

Adjusting the water hardness setting on your washing machine

Switch on your machine.

Press and hold the "Level of soiling" key on the screen.

The LEDs in the programme selection zone flash alternately to show that you have entered the water hardness configuration mode.

The machine displays the water hardness on-screen: Average hardness «L2», hard «L3» or soft «L1».

Turn the selector knob to, to adjust the hardness according to the value of your water hardness measurement sample.

Confirm your selection by pressing the selector knob.

Don't forget to adapt your detergent dose to your water hardness, in particular if you have soft water.

Refer to the dosing recommendations provided on the detergent packaging.

Please only use to strip below to measure water hardness.

STICK HERE THE STRIP

