

Brandt

EN GUIDE TO INSTALLATION AND USE

Washing Machine

BT710HQA



CONTENTS

Safety instructions	2
Installation	5
Operation	12
Maintenance operations	22
Troubleshooting	25
Availability of spare parts	27

Safety instructions

- This appliance is designed to be used for domestic and similar applications such as:
 - kitchen areas for staff in shops, offices and other professional premises,
 - farms,
 - use by hotel, motel and other residential clients,
 - B&B type environments.
- The appliance must be connected to the mains water supply using the brand new connection fittings supplied with the appliance. Never reuse old fittings.
- Never obstruct the ventilation openings.
- This appliance may be used by children aged 8 years or over and by individuals with reduced physical, sensual or mental capacity or lack of experience or knowledge of the device provided that they are correctly supervised or have been provided with instructions regarding the safe use of the appliance and provided that the risks present have been fully understood. Children must not be allowed to play with the appliance. Cleaning and maintenance operations must not be carried out by children without supervision.
- Children under the age of three should be kept away from the appliance unless they are under constant supervision.
- If the power cord is damaged, it should be replaced by the manufacturer, its after-sales service department or a similarly qualified person, so as to avoid danger.
- Regarding the instructions for installing the appliance and making its electrical connections, please refer to the appropriate section in this guide.
- **WARNING:** Do not connect the appliance to hot water.
- The maximum weight of dry laundry is 7 kilograms.

- Maximum water supply pressure: 1 MPa
- Minimum water supply pressure: 0.1MPa

⚠ Warning!

Product installation

- This washing machine is intended for indoor use only.
- It is not designed for built-in installation.
- Never obstruct the openings.
- This washing machine must not be installed in bathrooms, very damp rooms or in rooms where there are explosive gasses or caustic substances.
- If the washing machine has only one water inlet valve, connect it to a cold water source only.
- The power plug must remain accessible after the appliance is installed.
- Remove all packaging materials and the transit bolts before using the appliance. Failure to do so may seriously damage your washing machine.

Appliance damage hazard!

- Your appliance is for household (domestic) use only and is designed solely for machine washable textiles.
- Do not climb on the top of the washing machine.

Care when handling the washing machine:

1. The transit bolts must be refitted to the washing machine by a qualified person.
2. Drain any water from the appliance before moving the washing machine.
3. Handle the appliance with care. Never lift the appliance by grabbing projecting parts.
The door must not be used as a handle when moving the appliance.
4. This appliance is heavy. Carry it with care.


- Do not close the door using excessive force. If the door is hard to close, make sure that the drum is not overloaded and that the laundry is properly distributed.
- Do not wash carpets.

Operation of the appliance

- Use of inflammable and explosive solvents is prohibited. Never use fuel and alcohol, etc. as detergents. Only choose detergents that are suitable for machine washing.
- Empty the pockets of your clothes. Cutting and rigid objects like coins, pins, nails, screws, stones, etc. may seriously damage this appliance.
- Be careful to avoid injury when draining very hot washing water.
- Never add water by hand during washing.
- Once the washing cycle has finished, wait two minutes before opening the door.

Installation



Description of the product

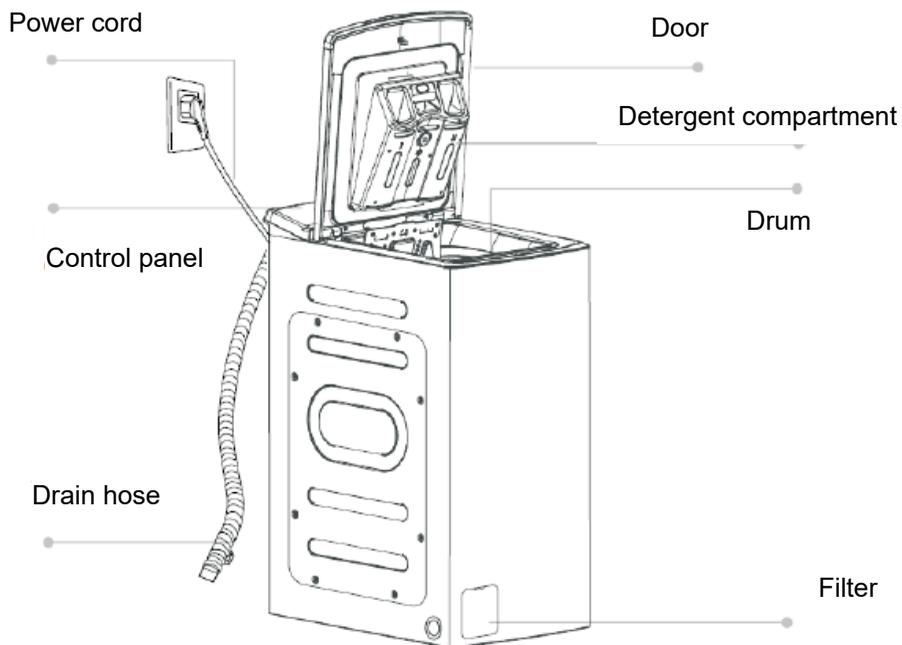

Note!

- The illustration of the accessories is provided for reference purposes only. Please refer to the actual product.

Accessories

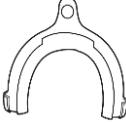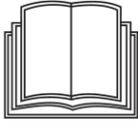			
Transit bolt hole covers	Cold water supply hose	Drain hose holder	User guide

Installation location



Warning!

- It is important that the product is stabilised to prevent it from moving!
- Ensure that the appliance is not resting on the power cord.

To install your washing machine, choose a location that is:

1. On a hard, dry, flat surface
2. Not exposed to direct sunlight
3. Adequately ventilated
4. In a room at ambient temperature
5. Away from heat sources

The washing machine is designed to operate at ambient temperature. If it is used in a room where the temperature is below 0°C, the water inlet valve and the drainage system may be damaged.

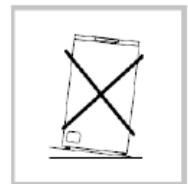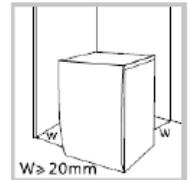


Unpacking the washing machine

Warning!

- Packaging materials (e.g. plastic film, polystyrene) can be hazardous to children.
- There is a suffocation hazard! Keep all packaging materials away from children.

1. Remove the cardboard box and the polystyrene wrapping.
2. Lift the washing machine and remove the packaging under it. Don't forget to remove the small foam triangle at the same time as the lower packaging. If you cannot do so, lay the washing machine on its side and remove the small foam triangle by hand.

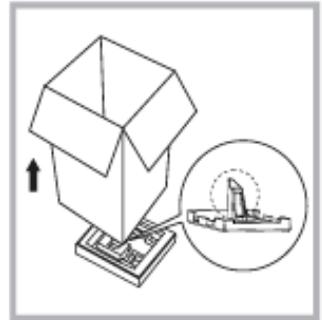


3. Remove the adhesive tape that holds the power cord and the drain hose in place.
4. Remove the water supply hose from the drum.

Fit the acoustic foam

Note!

- Fitting acoustic foam helps to reduce noise when the washing machine is in use.

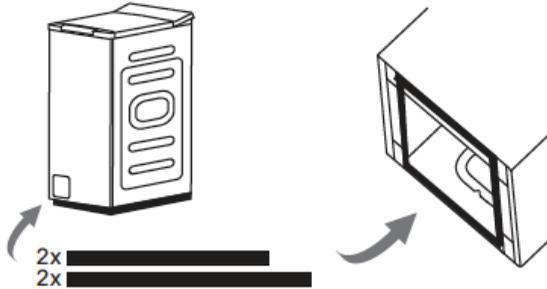


1. Place your washing machine on one of its sides, making sure you protect the floor.
2. Affix the foam as shown on the diagram, using the correct dimensions.

Remove the transit bolts

Warning!

- You need to remove all the transit bolts located at the back of the washing machine before using it.
- You'll need the transit bolts again if you move the washing machine. Keep them in a safe place.

Proceed as follows to remove the transit bolts:

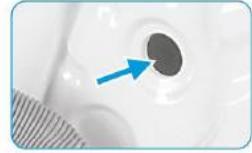


1. Use a spanner to loosen the four transit bolts then pull them out.
2. Push the four transit bolt cover caps provided for this purpose into the holes.
3. Keep the transit bolts in a safe place for future reuse.

Adjusting the levelling feet

Warning!

- The lock nuts on the four levelling feet must be tightened against the body of the washing machine.

1. Check that the feet are still firmly attached to the washing machine. If this is not the case, return them to their original position and tighten the nuts.
2. Slacken the lock nut and turn the foot until it touches the floor.
3. Adjust the feet and lock them into position using a spanner. Check that the washing machine is stable.

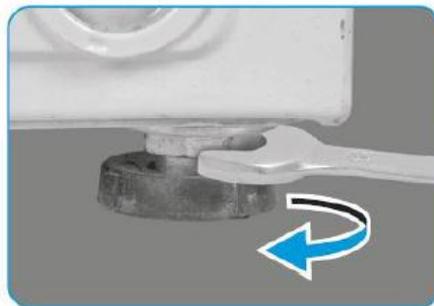

Connecting the Water Supply Hose

Warning!


- Follow the instructions in this section to avoid water leaks or water damage.
- Don't twist, squash, modify or cut the water supply hose.

Connecting the water supply hose to a threaded tap



Threaded tap and water supply hose

Connect the other end of the water supply hose to the water supply valve located on the back of the washing machine then tighten down the hose by turning it clockwise.

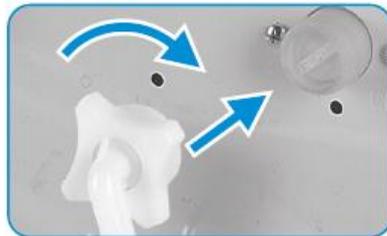


Drain hose

Warning!

- Do not twist or extend the drain hose.
- Position the drain hose correctly. If you do not perform this operation correctly a water leak may occur.

Note!

- If the washing machine is provided with a drain hose holder, install it as follows:

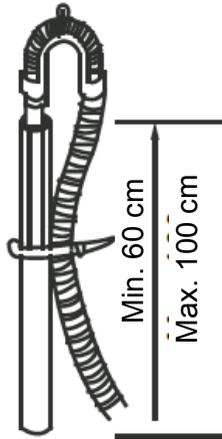

Warning!

- When you install a drain hose, attach it properly using a cord.
- If the drain hose is too long, never attempt to insert part of it into the washing machine by forcing it as this will cause unusual noises.


Operation

Quick start

Warning!

- Before using your washing machine for the first time, always ensure that it is correctly installed.

1. Before washing

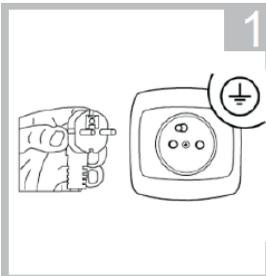


1. Connect the power cord




2. Open the tap




3. Load the washing machine

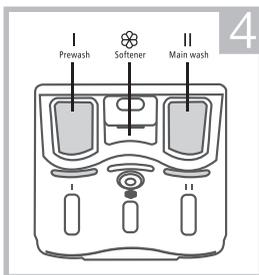

4. Add detergent

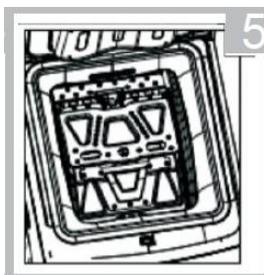



5. Close the drum door

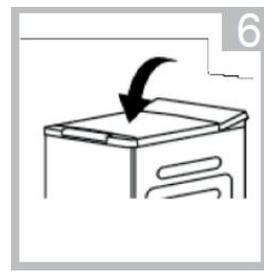

6. Close the door


⚠ Warning!

- Make sure that the hook on the drum door is engaged to ensure that the door closes properly.

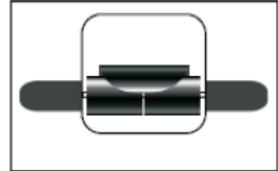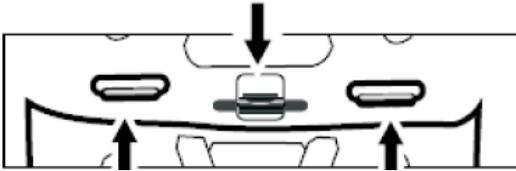

Check the bearings under the hook before each wash. They must run freely.

2. Washing

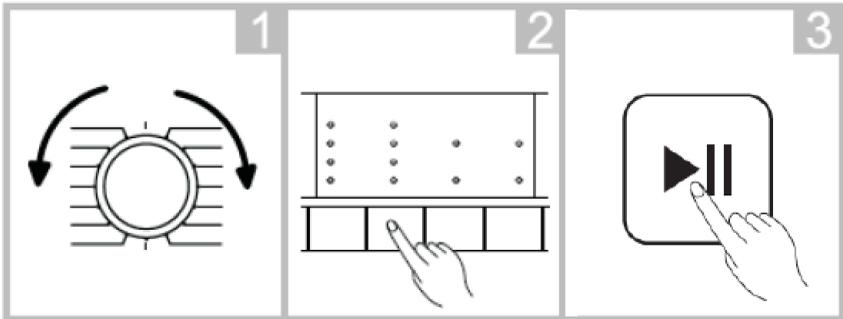

1. Select the programme

2. Select a function or the default settings

3. Start the programme

📌 Note!


- If you choose to use the default settings, you can skip step 2.

3. After washing

The Rinse+ and  flash at the same time informing you of the end of the cycle.

Before every wash

- Always read the washing labels on garments and the explanations on how to use the detergent before washing. Choose detergent that produces little or no foam for optimum washing and to avoid any overflowing. Refer to the instructions provided by the detergent maker as shown on the detergent packaging.

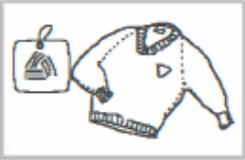		
Always read the garment labels	Empty the pockets of your clothes	Attach long strings/ribbons, close zips and fasten buttons
		
Place small size clothes in pillowcases	If clothes have raised fabric or suffer from piling, turn them inside out	Sort clothes by texture

Choosing the correct detergent

A washing care label symbol shows the right choice of detergent, temperature, and wash cycle.


Type of fabric	Programme	Detergent
White cotton 	Cotton temp. ≤ 90°C	Detergent with whitening product
Colours made of linen or cotton 	Cotton temp. ≤ 60°C	Colours without whitening product
Mixed fibres 	Mixed temp. ≤ 60°C	Colour wash
Synthetics 	Synthetics temp. ≤ 60°C	Colour/delicate wash
Delicate textiles 	Wool temp. ≤ 40°C	Detergent for delicate textiles
Wool 	Wool temp. ≤ 40°C	Detergent for wool

Warning!

- If there are not enough clothes in the washing machine this may unbalance the drum and cause the unbalance detection to trigger, significantly reducing the spin speed.
- Add a few clothes to remove the unbalance so that the washing machine can spin at the speed you have selected.

Detergent compartment

- I Prewash detergent
 II Main wash detergent
 Softener

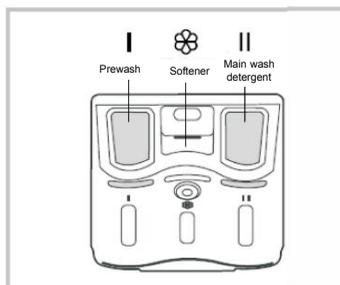

Removable detergent compartment

Warning!

- Do not exceed the MAX level when adding detergent or softener.
- You will need to put detergent in Compartments I and II when you choose the Prewash mode.

Programme	I	II		Programme	I	II	
Cold Cotton	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Rinse and Spin			<input type="radio"/>
Cotton 30°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Jeans	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Cotton 40°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Mixed load 40°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Cotton 60°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Mixed load 60°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Cotton 90°C	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	20°C		<input checked="" type="radio"/>	<input type="radio"/>
Delicate 20°C		<input checked="" type="radio"/>	<input type="radio"/>	Rapid 45'	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Cotton Eco		<input checked="" type="radio"/>	<input type="radio"/>	Flash 15'		<input checked="" type="radio"/>	<input type="radio"/>
Spin							

● Must Do

○ Optional

Washing products

- Use washing products designed specially for washing machines:

- Powdered detergents for all kinds of textiles except delicate ones.


For these detergents, we recommend first diluting them with some water to avoid clogging the detergent pipe causing water to overflow when washing starts.

- Liquid detergents for all low temperature programmes for all kinds of textiles or specialist liquid detergents (e.g. for woollens).

- Choose the detergent with care to match the required washing temperature, to optimise washing while saving water and energy.

Too much detergent may prevent laundry from being properly rinsed, leaving behind traces of the product. On the other hand, an inadequate dosage may cause poor washing results.

The control panel

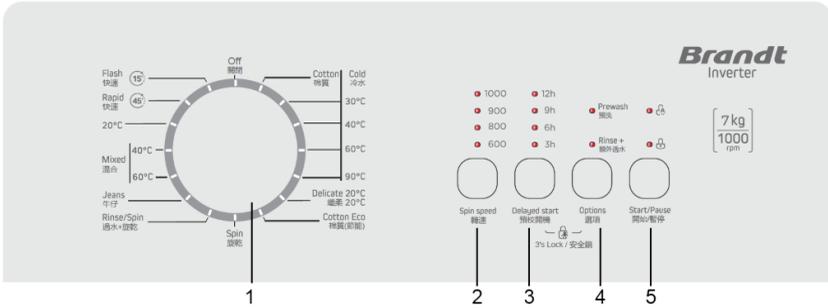

1 Programme dial

You can select the programme of your choice to match your washing requirements.

2 Spin

By default, a spinning speed associated with the programme is proposed. You can modify it by pressing the Spin button.

3 Delayed start.

You can use this button to delay the time when the washing cycle starts. Keep pressing the button until the number of hours you need is shown (up to 12 hours).


4 Options.

Press this button successively to access the Prewash or Rinse+ option.

5 Start/Pause

Once your selections have been made, press this button to start the wash cycle. Pressing again pauses the cycle.

The screen below informs you about the settings, remaining time and options chosen

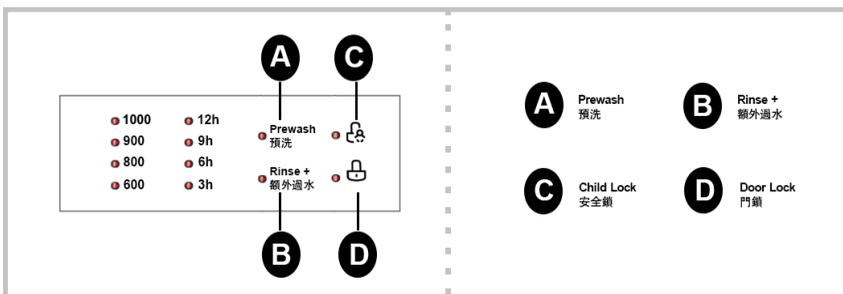



Warning!

- To change a setting after starting the washing cycle, turn the programme dial to the OFF position. Select the programme, the spin speed and the options again, then press the **Start / Pause** button.
(Ensure that the child safety function is disabled or the initially selected programme will continue to run.)
- Just before leaving the factory, the appliance is subject to a last check when water is poured into the drum. Consequently, there may be water drops or condensation inside the washing machine. This is not an indication of a malfunction.



Note!

There may be a slight smell when the appliance is started and used for the first time.

Options

Prewash

Prewash

The Pre-wash option lets you perform an additional wash before the main wash. This is a suitable option for eliminating dirt from your laundry. You will need to place detergent in compartment (I) after choosing this option.

Rinse +

Rinse +

When this option is selected, your laundry will get an extra rinse.

Delayed start

Delayed start

Select a programme and then the Delayed start function:

1. Choose the time by pressing the delayed start button (you can select a delay of 3h, 6h, 9h or 12h).
2. Press the Start/Pause button to start the Delayed start function.



labelling the delayed start function:

Press the Delayed start button until the LEDs concerning the delayed start go off. This operation cannot be performed once the washing cycle is started. If the programme has already started, place the selector in the Off position to reset it.

Programme	Option			Programme	Options		
	Delayed start	Rinse+	Pre-wash		Delayed start	Rinse+	Pre-wash
Cold Cotton	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Rinse and Spin	<input type="radio"/>	<input type="radio"/>	
Cotton 30°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Jeans	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cotton 40°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Mixed load 40°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cotton 60°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Mixed load 60°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cotton 90°C	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	20°C	<input type="radio"/>	<input type="radio"/>	
Delicates	<input type="radio"/>	<input type="radio"/>		Rapid 45'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cotton Eco	<input type="radio"/>			Flash 15'	<input type="radio"/>		
Spin	<input type="radio"/>						

Optional

Other options

- Spin speed** Spin
Press the "Spin" button until the required spin speed is displayed.
600-800-900-1000. Access to the choice is linked to the programme selected.

Warning!

- If a power break occurs when the washing machine is running, the internal memory saves the selected programme. Once the power has returned, press the **Start/Pause** button to resume the programme.



Child Lock

This function locks the buttons so that the current programme cannot be changed especially if a child plays with the keys.



Press Delayed start and Options at the same time for 3 seconds, until a beep is heard. The Child Lock LED flashes.

Programmes

The programmes are adapted to the kind of laundry.

Programmes	
Cold Cotton	
Cotton 30°C	This programme is suited to a load consisting of resistant white or coloured cotton. To know which washing temperature is suitable, refer to the labels on your clothing.
Cotton 40°C	
Cotton 60°C	
Cotton 90°C	This high-temperature programme is intended for very dirty cotton laundry by increasing the drum rotation rate and cycle time.
Delicates	This programme is suitable for satin and silk items. Your laundry is washed and spun gently, as if by hand.
Cotton Eco	This programme is used to wash your laundry at a temperature that cannot be changed, while optimising water and power consumption.
Spin	This programme is used to only spin your clothes by choosing the desired spin speed.
Rinse and Spin	This programme is used to simply rinse and spin your clothes.
Jeans	This programme is specially intended for washing jeans. It reduces colour washout and its more intensive rinse avoids any residual traces of detergent.
Mixed load 40°C	This programme is ideal for a load of laundry comprising mixed fibres (moderately dirty laundry).
Mixed load 60°C	This programme is ideal for a load consisting of mixed fibres (dirty washing).
20°C	This low temperature washing programme protects lightly-soiled daily items from fading and dye transfer, while cool washes are gentler and use less energy.
Rapid 45'	This programme is used to quickly wash a usual load of laundry that is not very dirty.
Flash 15'	This programme is used to very quickly wash a small load of laundry that is not very dirty.

Warning!

- To disable to Child safety lock, press the same two buttons for three seconds.
- The Child safety lock function will lock all of the buttons except for the selector.
- If you switch the appliance off, the Child safety lock will be disabled.
- The Child safety function remains active when the washing machine restarts after a power break.

Options table

Programme	Default temperature (+C)	Spin speed (rpm)	Possible options
Cold Cotton	Cold	800	Delayed start; Pre-wash; Rinse Plus
Cotton 30°C	30	800	Delayed start; Pre-wash; Rinse Plus
Cotton 40°C	40	800	Delayed start; Pre-wash; Rinse Plus
Cotton 60°C	60	800	Delayed start; Pre-wash; Rinse Plus
Cotton 90°C	90	900	Delayed start; Pre-wash; Rinse Plus
Delicates 20°C	20	600	Delayed start; Rinse Plus
Cotton Eco	-	1000	Delayed start
Spin	-	900	Delayed start
Rinse and Spin	-	900	Delayed start; Rinse Plus
Jeans	60	900	Delayed start; Pre-wash; Rinse Plus
Mixed load 60°C	60	900	Delayed start; Pre-wash; Rinse Plus
Mixed load 40°C	40	900	Delayed start; Pre-wash; Rinse Plus
20°C	20	900	Delayed start; Rinse Plus
Rapid 45'	40	800	Delayed start; Pre-wash; Rinse Plus
Flash 15'	Cold	800	Delayed start

- The product is tested in accordance with the Hong Kong Code of Practice on Energy Labeling of Products 2020; IEC 60456:2010 standards.
- Half load for 7.0kg machine is 3.5kg.

Maintenance operations


Cleaning and Care

Warning!

- Always switch off the appliance and turn off the water tap before any maintenance operations.

Cleaning the Exterior of your Washing Machine

Suitable maintenance will optimise the service life of your washing machine. Appliance surfaces can be cleaned with neutral non-abrasive detergents diluted where necessary. If the water overflows, wipe it up immediately. Never use sharp objects.

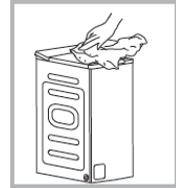

Note!

- Do not use formic acid and its diluted solvents or equivalents such as alcohol, solvents or chemicals, etc.

Cleaning the drum

Any rust left inside the drum by metal articles must be removed immediately with chlorine-free detergent. Never use steel wool.

Note!


- Don't put laundry in the washing machine during the drum cleaning.

Cleaning the water supply hose filter

Note!

- If there is hardly any water in the appliance and the tap is open, then the water supply hose filter needs to be cleaned.

1. Close the tap
2. Remove the Water Inlet Hose from the tap.
3. Clean the filter.
4. Reconnect the water inlet hose.

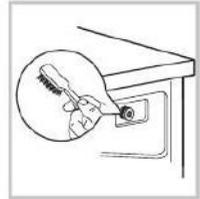




Cleaning the washing machine filter

1. Unscrew the water inlet hose from the back of the machine.
2. Remove the filter using a pair of pliers.
3. Use a brush to clean the filter.
4. Refit the filter once cleaning is finished.
5. Reconnect the water inlet hose.

Cleaning the detergent compartment

If you observe any dirtying of the detergent drawer, clean it. To do this:

1. Remove the detergent drawer by pressing the arrow on the softener compartment (shown as A below).
2. Clean with water.
3. Put the compartment back.

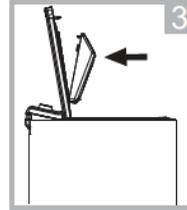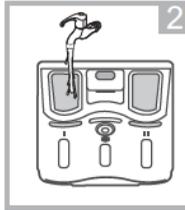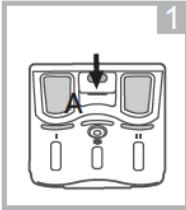


Note!

- Do not use alcohol, solvents or chemicals to clean the washing machine.

Cleaning the drain pump filter

Warning!

- Beware of hot water!
- Disconnect the appliance to avoid any electric shock hazard.
- The drain pump filter filters out lint and other small debris present in the laundry.
- Clean the filter regularly to ensure proper washing machine operation.

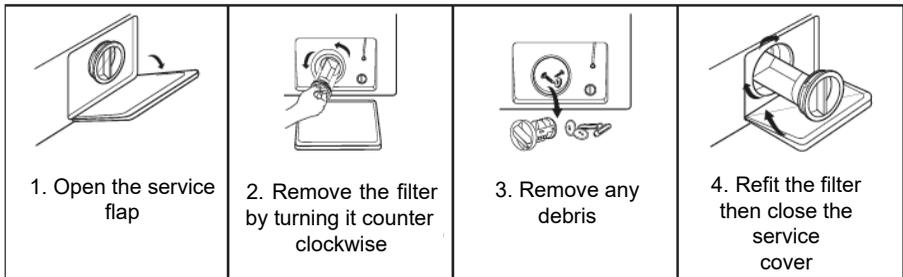

Warning!

- Ensure that the filter is properly refitted to avoid any leakage.
- When the washing machine is running, never remove the filter. This operation must only be performed with the washing machine switched off.

Preventing scale build-up

If you live in an area with hard water, we recommend using a washing machine descaling product. Regularly check for any scale build-up in the drum. If necessary, run an empty washing cycle with a descaling product. Refer to the instructions provided by on the product packaging.

Troubleshooting

The washing machine cannot start up or stops during operation.

First attempt to solve the problem. If you cannot, then contact the service centre.

Description	Cause	Solution
Washing machine cannot start up	The door is not properly closed.	Switch the washing machine back on after closing the door. Check whether any clothes are trapped.
Door cannot be opened	Washing machines' safety protection system is working.	Disconnect the power, reconnect it and switch the machine back on.
Water leakage	The connection between the washing machine and the water supply hose or the drain hose is not tight.	Check the water pipes and tighten the connections. Clean the drain hose.
Detergent residues in the detergent compartment	The detergent is dampened and clumpy.	Clear and dry the compartment.
Washing machine lights or display do not light up.	The appliance is not switched on. Circuit problem. Connection problem.	Check that the power is on and the power cord is properly connected.
Unusual noise		Make sure that the transit bolts have been removed. Make sure that the washing machine is installed on a solid and level floor.

Description	Cause	Solution										
<table border="1"> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>●</td></tr> <tr><td>○</td><td>●</td></tr> <tr><td>○</td><td>●</td></tr> <tr><td>Spin speed</td><td>Delayed start</td></tr> </table>	●	●	●	●	○	●	○	●	Spin speed	Delayed start	The door is not properly closed.	<p>Close the door properly and restart the washing machine.</p> <p>Check whether any clothes are trapped.</p>
●	●											
●	●											
○	●											
○	●											
Spin speed	Delayed start											
<table border="1"> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>●</td></tr> <tr><td>○</td><td>●</td></tr> <tr><td>Spin speed</td><td>Delayed start</td></tr> </table>	●	●	●	●	●	●	○	●	Spin speed	Delayed start	Problem adding water during washing.	<p>Check whether the water pressure is too low.</p> <p>Straighten the water supply hose.</p> <p>Check the water supply filter is not blocked.</p>
●	●											
●	●											
●	●											
○	●											
Spin speed	Delayed start											
<table border="1"> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>●</td></tr> <tr><td>○</td><td>●</td></tr> <tr><td>●</td><td>○</td></tr> <tr><td>Spin speed</td><td>Delayed start</td></tr> </table>	●	●	●	●	○	●	●	○	Spin speed	Delayed start	Water drainage takes too long.	Check if drain hose is blocked.
●	●											
●	●											
○	●											
●	○											
Spin speed	Delayed start											
<table border="1"> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>●</td></tr> <tr><td>●</td><td>○</td></tr> <tr><td>○</td><td>●</td></tr> <tr><td>Spin speed</td><td>Delayed start</td></tr> </table>	●	●	●	●	●	○	○	●	Spin speed	Delayed start	Water leakage.	<p>Run another programme.</p> <p>If error is still displayed, turn off the water supply, disconnect the washing machine and call your After Sales Service.</p>
●	●											
●	●											
●	○											
○	●											
Spin speed	Delayed start											
Others		<p>Do not hesitate to reset the washing machine.</p> <p>Contact our After Sales Service if the issues remain.</p>										

○ Flashing LED

● LED off




Note!

- Once this check is complete, start the appliance. If the problem occurs again or if the error codes are displayed again, contact your after-sales service.
- Any attempt made by the user or a non professional to repair the appliance may affect user safety and void the appliance warranty.

Technical specifications

Power supply	220-240V~/50Hz
Maximum current	10 A
Standard water pressure	0.1 MPa~1 MPa

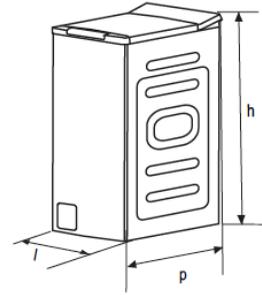

Model	Washing capacity	Dimensions (l * d * h mm)	Net weight	Rated power
BT710HQA	7.0kg	400*610*875	56kg	2000W

SERVICING AND REPAIRS



Any repairs that are made to your appliance must be handled by a qualified professional authorised to work on the brand. When calling, please provide the full references of your appliance [commercial reference, service reference, serial number), so that we can handle your call more efficiently. This information can be found on the data plate



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.



For more information, please contact the local authority or your retailer where you purchased the product.

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.



保養登記

Warranty Registration

於網上登記新產品保養 Register your product online
www.dchtoolbox.com



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啟祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com