

CELLINI Italy

2000W CERAMIC HEATER USER MANUAL

陶瓷暖風機使用說明書

Model No. 型號: CTH20WH



Please read this instruction manual carefully before use and keep it for future reference. 請於使用前細閱本說明書並加以保存。

| CONTENTS | |
|----------------------------|----|
| SAFETY INSTRUCTIONS | 3 |
| FEATURES | 5 |
| DIAGRAM | 5 |
| OPERATION | 6 |
| CONTROL PANEL AND SETTINGS | 6 |
| REMOTE CONTROL | 8 |
| MAINTENANCE | 9 |
| TROUBLE SHOOTING | 9 |
| TECHNICAL DATA | 10 |

Please read and retain for future reference.

SAFETY INSTRUCTION - GENERAL

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Remove the plug from the wall socket when connected to the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Only use the attachments/accessories supplied with the product.

SAFETY INSTRUCTION - ELECTRICITY AND HEAT

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.
- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance, the airvents must not be covered or blocked when use.

- Never use the appliance in the vicinity of flammable material.
- Certain part of the appliance may get hot, such as air outlet. Do not touch these part to prevent scalding yourself.

SAFETY INSTRUCTION - DURING OPERATION

- In use, some parts of the heater are hot. When moving, make sure the heater is switched off.
- Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
- Do not place the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
- Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
- A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
- Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur

INSTALLATION LOCATION OF THE APPLIANCE

 
- The appliance should be placed with a minimum distance of 90cm away from flammable objects (e.g. curtains, walls or other structures!)
- The heater should only be operated at the minimum distance of 50cm from any wall or other objects. Position the air flow in order to optimize the heating of the room. Avoid to place in corners, small volumes and ceilings.

CERAMIC HEATER

FEATURES

- Slim design takes minimal space
- High Speed Motor with Fan mode and 2 Heat settings
- Swing Function
- 12 hour standby timer.
- Remote Control allowing all functions to be changed.

DIAGRAM

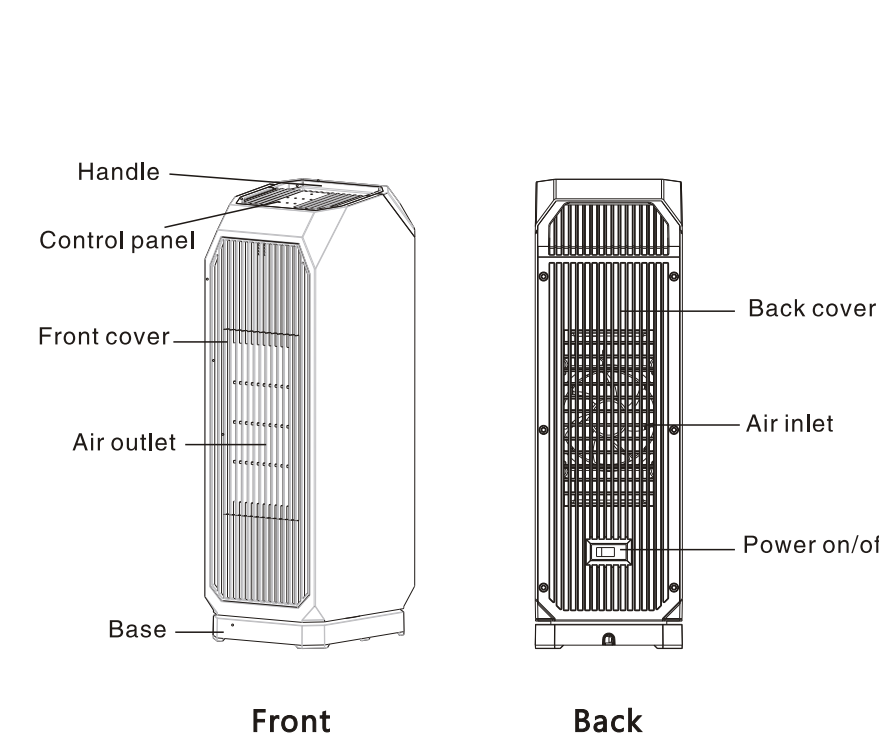


OPERATION

Your heater may be operated by using either the manual controls located on the front of the fan or by your remote control.

POWER SWITCH ON THE BACK OF THE UNIT

Used to turn the heater ON and OFF. This should be used to turn off the appliance before leaving unattended.

 CONTROL PANEL AND SETTINGS

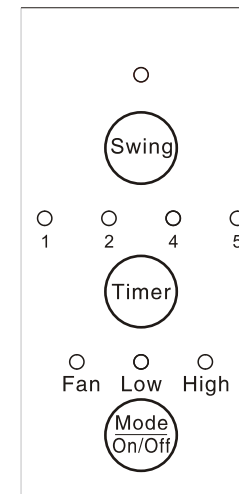

MODE/ON/OFF BUTTON

Press the button to select the power indicator: fan - low heat - high heat - shutdown - fan..... The corresponding indicator light will be on.

If you press the button to shut down the appliance, the fan indicator light will be flashing, the on/off indicator light will be off and the appliance will be off after about 30 seconds.

SWING BUTTON

Press this button to turn the swing function on and off. When it is operating, the horizontal direction of the airflow is slowly moved from side to side and the Swing indicator will be on.

TIMER BUTTON

 
Press this button repeatedly to increase the running time in 1-hour intervals. The timer can be set between 1 hour and 12 hours. The display will show the duration currently set. When the display is showing the timer duration the symbol will illuminate next to the timer. To cancel the timer repeatedly press the timer button until 00 is shown.

Note: Since the temperature detected by the induction probe is the temperature around the Space heater, the displayed temperature is different from the actual indoor temperature, which is only for reference.

The indicator light will automatically turn off after 5 minutes without any operation of the product (the display screen will automatically shut down)

REMOTE CONTROL


Your heater are supplied with a remote control .

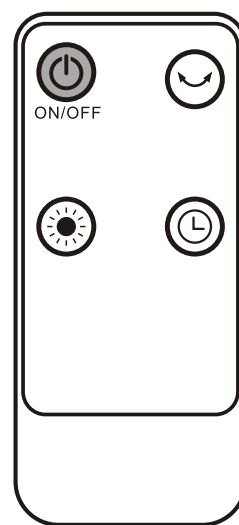

REPLACING THE BATTERIES

The remote control is powered by a Lithium Button Cell Battery (CR2025). Should the remote become unresponsive, replace the battery following the instructions below:

 - Turn over the remote and press tab A to the right.
- Slide out the battery tray B
- Replace the battery with the same type, ensuring the positive side is facing upwards.

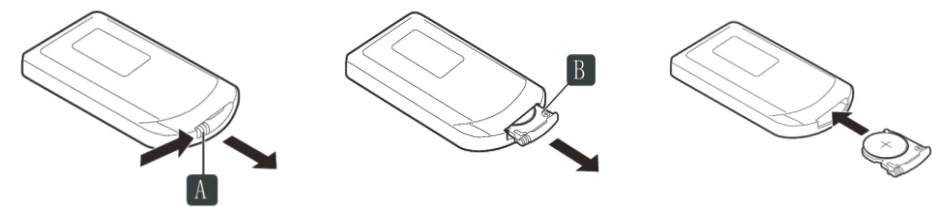

MAINTENANCE

CLEANING AND STORAGE

ATTENTION: Please shut off the unit and unplug from the mains before cleaning or performing any maintenance.

Cleaning the surface

Clean the heater with a duster or a soft wet cloth. Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or gaps in the casing.

Do not run the unit until completely dry.

Place the heater in its original box or cover to protect it from dust when not in use. Store it in a cool dry place.

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

| Issue | Possible Reason | Solution |
|-----------------------------|--|---|
| No power | 1. Power cord is unconnected 2. There is no power from socket 3. The power switch on the rear of the unit is turned off. | 1. Connect the power cord 2. Check socket is turned on 3. Ensure the power switch on the rear of the unit is in the On position |
| Odour emission from unit | 1. New unit. When the unit is used for the first time the fan motor may produce and odour which will dissipate within a week of use. | 1. No action required |
| Strong vibrations and noise | 1. Unit is not places on a flat surface 2. Unit may be damaged | 1. Place on a flat surface. May put an anti-vibration mat underneath 2. If the heater is damaged discontinue use and contact the service centre. |

If the above solutions do not resolve the problem please contact the service centre.

TECHNICAL DATA

| | |
|---------------------------|----------------------|
| Model | CTH20WH |
| Cable length | 1.5meters |
| Rated Input | 2000W |
| Power Supply | 220-240V ~, 50-60Hz |
| Net Weight | 1.8Kg |
| Product Dimension (HxWxD) | 427 x 134 x 162 (mm) |

閱讀下列說明事項並請妥善保管，以供日後參考。

安全指引 - 一般安全

- 請按照這些說明事項，使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩弄本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 當本機開著時，頭髮、鬆身衣物、手指和身體其他部份都要離開本機。
- 只使用隨機附送的配件。

 
安全指引 - 電子和熱能產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 確保本產品的周圍有足夠空間，並且不接觸易燃物料。使用時，通風口不得覆蓋或堵塞。
- 切勿在易燃材料附近使用本產品。
- 本產品的某部分可能會發熱。如出風口，不要觸摸這些部分，以防止燙傷自己。

陶瓷暖風機

特徵:
輕巧設計, 佔用最小平面
高轉速風打、風扇模式和2段加熱程序
左右搖擺功能
12小時時間設定
備有遙控器

示意圖：

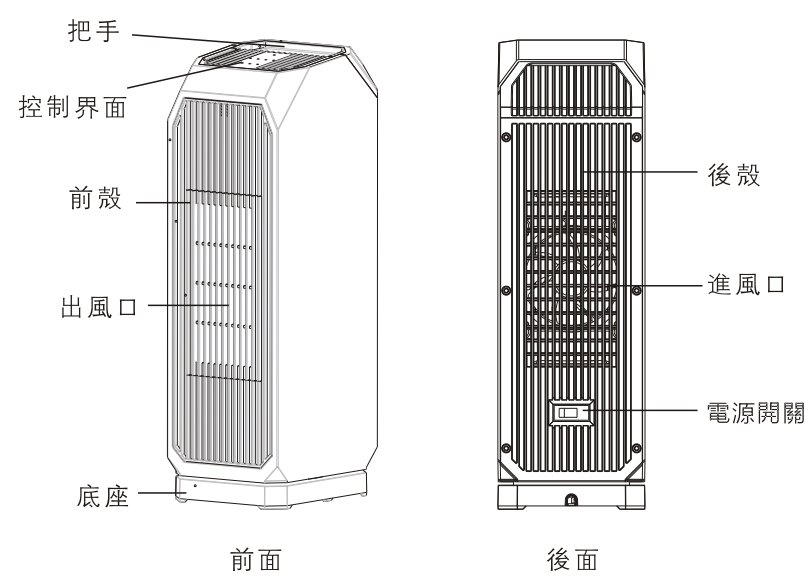


操作

暖風機可以透過使用手動控制界面或透過您的遙控器來操作。

機組背面的電源開關

 用於打開和關閉加熱器。這應用於在離開無人值守之前關閉設備。

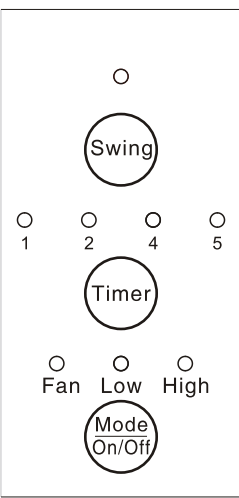

操作機組後蓋：產品接洽電源線見“蓋”蓋後按下此蓋，開始工作散熱冷風狀態。再按下此蓋，進行低熱模式，再按下此蓋，進入高熱模式。再按下此蓋，則關閉暖風機所有工作狀態(備注:維修後,產品會繼續工作30秒，冷風吹出產品內部的熱量,然後關閉所有工作狀態)。

搖擺鍵：按下“搖擺”鍵，暖風機進入搖擺模式，搖擺指示燈亮，再次按下關閉搖擺功能。

定時鍵：按下“定時”鍵，暖風機可在0-12小時定時使用，定時指示燈亮。

 
設定溫度(詳見圖)：開機後按下此鍵，可在15-40°C之間調整所需溫度，每按一下增加1°C。設置完成5秒後顯示目標溫度(當設定溫度高於環境溫度2°C時自動調整為低熱狀態，高於4°C時為高熱狀態)。

注：由於感測器探測所檢測到的基礎風機轉速溫度，故所顯示的溫度與室內實際溫度有所差異，僅供參考。

產品在無任何操作情況下，五分鐘後指示燈自動熄滅(離開後自動熄滅)。

遙控器


此暖風機備有一個遙控器

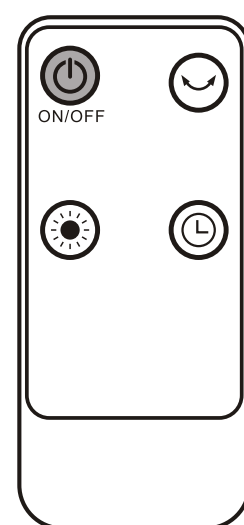

更換電池

遙控器由鋰接鈕電池(CR2025)供電。如果遙控器無響應，請按照以下說明更換電池：

 - 打開遙控器，然後按右邊的選項卡A。
- 滑出電池托盤B。
- 用相同類型更換電池，確保正確面對準正面向上。

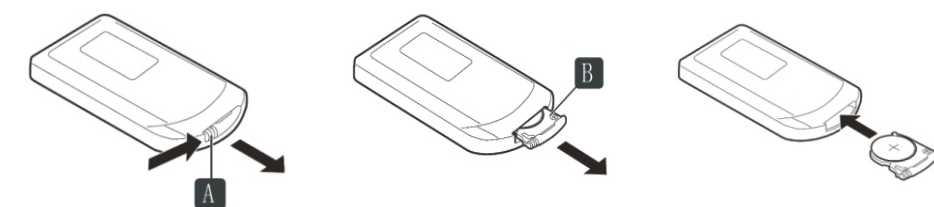

維護

清潔和儲存
注意：在清洗或進行任何維護之前，請關閉機組並拔下電源。清潔表面用抹布或軟毛刷清潔加熱器。不要使用化學溶劑(如苯、酒精或汽油)，因為它們可能會造成不可逆的損害。確保沒有水進入控制面板或外殼內的開關。在機組完全乾燥之前不要運行取暖器。將加熱器放在原盒或蓋上，防止不使用時防止灰塵。儲存在陰涼乾燥的地方。

故障排除

不要自行修理或拆卸設備。未經授權的維修嘗試將使保修失效，並可能造成人身傷害。

| 問題 | 可能原因 | 解決 |
|----------|--|---|
| 沒電 | 1. 電源插頭未插入 2. 插座無電 3. 後部的電源開關已關閉 | 1. 插入電源插頭 2. 檢查插座是否打開的 3. 確認後部的電源開關已打開 |
| 氣味散發 | 1. 新產品。當機組首次使用時，風扇轟打可能產生氣味，並在使用一周內消散 | 無需採取行動 |
| 強烈的振動和噪音 | 1. 機器不是放置在一個平面上 2. 機器可能會被損壞 | 1. 放置在一個平面上。可能會造成防風下面的墊子損壞 2. 如果加熱器損壞，請終止使用並聯繫客戶服務中心 |

如果以上解決方案解決問題請聯繫客戶服務中心。

技術參數

| | |
|-------------|----------------------|
| 型號 | CTH20WH |
| 電線長度 | 1.5米 |
| 額定功率 | 2000W |
| 額定輸入 | 220-240V ~, 50-60Hz |
| 淨重 | 1.8公斤 |
| 產品尺寸(高x寬x深) | 427 x 134 x 162 (毫米) |

請記錄下列產品資料

| | |
|------------------------|--|
| 型號 Model No.: | |
| 機身編號 Serial No.: | |
| 經銷商名稱 Dealer: | |
| 購買日期 Date of Purchase: | |
| 單據編號 Invoice No.: | |

本產品不斷改進中，如功能有所更改，恕不另行通知。如有任何不一致或歧義，請與客戶服務中心聯絡。不獲之處，敬請諒察。The product specifications may be changed without prior notice. Please contact customer service for details if necessary.

說明書內容以英文版為準。If there is any inconsistency or ambiguity between the English version and the Chinese version, the English version shall prevail.

保養登記



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自備點



客戶服務中心 DCH Toolbox Customer Service Centre
香港九龍彌敦道20號大成行匯豐大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: dch.service@gilman.com.hk
網址 Website: www.gilman-group.com