
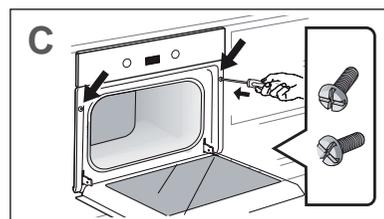
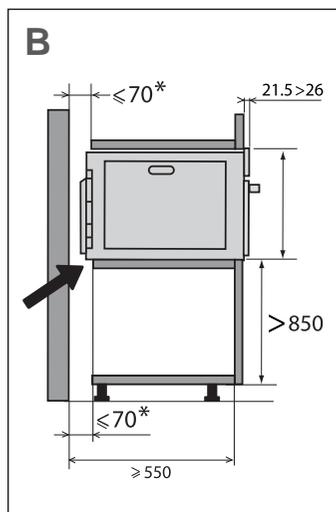


EN INSTALLATION AND SAFETY INSTRUCTIONS

MICROWAVE OVEN

De Dietrich 

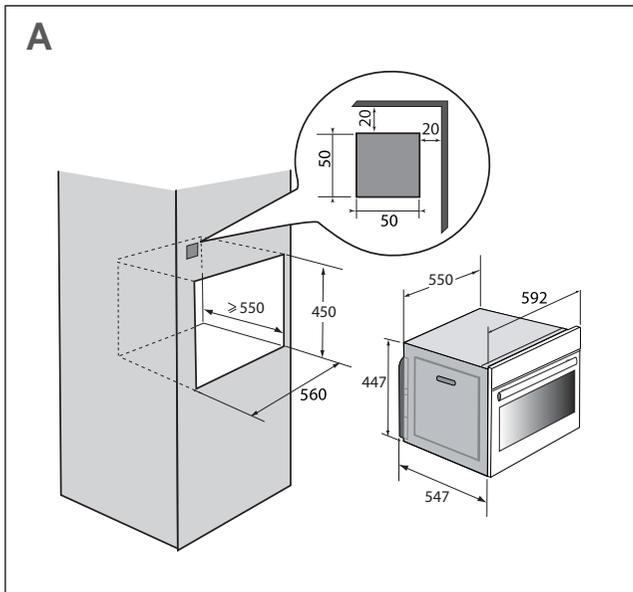

IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY AND RETAIN FOR FUTURE USE.

This user guide is available for download on the brand's website.

When you receive the appliance, unpack it or have it unpacked immediately. Check its general appearance. Make a note of any reservations on the delivery slip and keep a copy.



This appliance must be installed more than 850mm up off the ground.

— In order to avoid overheating, the appliance must not be installed behind a decorative door.

— Centre the oven in the unit so as to ensure a minimum distance of 10 mm between the appliance and the surrounding unit. The material of the unit supporting the appliance must be heat-resistant (or covered with a heat-resistant material). For greater stability, attach the oven to the unit with 2 screws through the holes provided on the side panels.



It must be possible to disconnect the appliance from the power supply,

either using a plug or by fitting a switch on the fixed wiring system in accordance with installation rules.

— The electrical plug must remain accessible after installation.

— If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a similarly qualified person in order to avoid danger.



WARNING:

It is dangerous for anyone other than a qualified person to perform maintenance or repairs that requires the removal of the cover providing protection against exposure to microwave power.

— This appliance is designed to cook with the door closed.

— This appliance is designed to be used for domestic and similar applications such as: kitchen areas for the staff of shops, offices and other professional premises; farms;

IMPORTANT SAFETY ADVICE AND PRECAUTIONS

use by clients of hotels, motels and other residential type establishments; guest house type environments.

— This appliance may be used by children aged 8 years and older, and by persons with impaired physical sensorial or mental capacities, or without experience or knowledge, if they are supervised or have received prior instructions on how to use the appliance safely and have understood the risks involved.

— Children must not be allowed to play with the appliance. Cleaning and maintenance operations must not be carried out by children without supervision.

— Children must be supervised to prevent them from playing with the appliance.



WARNING :

The appliance and its accessible parts become hot during use. Be careful not to touch the heating elements inside the oven. Children under 8 years old must not be allowed near it unless they are supervised at all times.



WARNING:

If the appliance is being

used in combination mode, it is recommended that children only use the oven under adult supervision due to the temperatures generated.

— Only use utensils suitable for usage in microwave ovens.

Metal food and beverage containers are not permitted for microwave cooking.

— The microwave oven is designed to heat food and drinks. Drying food or linen or heating cushions, slippers, sponges, wet linen and other similar items may cause injury, risk of inflammation or fire.



WARNING:

Liquids and other foods must not be heated in sealed containers, as they may explode.

— While heating food items in plastic or paper containers, monitor the micro-wave's contents, since there is a risk of spontaneous combustion.

— If smoke appears, stop or unplug the oven and leave the door closed to smother any flames that may appear.

— Heating beverages in the microwave oven can cause the sudden and/or delayed splattering of boiling liquid, so care must be taken when handling their containers.

IMPORTANT SAFETY ADVICE AND PRECAUTIONS

— The contents of baby bottles and baby food jars must be stirred or rearranged and the temperature must be checked before consumption, so as to prevent burning.

— It is not recommended to heat eggs in their shells or whole hardboiled eggs in a microwave oven, as they may explode, even after cooking has ended.

— It is recommended that you clean your oven regularly and to remove any food build-up.

— If the appliance is not cleaned regularly, its surface could become damaged, permanently affecting the appliance's lifespan and possibly causing a safety hazard.



WARNING:

If the door or door seal is damaged, the oven should not be used until it has been repaired by an authorised person.

— Do not use abrasive cleaning products or hard metal scrapers for cleaning the oven's glass door, as they could scratch the surface and cause the glass to shatter.

— Do not use a steam cleaner.

— Only allow children to use the oven without supervision

if adequate instructions have been given so that the child is able to use the oven safely and understands the dangers of incorrect use.

• 1 *INSTALLATION*



CHOICE OF LOCATION AND BUILDING IN

This appliance must be installed more than 850 mm up off the ground. This appliance may be installed in a cabinet column, as indicated on the installation diagram (**fig. A**).

Caution: if the back of the cabinet is open, the space between the wall and the surface on which the oven rests must be no more than 70 mm* (**fig. B**).

Do not use your appliance immediately (wait approximately 1 to 2 hours) after moving it from a cold location to a hot location, as the condensation may cause a malfunction.

Centre the oven in the unit so as to ensure a minimum distance of 10 mm between the appliance and the surrounding unit. The material of the unit supporting the appliance must be heat-resistant (or covered with a heat-resistant material).

Drill a 2 mm diameter hole in the cabinet panel to avoid splitting the wood.

For greater stability, attach the oven to the unit with 2 screws through the holes provided on the side panels (**fig. C**).

ELECTRICAL CONNECTION

 **Warning:**
Installation should only be performed by installers and qualified technicians.

The appliance must be recess-fitted correctly to ensure electrical safety. The electrical connections should be made before the appliance is installed in its

housing.

The oven must be connected via a standardised power cable with 3 conductors of 1.5mm² (1 live + 1 neutral + earth) which must be connected to the network by means of an IEC 60083 standard power socket or via an all-pole cut-off device in compliance with the installation rules.

Check that:

- the electrical installation has sufficient voltage (220-240 Volts~ 16 Amps),

If the electrical installation in your home requires any changes in order to connect your appliance, contact a professional electrician.

During maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be switched off or removed.

 **Caution:**
The safety wire (green-yellow) is connected to the appliance's  terminal and must be connected to the installation's earth.

If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector where the oven is hooked up.

 **Caution:**
We cannot accept liability for any accident or incident resulting from non-existent, defective or incorrect grounding.

• 2 ENVIRONMENT



CARING FOR THE ENVIRONMENT

This appliance's packaging can be recycled. Recycle and help protect the environment by disposing of packaging in local waste containers designed for this purpose.

Your appliance also contains a lot of recyclable material. This logo indicates that used appliances must not be mixed with other waste.



Appliance recycling organised by your manufacturer is carried out under optimum conditions, in accordance with European Directive 2002/96/EC on the disposal of waste electrical and electronic equipment.

Contact your local authority or retailer for information on used appliance collection points close to your home.

We thank you for your help in protecting the environment.