

**gemini**  
ITALY

BLADELESS HEPA &  
CARBON FILTER  
TOWER FAN  
無葉HEPA及活性炭過濾  
直立風扇  
MODEL NO./型號: GBF40WH

Please read this instruction manual carefully  
before use and keep it for future reference  
請於使用前仔細閱讀本說明書並加以保存

# SAFETY INSTRUCTION

Thank you for purchasing this fan. This product has passed through extensive quality assurance process. Every care has been taken to ensure that it reaches you in perfect condition.

**Attention!** When using electric tools, basic safety precautions should be followed to reduce the risk of fire, electric shock and personal injury, including the following,

Read all these instructions before operating this product and keep these instructions for easy reference.

1. Check the voltage indicated on the rating plate. This fan is designed for a 220-240V~50-60Hz electric supply.
2. Do not use electrical extension cord with this fan.
3. Do not introduce your fingers through the front housing. Do not let children put any objects into the front housing.
4. Do not let hair, curtains, tablecloth, clothes or other objects next to the air outlet of the fan. They could be sucked into the fan, causing damage or injuries.
5. Do not use the fan having a cord or a plug damage, operation failure the fan is fallen or have been damage by any method.
6. Periodically check the electric cable of this fan. If the electric cable is damaged, it must be replaced by the After-sales Service Center or by a similar qualified person in order to avoid a danger.
7. Do not use this fan outdoor.
8. Do not use this fan in a damp area such as bathroom.
9. Do not use this fan on a window.
10. Do not use this fan with any semi-conductors speed control.
11. The fan should not be operated without a base nor used laying on its side.
12. Do not cover the electrical cord by any objects. Do not overlay the cord with little covers or such element. Place the cord in an area where there are not any risk to stumble over it.
13. The fan must be unplugged when not in-use. To unplug the fan, all the switches must be on the position "OFF", and then the plug could be disconnected.
14. Do not operate the fan in an area where gasoline painting or such flammable liquids is used or stocked.
15. Use this fan only as it is describe in this manual.
16. Do not try to disassemble this fan and fix it by user, If you need maintenance, please send back the fan to our After-sales Service Center.
17. All componets of this fan must not be replaced by the user.
18. If the supply cord is damaged, it must be replaced by the After-sales Service Center or a similarly qualified person in order to avoid a hazard.
19. The safety standard of this fan is without earth connection.
20. Keep this fan out of reach from Children or infirm persons and do not let them use the fan without supervision.

**WARNING:**

 
 
 
 
1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.

**NOTE:**

There are no serviceable parts in this unit. Do not attempt to disassemble.


**WARNING:** Never use this fan with any solid-state speed control device. Doing so will create fire and/or shock hazards.

# MAIN PARTS

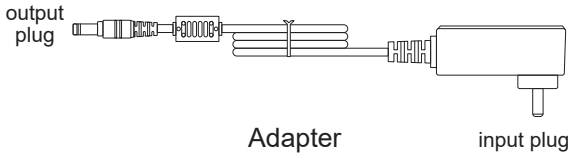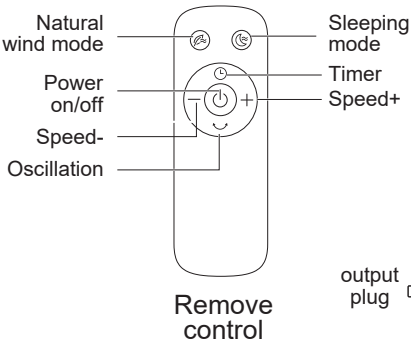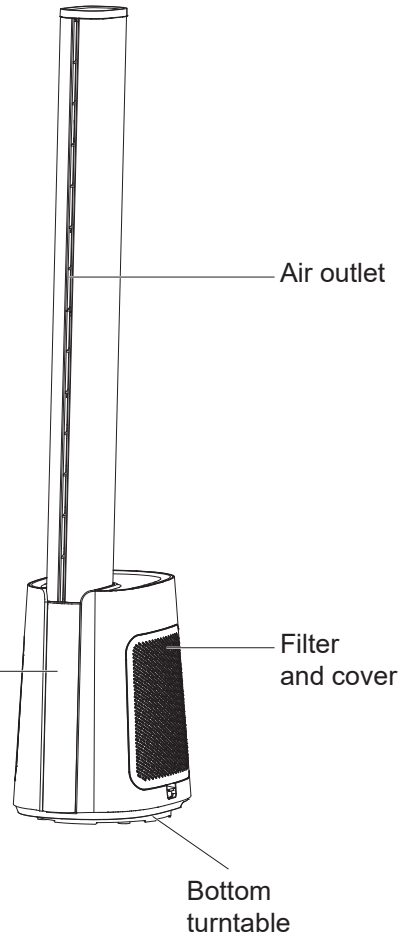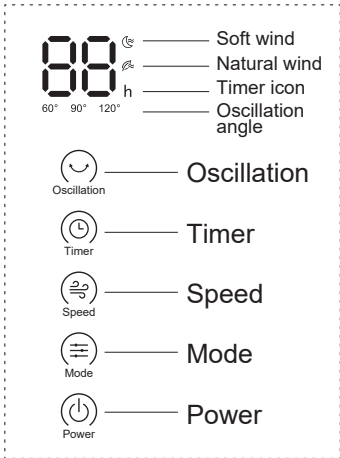



# PRODUCT SIZE

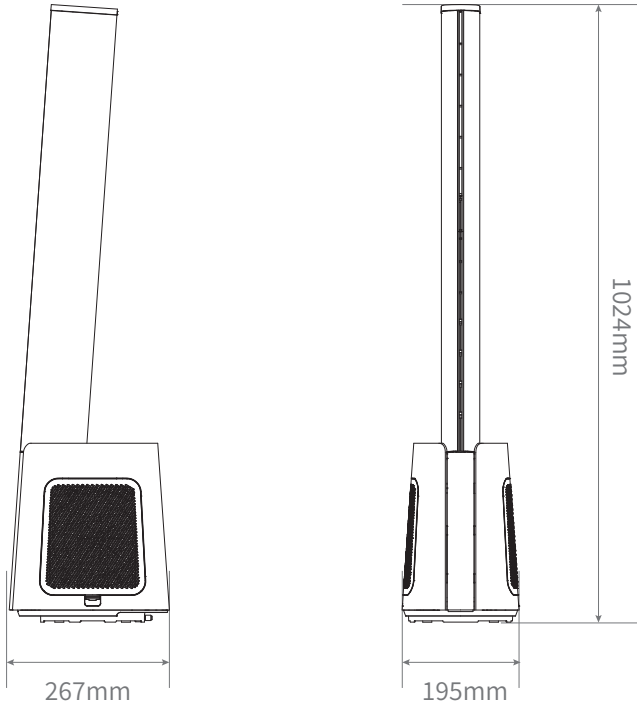 



# USING GUIDE

- After taking the bladeless fan out of the package, take out the protective piece of the adapter, place the fan on a stable ground or desktop, insert the output plug of the power adapter (DC24V 1.5A) into the power input interface at the bottom of the fan head, and then The adapter input plug plugs into a household electrical outlet.
- The fan enters the standby state, and the display lights up " - - ". Power on the fan by touching the power button on the control panel, or using the remote control to for operation.



The power interface of the fan is located on the side of the bottom turntable; the fan is worked with 8 speeds when power on by default .

# OPERATION GUIDE


## 1、 POWER ON/OFF


After plug on press the Power button “”, the machine will enter the normal work model. Press the Power button “” again, the machine will enter the standby state.



## 2、 ADJUST THE WIND SPEED

After power on, press the Speed button “” or press the “ +/- ” of the remote control to adjust the speed, the display will show corresponding speed. When it is in the highest speed “12”, if you touch the speed button “” again, the speed will continue to cycle from speed 1. The speed will not cycle during remote control operation.

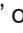
## 3、 MODE SETTING

Press the Mode “” on machine or remote control to set the wind mode, wind model will change according to Normal wind-Nature wind-Sleeping wind.



Nature wind mode: This icon of Nature wind “” will light up, the display screen will show “88”, the wind speed simulates the natural wind, and the change of large and small winds.

Sleeping wind mode: the icon of the sleeping mode “” will light up, the display screen will show “”, the wind speed will be changed to suitable for sleep.

## 4、 TIMER SETTING

Press the Timer button “” for timer adjustment during the machine is working, the “h” will flash and display the timer time. The digit will flash 5S means the setting the timer successfully and the timer will start running. The timer setting can be up to 12 hours. When “00” hours are displayed, the timer function is turned off.

## 5、 OSCILLATION SETTING

Press the Oscillation button “” start the oscillation function, the max scillation angle can be 120°. Each time touching the Oscillation button “”, the oscillation angle will be 60°, 90°, and 120° in turn, until the oscillation function is turned off.

### Pay attention!

 
**Do not forcibly turn the fan's oscillation angle or external force to hinder its normal oscillation process, otherwise it may damage the mechanical structure of the fan and affect its use.**

## 6、DISPLAY LIGHT STATUS

In normal wind and natural wind modes, if there is no operation for 60 seconds, the screen brightness will be reduced by half, and if there is no operation for 10 minutes, the screen will turn off. In sleeping wind mode, if there is no operation for 30s, the screen brightness will be reduced by half, and if there is no operation for 5 minutes, the screen will automatically turn off.

## MAINTENANCE

- It is recommended to clean and maintain the machine every 3 to 4 weeks to ensure that the fan works more efficiently and the air outlet is cleaner.

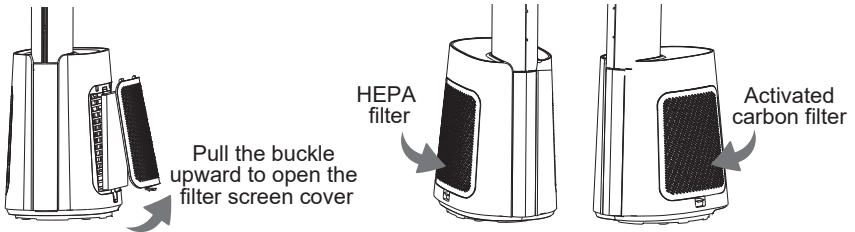

- Remove the filter of the machine, use a vacuum cleaner or a dry brush for cleaning, use a low-humidity dish towel to wipe the dust on the place where the filter is placed, put the filter back and cover it after drying.
- In order to ensure the purification effect, the filter can be replaced regularly depending on the actual situation, and the customer service staff can be consulted for the purchase of special accessories.
- When cleaning the appearance of the product, please wipe the product with a soft and clean cloth. To remove stubborn stains, be sure to use a mild and neutral detergent. After cleaning, wait for the surface to dry before turning it on.

### Pay attention!

**Before cleaning and maintenance, the power supply must be disconnected, the whole machine should not be immersed in water, and the machine should not be sprayed.**

# PRODUCT PARAMETERS

<b>Product name</b>	BLADELESS HEPA & CARBON FILTER TOWER FAN
<b>Model</b>	GBF40WH
<b>Input voltage</b>	24V $\equiv$
<b>Rated Frequency</b>	50Hz
<b>Rated power</b>	36W
<b>Input data</b>	220-240V~50-60Hz 1.2A
<b>Output date</b>	24V $\equiv$ 1.5A
<b>Product size</b>	1024*195*267 mm
<b>Net Weight</b>	3.1kg

\*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

# MALFUNCTION PRECLUDE

<b>Malfunction description</b>	<b>Possible reason</b>	<b>Measures</b>
Can not turn on the machine	The adapter is not properly plugged into the power source.	Re-plug the adapter
	Don not turn on the Power On/Off button of the remote control / control panel.	Turn on the Power On/Off button of the remote control / control panel.
	Mismatched adapter used	Use the adapter configured with the machine
	Damaged power cord	Contact Designated Maintenance center
	The circuit board is damaged	Contact Designated Maintenance center
The product has abnormal sound	Foreign objects entering the fan	Contact Designated Maintenance center
	Damaged fan blades or casing	Contact Designated Maintenance center
	Oscillation structure damage	Contact Designated Maintenance center
	Damaged motor	Contact Designated Maintenance center
Remote control is not sensitive	The remote control battery is low	Replace with new remote control batteries
	The remote control is too far away	Use close to the fan
	Remote control battery installed incorrectly	Check whether the positive and negative poles of the battery are correct
	Internal damage to the remote control	Contact Designated Maintenance center
The machine do not oscillation / or stuck when oscillation	Oscillation structure damage	Contact Designated Maintenance center
	Damaged oscillation motor	Contact Designated Maintenance center
	A foreign object is stuck on the turntable	Check and remove the foreign objects

## 重要安全事項

注意: 當使用電動工具時, 應遵循基本的安全預防措施, 以減少火災, 觸電和人身傷害的風險, 包括以下內容:

首次操作本產品前, 先閱讀所有說明, 並保存各有指示:

1. 檢查銘牌上標示的電壓。本產品應在220-240V~50-60Hz的電力供應中使用。
2. 不要使用電源延長線。
3. 不要把你的手指穿過前方的出風口。不要讓孩子把任何異物插進前方的出風口。
4. 不要讓頭髮、窗簾、桌布、衣服或窗簾旁邊的物件放在風扇的出風口。它們可能被吸入風扇內, 造成損壞或人身傷害。
5. 如風扇的電源線或插頭。在工作後、風扇跌落或以任何方式損壞, 不要繼續使用。
6. 定期檢查風扇的電源線。如果電源線損壞, 必須由售後服務部或合格的電器技師更換, 以避免危險。
7. 不要在戶外使用這風扇。
8. 不要在潮濕的地方, 如浴室使用這風扇。
9. 不要在窗口附近使用這風扇。
10. 不要使用任何半導體速度控制器來控制這風扇。
11. 如沒有底座或把風扇橫放都不應操作。
12. 請勿覆蓋電源線。將電源線放於沒有任何絆倒風險下的位置。
13. 風扇不工作時, 請把插頭拔出。在拔走插頭前, 所有的開關必須是在“OFF”位置, 然後才把插頭拔除。
14. 不要在有汽油、油漆或易燃液體的地方使用。
15. 只使用本說明書中描述的方法使用這風扇。
16. 不要試圖拆開這風扇, 用戶不可以自行進行維修。如果您需要維修, 請送回售後服務中心處理。
17. 這風扇的所有部件或零件不可由用戶進行更換。
18. 如果電源線損壞, 必須由售後服務部或合格的電器技師更換。
19. 此風扇的安全技術標準是不可連接地線的。
20. 確保本風扇不可被兒童或體弱者接觸。不要讓他們在沒有監督下使用本產品。

### 注意:

1. 本產品不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用, 除非他們曾經接受負責安全人士的監督或指導使用此電器。
2. 成年人必須指導小孩不可把玩本電器。

 
 
#### **注意:**

這風扇沒有可由用戶進行更換的部分, 用戶不可自行拆開風扇。



#### **警告:**

不要使用非本產品的控制器或硬物來控制這風扇, 這會引致火警或觸電。


# 主要零部件

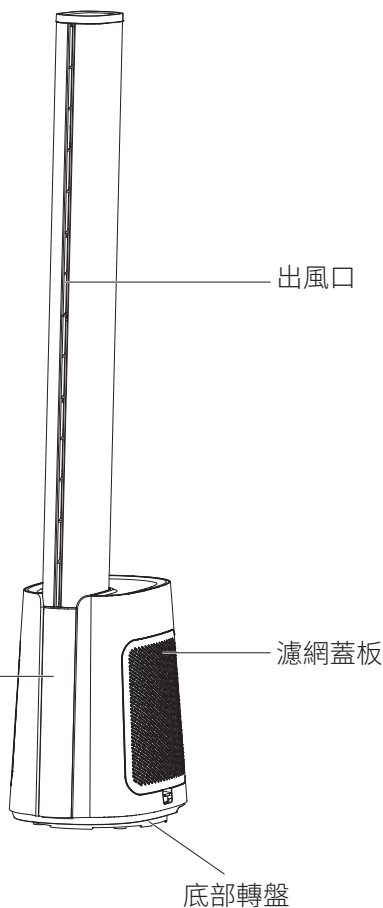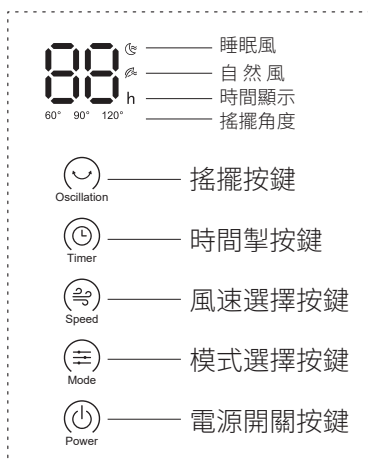

控制/狀態面板

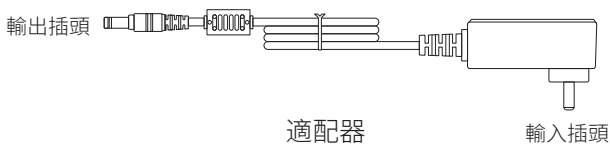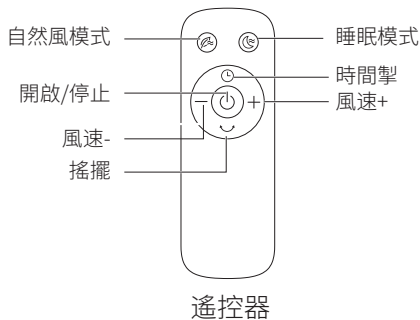  

## 產品尺寸

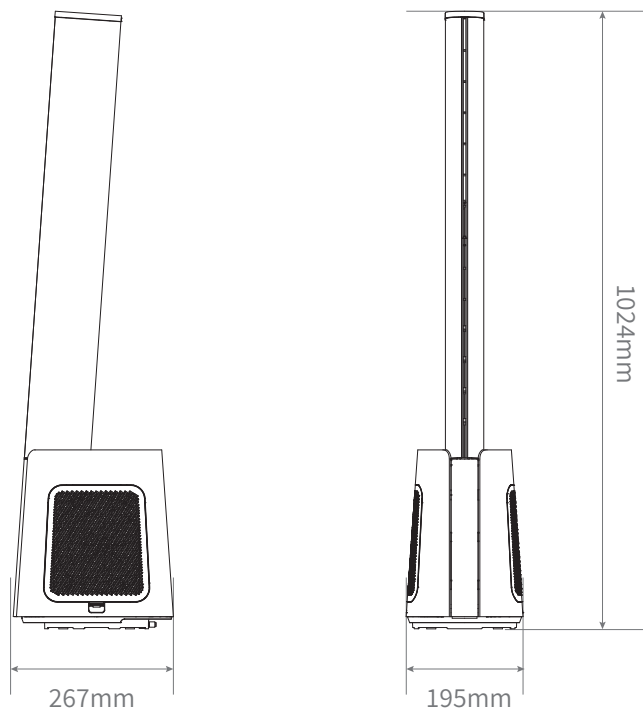 

## 使用指南



- 將無葉風扇從包裝中取出後，取出電源接頭上的保護件後，將風扇置於平穩的地面或桌面，將電源適配器輸出插頭（DC24V 1.5A）插入扇頭底部的電源輸入介面，再將適配器輸入插頭插入家用電源插座。
- 風扇進入待機狀態，顯示幕亮起“-”，可通過控制面板上觸摸電源按鍵啟動風扇，也可用遙控器進行控制操作。

風扇機身電源介面位於底部轉盤側邊處；風扇開機默認8檔風速啟動。





# 操作說明



## 1、開/關機


接通電源後在待機狀態按下**電源按鍵**“”，風扇進入普通風工作模式，再次按下**電源按鍵**“”，機器進入待機狀態。


## 2、風速調節

風扇在開機後，每輕觸**風速選擇按鍵**“”或按遙控器上風速+/-按鍵一次，機器短暫蜂鳴提示，進行加/減檔調節，機器上的數碼屏顯示相應檔位。當最高檔位到12檔，若再輕觸機身**風速選擇按鍵**“”，則檔位從1檔開始繼續循環，遙控器操作時檔位不循環。


## 3、風類設置

輕觸機身**模式選擇按鍵**“”或按遙控器風類按鍵，每輕觸機身**模式選擇按鍵**“”一次，風類按普通風—自然風—睡眠風循環變換。



**自然風模式：**自然風“”燈點亮，檔位顯示“88”，風速模擬自然風效果，大小風更替變化；

**睡眠風模式：**睡眠風“”燈點亮，檔位顯示“5L”，風速智能變化適合睡眠；

## 4、定時設置

風扇在運行時，輕觸**時間掣按鍵**“”進行定時設定，數碼屏“h”閃爍，並顯示定時時間，螢幕閃爍5秒後鎖定定時設置並開始計時運行，每5分鐘顯示一次剩餘時間，定時設定最長12小時，當顯示00時長，定時功能關閉。

## 5、搖擺設置

風扇在運行時，輕觸**搖擺按鍵**“”開啟風扇搖擺功能，風扇搖擺角度為120°，每輕觸**搖擺按鍵**“”一次，搖擺角度依次為60°、90°、120°循環變換，直至關閉搖擺功能。



 
**注意：**不得強行扳動風扇搖擺角度或外力阻礙其正常搖擺過程，否則可能損壞風扇的機械結構，影響使用。

## 6、顯示燈狀態

正常風和自然風模式下，60s無操作，螢幕亮度減少一半，10分鐘無操作，螢幕將熄滅；睡眠風模式下，30s無操作，螢幕亮度減少一半，5分鐘無操作，螢幕將自動熄滅。

## 清潔維護

- 建議每3-4周對風扇進行一次清潔維護，以保證風扇的工作更有效，出風更清潔；
- 可拆出機器過濾芯，使用吸塵器或幹毛刷對其進行清潔，可用低濕度抹布擦拭機身過濾芯放置位的灰塵，待乾燥後放回過濾芯並蓋上蓋板即可；

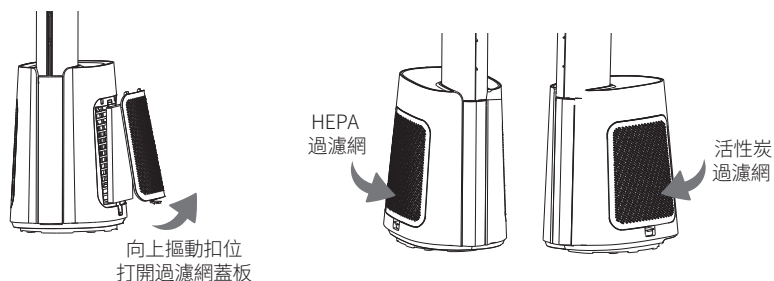

- 為保證淨化效果，機器過濾材料可視情況定期更換，專用配件購買可諮詢客服人員；
- 清潔產品外觀污漬時，請用柔軟乾淨的抹布將產品擦拭乾淨即可，如需清楚頑固污漬時，請務必使用溫和中性清潔劑。清潔完成後待表面乾燥再開機使用。

### ⚠ 注意

在清潔維護前，必須斷開電源，機身整機不可浸水，不能對風扇進行噴霧操作。

## 產品規格

產品型號：GBF40WH

額定電壓：24V ===

適配器輸入：220-240V~50-60Hz 1.2A

適配器輸出：24V ===1.5A

額定功率：36W

產品尺寸：1024高x267闊x195深 毫米

淨重重量：3.1kg

\*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

## 故障排除

故障描述	可能原因	處理措施
不能開機	電源線為正確插入電源	接插好電源插頭
	未開啟電源按鍵/觸控開關	重新觸控/按選電源按鍵
	使用了不匹配的適配器	使用隨機配置的適配器
	電源線損壞	聯繫指定維修機構
	線路板損壞	聯繫指定維修機構
產品出現異音	風機內進入異物	聯繫指定維修機構
	風葉或內殼損壞	聯繫指定維修機構
	搖擺結構損壞	聯繫指定維修機構
	電機損壞	聯繫指定維修機構
遙控器操作不靈敏	遙控器電池電量不足	更換新的遙控器電池
	遙控器使用距離過遠	靠近風扇使用
	遙控器電池安裝不正確	檢查電池正負極是否正確
	遙控器內部損壞	聯繫指定維修機構
風扇不搖擺 / 搖擺卡頓	搖擺結構損壞	聯繫指定維修機構
	搖擺電機損壞	聯繫指定維修機構
	異物卡住轉盤	檢查異物並清除

## 請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知  
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.  
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity  
between the English version and the Chinese version,  
the English version shall prevail.



## 保養登記 Warranty Registration

於網上登記新產品保養 Register your product online  
[www.dchtoolbox.com](http://www.dchtoolbox.com)



客戶服務中心 DCH ToolBox Customer Service Centre  
香港九龍灣啓祥道20號大昌行集團大廈4樓  
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210  
電郵地址 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)  
網址 Website: [www.gilman-group.com](http://www.gilman-group.com)