

gemini
ITALY

MULTI-FUNCTIONAL
SMOKELESS BBQ GRILLER

多功能無煙燒烤爐

MODEL NO. 型號: GBG1500
1500W



A GILMAN GROUP BRAND

Please read and retain this manual for future reference.

SAFETY INSTRUCTION - GENERAL

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Only use the attachments/accessories supplied with the product.

SAFETY INSTRUCTIONS - ELECTRICITY AND HEAT


- Ensure the appliance is placed on a horizontal, even and stable surface.
- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.

SAFETY INSTRUCTIONS - DURING OPERATION

- The body and the heating element get very hot during use. Beware of the hot surfaces while the appliance is operating.
- Operate the appliance only with the heating element in place and perfectly locked.
- Always fill the oil collecting tray with water before you switch on the appliance. This is to:
 - reduce the generation of smoke while grilling
 - facilitate cleaning
- This appliance is not intended for use with charcoal.
- Make sure the appliance stands stable and safe on a heat-resistant surface.
- DO NOT place the appliance on stove top surface.
- Be careful not to position the appliance right against the wall or into a corner. Always keep a distance from at least 15 cm.
- Make sure that no inflammable materials are adjacent to the grill.
- Wear oven mitts when handling hot components or touching hot surfaces.
- The glass lid and handle get very hot. Always use oven mitts.
- Clean the appliance thoroughly after use (please refer to “Cleaning and Maintenance” section.)


PRODUCT OVERVIEW

The appliance is intended only for domestic use, not for professional use.

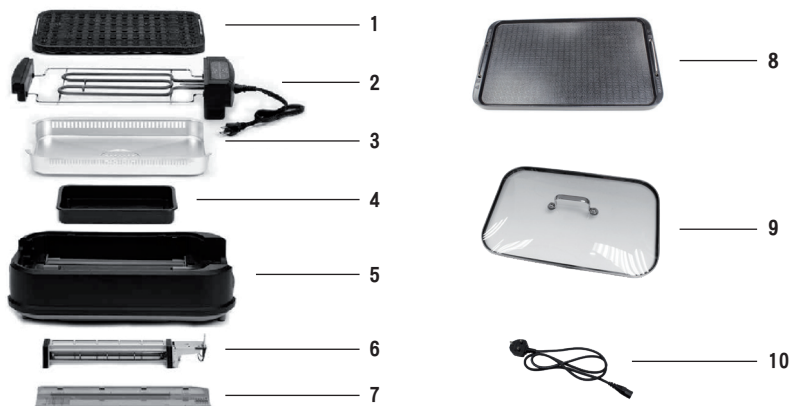

1. Non-stick grill plate
2. Control panel & heating element
3. Heat-insulation tray
4. Oil collecting tray
5. Base unit
6. Detachable electric fan
7. Detachable fan cover
8. Teppanyaki plate
9. Glass lid
10. Detachable power cord

TOUCH SCREEN CONTROL PANEL

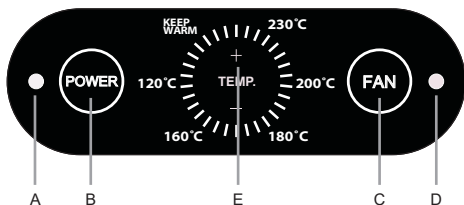

- A. Power indicator
- B. Power On/ Off button
- C. Fan On/ Off button
- D. Fan indicator
- E. Temperature Increase/ Decrease button
(KEEP WARM-120°C-160°C-180°C-200°C-230°C)

OPERATING INSTRUCTION

- Install Handle:
Please refer to Pic. 1, install the handle on the glass lid properly.
- Place the oil collecting tray (PRODUCT OVERVIEW item 4) at the bottom of the base and fill with approximately 100ml of water.
- Please refer to Pic.2, place the heat-insulation tray (PRODUCT OVERVIEW item 3) on the base align the arrow direction.
- Please refer to Pic.3, make sure to install the connector of the control panel & Heating element into the hole of the heat-insulation tray tightly, ensuring that the parts are in the recess.
- Fix the grill plate on the heating elements.
- Insert the plug into a plug socket. The red power indicator is flashing.
- Press the power button once, the red power indicator is continuous lighting, then set the desired temperature.
- Press “+” or “-“ button to increase or decrease the temperature (TEMP. range from Keep warm-120°C-160°C-180°C-200°C-230°C)
- Press the Fan button once, the fan will turn on and the fan indicator will light up.
- NOTE: Suggest the fan to keep running throughout the grilling process to prevent grease build up.
- This appliance has a safety protection function, after operating around for 90 minutes, the appliance will turn to standby mode (The red power indicator flashes). To continue using the appliance, please press the power button once, the red power indicator light becomes steadily, then set the desired temperature.
- The grilling time vary according to the nature of the food and to your personal taste.
- When grilling has finished, turn the appliance off and disconnect the grill from the mains supply socket.



Pic 1



Pic 2



Pic 3

OPERATION-BEFORE USE FOR THE FIRST TIME


- Remove all packing materials, labels and stickers.
- Clean the griller and its accessories.
- When the griller is first switched on, the grill may emit smell. A small amount of smoke may also be noticeable. It is recommended heating the appliance for approx. 5 minutes without any food. Ensure the room is well ventilated because of the smell of the coating material. Do not use this appliance for grilling in the meantime.

TIPS

- Do not grill large pieces of meat. This will avoid the inside from still being raw when the outside is cooked.
- You can grill vegetables, fish, meat or vegetarian products.
- Small products that may fall through the grille, please replace the grill plate with Teppanyaki plate or use aluminum foil.
- To prevent scratching the coating, it is recommended to use non-metallic utensils. DO NOT slice food on the grill plate using sharp utensils, such as knives and forks.

REMOVING THE ELECTRIC FAN

If you are thoroughly cleaning the base unit with water and detergents, please remove the Electric Fan. When placing the fan back to its position, make sure to insert the two-prong connection into the inner cavity.

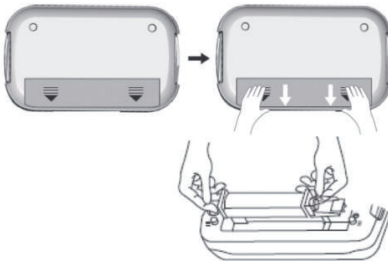

1. Turn over the base unit.
2. Use a screwdriver to remove the screws on the fan cover.
3. Slide down and remove the fan cover.
4. Lift the fan out of the base unit.

CAUTION: Unplug the power cord before removing fan.

CLEANING AND MAINTENANCE

- Clean the appliance after every usage. Switch off the appliance and unplug power cord from the socket before to clean the appliance. DO NOT clean it until the surface cools down.(Cool down at least 30 minutes)
- Make sure that unplug the power cord from the mains supply socket after use, before cleaning and storing.
- Clean the grill plate, teppanyaki plate, heat-insulation tray, oil collecting tray, glass lid with a piece of wet cloth and neutral detergent.
- Never immerse the heating element in water or liquids.
- Clean the heating element with a clean dry cloth only.

PRODUCT SPECIFICATIONS

Model no.: GBG1500

Voltage: 220-240V~

Frequency: 50/60Hz

Output power: 1500W

Product dimensions: 498 (W) x 130 (H) x 300 (D) mm

*** The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.**

請仔細閱讀這說明，並保存以供日後參考。

安全指引 - 一般安全

請按照這些說明事項，使用本產品。

- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩弄本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 只可使用隨機附送的配件。


安全指引 - 電子產品

- 請把本產品放置在平穩的表面上使用。
- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。

安全指引 - 操作期間


- 機身和發熱管在使用過程中會非常熱。當本產品使用中，小心熱表面。
- 只有組裝發熱管在正確位置及完全鎖定後才能操作本產品。
- 打開本產品前請在托盤裝入水。這是為了：
當燒烤時減少煙霧的產生
方便清潔
- 這設備不適合和木炭使用。
- 燒烤架放置在一個穩定的和安全的耐熱表面上。
- 切勿將本機放置於爐頂上。
- 小心不要放烤爐正對著牆壁或一個角落裡，要保持在至少15厘米的距離。
- 確保沒有易燃材料在本產品附近。
- 在處理受熱部件或接觸熱表面時，請戴上烘培手套。
- 操作中，玻璃蓋子和把手會較熱，拿放時請戴上烘培手套。
- 使用後，請清潔本機（請參閱“清潔和保養”部分。）

部件示意圖

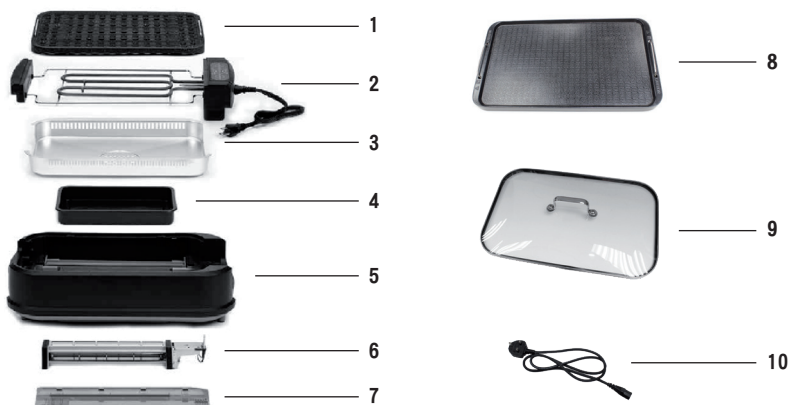

- | | |
|----------------|------------|
| 1. 不沾塗層烤盤 | 6. 可拆卸電風扇 |
| 2. 可拆卸控制面板和發熱管 | 7. 可拆卸電風扇蓋 |
| 3. 隔熱盤 | 8. 煎盤 |
| 4. 盛油盤 | 9. 玻璃蓋 |
| 5. 底座 | 10. 可拆卸電源線 |

輕觸式控制面板

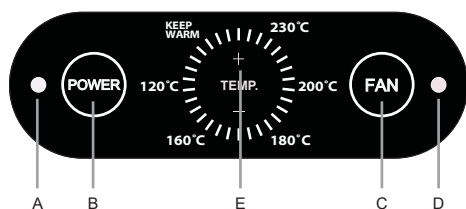

- | | |
|----|--|
| A. | 電源指示燈 |
| B. | 電源開/關鍵 |
| C. | 風扇開/關鍵 |
| D. | 風扇指示燈 |
| E. | 溫度增加及減少鍵
(保溫-120°C-160°C-180°C-
200°C-230°C) |

使用說明

– 手柄安裝:

請參考圖 1，將手柄正確地安裝在玻璃蓋上。

- 將盛油盤(部件示意圖第4個項目)裝入底座最底層，然後裝入約100毫升的水。
- 參閱圖1，將隔熱盤(部件示意圖第3個項目)對著箭咀方向安裝好。
- 參閱圖2，將底座兩支電極棒對準發熱管的相應孔位，往下安裝，確保該組件是在凹槽中。
- 將烤架放置在發熱管上。
- 將插頭插入電源插座。紅色電源指示燈閃爍。
- 輕觸電源開/關鍵一次，紅色電源指示燈長亮，這時可設置所需的溫度。
- 輕觸 “+” 或 “-” 鍵來增加或減少溫度。(溫度範圍:保溫-120°C-160°C-180°C-200°C-230°C)。
- 輕觸風扇鍵一次，風扇功能將開啓以及風扇亮起。

注意: 在操作時，建議保持風扇開啓，防止油脂積聚。

- 本產品有安全保護裝置，在工作約90分鐘後，將會轉為待機狀態(紅色電源指示燈閃爍)，若用家需再使用，請輕觸電源開/關鍵一次，紅色電源指示燈長亮，再設所需溫度。
- 燒烤時間根據食品種類和個人口味而有所不同。
- 當結束燒烤後，關閉本產品，並從主電源插座上拔下插頭。



圖1

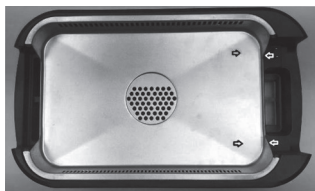 


圖2



圖3

電極棒

操作-首次使用之前

 
- 拆除所有包裝材料，標籤和貼紙。
- 清潔烤爐及其配件。
- 當烤爐第一次接通電源，會發出氣味和少量的煙霧。建議先加熱約 5分鐘，確保室內通風良好，因為塗層材料會產生氣味，預熱期間不要使用本機。

溫馨提示

- 不要用水和洗滌劑徹底清潔底座，需要拆下電風扇。當拆卸風扇時，請確保插入內腔的兩孔中。
- 不要用水和洗滌劑徹底清潔底座，需要拆下電風扇。當拆卸風扇時，請確保插入內腔的兩孔中。
- 你可以烤蔬菜、魚、肉或素食產品。
- 細塊的食物，可能會從烤盤上掉落，可在煎盤或鋁箔上烹煮。
- 為了防止劃損塗層，建議使用非金屬用具。切勿使用刀叉等鋒利的用具在烤盤上切食物。

拆卸電風扇

如果想用水和洗滌劑徹底清潔底座，需要拆下電風扇。當拆卸風扇時，請確保插入內腔的兩孔中。

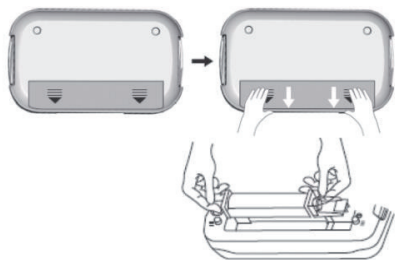

1. 把底座翻過來。
2. 用螺絲批取下風扇後蓋上的螺絲釘。
3. 向下滑動和拆卸風扇後蓋。
4. 將風扇從底座上提起。

注意事項：在拆卸風機之前，請先拔掉插頭。

清潔及保養

- 每次使用後，請清潔本機。
- 每次使用後都要清潔本機。在清潔本機前，請關閉本機並從插座上拔下電源線。待表面冷卻後再進行清潔（冷卻至少30分鐘）
- 使用後，在清潔和儲存前，確保插頭已經從電源插座上拆除。
- 用一塊柔軟濕布和中性清潔劑清潔烤盤、煎盤、隔熱盤、盛油盤、玻璃蓋。
- 切勿將發熱管浸入水或液體中。
- 僅使用乾淨的乾布清潔發熱管。

產品規格

型號：GBG1500

電源：220-240V~

頻率：50/60Hz

熱量輸出：1500瓦

產品尺寸：498(闊) x 130(高) x 300(深) 毫米

*** 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。**

請記錄下列產品資料

● 型號

● 機身編號

● 經銷商名稱

● 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com

Proudly Serviced by:



太平家庭電器