

gemini
ITALY

7" RECHARGEABLE DC AIR
CIRCULATION FAN

7吋充電式DC循環風扇

Model No./型號 : GCF07WH

Please read this instruction manual carefully
before use and keep it for future reference
請於使用前仔細閱讀本說明書並加以保存

SAFETY INSTRUCTIONS

1. Please read these instructions carefully and retain for future reference.
2. This appliance is not intended for use by persons (including children under 8 years old with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
4. Use this appliance solely in accordance with these instructions.
5. Never use the appliance outdoors and in a humid room.
6. Before start use, ensure the power supply same as indicate at the appliances. All power supply should be earthed.
7. Appliances should place at a stable platform, keep away from children.
8. If the power cable is damaged, contact service center to replace a new cable. Do not change by yourself.
9. While selecting the features, do not press the button with great force, it will damage the button and control panel.
10. Any faulty operation, must turn off power and unplug the power supply. Do not unplug while your hand is wet, it will get electric shock.
11. Do not pull the line along sharp object / sharp edges, crimp the wire or let it hang down. Also put away from hot and wet .
12. Do not insert any metal object into to the heat dissipation holes / gaps, otherwise it will damage / danger the of electric shock.
13. Do not place the product on the surface or beside extreme heat condition, such as oven etc.
14. It is forbidden to use this product on an unstable / inclined platform to avoid accident such as injury or fire cause by products falling over.

15. For the first time use or use after long-term storage, please fully charge the product. Please use the power adapter of 5V/2A or above which need a safety certification, and a standard charging line to charge the product.

16. Before long-term storage, please fully charge the product. Please charge the battery to at least 85%. It is recommended to charge the battery every 2-3 months to extend its service life. Otherwise, the service life of the battery will be affected and the product cannot be used normally.

Notice! This product is only suitable for household use.



Product Structure

The front of front net cover

(The front of front net cover is detachable, Rotate counterclockwise to remove it. When installing it, align the card position and rotate clockwise)

Control panel

Infrared receiving hole

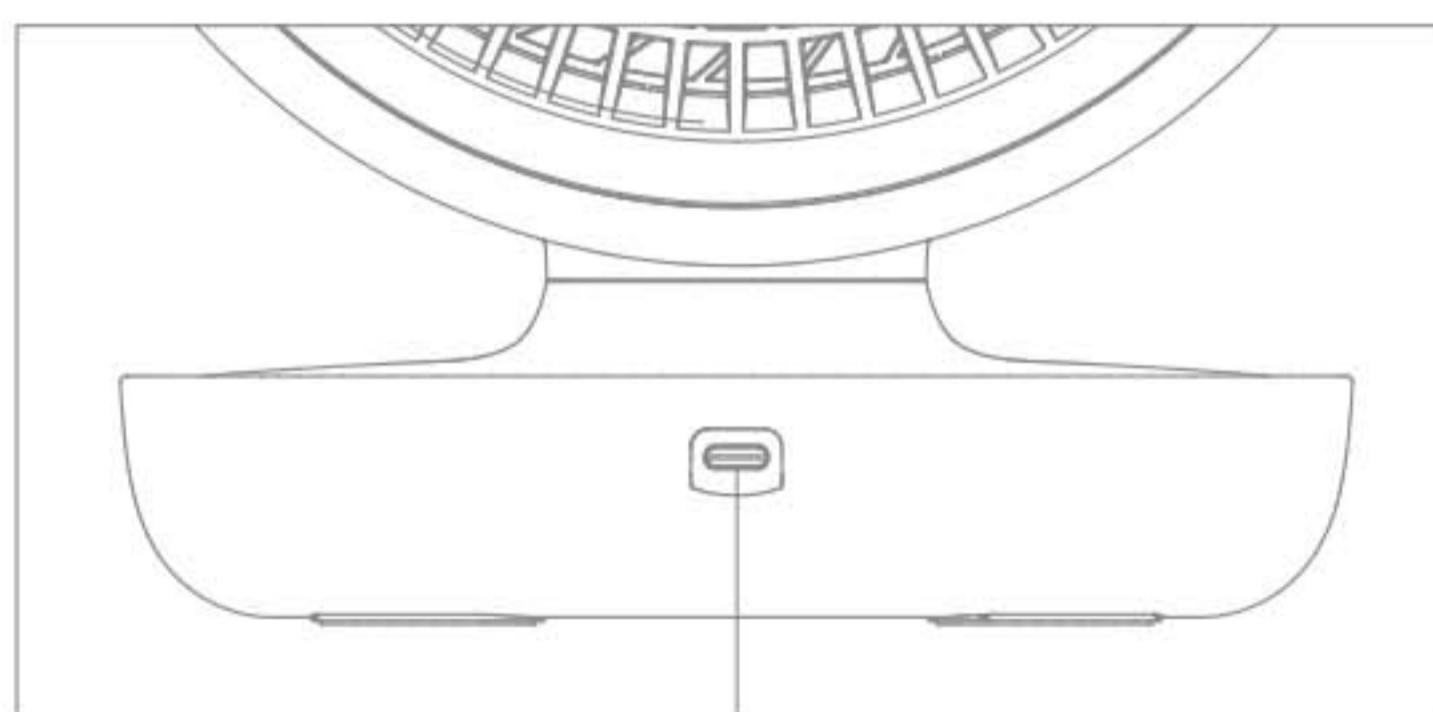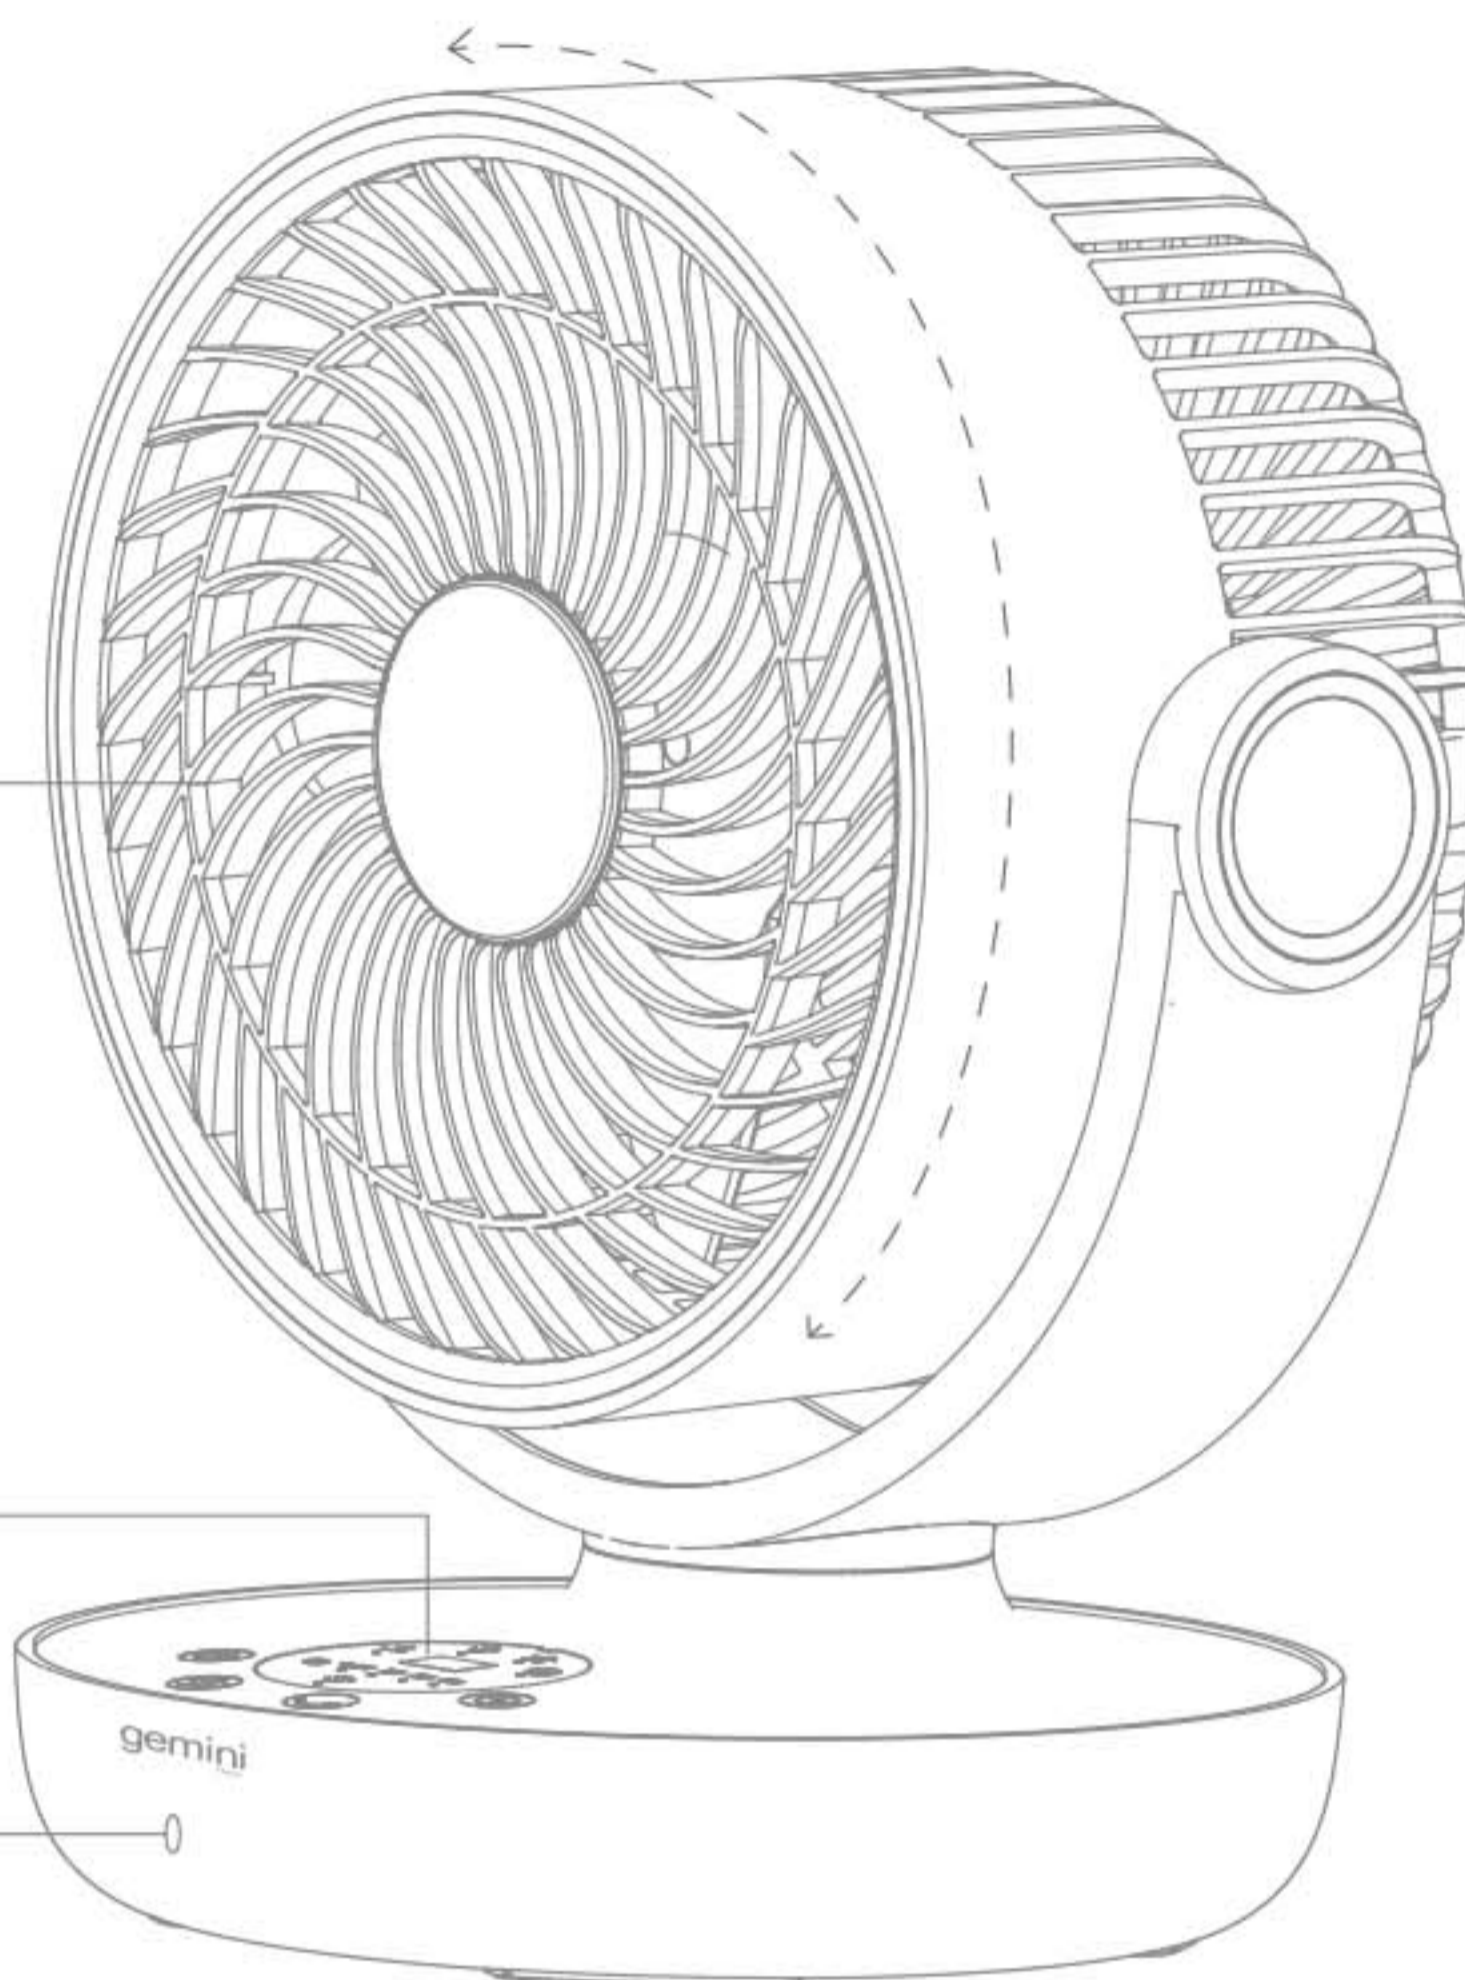

Type-C

On/off button

Rotation button



Gear button


Timing button

gemini


Usage time	First gear about 14H Second gear about 8.5H Third gear about 4.5H Natural wind about 8H
Battery capacity	10000mAh 3.7V
input	DC5V 2A
Charging time	About 8 hours
Product size (H×W×D) about	250*213*179mm

The service time varies with temperature/humidity. The above service time is only for reference

The introduction of control panel

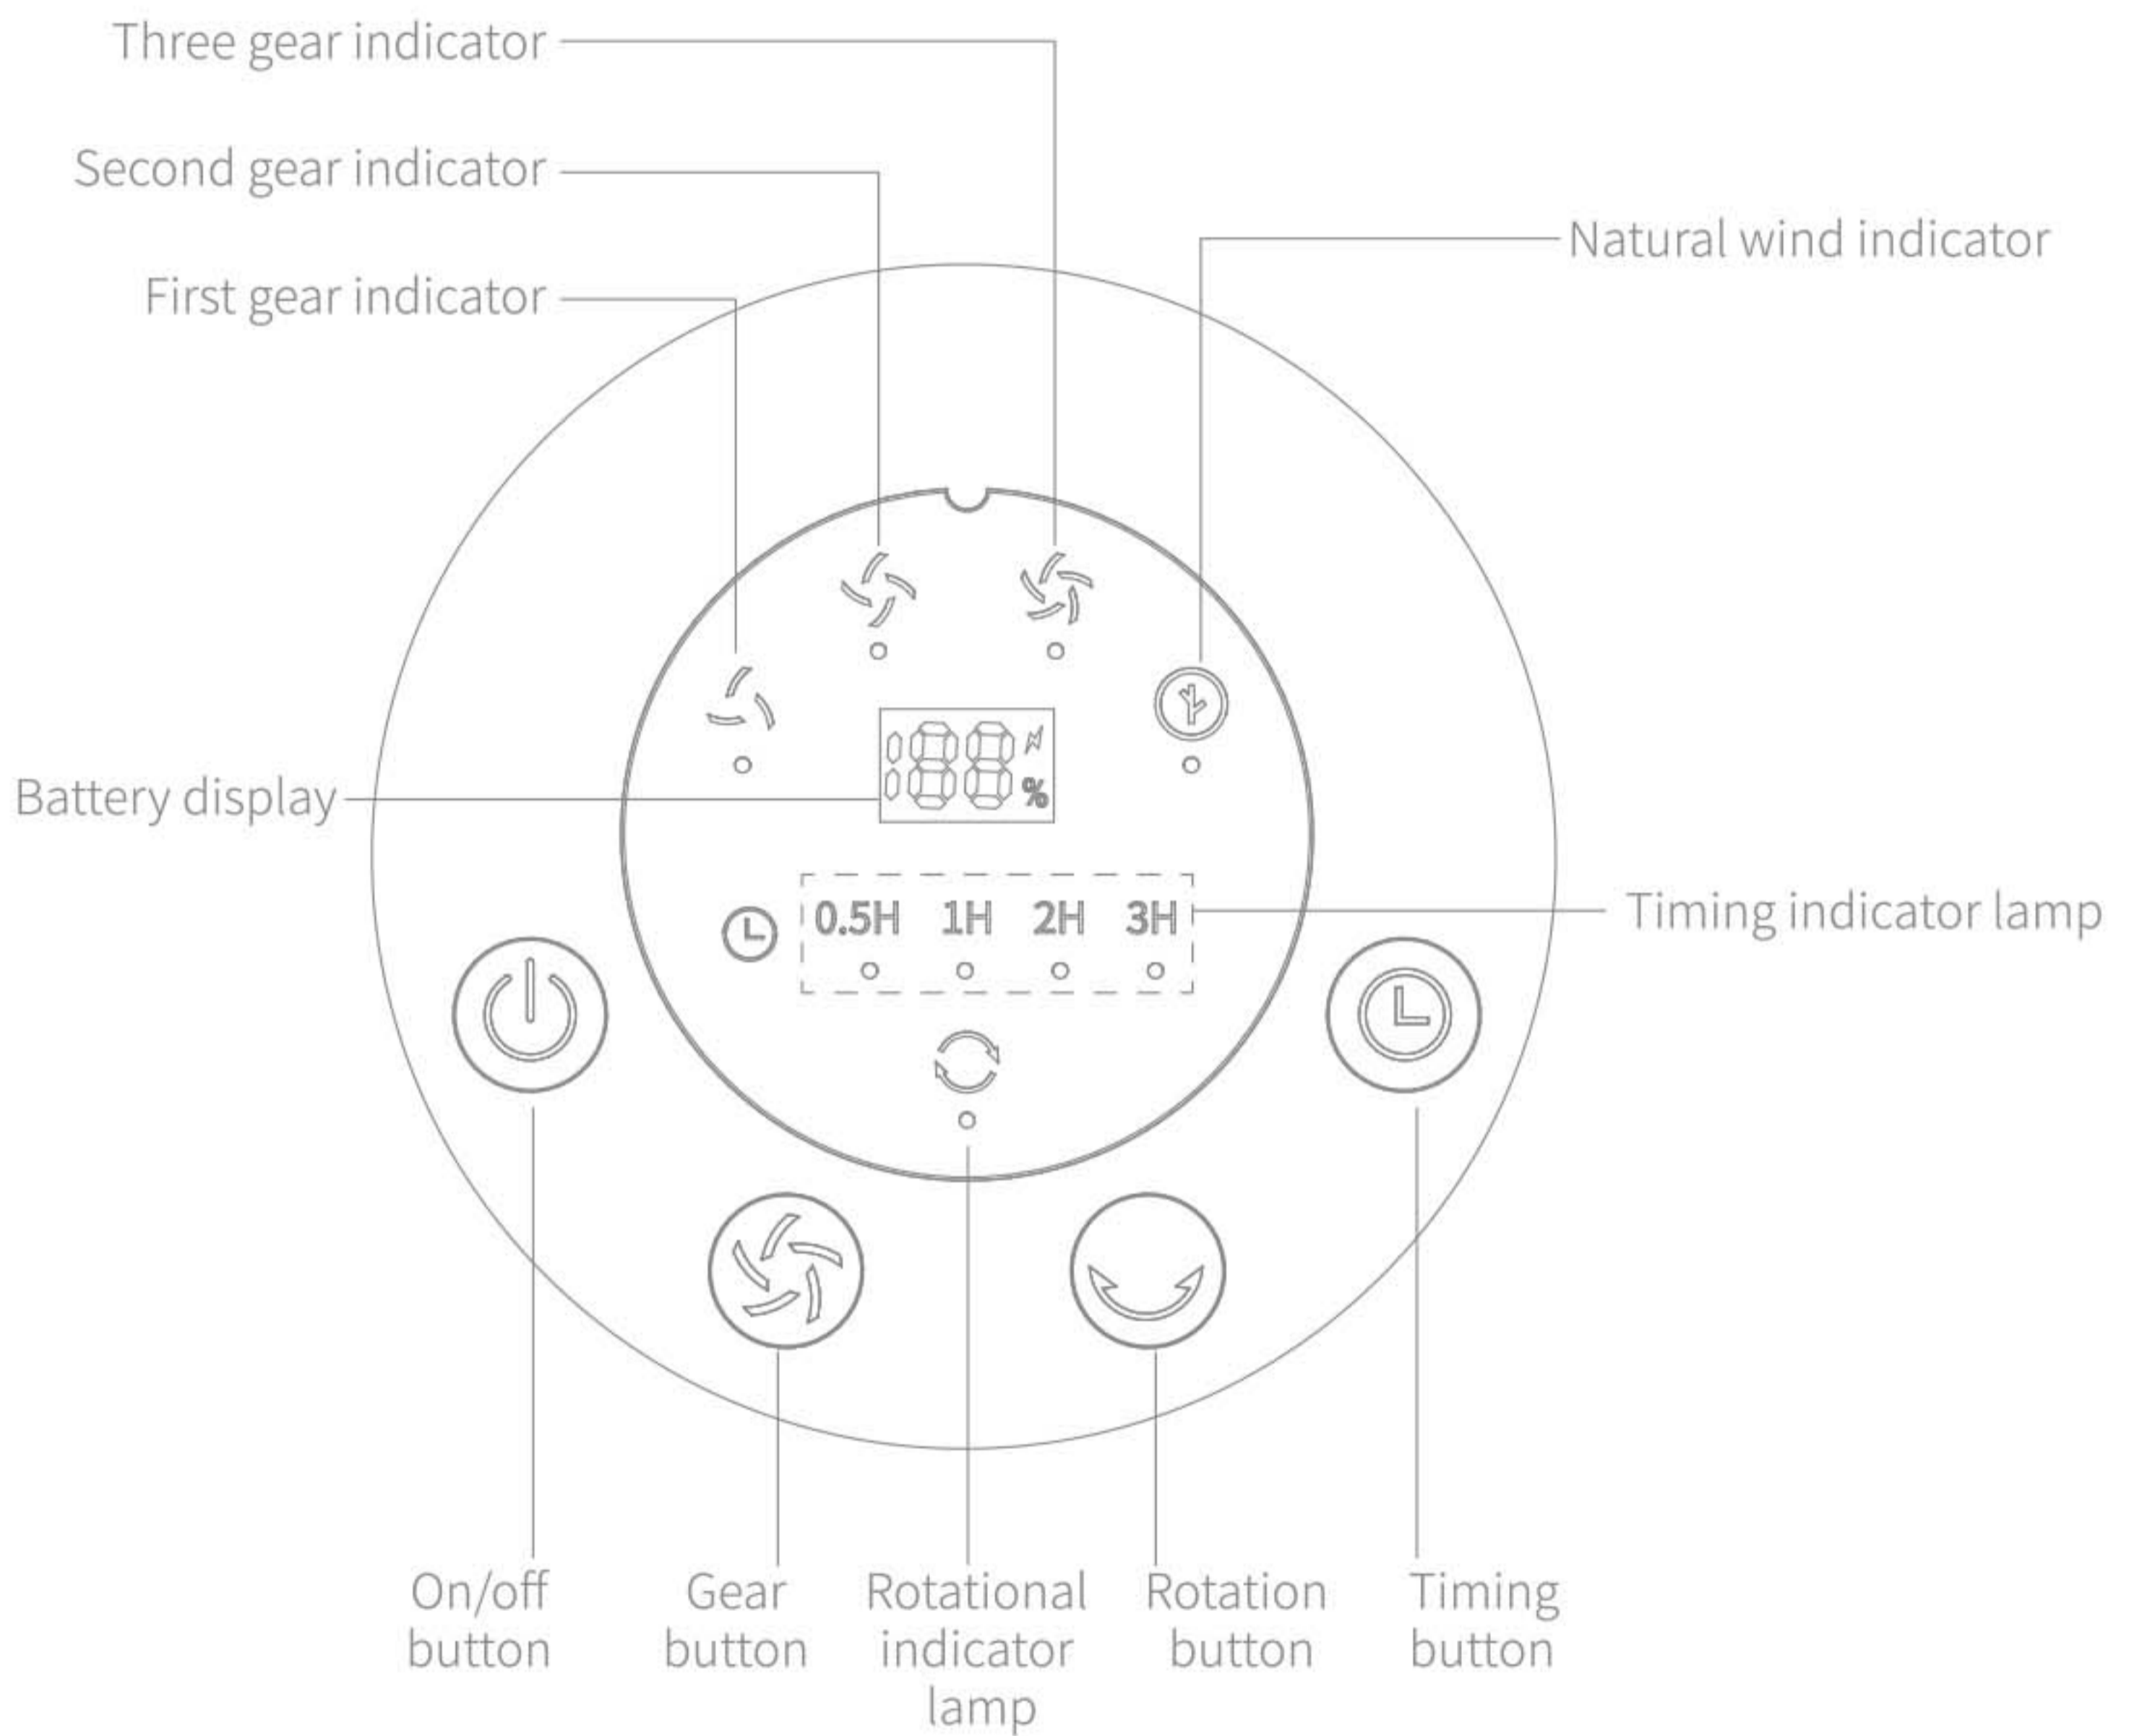

Cleaning method

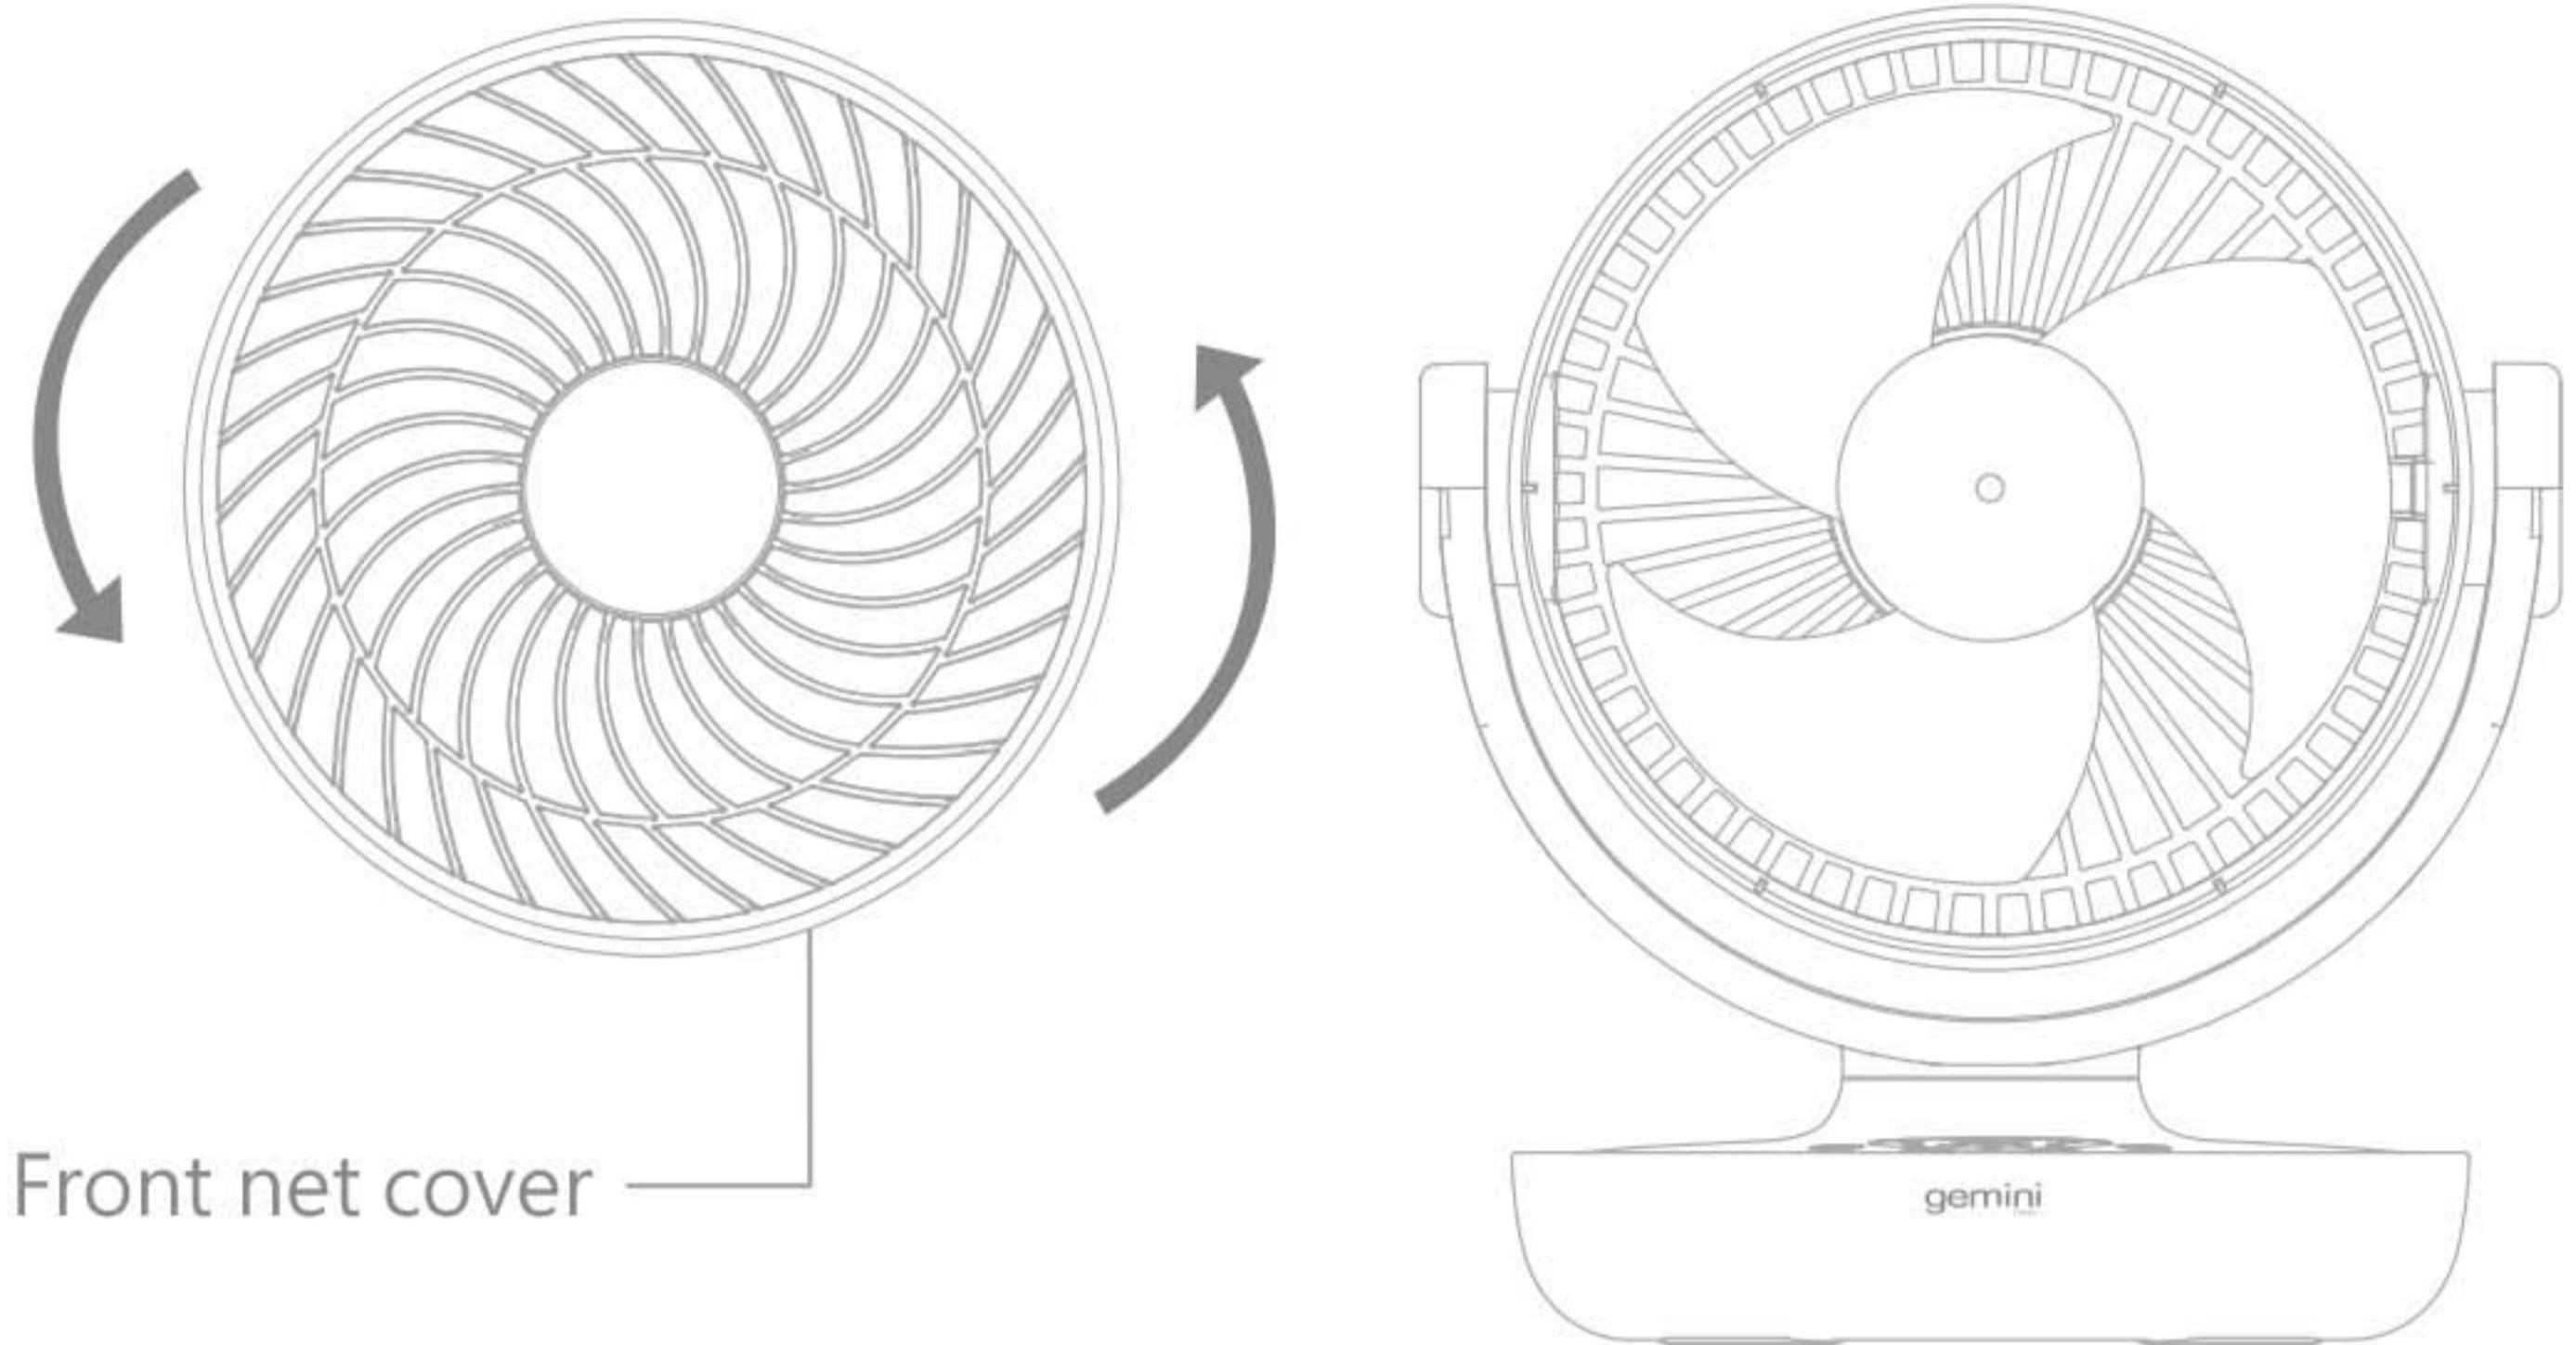

1. Turn off the fan.
2. Rotate the fan Front net cover counterclockwise to remove front net cover.
3. Wipe the fan with a clean cloth.
4. Do not put the whole machine into water for cleaning.
5. Unplug the anti leakage film before use.
6. The control mode of the remote control is the same as that of the set-top control panel.
7. A 3V lithium battery (model CR2025) has been installed in the remote control

Note: The fan must stop working before wiping it; If the fan is not waterproof, do not put it into water; Without supervision, Children must not clean

How To Use This Product

1.ON/OFF



Turn on: Short press the  button, it is the first wind speed, and the first wind speed indicator lights up, the remaining battery capacity will be displayed digitally at the same time.

Turn off: In the turn on state, short press the  button, the fan stops working.

2.The gear adjustment

The default is first wind speed when turn on,, short press the  button to switch gears, and the corresponding gear indicator lights up.


3.Rotation settings

Left and Right Rotation: While the fan is on, press the  button to turn on the left and right rotations. Press the  button again to fix the rotation angle.



If the fan stops working, the fan automatically returns to the starting position.

Up and down rotation: Manually adjust the angle of up and down fan.


4.Timed shutdown

In the turn-on state, short press the  button to cycle to switch the timing shutdown gear: 0.5h, 1h, 2h, 3h, and then turn off the timing. if the fan is turned off halfway, the timing will also be turned off.

5.Battery display

When the fan is on or charging, the battery display shows the current charge, long press the  button to close the display screen, and the display is restored after pressing any other keys (The display cannot be turned off while charging) .When the fan is charged, the  symbol is stroboscopic and always on when it is fully charged. When the charge is less than 10%, the digital displays battery capacity will stroboscopic.

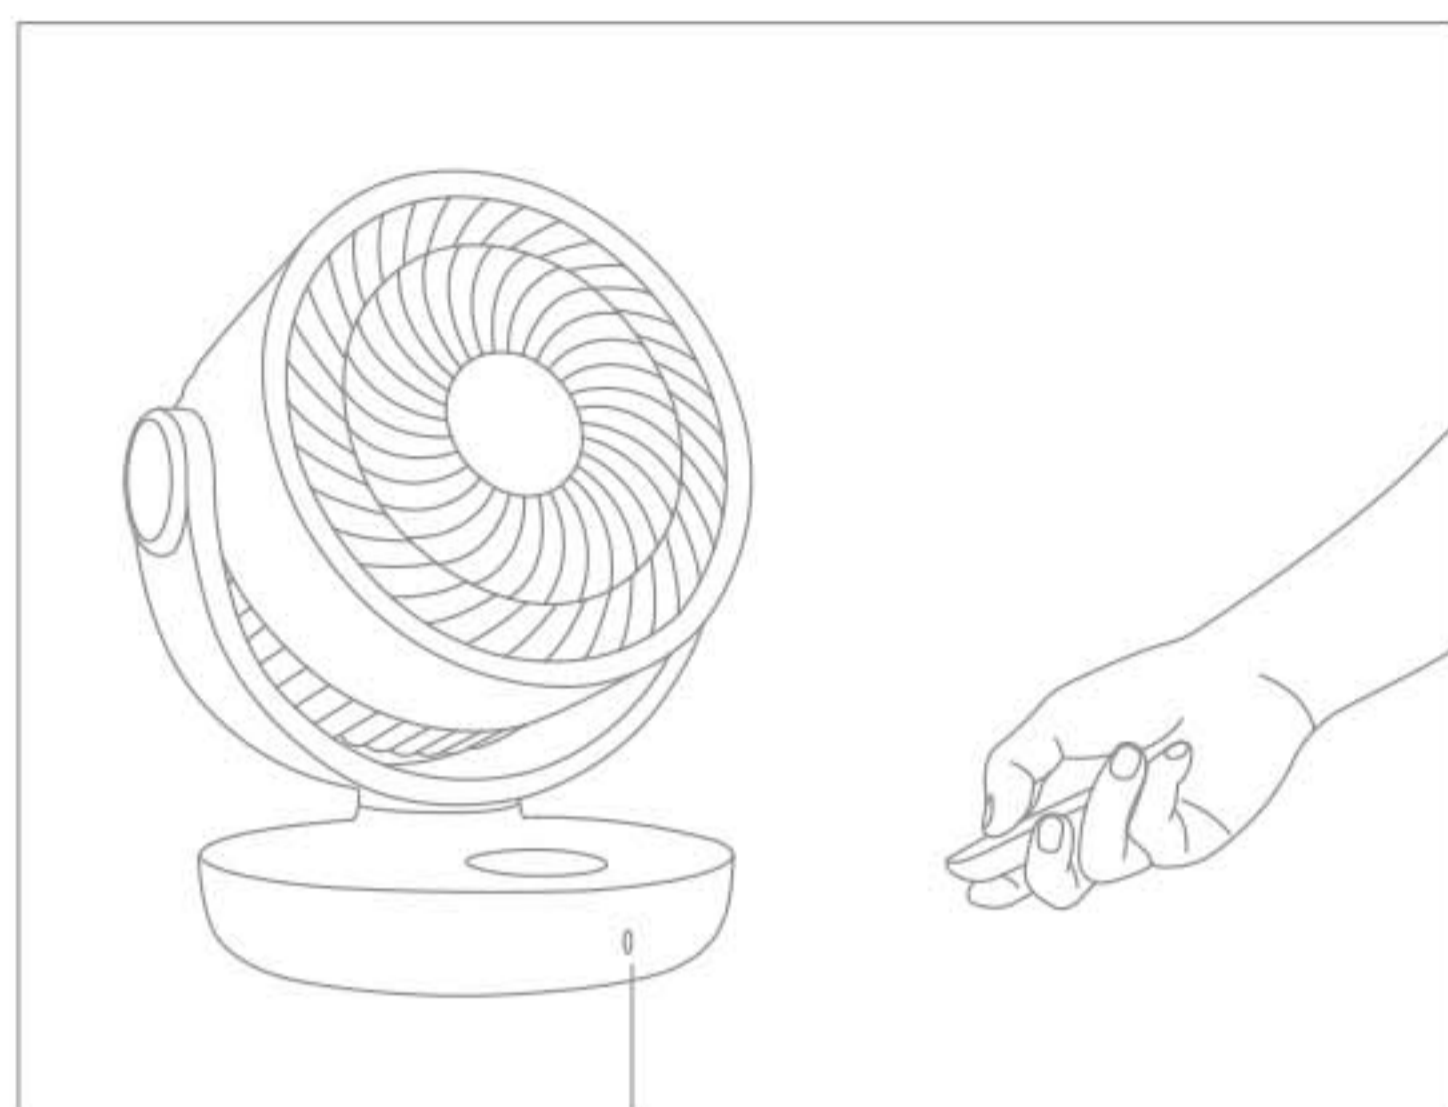

How to use the remote control



Infrared receiving hole


When using the remote control, please pay attention to the infrared receiving hole.

In order to save power, the product will start the timed power-off function every 12 hours, and the remote control function will also be turned off. The remote control function can only be started by pressing the key on the product.

When the remote control does not press the  switch, when pressing other function keys will make a "tick" sound, but it will not work. Press the remote control  switch first: the fan can be used normally, when it is turned on.

You need to press the key  the product to start the remote control function.

Package Content

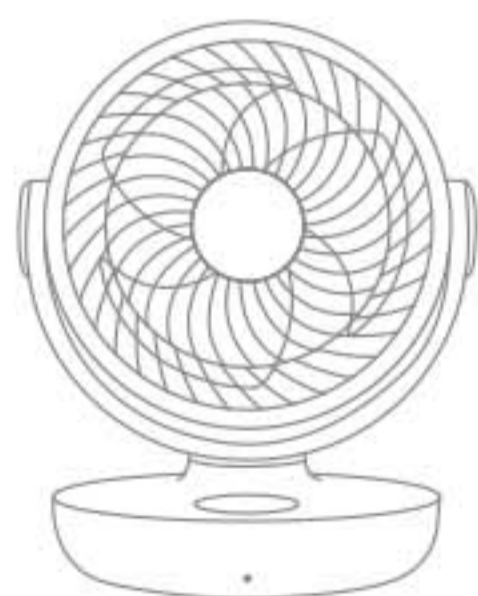

Main body



Remote control



Type-C Charging Cable




Instruction manual

安全指引

1. 請於操作前詳閱操作指引,避免使用不當而造成損壞或危險。
2. 8歲以下兒童、傷健人仕、精神及感官受到影響及缺乏操作常識和經驗者不適宜獨立操作此產品。如需操作需有相關人仕從旁指引及對其行為安全負責。
3. 如本產品出現問題，請聯絡代理商或合資格人仕處理並不要自行對其進行維修以免發生危險。
4. 本產品只適用於家居室內操作，並不適用於商業用途及不要在濕度高的室內使用。
5. 使用前請確保插座的接地有效，同時請確認輸入電壓為220-240V~50-60Hz。
6. 如果電源線損壞，必須用專用的軟線或從其製造商 或維修部買到的專用組件來更換。
7. 操作按鍵時不可用力過猛,以防按鍵損壞。
8. 在使用過程中，若發生問題時，請先將電源插頭從插座上拔下；禁止濕手拔、插插頭，以免觸電。
9. 不可沿尖端物或鋒利邊沿來拽線、壓線或讓它懸垂下來，同時要遠離熱源和濕源。
- 10.不要將金屬等異物插入散熱孔或間隙中，否則可能導致電路損壞。
- 11.切勿將本產品放置在帶熱源的表面上或熱源旁，如焗爐等。
- 12.禁止放置在不平或傾斜的臺面上使用本產品,避免產品容易傾倒引起傷害或火災等事故。
- 13.不要在地毯、塑膠凳不耐熱的表面或者附近使用，會因蒸汽受損的物體不要放置在本產品上方。
- 14.本產品不適用於兒童、精神病患者或缺乏經驗的人 使用或把玩本產品。
- 15.首次使用或长期存放后使用，请将产品充满电，请使用经过安全认证的5V/2A及以上的电源适配器和标配的充电线给产品充电
- 16.长期存放前,请将产品充满电,请至少将电池充电至85%，并建议每2-3个月充电一次，以延长电池使用寿命,否则会影响电池使用寿命,导致产品不能正常使用

注意! 此產品只適合家庭用途。


產品結構

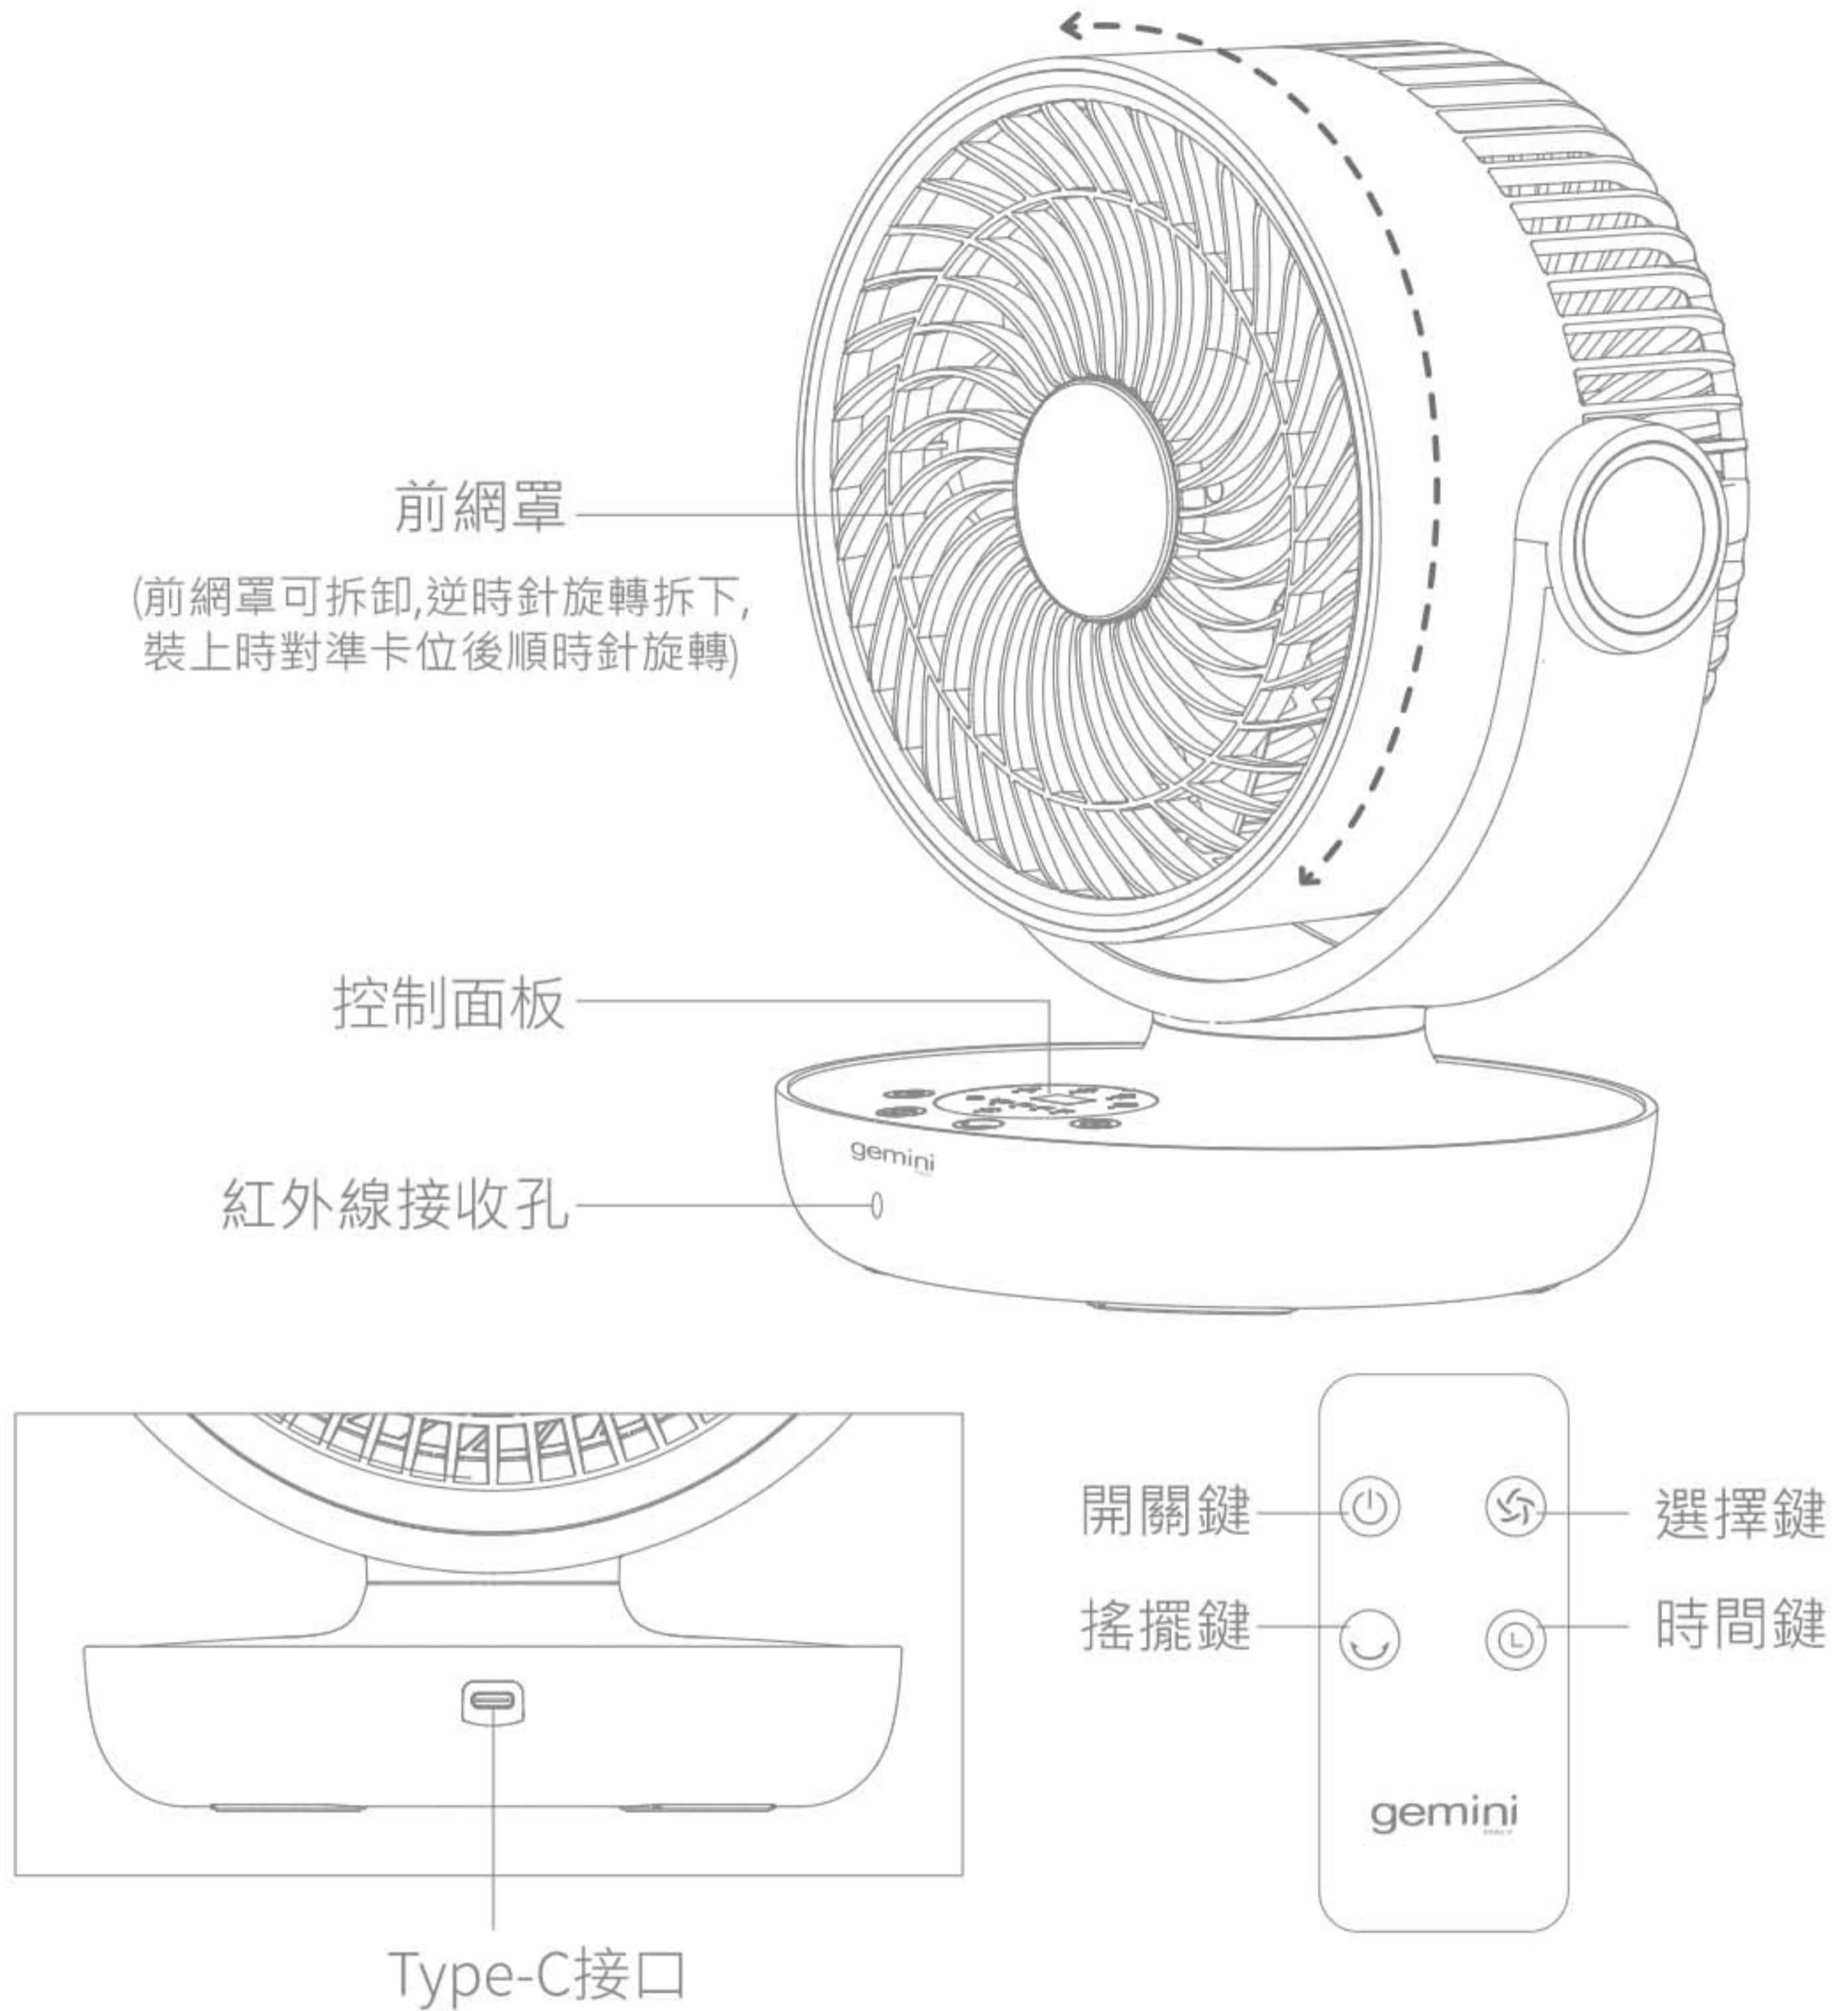


使用時間	一段風大約 14小時 二段風大約 8.5小時 三段風大約 4.5小時 自然風大約 8小時
電池容量	10000mAh 3.7V
輸入	DC5V 2A
充電時間	約8小時
產品尺寸 (高×闊×深) (約)	250*213*179毫米

不同溫度/濕度使用時間會有差異. 以上使用時間, 只能作參考

控制面板介紹

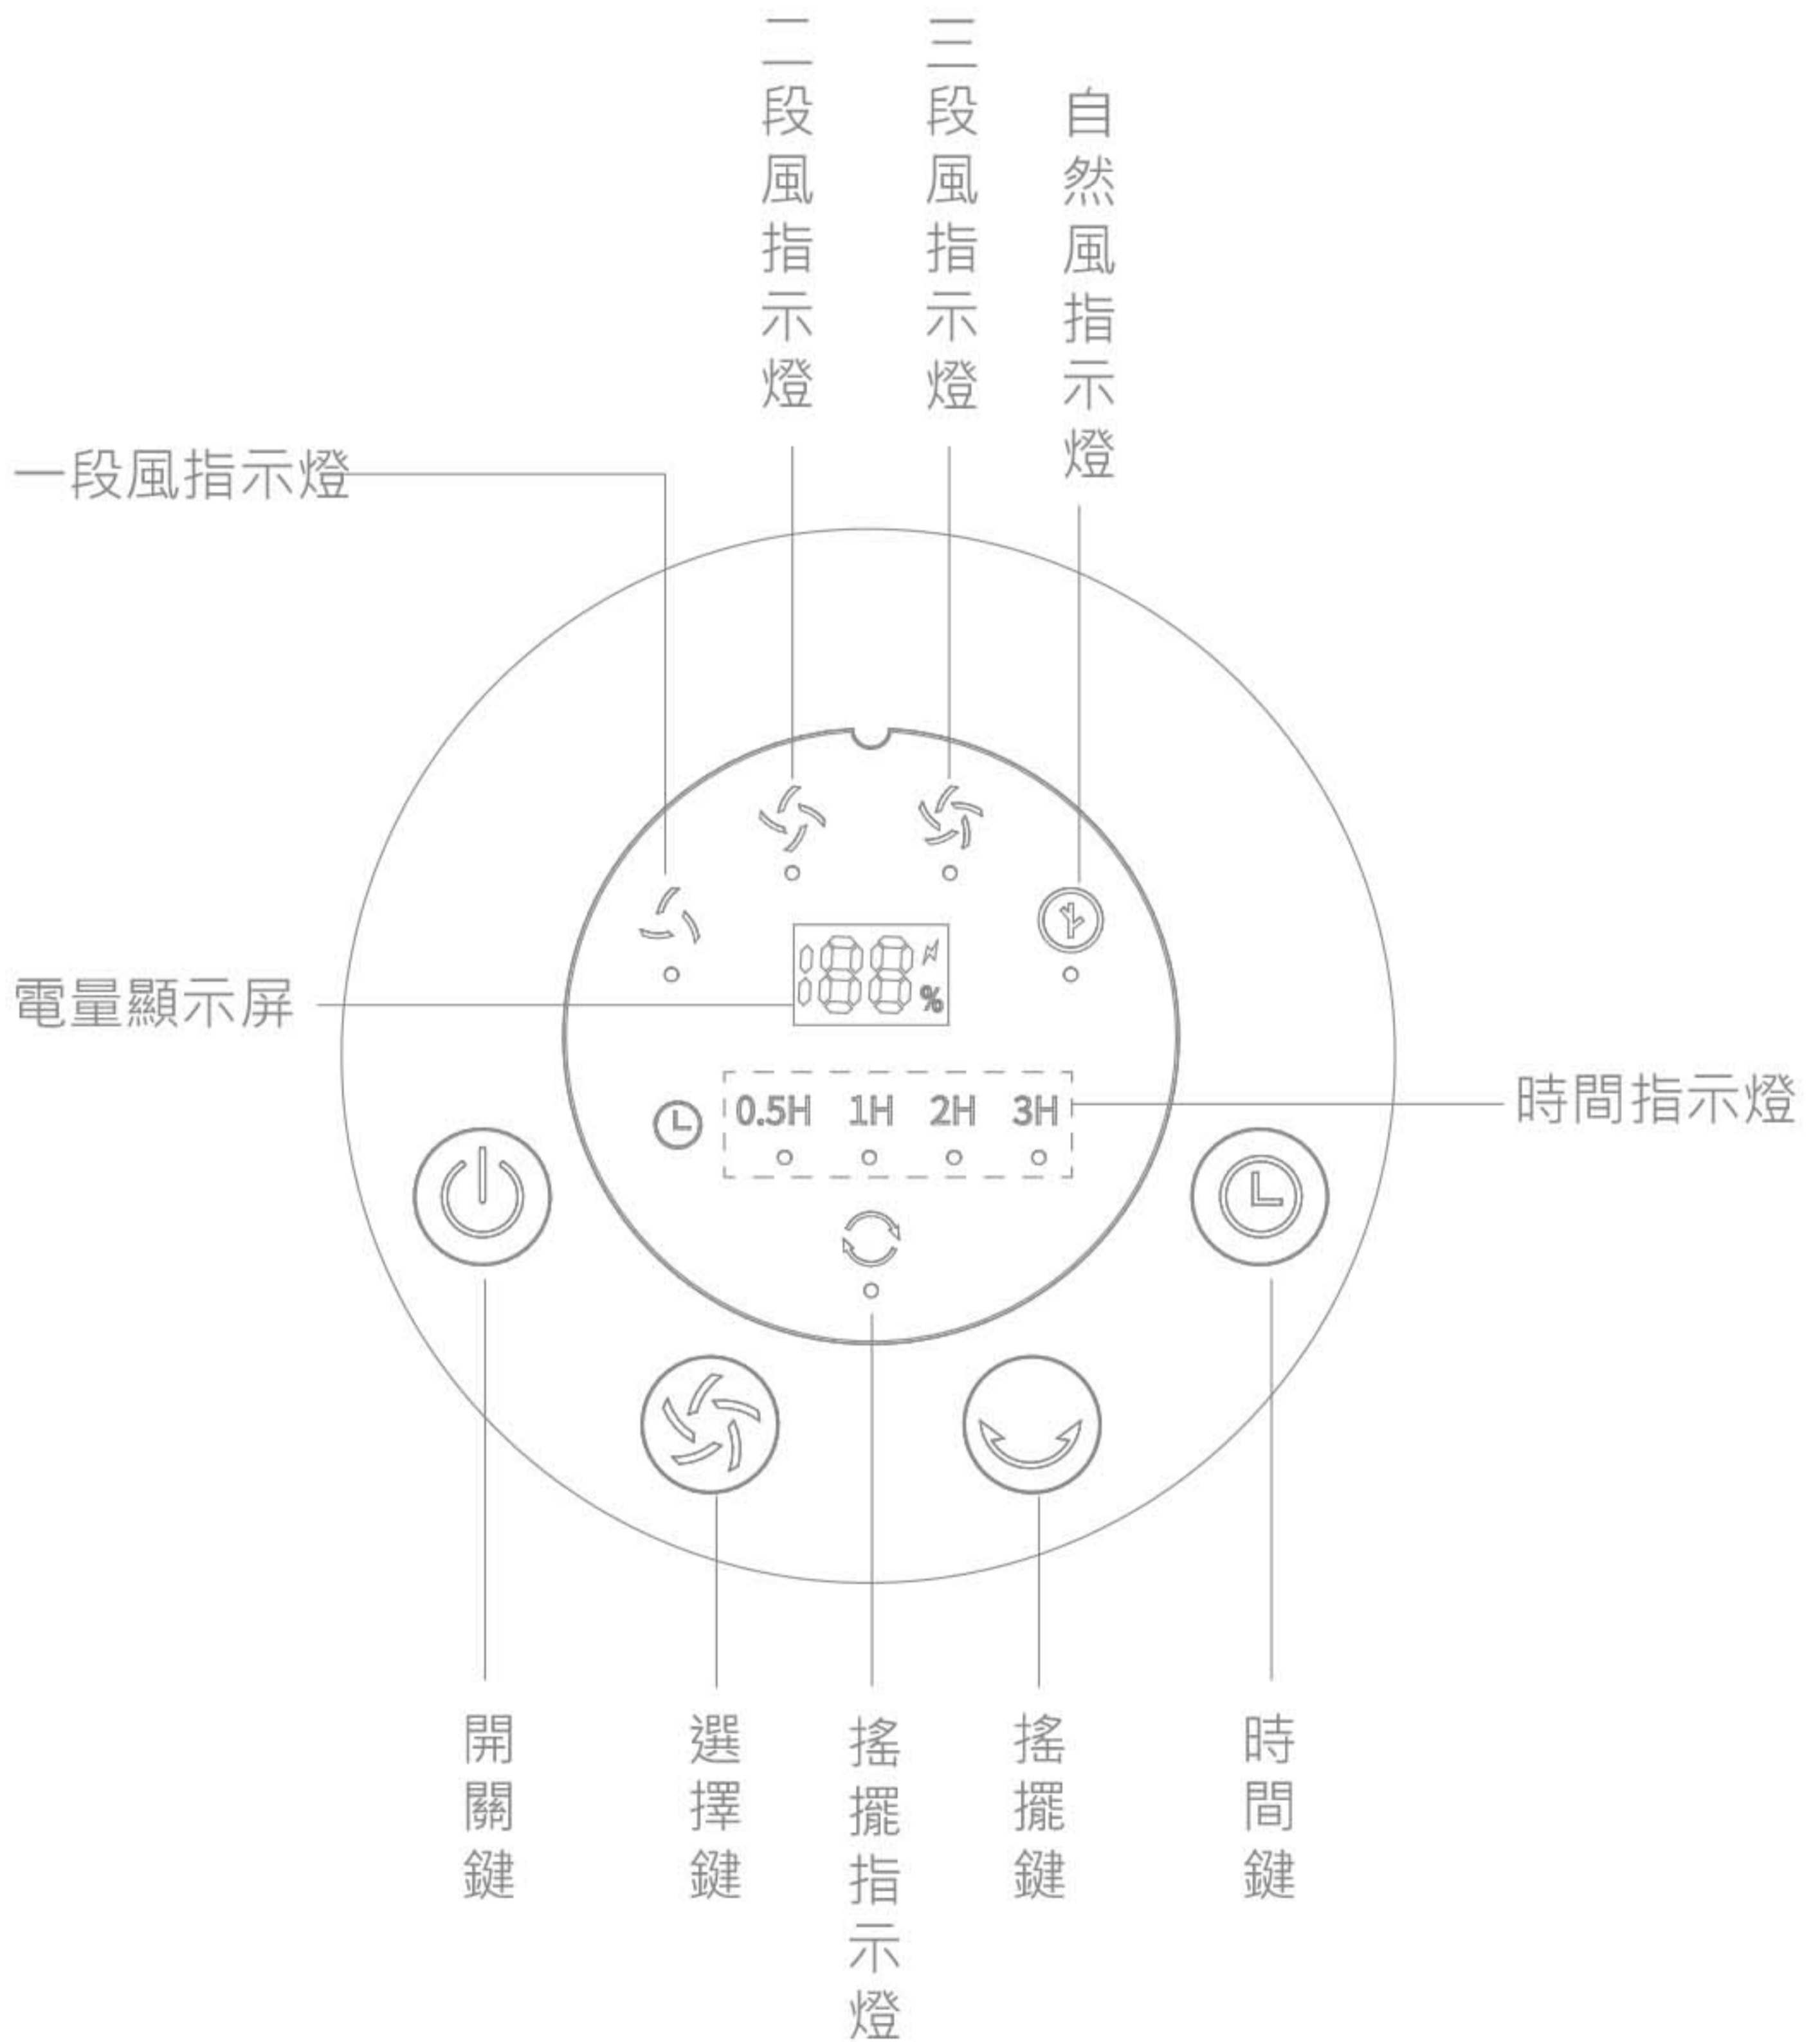

清洗方法

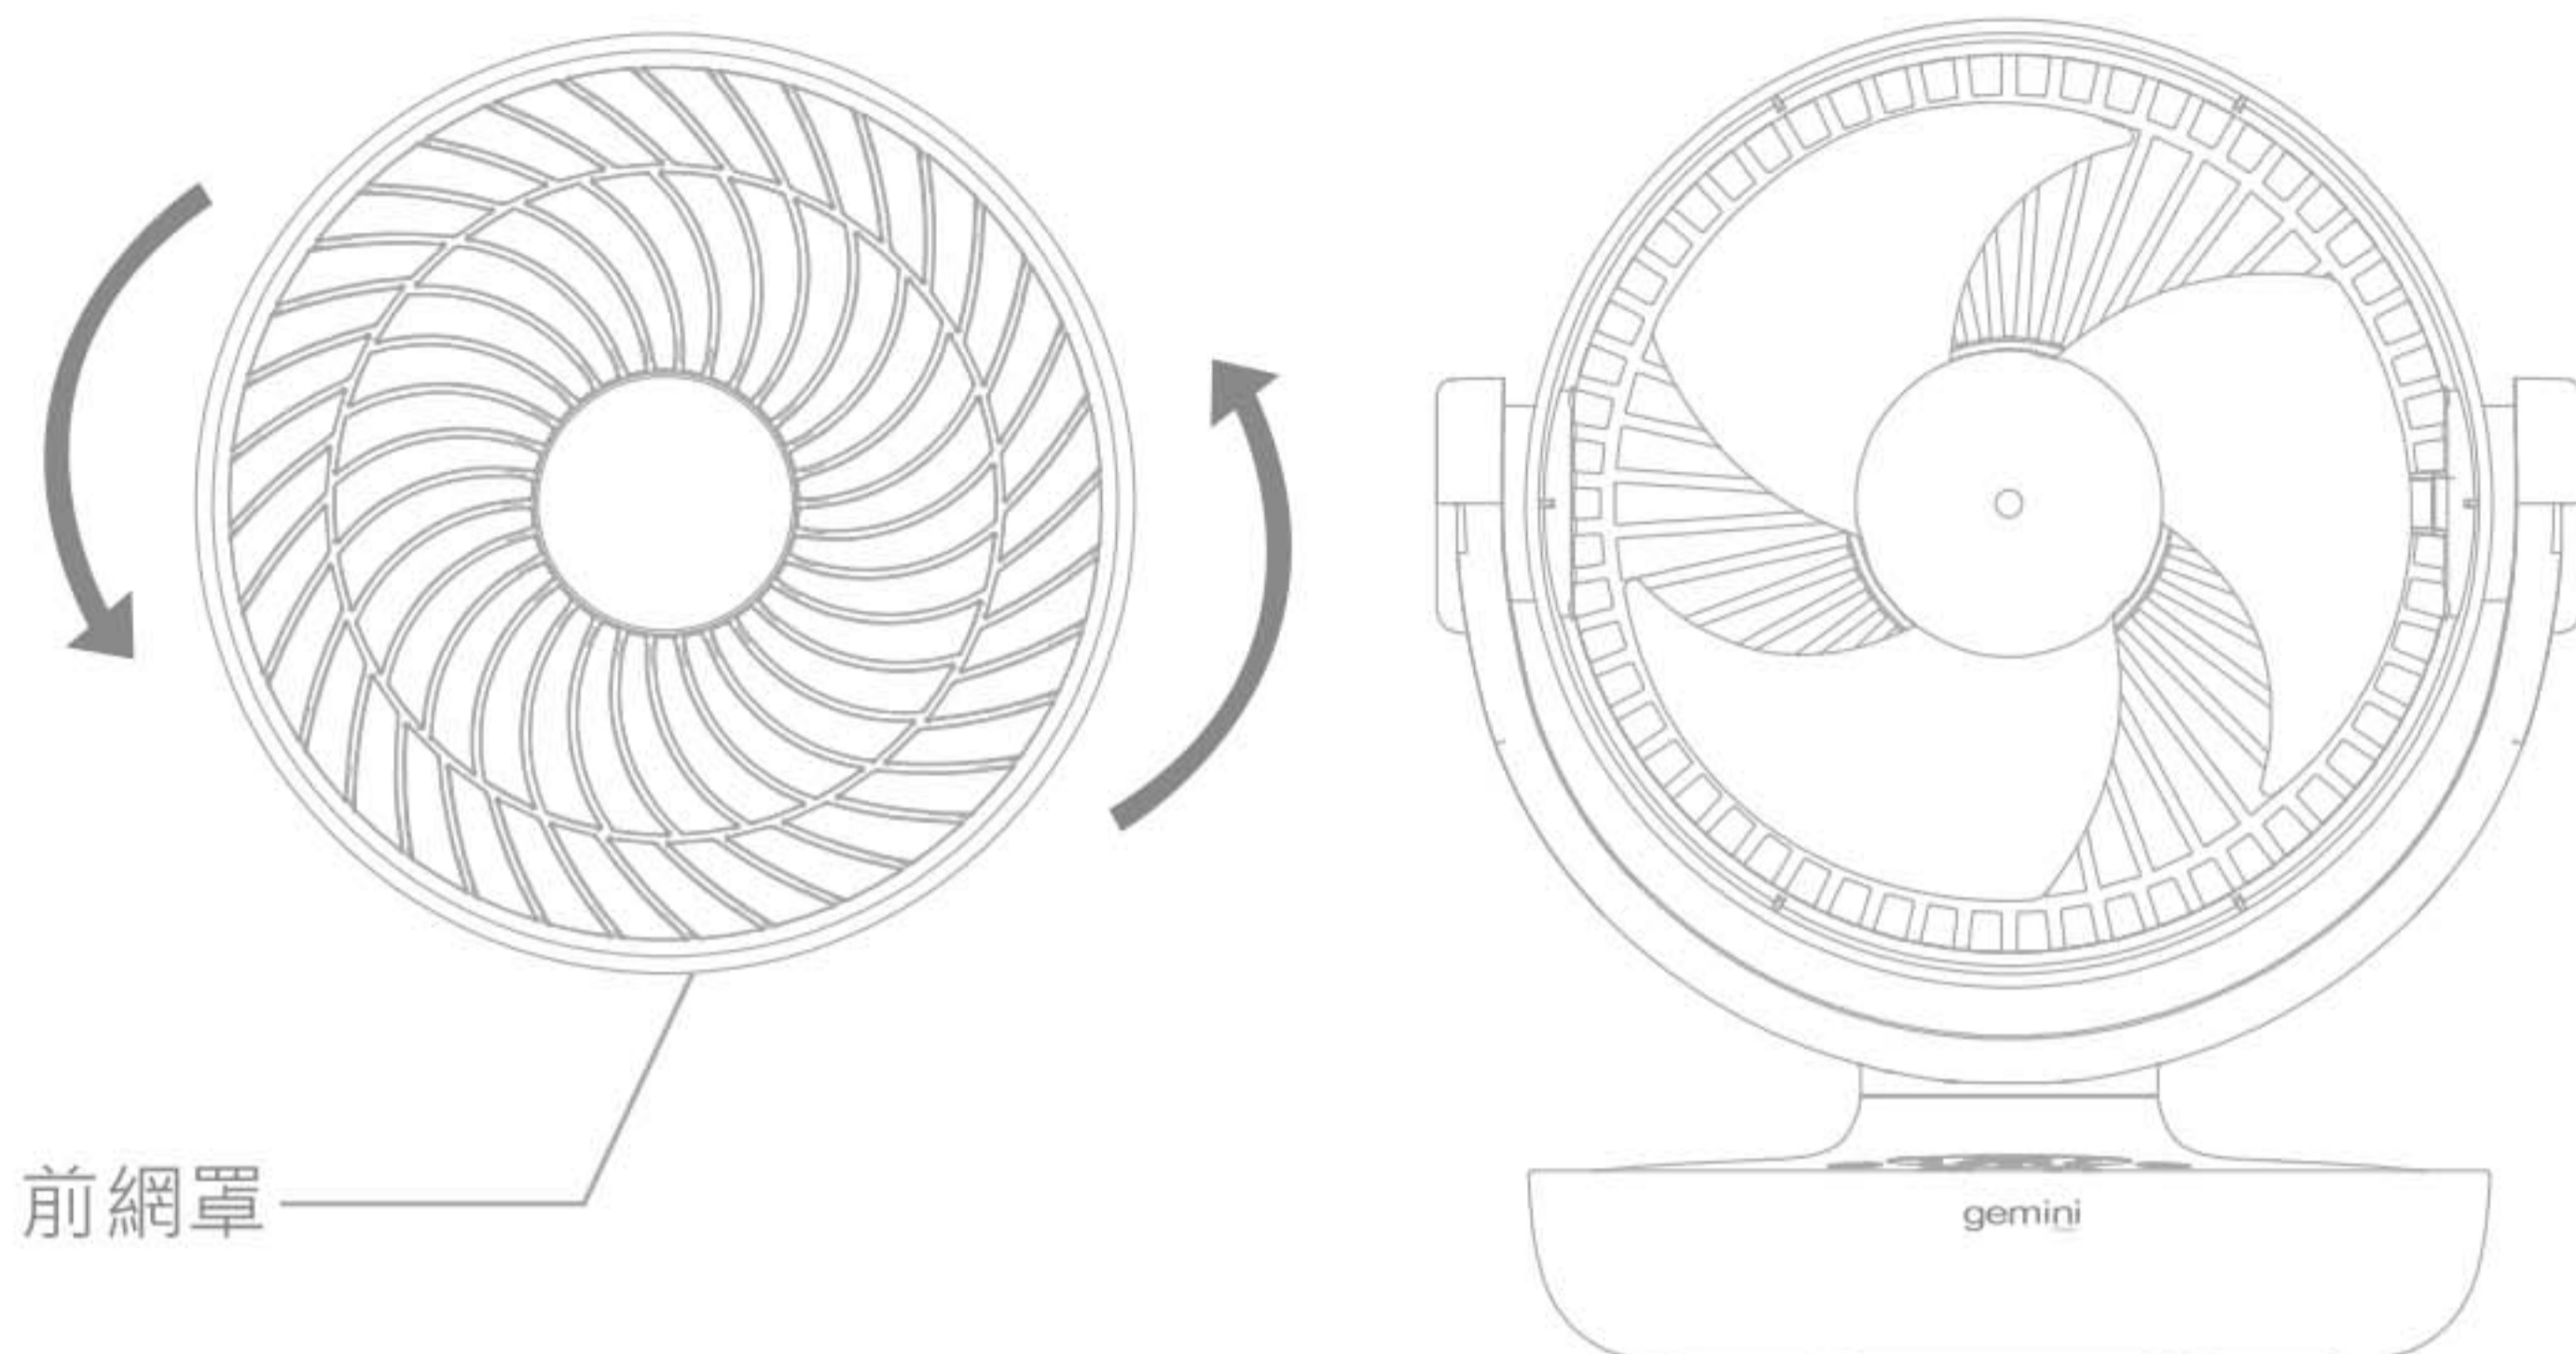


- 1.關閉風扇;
- 2.逆時針旋轉風扇前網罩,取下前網罩;
- 3.用乾淨的布擦拭清潔風扇;
- 4.不可以整機放入水中清洗;
- 5.使用前將防漏電膠片拔掉;
- 6.遙控器操控方式與機頂控制面板操控方式相同
- 7.遙控器內已裝上一枚3伏特鋰電池(型號CR2025);

注意:擦拭風扇前風扇一定要停止工作;風扇不防水,不要放入水中;未經監督,兒童不得進行清潔.

如何使用本產品

1. 開關機

開機:短按  鍵,風扇啓動一段風,一段風指示燈亮起,同時電量顯示屏顯示當前電量

關機:開機狀態下,短按  鍵,風扇停止工作.

2. 選擇調節


開機默認一段風,短按  鍵切換選擇,相應的選擇指示燈亮起.

3. 搖擺設置

左右搖擺:風扇開啓狀態下,短按  鍵開啓左右搖擺,再次短按  鍵固定搖擺角度,如風扇停止工作,風扇頭自動回到起始位置.

上下搖擺:手動調節上下風扇頭角度.

4. 時間設置


在開機狀態下,短按  鍵循環切換時間關機選擇:0.5小時、1小時、2小時、3小時,關閉時間,如中途關閉風扇,時間也將關閉.

5. 電量顯示屏

風扇啓動或充電狀態下,電量顯示屏顯示當前電量,長按  鍵,可關閉顯示屏,按下其它任何按鍵後顯示屏恢復電量顯示(充電狀態下,顯示屏無法關閉).風扇充電狀態下,顯示屏  符號頻閃,滿電常亮.風扇電量低於10%時,電量顯示數字頻閃.

注意:首次開機前,建議手動校正風扇頭.

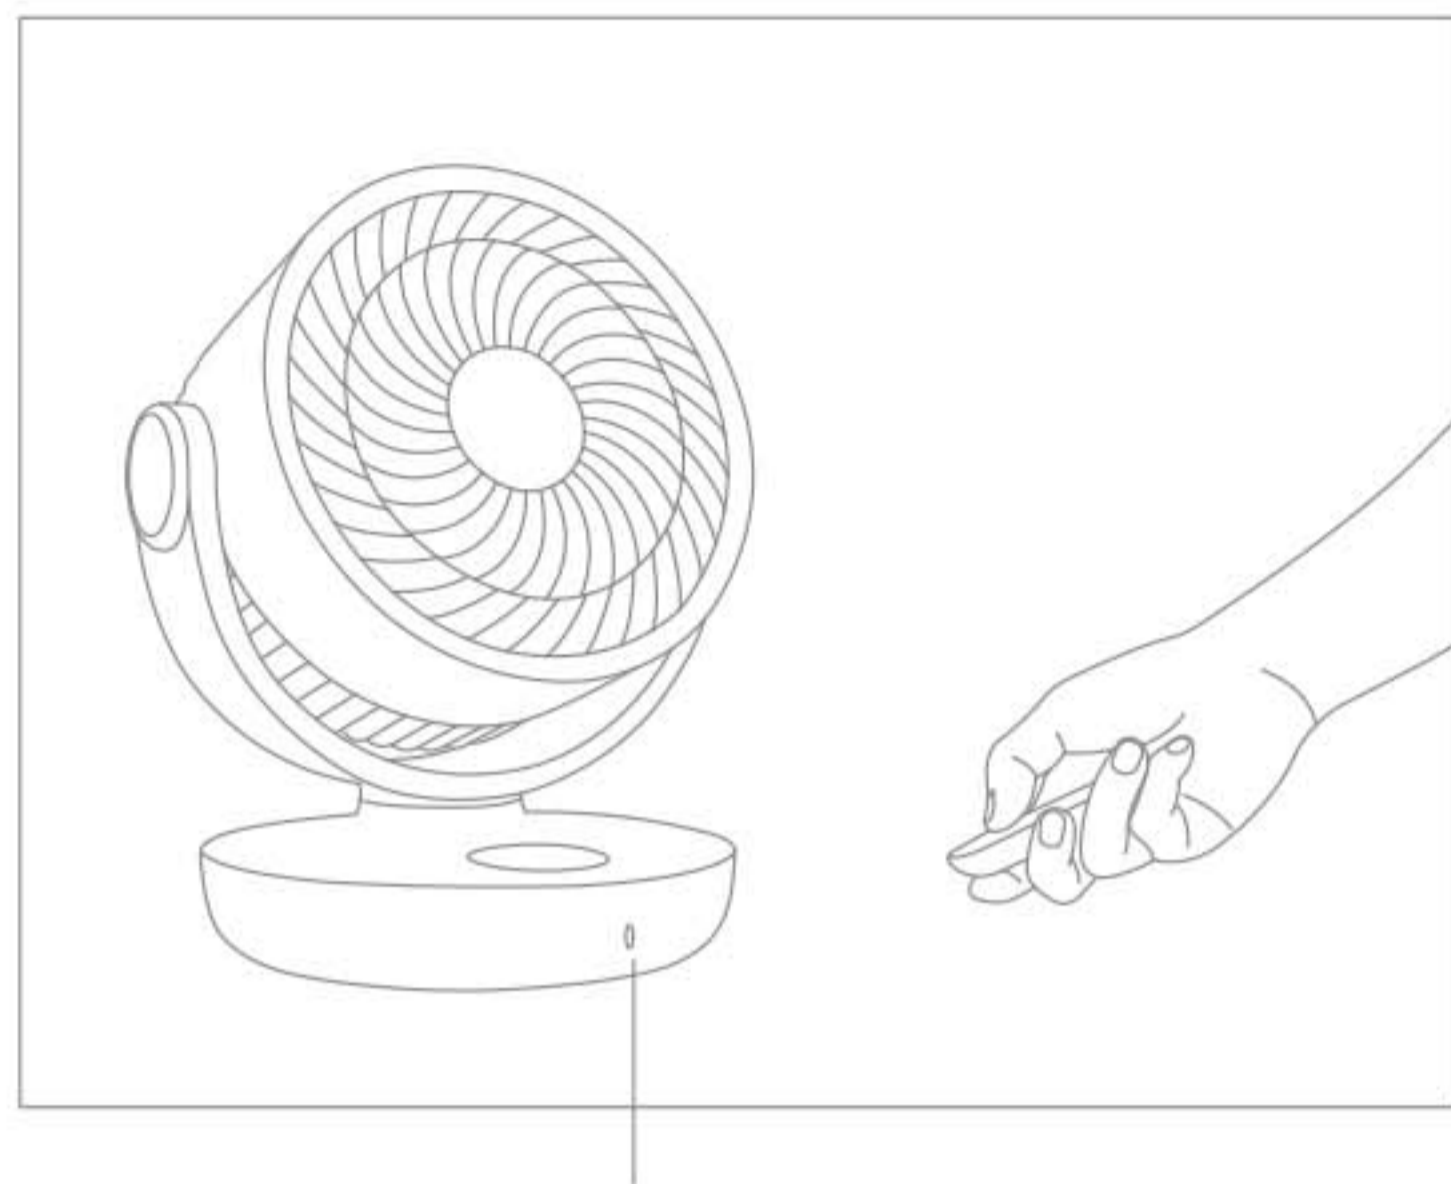


遙控器的使用方法




使用遙控器時請注意應對準紅外線接收孔。

紅外線接收孔


爲了省電原因：產品每隔12小時將啓動時間斷電功能，遙控功能也關閉，需在產品上按開關鍵方可啓動遙控功能。

遙控器在沒按  開關的情況下，按其它功能鍵會有"滴"響，但不會工作。需要先按下遙控器  開關：風扇啓動後，在  開啓的情況下才能正常使用其它功能。

產品與配件

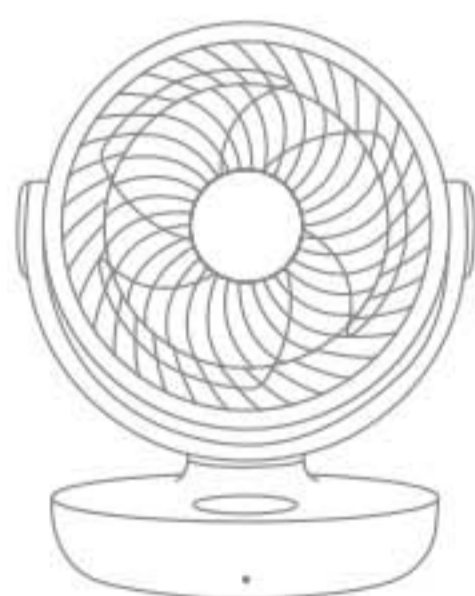

主機

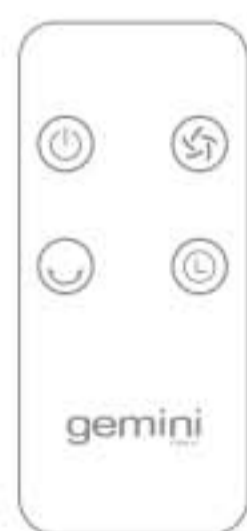

遙控器



Type-C充電線



說明書

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.



保養登記
Warranty Registration

於網上登記新產品保養 Register your product online
www.dchtoolbox.com



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啟祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com