

**gemini**  
ITALY

8" DC STAND AIR  
CIRCULATION FAN  
8" DC 座地空氣循環扇  
MODEL NO./ 型號: GCF40BK

Please read this instruction manual carefully  
before use and keep it for future reference.  
請於使用前仔細閱讀本說明書並加以保存

# SAFETY INSTRUCTION

Thank you for purchasing this fan. This product has passed through extensive quality assurance process. Every care has been taken to ensure that it reaches you in perfect condition. Warning! When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and personal injury, including the following. Read all these instructions before attempting to operate this product and save these instructions for easy reference.

1. Check the voltage indicated on the rating plate. This fan is designed for a 220-240V~50/60Hz electric supply.
2. Do not use electrical extension cord with this fan.
3. Do not introduce your fingers through the front case. Do not let children introduce any foreign objects into the front case.
4. Do not let hair, curtains, tablecloth, clothes or other objects next to the air outlet of the fan.  
They could be sucked into the fan, causing damage or injuries.
5. Do not use any fan having a cord or a plug damaged, with operation defect or if the fan is fallen or have been damaged by any way.
6. Periodically check the electric cable of this fan. If the electric cable is damaged, it must be replaced by the After-sales Service Center or by a similar qualified person in order to avoid danger.
7. Do not use this fan outside.
8. Do not use this fan in a damp area such as bathroom.
9. Do not use this fan on a window.
10. Do not use this fan with any semi-conductors speed control.
11. The fan should not be operated without a base nor used laying on its side.
12. Do not place the electrical cord under a cover. Do not overlay the cord with little covers or such element. Place the cord in an area where there are not any risk to stumble over it.
13. The fan must always be unplugged when not operating. To unplug the fan, all the switches must be on the "OFF" position, and then the plug could be disconnected.
14. Do not operate the fan in an area where gasoline, painting or such flammable liquids is used or stocked.

15. Use this fan only as it is described in this manual.
16. Do not try to disassemble this fan. If maintenance or repair service is needed, please send back the fan to the After-sales Service Center.
17. No part of this fan must be replaced by the user.
18. The fan should not be opened by user.
19. If the supply cord is damaged, it must be replaced by the After-sales Service Center or similarly qualified person in order to avoid a hazard.
20. The safety standard of this fan is without earth connection.
21. Keep electrical appliances out of reach from Children or infirm persons.
22. Do not let children use the appliances without supervision.
23. Do not pull, lift or carry the appliance by its power cord. In order to avoid damages to the power cord, do not pull the cord around sharp corners and edges.

## **WARNING:**

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.

 
 
### **NOTE:**

There are no serviceable parts in this unit. Do not attempt to disassemble.

### **WARNING:**

Never use this fan with any solid-state speed control device.  
Doing so will create fire and/or shock hazards.

# APPLIANCE COMPONENTS

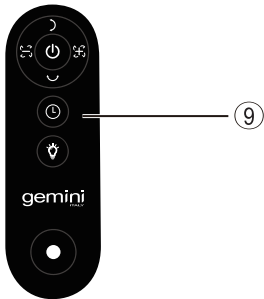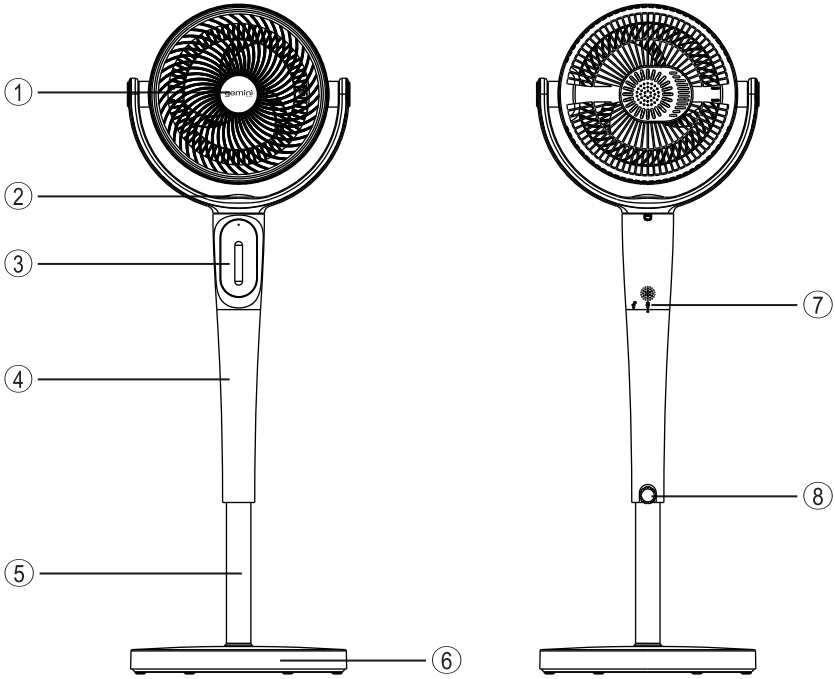

1. Fan head
2. Ambient light
3. Control panel
4. Upper rod
5. Lower rod
6. Base
7. Lock/Unlock
8. Height adjust nut
9. Remote Control

# AINSTALLATION METHOD

## 1. Prepare the rod and Lock nut

Locate the rod part. Remove the nut from rod end. Retain this nut for later use.

## 2. Secure Rod to Base

Insert the threaded end of supporting rod into the base center bore. From underneath, secure the rod with lock nut. Tighten securely.

## 3. Attach the Fan Head

Place the fan head onto the supporting rod top. Rotate the rod to align it until the triangle locator points to the lock position. (▲ Lock symbol see pic below)

## 4. Positioning & Stability Check

 
Carefully stand the fan upright. (See installation pictures below)

## 5. Height Adjustment (If Needed):







Loosen the height adjustment knob, adjust the fan to your desired height, and then tighten it securely.
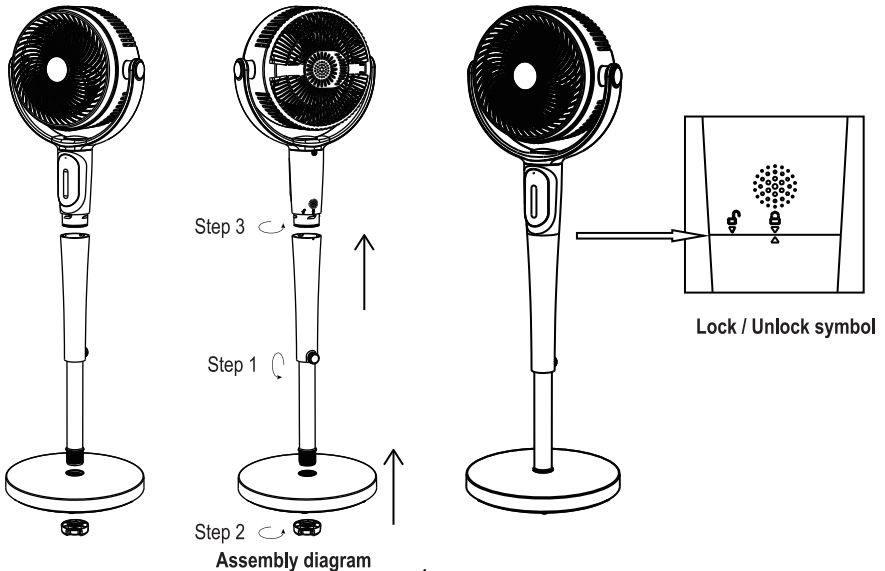
### IMPORTANT SAFETY NOTE



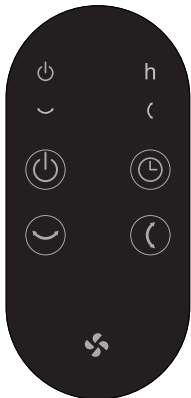





**Auto-Oscillation Mechanism : Do not forcibly rotate the fan head by hand** – this will damage internal components. Use **ONLY** the oscillation control button.



## Control panel

	 <b>ON/OFF</b> Turn the fan on or off.
	 <b>Gear / Fan Speed</b> Slide the touch bar up or down to adjust the fan speed.
	 <b>Timer / Light</b> *Press once to set the timer (1 - 12 hours). *Press and hold for 3 seconds to turn the light ON/OFF.
	 <b>Oscillation Horizontal</b> Press for left-right swing.
	 <b>Oscillation Vertical</b> Press for up-down tilt.

## Remote control

	 Power ON / OFF
	 Lower Speed – Press once to reduce 1 level
	 Higher Speed–Press once to increase 1 level
	 Timer–Press once to add 1 hour (1–12 hours)
	 Horizontal Swing (Left/Right)
	 Vertical Swing (Up/Down)
	 Ambient Light

※ **Note:** Remove the insulating tab from the battery compartment before first use.

## FUNCTIONS & OPERATION



### Placement

For optimal performance, place the fan in an open area of the room, ensuring the airflow path at the front and rear is not immediately blocked. Suggest there is at least a clearance 50 CM around the fan of any objects.


## 1. Standby

- Unwind the power cord fully and plug it into a 220-240V~ 50/60Hz power socket.
- Turn the power socket on, the unit will then enter standby, and emit a beep.



## 2. On/Off

- Turn On: Press the power button  once to start the fan on control panel or remote control.
- Turn Off: Press the power button  again to shut down all functions and return to standby.

## 3. Gear / Fan Speed


- \* On the control panel  : Slide up ↑ to increase speed, or down ↓ to decrease speed.

The current setting is shown on the display.


- \* On the remote control: press the speed button. Lower Speed  : Press once to reduce 1 level. Higher Speed  : Press once to increase 1 level.
- **When the fan first turned on, it will run at 12 gears and displays 12.** Slide the control panel to adjust the gear(fan speed). The gear display as F1, F2, F3, F4, F5, F6, F7, F8, F9, 10, 11...24, the gear for up to 24.

## 4. Oscillation /



- **Oscillation (Horizontal)** 

Press  on the control panel or remote control to set the fan head to oscillate left and right. Press the button again to turn OFF.

- **Oscillation (Vertical)** 

Press on  the control panel or remote control to set the fan head to oscillate up and down. Press the button again to turn OFF.



## 5. TIMER

- \* On the control panel: Press the timer button  each press increases the timer by 1 hour (1-12 hours).
- \* On the remote control: Press the timer button  once to add 1 hour

(1–12 hours).

- When the timer is set, the timer indicator light will remain on and the digital screen will jump back to the gear display.(unit remains in Standby mode until power cord is unplugged from electrical socket).

## 6. AMBIENT LIGHT-- For Ambient use only

- \* On the control panel, press and hold for  3 seconds to turn the light on or off.
- \* On the remote control, press  to turn the light on or off .
- When the fan is turned off , the ambient light will be turned off synchronously.

## Usage Tips:

- The display will enter sleep mode after approximately 3 minutes of inactivity. Press any button to wake it up.
- When using the remote control, you may need to press the desired function button twice: the first press wakes up the fan’s receiver, the second press executes the command.

## REMOTE CONTROL BATTERY REPLACEMENT

- The remote control requires one CR2025 3V lithium battery to operate.

1.Place the remote control down with buttons facing downwards. Push the bottom of battery box while pulling it out to release the battery compartment. Remove the old battery.

2.Place one new battery into the battery compartment with positive ‘+’ polarity facing up. If the battery is placed incorrectly, the remote control will not work.

3.Insert the battery compartment back into the remote control and ensure it is secure.



## Note:

**Do not use a different type of battery when replacing as this may lead to the remote control not working or cause damage.**

## CLEANING & MAINTENANCE

- Always disconnect the fan from the mains by switching it off and removing the plug from the power outlet before cleaning.
- Do not allow water to penetrate into the motor during cleaning.
- It is advisable to use a neutral detergent and a soft cloth and to rub dry. Do not use solvents, acidic detergents, petrol or alcohol etc. to clean the plastic components, as these could cause deformed or damaged.
- Pack the fan in the original box and place it in a dry, well-ventilated place when it is not to be used for a long period of time.



### For thorough cleaning:

1. Remove the screw under the fan head.
  2. Detach the front grille and blades to clean.
  3. Reassemble all parts in original order.
- **Note:** Ensure no parts are lost during cleaning.

## Selective Collection Of Electrical And Electronic Waste



Electrical products should not be disposed of with household products. According to the European Directive 2012/19/EU for the disposal of electrical and electronic equipment and its implementation in national law, used electrical products must be collected separately and disposed of at the collection points provided for this purpose. Contact your local authorities or dealer for recycling advice.

## TECHNICAL DATA

Model No. GCF40BK

Power: 40 W

Weight: 3.6 kg

Voltage&Frequency:220-240 V~ 50/60 Hz

Dimensions (H x W x D) : 1080 x 310 x 310 mm

( Adjustable height 880-1080mm)

The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

## 重要安全事項

注意: 當使用電動工具時, 應遵循基本的安全預防措施, 以減少火災, 觸電和人身傷害的風險, 包括以下內容:

首次操作本產品前, 先閱讀所有說明, 並保存本說明書:

1. 檢查銘牌上標示的電壓。本產品應在 220-240V~50/60 Hz 的電力供應中使用。
2. 不要使用電源延長線。
3. 不要把你的手指穿過前方的出風口。不要讓孩子把任何異物插進前方的出風口。
4. 不要讓頭髮、窗簾、桌布、衣服或窗簾旁邊的物件放在風扇的出風口。它們可能被吸入風扇內, 造成損壞或人身傷害。
5. 如風扇的電源線或插頭。在工作後、風扇跌落地或以任何方式損壞, 不要繼續使用。
6. 定期檢查風扇的電源線。如果電源線損壞, 必須由售後服務部或合格的電器技師更換, 以避免危險。
7. 不要在戶外使用這風扇。
8. 不要在潮濕的地方, 如浴室使用這風扇。
9. 不要在窗口附近使用這風扇。
10. 不要使用任何半導體速度控制器來控制這風扇。
11. 如沒有底座或把風扇橫放都不應操作。
12. 請勿覆蓋電源線。將電源線放於沒有任何絆倒風險下的位置。
13. 風扇不工作時, 請把插頭拔出。在拔走插頭前, 所有的開關必須是在“OFF”位置, 然後才把插頭拔除。
14. 不要在有汽油、油漆或易燃液體的地方使用。
15. 只使用本說明書中描述的方法使用這風扇。
16. 不要試圖拆開這風扇, 用戶不可以自行進行維修。如果您需要維修, 請送回售後服務中心處理。
17. 這風扇的所有部件或零件不可由用戶進行更換。
18. 這風扇不可由用戶進行拆開。
19. 如果電源線損壞, 必須由售後服務部或合格的電器技師更換。
20. 此風扇的安全技術標準是不可連接地線的。
21. 確保本風扇不可被兒童或體弱者接觸。不要讓他們在沒有監督下使用本產品。
22. 不可以讓兒童在沒有監護的情況下使用本產品。
23. 請勿用電源線拉扯, 抬起或攜帶本產品。為避免損壞電源線, 請勿將電源線繞著尖角和邊緣拉扯。

## 注意：

1. 本機不是為體質、感覺或智力有障礙人士（包括小孩）或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指導使用此電器。
2. 大人應該指導小孩不可把玩電器。

 
 
### **注意：**

這風扇沒有可由用戶進行更換的部分，用戶不可自行拆開風扇。

### **警告：**

不要使用非本產品的控制器或硬物來控制這風扇，這會引致火警或觸電。

## 部件名稱

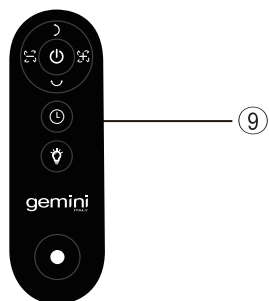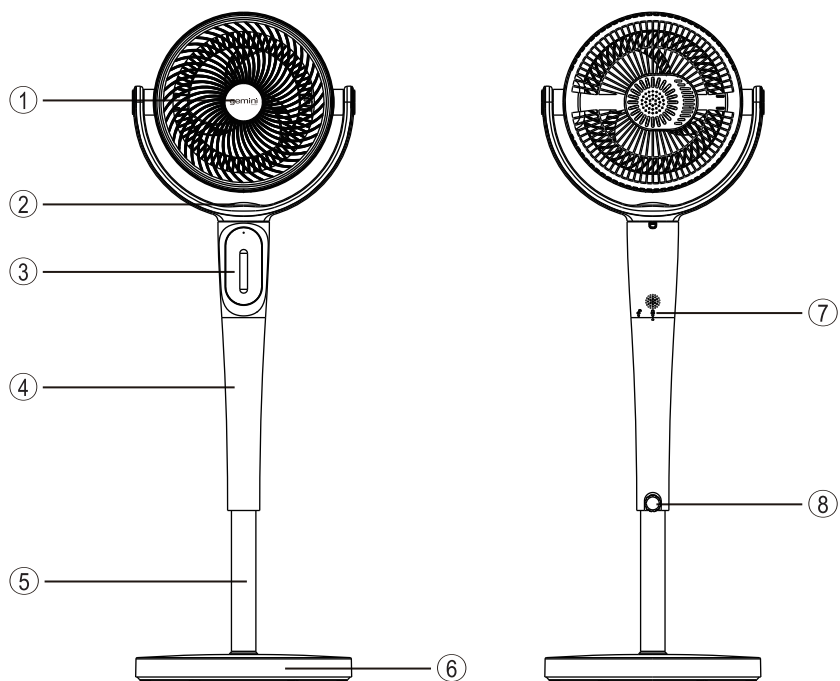

1. 風扇頭
2. 氛圍燈
3. 控制面板
4. 上段支撐桿
5. 下段支撐桿
6. 底座
7. 鎖定/解鎖標誌
8. 鎖緊螺母
9. 遙控器

## 組裝方法

### 1. 準備支撐桿與鎖緊螺母

找出支撐桿組件。將桿端的塑料螺母取下。請保留此螺母以供後續使用。

### 2. 將支撐桿固定於底座

將支撐桿的螺紋端插入底座中央孔中。從底座下方，用鎖緊螺母固定支撐桿。請擰緊。

### 3. 安裝風扇頭

將風扇頭套入支撐桿頂部。旋轉支撐桿，直到三角形對位標誌指向鎖定位置（▲鎖定符號見下圖）。

### 4. 擺放位置與穩定性檢查

 
小心地將風扇直立擺放。（見下方安裝示意圖）

### 5. 高度調節（如需要）

鬆開高度調節旋鈕，將風扇調節至所需高度，然後將其重新擰緊。

#### ※重要安全提示：

自動擺頭裝置：請勿用手強行轉動風扇頭——這會損壞內部元件。請僅使用擺頭控制按鍵操作。

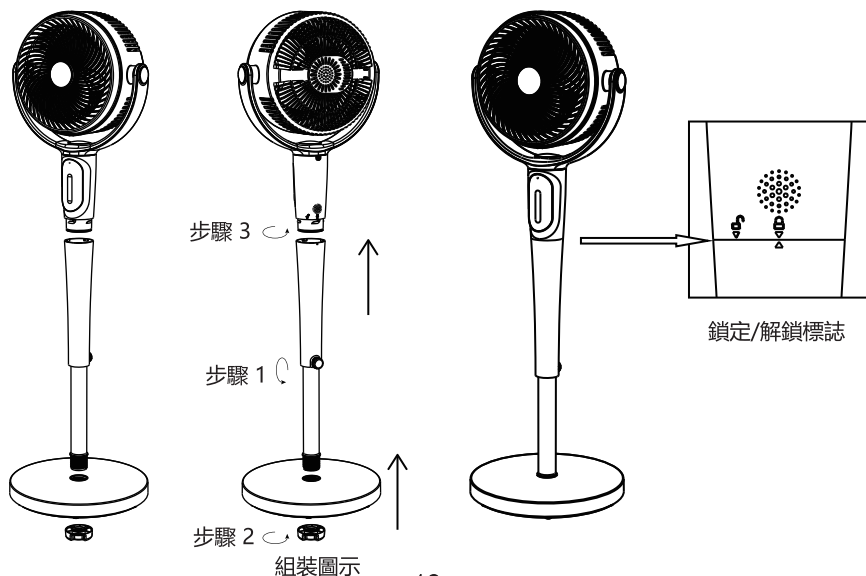

## 控制面板

	 <b>ON/OFF</b> 開啟或關閉風扇
	 <b>風速調節</b> 在觸控條上向上或向下滑動以調節風速。
	 <b>定時 / 燈光</b> * 輕按一次可設定定時關機 (1-12 小時) * 長按 3 秒可開啟或關閉氛圍燈。
	 <b>水平擺頭</b> 輕按可開啟或關閉風扇頭左右自動擺頭。
	 <b>垂直擺頭</b> 輕按可開啟或關閉風扇頭上下自動擺頭。

## 遙控器

	 <b>開/關</b>
	 <b>風速減弱：每按一次減弱1檔風力。</b>
	 <b>風速增加：每按一次增加1檔風力。</b>
	 <b>定時：每按一次增加1小時 (1-12 小時)</b>
	 <b>水平擺頭 (左/右)</b>
	 <b>垂直擺頭 (上/下)</b>
	 <b>氛圍燈開關</b>

※ 提示：初次使用遙控器，請取出電池倉的絕緣片，向外拉出即可。

## 功能與操作

擺放建議: 為達至最佳效果, 請將風扇放置於房間開闊處, 確保前後氣流暢通, 建議周圍保留至少 50 厘米空間。



 
### (1). 待機模式

- 展開電源線, 插入 220-240V~ 50/60Hz 插座。
- 開啟插座電源, 風扇進入待機並發出提示音。



### (2). 開機 / 關機

- 開機: 輕按控制面板或遙控器上的電源鍵 。
- 關機: 再次輕按電源鍵 , 返回待機模式。

### (3). 風速調節

- 控制面板上 : 在觸控條上滑動調節, 屏幕顯示當前檔位 (1-24)。
- 遙控器: 設置風速增加或減弱。風速減弱:  每按一次減弱1檔風力。或者, 風速增加:  每按一次增加1檔風力。
- 開機預設: 首次啟動為第 12 檔。屏幕顯示 12。您可以透過滑動控制面板來調節風速檔位。檔位顯示為 F1, F2, F3, F4, F5, F6, F7, F8, F9, 10, 11...24, 最高為 24 檔。

### (4). 擺頭功能 /

- 水平擺頭: 輕按  對應鍵啟動左右擺頭, 再次輕按關閉。
- 垂直擺頭: 輕按  對應鍵啟動上下擺頭, 再次輕按關閉。

### (5). 定時關機功能

- 控制面板: 每按一次定時鍵  增加1小時 (1-12 小時)。
- 遙控器: 每按一次定時鍵  增加1小時 (1-12 小時)。
- 設定後, 定時指示燈亮起, 屏幕返回風速顯示。

### (6). 氛圍燈

- 控制面板: 長按  鍵3秒以開啟/關閉燈光。
- 遙控器: 輕按  鍵開啟或關閉燈光。
- 風扇關閉時, 氛圍燈將同步關閉。

### ▲使用提示

- 屏幕約 3 分鐘 無操作後進入休眠, 按任意鍵喚醒。
- 需連按兩次功能鍵: 第一次喚醒, 第二次執行。

## 更換遙控器電池

遙控器需使用一枚CR2025 3V鋰電池運作。

- ① 將遙控器按鍵朝下放置，推壓電池倉底部並拉出。
- ② 取出舊電池，放入新電池（正極「+」朝上）。
- ③ 裝回電池倉並確保牢固。如果電池放置不正確，遙控器將無法工作。

### ▲注意：

- 請僅使用 CR2025 型號電池，否則可能導致遙控器失效或損壞。
- 此電池請勿充電；請置於小孩接觸不到的地方；如若吞服請及時就醫。
- 廢電池請回收，當電池廢棄時請放置至政府指定的回收站，避免污染環境。



## 清潔與保養

清潔或維護前務必拔掉風扇插頭。

- 用軟布擦拭機身以去除灰塵。
- 使用沾有溫水及溫和清潔劑（如洗潔精）的軟海綿清潔機身。用清水擦拭後以軟布抹乾。
- 請勿在控制面板上殘留水跡。
- 請勿使用研磨性清潔劑或百潔布進行清潔。



進行徹底清潔：

1. 卸下風扇頭下方的螺絲。
2. 拆下前格柵和扇葉進行清潔。
3. 按原順序重新組裝。

注意勿遺失零件。



本產品含有可回收材料，不可把本產品作為未分類廢物。

請聯繫就近指定回收點。

## 技術參數

型號：GCF40BK

電壓 / 頻率：220-240V~ 50/60Hz

功率：40 瓦

產品尺寸 (高 x 闊 x 深)：1080 x 310 x 310 毫米 (可調整高度 880-1080 毫米)

淨重重量：3.6 公斤

相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。





請記錄下列產品資料

型號 Model No.:

---

機身編號 Serial No.:

---

經銷商名稱 Dealer:

---

購買日期 Date of Purchase:

---

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知  
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.  
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity  
between the English version and the Chinese version,  
the English version shall prevail.

保養登記  
Warranty Registration



於網上登記新產品保養  
Register your product online  
[www.dchtoolbox.com](http://www.dchtoolbox.com)

小電維修服務 - 自攜點  
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre  
香港九龍灣啓祥道20號大昌行集團大廈4樓  
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210  
電郵地址 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)

[www.gemini-living.com](http://www.gemini-living.com)