

**gemini**  
ITALY

**TOWER FAN  
HEATER**

直立式暖風機

MODEL NO.: GCTH20WH

2000W



A GILMAN GROUP BRAND

**Please read and retain for future reference.**

## **SAFETY INSTRUCTION - GENERAL**

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Only use the attachments/accessories supplied with the product.

## **SAFETY INSTRUCTION - ELECTRICITY AND HEAT**

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.
- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance, the airvents must not be covered or blocked when use.

- Never use the appliance in the vicinity of flammable material.
- Certain part of the appliance may get hot, such as air outlet. Do not touch these part to prevent scalding yourself.

## **SAFETY INSTRUCTION - DURING OPERATION**

- In use, some parts of the heater are hot. When moving, make sure the heater is switched off.
- Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
- Do not place the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
- Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
- A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
- Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur

 
## **INSTALLATION LOCATION OF THE APPLIANCE**

- The appliance should be placed with a minimum distance of 90cm away from flammable objects (e.g. curtains), walls or other structures!
- The heater should only be operated at the minimum distance of 50cm from any wall or other objects. Position the air flow in order to optimize the heating of the room. Avoid to place in corners, small volumes and ceilings.

# PRODUCT OVERVIEW

 
## Main unit

1. Control panel
2. Air outlet
3. Base
4. Handle
5. LED Display
6. Detachable Filter
7. Air inlet
8. Power plug
9. Main Power On/ Off Switch

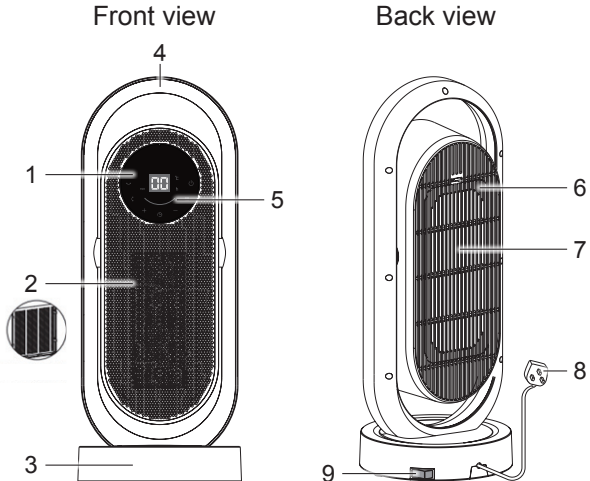 


## Control panel

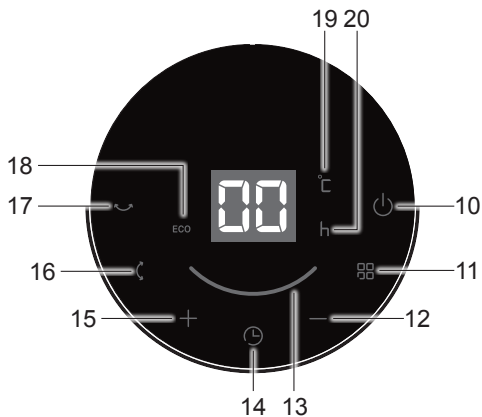


10. On/ Off button
11. Mode button (High/Low/ECO/Fan)
12. Temperature / Time decrease button
13. High/Low/ECO/Fan mode indicator:
  - Dark red indicator - High heating mode
  - Light red indicator - Low heating mode
  - Purple indicator - ECO mode (ECO)
  - Blue indicator - Fan
14. Timer button
15. Temperature / Time Increase button
16. Up & Down Oscillation button
17. Left & Right Oscillation button
18. ECO indicator
19. Temperature indicator
20. Timer indicator

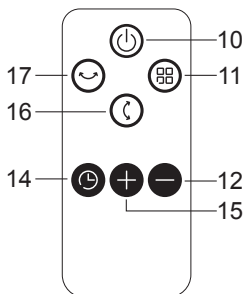

## Remote control





# OPERATING INSTRUCTION

1. Carefully remove the heater from the plastic bag and the carton.
2. Place the heater on a flat surface floor.
3. Turn the main ON/OFF button to “O” (off) at the back of the unit, plug the power cord into AC 220-240V electrical outlet. Press the main ON/OFF button to “I” (ON) position, the heater is in standby mode, LED display screen shows “-”
4. Turn the heater ON by pressing the ON/OFF button “” at the control panel or remote controller. The unit is now in HIGH heat mode, display show “HI” with dark red indicator. Press the ON/OFF button “” on control panel / remote controller again. The heater will switch off.
5. Pressing the Mode button “”, the relating mode, indicator and display are as follows:

Operation	Mode	Indicator status	Display
Pressing once	Low heat mode	Light red	Lo
Pressing twice	ECO mode	Purple	ECO icon, 30°C
Pressing Third	Fan mode	Blue	No display
Pressing Fourth	High heat mode	Dark red	HI

 
 
 
The ECO mode is turned on, the purple indicator light is on, and the screen shows 30°C (this is default setting). When the room temperature is close to 30°C, the appliance will stop heating and enter the standby mode. When the room temperature is lower than the set value, the machine will restart the heating mode (Press the +, - temperature/time decrease or increase buttons on the control panel or remote control to adjust the temperature).

## OSCILLATING FUNCTION

This heater has an oscillating function. To Left & right switch the function on, press the Left & Right oscillation button “”. To stop it, press the button again. To up & down switch the function on, press the Up & Down oscillation button “”. To stop it, press the button again. Same operation for both main unit control panel and remote controller.

**NOTE: DO NOT** adjust the angle position of the appliance hardly by hand to avoid damage to the internal motor.

## TIMER FUNCTION

The timer function allows you to set the operation time from 1 to 24 hours. To set the timer, press the TIMER button “”. The LED display screen will show “”. press +, - to adjust the desired operation time is displayed. After the setting, the digit blinks for 3 seconds to confirm, display shows “h” indicator. To cancel the timer feature press the button again until LED display screen show “” Same operation for both main unit control panel and remote controller.

 
## TEMPERATURE SETTING

Temperature can be set from 17 degrees to 37 degrees. Under heat mode, press Temperature / Time Increase or decrease button “+ , -”, auto switch to ECO mode, then press Temperature / Time Increase or decrease button “+ , -” to adjust the desired temperature is displayed, the digit blinks for 3 seconds to confirm. Same operation for both main unit control panel and remote controller.

Under Heating mode to turn off the appliance, the fan will continue run for around 15 seconds, please turn the main on/ off button after 15 seconds. Under fan mode, short press on/ off button of the control panel to stop fan mode.

## REMOTE CONTROLLER

The remote controller use one Lithium battery, model No. CR2025 (3V). We recommend using the Lithium type battery for longer use. Install battery as per below steps. Pull out the bottom cover from the remote controller. Insert a Lithium battery and push back the cover inside the remote controller. Please pay attention to the battery direction.

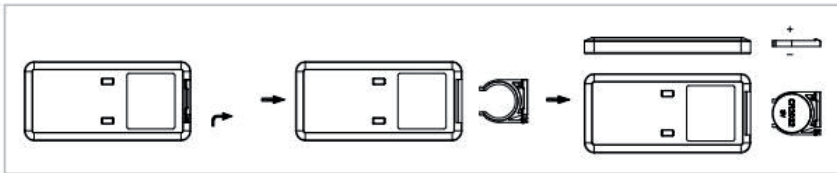

### NOTE:

- Please follow battery disposal instruction on battery packaging, or contact your local councils for safely disposal of batteries.
- One battery is included. Please pull out the insulating film before using the remote controller for the first time.

## OVERHEAT PROTECTION

The appliance is protected with an overheat protection that switch off the appliance automatically in case of overheat, e.g. the whole or partial obstruction of the wind outlet or back net. In this case, unplug the appliance, wait about 30 minutes to cool it and remove the object which is obstructing the wind outlet immediately.

Then switch it on as described above after 30 minutes. The appliance should operate normally. Should the problems persist, please contact our after sales service centre.

## TIP-OVER AUTO-OFF SAFETY SYSTEM

When the appliance inclines from vertical or tip-over, it will stop working. When appliance is returned to upright position, it can connect the power again and returns to standby mode, set the desire setting to start operating again. Do not use on thick and long pile carpet, as the appliance may not work due to the tip-over switch not been activated.

## CLEAN & STORAGE

- Your appliance must be switched OFF and disconnect to the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please pack the heater and store in a dry place away from sunlight and dirt.

### Filter Cleaning:

Open the cover at the back of the appliance, remove the filter, take the filter outside for cleaning. Rinse the filter with water gently, allow to air dry completely before reinstalling the appliance.

## PRODUCT SPECIFICATIONS

Model no.:	GCTH20WH
Voltage:	220-240V~
Frequency:	50Hz
Output power:	2000W
Product dimensions:	526(H) x 211(W) x 211(D) mm

\* The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

閱讀下列說明事項並請妥善保管，以供日後參考。

## 安全指引 - 一般安全

- 請按照這些說明事項, 使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 當本機開著時，頭髮、鬆身衣物、手指和身體其他部份都要離開本機。
- 只使用隨機附送的配件。

## 安全指引 - 電子和熱能產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 確保本產品的周圍有足夠空間，並且不接觸易燃物料。使用時，通風口不得覆蓋或堵塞。
- 切勿在易燃材料附近使用本產品。
- 本產品的某部分可能會發熱。如出風口，不要觸摸這些部分，以防止燙傷自己。



## 安全指引 - 操作期間

- 在使用時，暖風機的一些部位是非常熱的，請確保關機後才移動暖風機。
- 不要在有使用和儲藏汽油、燃料和其他可燃物質的車庫之類的地方使用暖風機。
- 不要在傢俱、動物、窗簾或其他可燃物體周圍使用暖風機。讓可燃性的傢俱，臥具和其他可燃材料與暖風機的前方、側面和後背至少保持1米的距離。
- 不要把暖風機放在寢具或者厚厚的毛毯上，因為有可能堵塞進出風口。
- 不要在直接接近水的地方使用產品，比如浴缸、洗臉盆、浴室的游泳池等，這些地方可能發生漏電。
- 在暖風機中堆積灰塵或者毛絨可能引起過熱，通過拔掉電源插頭，讓它冷卻和仔細清洗，確保這些堆積物已被清除。
- 確保沒有其他高電流的電器同時插入和暖風機相同的電路，從而產生超負載的情況。

## 產品安裝位置

 
該設備必須安裝在可燃性物體(如窗簾)、牆壁或者其他建築物最小距離90厘米的地方。

暖風機在使用的時候必須和牆壁或其他物品之間保持最少50厘米距離，以達到最佳的加熱效能。避免放置在角落，小體積和天花板中。

# 暖風機部份介紹

 
## 主機

1. 觸式控制面板
2. 出風口
3. 底座
4. 把手
5. LED顯示屏幕
6. 可拆卸過濾網
7. 進風口
8. 電源插頭
9. 主電源開關鍵

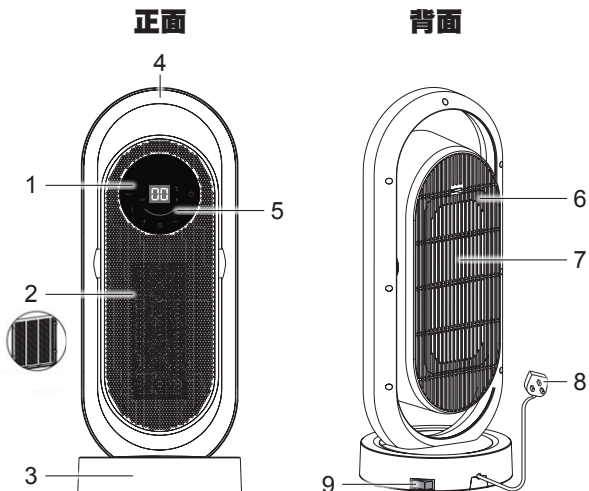 


## 控制面板


 
10. 開關鍵
11. 模式鍵 (高/低/ECO/風扇)
12. 溫度/時間減少鍵
13. 高/低/ECO/風扇模式顯示燈：
  - 深紅色指示燈 - 高溫模式
  - 淺紅色指示燈 - 低溫模式
  - 紫色指示燈 - 環保模式 (ECO)
  - 藍色指示燈 - 風扇模式
14. 時間鍵
15. 溫度/時間增加鍵

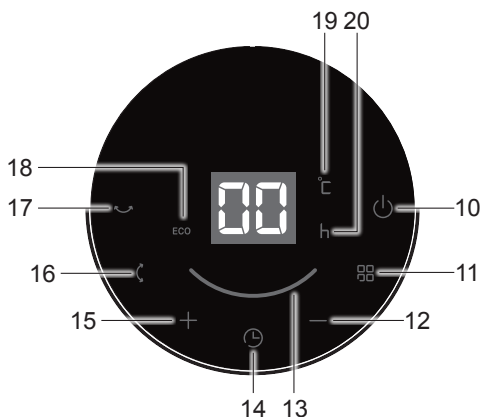

## 遙控器

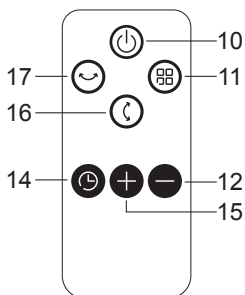


 
## 使用說明

1. 從包裝盒內小心地取出暖風機，並移除包裝物料。
2. 放置暖風機在平坦的表面上。
3. 把本機背面的主電源開關掣設定為“O”(OFF)關閉狀態。將電源插頭插在220-240V交流電的插座上。再把主電源開關掣設定為“|”(ON)位置。本產品將在待機狀態下，LED顯示屏顯示“—”。
4. 按控制面板或遙控器上的開/關鍵“”開始運作。本產品默認高溫模式，顯示屏顯示“HI”並帶有深紅色顯示燈。再次按鍵，本產品將停止運作。
5. 按下模式按鍵“”，相關模式、顯示燈及顯示如下：

操作	模式	指示燈狀態	顯示屏
按一次	低溫模式	淺紅色	Lo
按兩次	ECO模式	紫色	ECO圖標, 30°C
按第三次	風扇模式	藍色	無顯示
按第四次	高溫模式	深紅色	HI

 
開啟ECO模式，亮起紫色顯示燈，顯示屏顯示30°C（默認設置）。當室溫接近30度時，產品將停止加熱並進入待機模式。當室溫低於設定值時，機器將重新啟動加熱模式（按控制面板或遙控器上的+、-溫度/時間減少或增加鍵，以調節溫度）。

## 自動搖擺功能

本產品有自動搖擺功能。按下左右搖擺鍵“”以啟動左右搖擺功能。再按一次按鍵以停止左右搖擺功能。按下“”上下搖擺鍵以啟動上下搖擺功能。再按一次按鍵以停止上下搖擺功能。以無線遙控器及主機上的按鍵操作方式一致。控制面板和遙控器。

**注意：**請勿用手用力調整本產品的搖擺角度，以免損壞內部電機。

## 操作時間鍵功能

時間鍵功能可將操作時間設置為1至24小時。有關設定操作時間功能，請按下時間鍵“”。LED顯示屏將顯示“00”。按下+、-溫度/時間減少或增加鍵調整所需的操作時間。設置完成後，數字閃爍3秒確認，顯示屏顯示“h”顯示燈。要取消時間鍵功能，請再次按下按鍵，直至LED顯示屏顯示“00”。以無線遙控器及主機上的按鍵操作方式一致。控制面板和遙控器。

 
## 溫度設定

溫度可設置為17度至37度。在加溫模式下，按溫度/時間增加或減少鍵“+、-”，自動切換到ECO模式，然後再按溫度/時間增加或減少鍵“+、-”調節所需溫度，設置完成後，數字閃爍3秒確認，主機控制面板和遙控器的操作相同。

在加溫模式下關閉產品時，風扇將繼續運行約 15 秒，請在 15 秒再按主電源開/關按鍵。風扇模式下，短按控制面板開/關按鍵可停止風扇模式。

## 無線遙控器

本產品內附帶的無線遙控器需要 1 枚鋰電池，型號為 CR2025 (3V)，我們建議同鋰型電池，以作可較長時間使用。安裝電池方法如下圖，拉下無線遙控器底部的電池蓋，裝上電池後並裝回無線遙控器的底盤，請注意電池安裝方向。

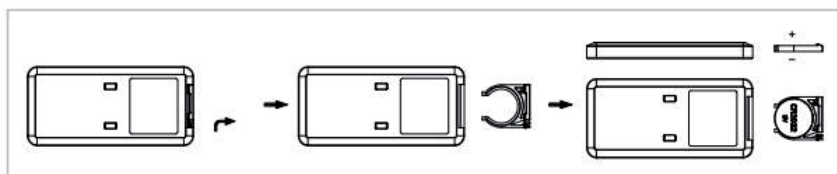

### 注意：

- 請按照電池包裝上的指示處理電池。
- 遙控器配有一枚電池，第一次使用前，請把遙控器的電池膠片移除。

## 過熱保護裝置

本產品具有過熱保護功能，在過熱情況下，自動關閉設備，例如在整個或部份的出風口或後網堵塞。在這種情況下，請拔掉產品電源插頭，等待約 30 分鐘使其冷卻，並立即清除阻礙出風口的物體。

然後在30分鐘後，重新插上電源開啟本機，設備應正常運行。如果問題仍然存在，請聯繫我們的售後服務中心。

## 翻倒自動停止操作

本產品機底部配有一個開關保護，當本產品在傾斜或翻倒時，電源會被自動切斷運作。當將本產品擺正直立之後，會自動回復通電及進入待機模式後，重新設置所需功能，本產品便可重新運作。不要在又厚又粗的地毯上使用，本產品可能不能正常工作，因為這開關保護沒有被啟動。

## 清潔與儲存

- 在清洗工作之前你的暖風機必須關上主電源開關OFF，拔掉電源插頭。
- 用一塊濕的布、吸塵器或除塵刷擦拭外殼。
- 不要使用可燃的或者腐蝕性的清潔液，像苯或酒精清潔暖風機。
- 不要把暖風機浸入水中！
- 定時用吸塵器清潔空氣進出口及過濾網。
- 如果暖風機長時間不使用，必須把暖風機包好，防止灰塵或污垢積聚。請把暖風機儲藏在沒有陽光和灰塵的乾燥的地方。

**清潔過濾網：**打開本機背面的蓋子，取下過濾網，取出過濾網並進行清潔。用水輕輕地沖洗過濾網，待完全風乾後，重新裝回本機。

## 技術參數

型號：GCTH20WH

電源：220-240V~

頻率：50Hz

熱量輸出：2000瓦

產品尺寸：526(高) x 211(闊)x 211(深) 毫米

\* 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。





請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知  
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.  
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity  
between the English version and the Chinese version,  
the English version shall prevail.

保養登記  
Warranty Registration



於網上登記新產品保養  
Register your product online  
[www.dchtoolbox.com](http://www.dchtoolbox.com)

小電維修服務 - 自攜點  
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre

香港九龍灣啟祥道20號大昌行集團大廈4樓

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210

電郵地址 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)

網址 Website: [www.gilman-group.com](http://www.gilman-group.com)