

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啓祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com

gemini
ITALY


16L 3-TIERS
ELECTRIC FOOD STEAMER
16公升三層電蒸籠
Model no./型號:GFS16WH
1000W

Before using your product for first time, please read this instruction manual.
在使用本產品前，請仔細閱讀本說明書並保存好

Safety Instructions


1. Please read these instructions carefully and retain them for reference.
2. This appliance is not intended for use by persons (including children under 8 years old) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
4. Use this appliance solely in accordance with these instructions.
5. Never use the appliance outdoors and in a humid room.
6. Before use, ensure the power supply 220V~50Hz same as indicate at the appliances. The power supply should be earth wire.
7. Appliances should place at a stable platform, and keep away from children.
8. While selecting the features, kindly do not press the button so hard, it will damage the button and control panel.
9. Any faulty operation, must off power and unplug the power supply. Do not unplug while your hand is wet, because will get electric shock.
10. Do not pull the line along sharp object / sharp edges, crimp the wire or let it hang down. Also put away from hot heating and wet condition.
11. Do not insert any metal object into to the heat dissipation holes /gaps, otherwise it will cause the electric shock.
12. Do not place the product on the surface or beside extreme heat condition, such as oven etc.
13. It is forbidden to use this product on an unstable / inclined platform to avoid accident such as injury or fire cause by products falling over.
14. Please keep the surface of the heating plate clean. After using it for a period of time, you need to clean the dirt on the surface of the heating plate.
15. The product will generate steam when it is working. It is easy to cause burns from the steamer. Please be careful while using it.
16. Do not allow liquid to flow into the product during cleaning, and to avoid danger do not allow the power cord, plug, main body, etc. To dip in the water.
17. Heating element in the steamer shall not be direct contact with food.
18. Steamer has the dry boiling protection. If the heating PTC is out of water, the steamer will cut off and digital display will show "E3" alarm, and it can return to normal use after adding water.
19. Do not put the steamer base into water for cleaning. The steamer base only can be wiped with wet towel. Do not wash it with water to avoid electric leakage and failure.
20. When adding water, not in use, cleaning, or moving, it is necessary to ensure that the power is disconnected
21. This product is for household use only.

Product Review

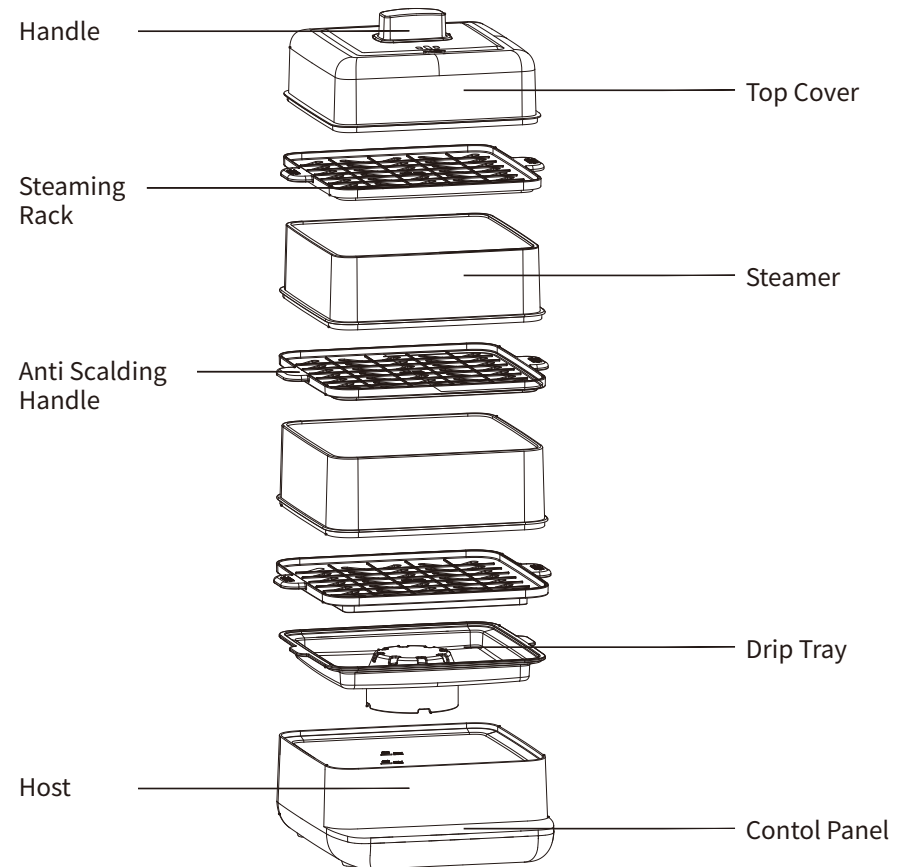

Note : The pictures are for reference only, assemblies maybe different from the picture.

Panel Instruction

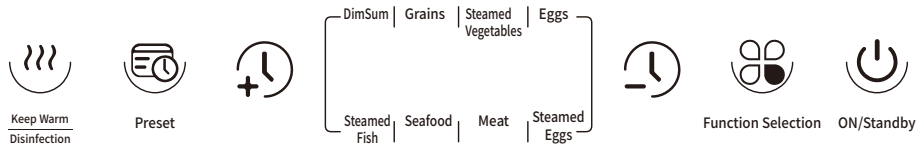

Function setting

【Power on/standby】

Plug in the power plus, One beep sound, all function lights and digital tubes will light up for one second and then turn off, entering standby mode, and the digital tube will display a flashing “— — — —”.

【Power on status】

Press the "Power/Standby" button and enter the power on state with a beep sound. The digital display shows the scrolling light “┌ _ _ ┐”.

【Standby mode】

Press the "Start/Standby" button for the first time to turn on the device, press it again to enter standby mode, and the digital display will flash with a “— — — —”.

【Insulation/Disinfection】

1. When the Steamer is turned on, pressing the "insulation/disinfection" button for the first time will activate the insulation function; Press the "Insulation/Disinfection" button again to activate the disinfection function, and select the cycle function.

2. In the keep warm state, the digital display shows "bb: bb" (keep warm for 5 hours, temperature 70 °C -80 °C); The power level and time function cannot be adjusted.

3. In the disinfection state, the digital display shows the working time and the function time can be adjusted, but the power cannot be adjusted.

【+ -】

1. In the Preset state, press of the "+" or "one" button increases or decreases the appointment time by 10 minutes

(Long press to increase or decrease), up to 24 hours can be reserved, and then press to return to a 10 minutes cycle.

2. In the Function Selection state, press the "+" or "one" button briefly to increase or decrease the working time by 2 minutes (Long press to quickly increase or decrease).

【Function Selection】

1. Under the power on status, press the "Function Selection" key to select Dim sum, miscellaneous grains, vegetables, eggs, steamed fish, seafood, meat, and steamed eggs.

【Preset】

1. Select the Preset function, the Preset indicator light will flash. After the function enters operation, the function indicator light will remain on.

Touch this button to select the Preset time, which ranges from 00:10-24:00 (default time 02:00). Press the "+" to add or subtract the appointment time, short press to add or subtract 10 minutes (long press to quickly set).

【Preset setting process】

Click the "Power/Standby" button to select the function, and then press the "Preset" button to enter the Preset program; Press the "+" to adjust the Preset time; After the Preset function is operation, the digital display shows a countdown to the Preset time ends, the function enters the working state.

Reference Cooking Time of Each Function

Dim Sum: Select this function to steam Dim Sum, steamed buns, The default working time is 45 minutes, adjustable range of 30 mins -1 hour. After the work is completed, it beeps 6 times to return to standby mode.

Grains: Select this function for steaming sweet potatoes, corn and other ingredients. The default working time is 45 minutes, and the range can be adjusted from 35 minutes to 1 hour. After completing the work, make 6 beeps to return to standby mode.

Steamed Vegetables: Select this function to use for cooking ingredients such as Vegetables, The default working time is 17 minutes, adjustable range of 10-40 minutes; After completing the work, beep 6 times to return to standby mode.

Steamed eggs: Select the appropriate function for steaming and boiling eggs; The working time is 20 minutes, adjustable range of 10-40 minutes. After completing the work, it will beep 6 times to return to standby mode.

Steamed fish: Select this function to steam and cook fish ingredients; The default working time is 20 minutes, adjustable range of 10-40 minutes; After completing the work, beep 6 times to return to standby mode.

Seafood: Select this function to cook ingredients such as lobster and crab; The default working time is 25 minutes, adjustable range of 10-40 minutes; After completing the work, beep 6 times to return to standby mode.

Meat: Select this function for steaming and cooking ingredients such as duck and chicken; The default working time is 30 minutes, adjustable range of 20-1 hour. After the work is completed, it beeps 6 times to return to standby mode.

Egg: Select this function to cook egg custard; The default working time is 25 minutes, adjustable range of 10-40 minutes; After completing the work, beep 6 times to return to standby mode.

Disinfection: Select this function for steam cleaning of tableware, disinfection, etc.. The default working time is 28 minutes, adjustable range of 18-38 minutes; After completing the work, beep 6 times to return to standby mode.

Tips:

1. The above is reference data, and the time should be adjusted according to the ingredients and actual needs during use
2. There is a water level line marked inside the host, which can be filled with the corresponding amount of water. If the digital screen displays E3 after dry burning, the prompt sound "drip" will sound 10 times, and press "power on/standby" to return to the power on state! (Do not use cold water directly for cooling. Wait for the natural cooling temperature to drop below 100 ° C, then reset and select the function again for heating.
3. When using the "Grains" function, please slice the ingredients, and it is recommended that the slice thickness should not exceed 3cm. Be careful not to stack the sliced ingredients after slicing
4. After removing the water / soup in the drip tray, this product can resume to work.

Maintenance and clean

1. Before cleaning, the power must be unplugged;
2. Be cautious of burns . Please clean the machine after it cools down; Do not use chemicals for wiping;
3. Do not use steel wire balls or hard tools to scrub the surface of the product: do not directly rinse the bottom;
4. After cleaning the product, please use a dry towel to wipe off any remaining water stains and place it in a cool place to air dry;
5. Do not expose the product and its accessories to direct sunlight;
6. After use, leaving scale or other marks on the bottom is a normal phenomenon. After the product is used, use 500ml of water and add about 15ml of white vinegar. Boil the water and cool it down. Pour out hot water and clean the bottom with a white cloth, then rinse with clean water. If the scale is severe, increase the amount of white vinegar appropriately and repeat the operation.


Storage

The steaming tray and steaming box are stored and stacked on the main unit in descending order, as shown in Figure 1; Refer to Figure 2 for the effect after storage.


1. Arrange the steaming trays in the order of ①②③ and stack them on the juice separating tray. Arrange the steaming boxes in descending order and stack them on the main unit, as shown in Figure

2. Refer to Figure 2 for the effect after storage.

- ① After cleaning, it is recommended to wipe or air dry before storing
- ② Do not put it in a disinfection cabinet or dryer for disinfection or drying.
- ③ Please store the product in a dry and ventilated place.

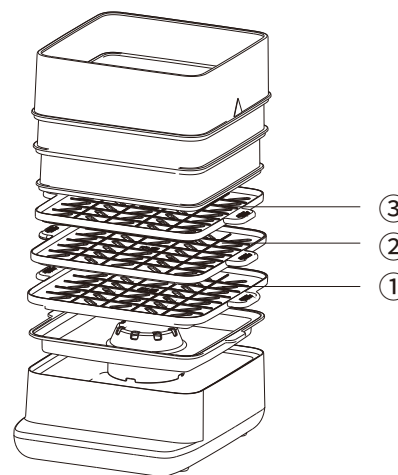

(Figure 1) Storage Diagram

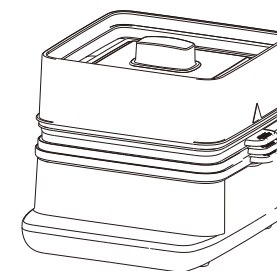

(Figure 2) After packing

Frequently Asked Question

1. The indicator light is not on:

- Is there a power outage?
- Is the power cord plugged into the socket?
- Is the power socket in a virtual closed state?

Note: After analyzing the above phenomena, the fault cannot be eliminated. Please contact our repair center or dealer. Non-professional are strictly prohibited from disassembling and assembling this machine by themselves.

SPECIFICATIONS


| | |
|---------------------|-----------------------------|
| Model No. | GFS16WH |
| Voltage & Frequency | 220V ~ 50Hz |
| Power | 1000W |
| Capacity | 16 liters Max |
| Product Dimension | 410(H) × 245(W) × 295(D) mm |

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

安全指引

- 請於操作前詳閱操作指引，避免使用不當而造成損壞或危險。
- 八歲以下兒童、傷健人士、精神及感官受到影響及缺乏操作常識和經驗者，不適宜獨立操作此產品；如需操作需要有關人士從旁指引及對其行為安全負責。
- 如本產品出現問題，請聯絡代理商或合資格人士處理，不要自行進行維修以免發生危險。
- 請遵循從本說明使用本產品。
- 此本產品只適用於家居室內操作，並不適用於商業用途及不要在濕度高的室內使用。
- 使用前請確保插座的接地有效同時請確認輸入電壓為220V~ 50Hz。
- 放置在平穩的平台上，遠離兒童。
- 操作按鍵時不可用力過猛，以防按鍵損壞。
- 在使用過程中，若發生問題時，請先將電源插頭從插座上拔下；請勿濕手拔出插頭，以免觸電。
- 請勿以尖銳的物體或鋒利的邊緣拉動電線，同時要遠離熱源和潮濕的環境。
- 不要將金屬等異物插入散熱孔或間隙中，否則可能導致電路損壞。
- 切勿將本產品放置在熱源的表面上或熱源旁，如烤箱、烘爐等。
- 禁止放置在不平或傾斜的枱面上使用本產品，避免產品容易傾倒引起傷害或火災等事故。
- 請保持機器發熱盤表面清潔，使用一段時間後需清理發熱盤表面的污垢。
- 產品使用時會產生蒸氣從蒸氣口噴出，這容易引起燙傷，請務必小心。
- 清洗時請勿讓液體流入產品內部，也不可將電源線、插頭、整機等浸入液體裏，以免發生危險。
- 本產品內用於加熱的發熱組件不可與食物直接接觸。
- 本產品具有乾燒保護功能，如水乾後工作時間未結束顯示屏會顯示"E3"警告，加入水後可恢復正常使用。
- 不要將蒸籠底座放入水中清洗，蒸籠底座只能用濕毛巾擦拭，以免漏電和故障。
- 每當加水時，不使用時、清潔時、移動時、必須保證電源是斷開的。
- 本產品僅供家庭使用。

部件示意圖

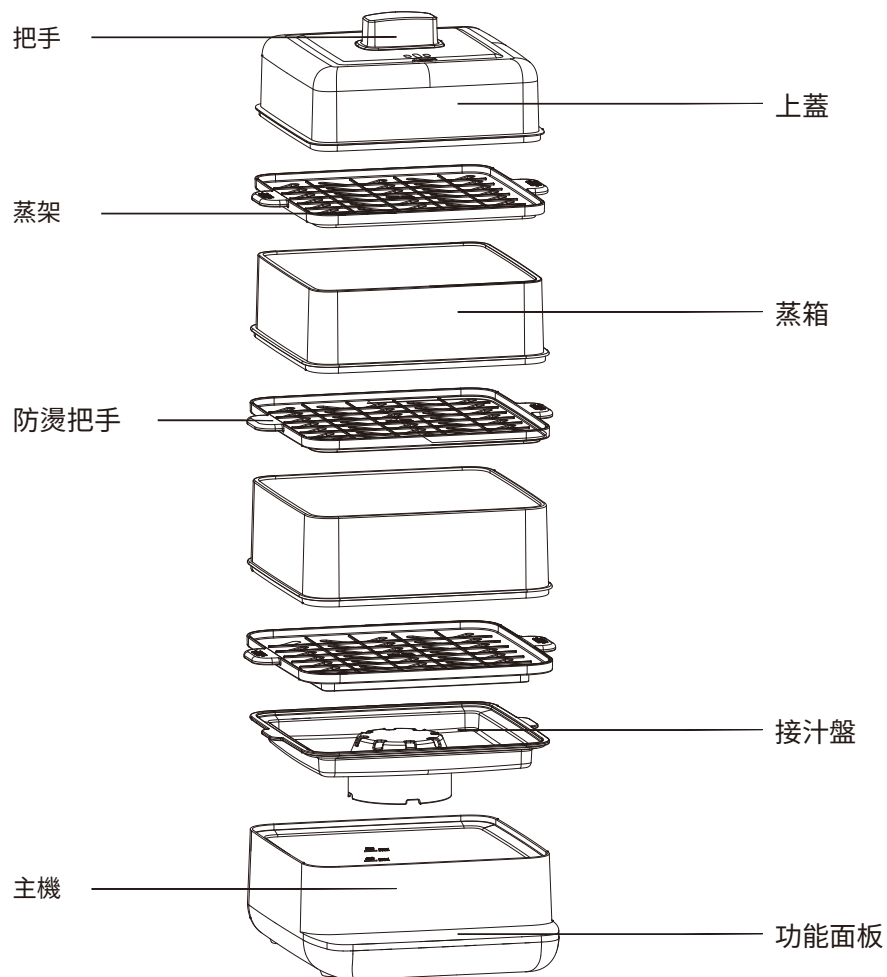

控制面板



功能設置

【開機狀態】

按“開機/待機”鍵，滴響一聲進入開機狀態，顯示屏顯示跑馬燈“|_ _|”。

【待機狀態】

- 1、首次按“開始/待機”鍵為開機，再按一次進入待機，顯示屏顯示閃爍的“— — — —”。
- 2、開機狀態下，首次按“保溫/消毒”鍵為保溫功能；再次按“保溫/消毒”鍵為消毒功能，功能選擇循環。
- 3、保溫狀態下，顯示屏顯示“bb:bb”(保溫5小時，溫度70°C-80°C)；不可調節火力大小和功能時間。
- 4、消毒狀態下，顯示屏顯示工作時間，可調節功能時間，不能調節火力大小。

【+ -】

- 1、在預約設定狀態下，每短按一次“+”或“-”鍵，預約時間增加或減少10分鐘（長按快速增加或減少），最長可以預約到24小時，再按返回到10分鐘循環。
- 2、在功能工作狀態下，每短按一次“+”或“-”鍵，增加或減少2分鐘工作時間（長按快速增加或減少）。
- 3、開機狀態下，按“功能選擇”鍵可選擇點心、雜糧、蔬菜、雞蛋、蒸魚、海鮮、肉類、蒸蛋。

【預約】

- 1、選擇功能，對應功能指示燈閃爍，功能進入運行後，功能指示燈常亮。
- 2、觸摸此鍵選擇預約時間，預約時間範圍00:10-24:00(默認時間02:00)，按“+”加減預約時間，短按增加或減少10分鐘（長按快速設置）。

預約設置流程：

點擊“開機/待機”鍵選擇功能，再按“預約”鍵進入預約程式；按“+”調節預約時間；預約功能進入運行後，顯示屏顯示預約倒計時，預約時間結束後，功能進入工作狀態。

使用說明

點心:選擇此功能,用於蒸點心或包子等食品;默認工作時間45分鐘,可調整範圍30分鐘-1小時工作完成後“滴滴”響6聲返回待機狀態。

雜糧:選擇此功能,用於蒸煮蕃薯和粟米等食材;默認工作時間45分鐘,可調整範圍35分鐘-1小時工作完成後“滴滴”響6聲返回待機狀態。

蔬菜:選擇此功能,用於蒸煮菜等食材;默認工作時間17分鐘,可調整範圍10分鐘-40分鐘;工作完成後“滴滴”響6聲返回待機狀態。

雞蛋:選擇好功能,用於蒸煮雞蛋;工作時間20分鐘,可調整範圍10分鐘-40分鐘工作完成後“滴滴”響6聲返回待機狀態。

蒸魚:選擇此功能,用於蒸煮魚類食材;默認工作時間20分鐘,可調整範圍10分鐘-40分鐘;工作完成後“滴滴”響6聲返回待機狀態。

海鮮:選擇此功能,用於蒸煮龍蝦、螃蟹等食材;默認工作時間25分鐘,可調整範圍10分鐘-40分鐘;工作完成後“滴滴”響6聲返回待機狀態。


肉類:選擇此功能,用於蒸煮鴨肉、雞肉等食材;默認工作時間30分鐘,可調整範圍20分鐘-1小時工作完成後“滴滴”響6聲返回待機狀態。

蒸蛋:選擇此功能,用蒸煮蛋羹;默認工作時間25分鐘,可調整範圍10分鐘-40分鐘;工作完成後“滴滴”響6聲返回待機狀態。

消毒:選擇此功能,用蒸汽清潔餐具、消毒等(首次按“保溫/消毒”鍵為保溫功能;再次按“保溫/消毒”為消毒功能,功能選擇循環);默認工作時間28分鐘,可調整範圍18分鐘-38分鐘;工作完成後“滴滴”響6聲返回待機狀態。

溫馨提示

- 1、以上為參考資料,使用時根據食材分量及實際需求調節時間。
- 2、主機內部有標注水位線,可加入相應的水量,如乾燒後顯示屏顯示E3,提示音“滴”響10聲,按“開機/待機”返回開機狀態!(請勿直接使用冷水來冷卻,待自然冷卻溫度降至100°以下,複位後可再次選擇功能進行加熱)。
- 3、使用雜糧功能時,請把食材切片,建議切片厚度不超過3cm,注意切片後食材不要堆疊放置。
- 4、清除接汁盤內的水/湯後,本產品即可恢復工作。

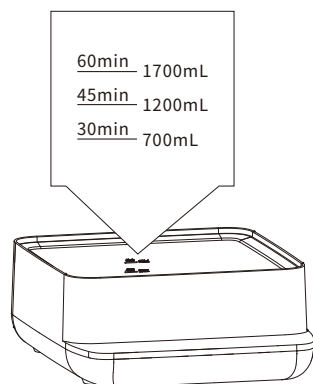


保養和維護


- 1、清洗前必須拔掉電源;
- 2、慎防餘熱燙傷,請待機器冷卻後清潔;不可使用化學藥品進行擦拭;
- 3、不可使用鋼絲球、硬質工具刷洗產品表面;不可以直接沖淋底部;
- 4、清洗產品後請用乾布擦拭殘留水漬,並置於陰涼處風乾;
- 5、不可以將產品及其附件置於太陽下暴曬;
- 6、使用後,底部留下水垢或者其他痕跡,均屬正常現象,可在產品使用500毫升水並添加約15毫升白醋,煲滾冷卻後,倒掉水用白布清潔底部,然後用清水沖洗,如水垢嚴重可適當增加白醋用量重複操作。

收納

- 1、蒸盤和蒸箱從大到小依次收納疊放到主機上,參考(圖1);收納後效果參考(圖2)。
 - 2、蒸盤按照①②③的順序收納疊放到隔汁盤上,蒸箱從大到小順序依次收納疊放到主機上,參考(圖1)。
 - 3、收納後效果參考(圖2)。
- ① 清洗後,建議擦乾或晾乾後,再收納存放。
 - ② 請勿放入消毒櫃或烘乾機中消毒、烘乾。
 - ③ 請將產品存放於乾燥通風的地方。

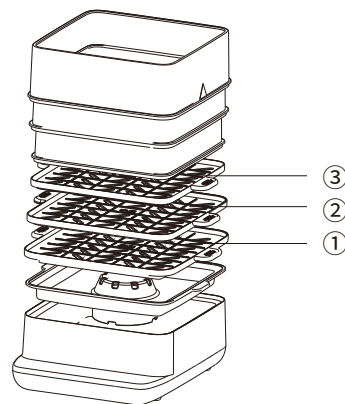

(圖1) 收納示意圖

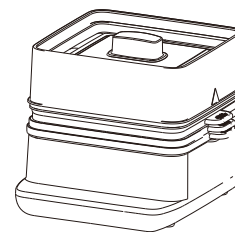

(圖2) 收納後示意圖

常見問題分析

1、指示燈不亮：

- a、是否停電？
- b、電源線是否插入插座中？
- c、電源插座是否處於關閉狀態？

備註：經以上分析後仍無法排除故障，請與本公司維修點或經銷商聯繫，嚴禁非專業人對本機自行拆裝。

產品規格

| | |
|------|-----------------------------|
| 型號 | GFS16WH |
| 額定電壓 | 220V~ |
| 額定頻率 | 50Hz |
| 額定功率 | 1000W |
| 容量 | 16L |
| 產品尺寸 | 410(高) × 245(闊) × 295(深) 毫米 |

*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。