

gemini
ITALY

ECOSMART UV ANTI-BACTERIAL
FOOD WASTE DISPOSER

環保智能除菌除臭廚餘機

MODEL NO./型號: GFWD4WH

500W

Before using your product for first time, please read this instruction manual.

在使用本產品前，請仔細閱讀本說明書並保存好

SAFETY INSTRUCTION - GENERAL

Please read and retain for future reference.

 
- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- Please place the machine on a horizontal tabletop or ground for use; The distance between the air outlet and obstacles such as walls should be maintained at least 20CM.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Only use the attachments/accessories supplied with the product.
- The maximum amount of machine waste processed by this product at once is 1kg
- The longest completion time for the machine is about 6-7 hours (the specific time varies depending on the type and moisture content of the garbage, and the intelligent control duration varies). After the program is completed, the machine will emit 3 beeps and enter a locked state
- Before using the appliance for the first time, remove any promotional materials.
- Place the appliance on a flat, dry, stable surface.
- The appliance should not be placed on untreated wooden surface. Place the appliance on a heat resistant surface.
- Be aware that the feet of the appliance can leave some marks on the table, if this happens, remove the marks with a damp cloth.

SAFETY INSTRUCTION - ELECTRICITY AND HEAT

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.
- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance, the air vents must not be covered or blocked when use.

- Never use the appliance in the vicinity of flammable material.
- Certain part of the appliance may get hot during operation. Do not touch these part to prevent scalding yourself.
- If composting is used for growing flowers and grass, please clean the oil and salt in the kitchen waste before pouring it into the kitchen waste machine for production.
- Do not open the lid casually during machine operation, as it may cause odor overflow.
- Do not touch the high-temperature mixing bucket and handle during machine operation, as it may cause burns. If you need to touch the handle, please wear heat-resistant gloves.

PRODUCT OVERVIEW

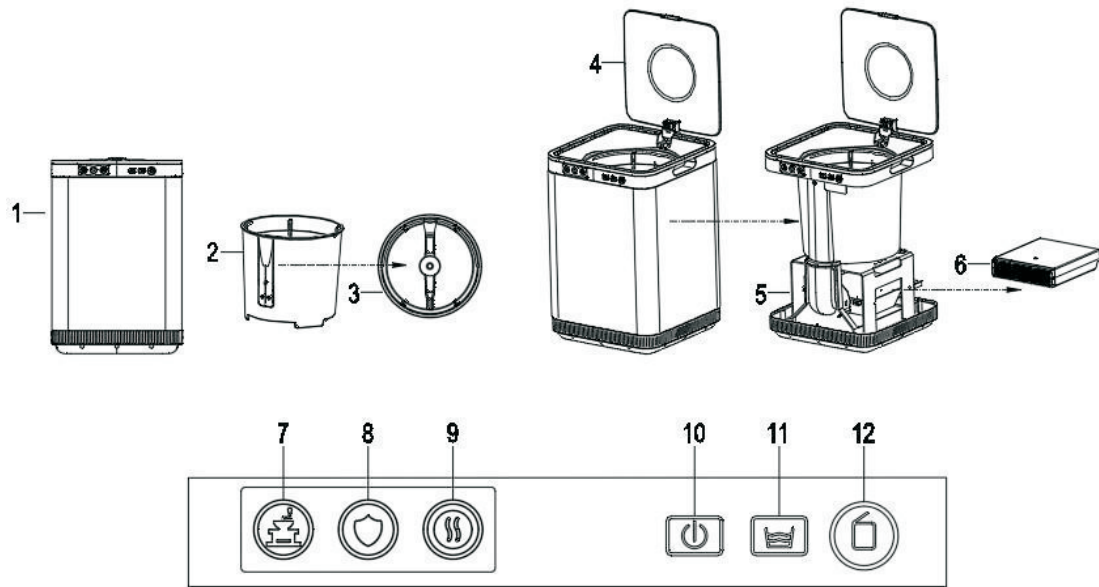


CONTROL PANEL


- | | |
|---------------------------------|--|
| 1.Host | 7.Grinding and drying stage indicator light |
| 2.Kitchen waste aluminum bucket | 8.Disinfection and deodorization stage indicator light |
| 3.Drum mixer | 9.Cooling stage indicator light |
| 4.Cover | 10. Power button |
| 5.UV light(UV lamp) | 11.Automatic cleaning button |
| 6.Activated carbon box | 12.Cover opening button |

Instructions for use

 
1. Plug in the power supply

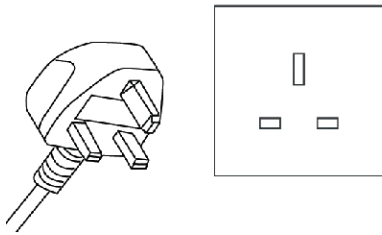


 
2. Open the cover

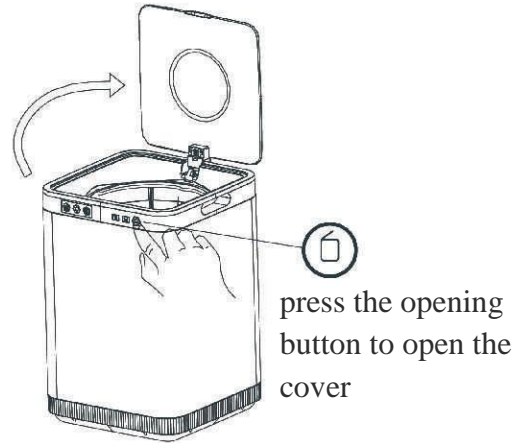

 3. Pour kitchen waste into the kitchen waste aluminum bucket, use a brush to sweep the garbage on the side into the bucket.

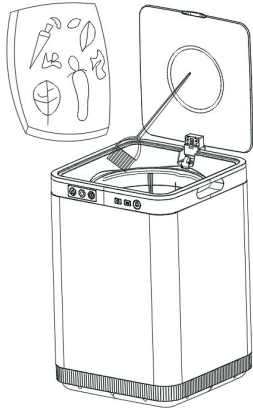

  
4. Close the cover

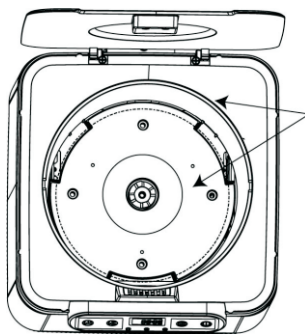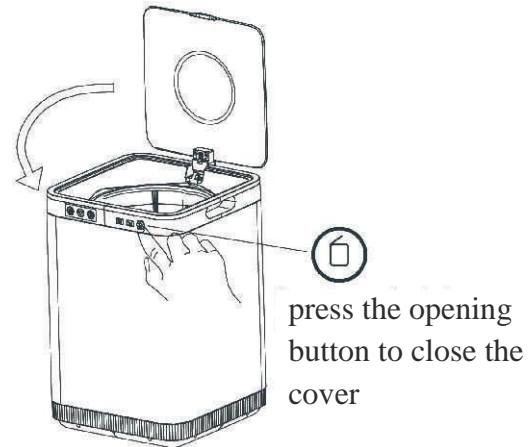

Ensure that the surface of the heating plate and the surrounding area inside the machine are clean and free of foreign objects.


Clean the bottom and upper edge of the bucket to ensure cleanliness and absence of foreign objects.

 Ensure that the bottom and upper edge of the bucket are clean and free of foreign objects, otherwise it will affect the processing effect.

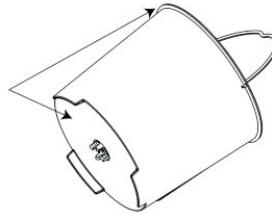

The weight of kitchen wastes should not exceed 1kg and the volume should not exceed the maximum capacity line of the mixing bucket.

 
Otherwise the machine's handling of kitchen waste will not be effective.

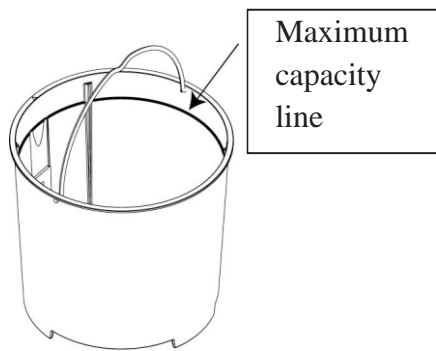




Attention:

- (1). Try to cut kitchen waste into small pieces (such as cutting apples/pears by 50mm).
- (2). Try to cut long kitchen waste short (such as cutting cucumber/radish vegetable stalks by 50mm).
- (3). Try to invest as little salt and other items as possible.
- (4). Do not put in large bone soup or large shellfish items.
- (5). Please do not throw more than 1KG of garbage and do not exceed the maximum capacity line. Otherwise the machine's handling of kitchen waste will not be effective.
- (6). Before closing the lid, align the marked arrows (otherwise it may damage the machine).




In case of power outage or other situations, after manually forcing the lid open, the machine can only be started when the system detects that the lid is closed by pressing the lid open button while the power is on.

5. After closing the top cover, lightly touch the  button to turn on the machine. The machine enters working mode and the UV light is on. Long press for 3 seconds, the machine stops working and returns to standby mode. When in standby mode, the three icon indicator lights on the display panel flash simultaneously.

 
During the work process, lightly touch the  button and the machine enters a pause state, with the corresponding indicator light flashing. The pause state allows you to open the top cover, lightly touch the  button again, and the machine will continue to run the current program.

After plugging in the power for 3 minutes without any operation, the machine will turn off all lights and enter a locked state. To unlock, press and hold the  button for 3 seconds to put the machine into standby mode.

The indicator light automatically displays the work progress:


-  grinding and drying (yellow light on)
-  disinfection and deodorization (green light on)
-  cooling (blue light on)

The system will determine the processing time based on the degree and quantity of dry and wet garbage: roughly divided into low (2-3hours), Medium (4-6hours). Three processing duration (6-7hours).

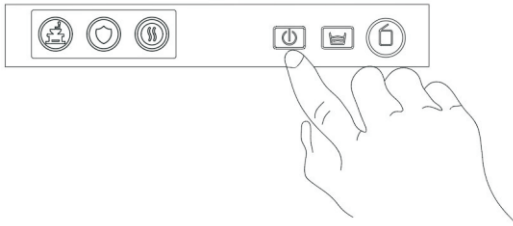

6. Gently touch the button, the machine enters cleaning mode, and the three icon indicator lights on the display panel light up alternately. The machine starts working (automatic cleaning time is 1 hour).

 If you encounter sticky kitchen waste that is difficult to clean, do not use hardware or metal scraping. You can put 2/3 of water into the bucket, and then press the automatic wash button to let the machine automatically clean. The solid kitchen waste will automatically come off, and then rinse the aluminum bucket of kitchen waste.

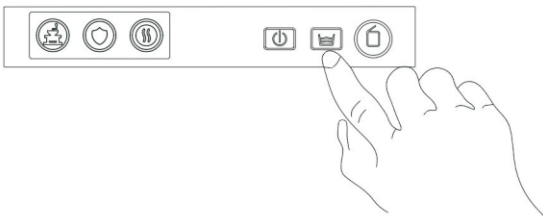


7. When you want to open the top cover during work, you need to lightly touch the button to put the machine into a pause state, and then lightly touch the button to open the top cover. After opening the cover for 1 minute, the machine will automatically close the top cover and start, completing the current program. During cleaning, the lid cannot be automatically opened. In standby mode, the lid will automatically close after 3 minutes of automatic opening.




After use:

 1. Open the cover

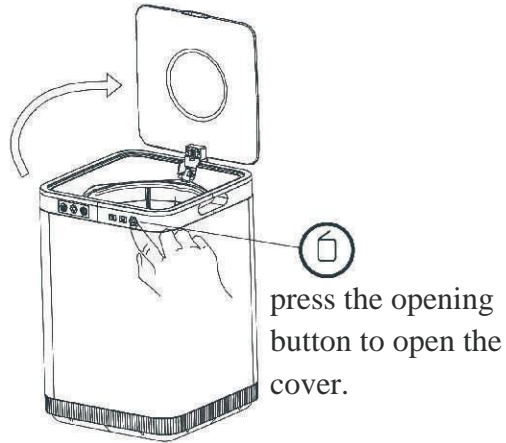

 2. Lift the kitchen waste bucket vertically and take it out.

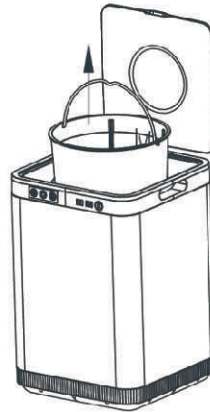


Attention: Note that the temperature remains high even after the program is completed High, please do not open the lid, wait for the equipment to cool down. Only then can the aluminum bucket be removed.


3. Pour the processed waste from the kitchen aluminum bucket into the storage box.



 
4. When using non cleaning kitchen waste aluminum buckets or directly putting them into the dishwasher, please use a soft cloth and do not scratch the coating.

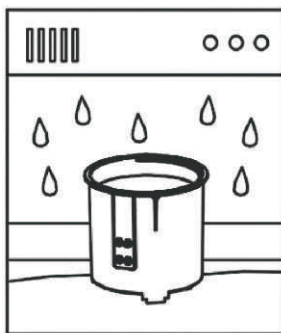

 5. Align the markings and place them back in the kitchen aluminum bucket.

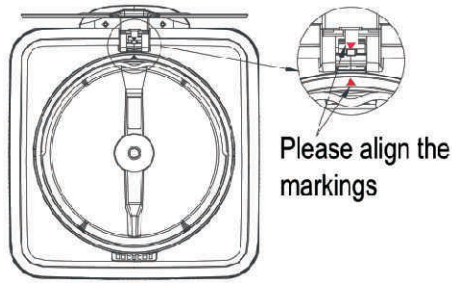

 6. After closing the lid, unplug the plug.

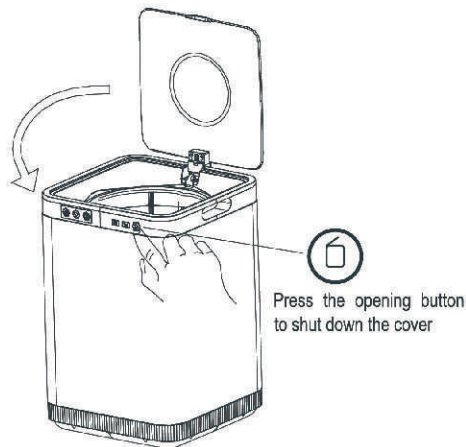

7. Mix the obtained fertilizer with soil in a 1:30 ratio, and then add garden plants.



8. Clean the kitchen waste aluminum bucket in the sink or dishwasher, and wipe the outside of the machine with a dry cloth. Finally, put the dry aluminum bucket back into the device and store it. Please use a soft cloth and do not scratch the coating.

SAFETY INSTRUCTION - UV LIGHT

The product contains a UV light system. In normal operation, the UV light would not be exposed outside. When the product with a UV light system is required, have the following warning:

WARNING!

- High intensity ultraviolet light.
- Eyes and skin hazard - avoid exposure to eyes/skin.
- Do not look directly at UV to avoid damaging eyesight.

Note: The UV lamp will only light up when on “power on mode”. Also it will not light up when the cover is opened --no matter the machine is during work or not working.

Attention:

1. When placing the kitchen waste aluminum bucket into the equipment according to step 5, rotate it slightly left and right, and use small force to push it to the bottom, ensuring that it is completely aligned with the triangular mark and in the correct position. After the program ends, the aluminum bucket is still hot. If you want to clean it immediately, please wrap the bucket handle with a damp cloth to avoid scalding.

Can be placed in	<p>Fruit and vegetable residues: Peels (watermelon, willow oranges, oranges, bananas, etc.) and scraps (carrots, cauliflower, peas, chickpea puree, etc.) Food leftovers: Grains (bread, cereal, oatmeal, rice, pasta, pancakes, etc.), soft bones and shells (fish, eggs, shrimp, minced meat, etc.), dairy products (cheese, yogurt, etc.) Cut poultry bones (chicken, duck, etc.) into small pieces and put them in Biodegradable bio materials: Tea and coffee (filter paper, coffee grounds, tea bags, etc.) biodegradable materials Potted plants and leaves: Indoor plants, garden decorations, flowers, leaves, straw, pine needles, etc Starch: Bread, pasta, rice, potatoes, grains, oats, and other grains</p>
Can not be placed in	<p>Soft fruit peel or fiber waste: Corn husks, pear heads, happy fruit shells, etc Paired with oil and sauce: Compo stable tissue, napkins, and tissue food packaging Sticky food: Honey, maple syrup, jam, nut jam, etc Bones: Cow bones, pig bones, sheep bones, etc, Shellfish: Flower shells, scallops, oyster shells, etc Daily necessities: Soap, shampoo and conditioner, inner bags (potato chips, biscuits, pet food), dirty diapers, baby wet paper towels, tampons, pet feces, cigarettes, metal, general plastic, glass, aluminum platinum packaging, alcohol, foam plastic, etc Soup type: Soup, vegetable water, toiletries, etc</p>

Cleaning and maintenance

Keep the surface clean

 
1. Before cleaning, please unplug the plug and cut off the power.
2. Dip a soft damp cloth in a small amount of neutral detergent, gently wipe it and then dry it with a dry cloth. Do not use gasoline or other solutions.

Keep attachments clean

1. After each use, all accessories need to be cleaned to prevent dirt and scaling. When not in use for a long time, the bucket and heating plate need to be cleaned and dried. Pay attention to the usage environment

1. Applicable temperature range -10°C to 40°C .
2. The relative temperature of the air is below 95% (at a temperature of 25°C).
3. Storage temperature -40°C to 60°C .
4. There should be no flammable, corrosive gases or conductive dust in the surrounding air.


Method of replacing filter device:

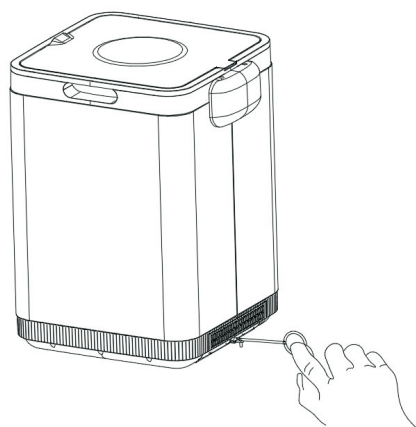

1. The filter should be replaced every 6 months after use.
2. After installing the needle, pull out the filter and replace it with a new one.

Tip:

 To maintain sealing, the filtering device needs to be tightly attached to the body. Therefore, when replacing the filtering device, users need to use a certain amount of force to pull it out, which is not a quality issue.

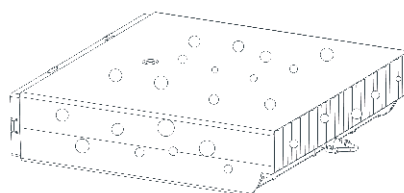

Troubleshooting

This troubleshooting is for your reference only during use. If you suspect that the machine is damaged, to avoid danger and greater losses, please promptly send it to a repair center or call the consultation hotline for resolution.

phenomenon	Possible reasons	Solution
Machine not working	Is the power supply connected	Press the "Power" button to start the machine
	Component damage	Send to the maintenance department for maintenance
Strange sound	Is there any hard debris inside the bucket	Remove debris and restart
	Is the bucket stuck in place	Reinstall the bucket in place
There is an odor	Is the power cord damaged	Avoid power cord contact with hot objects
	Is there any debris on the bottom of the bucket and the heating plate	After cooling, remove any debris before turning on the machine
	Is the filtering device installed properly	Install the filtering device properly
	Has the filtering device reached its service life	Replace with the manufacturer's specified filtering device

How to make perfect compost

Understand your brown and green materials

There are two main ingredients in any successful compost pile: carbon-rich ingredients and nitrogen-rich ingredients.

Brown Material (high carbon content)

Fall leaves, Pine needles, Twigs, chipped tree branches/bark, Straw or hay, Sawdust, Corn stalks, Paper (newspaper, writing/printing paper, paper plates, napkins, and coffee grounds), Dryer lint, Cotton fabric, Corrugated cardboard (without waxy/slick coatings), etc.

<p>Brown Material (high carbon content)</p> <p>Fall leaves, Pine needles, Twigs, chipped tree branches/bark, Straw or hay, Sawdust, Corn stalks, Paper (newspaper, writing/printing paper, paper plates, napkins, and coffee filters), Dryer lint, Cotton fabric, Corrugated card-board (without waxy/slick coatings), etc.</p>
<p>Green Material (high nitrogen content)</p> <p>Grass clippings, Coffee grounds/tea bags, Vegetable and fruit scraps, Trimmings from perennial and annual plants, Annual weeds that haven't set seed, Eggshells, Seaweed, etc.</p>

Striking the Right Carbon-Nitrogen Balance

The magic of composting lies in the interaction between carbon compounds (brown) and nitrogen compounds (green). The perfect ratio of carbon to nitrogen in compost is close to 25:1 to 30:1, at the right wet and dry level.

Get the Feel of Your Pile

A. If you are a home gardening enthusiast, you only need to put the daily kitchen waste into the compost according to the volume of brown material: green material about 1:3. You can also purchase commonly used microbial composting agents to use with them.

B. If you are a professional compost maker, you can browse relevant gardening books and websites to obtain the carbon and nitrogen content of various materials, and use professional calculation methods to control the results.

When the ratio is lower than ideal (too much nitrogen), the pile will be slimy and stinky, simply add more brown materials.

When the ratio is higher than ideal (too much carbon), the pile will be dry; simply add more green materials.

PRODUCT SPECIFICATIONS

Model No.: GFWD4WH

Voltage: 220-240V~ Frequency: 50-60Hz

Power consumption: 500W

Product dimensions: 395.3(H) x 264(W) x 286.1 (D) mm

PRODUCT SPECIFICATIONS *The final product specification may be varied according to a different lot of material and actual input

voltage power of the usage area.

注意事項

 
在使用該產品時應遵守以下所列的重要安全要求：

- 使用本產品前請仔細閱讀說明書，閱讀後請保存好使用說明書以備日後使用。
- 嚴禁將電源線、插頭及機器浸入水中或其他液體中，以防觸電。
- 請將廚餘機放置於水平桌面或地面上使用；出風口與牆壁等障礙物需保持 20CM 以上的距離。
- 使用廚餘機時嚴禁小孩操作，應將廚餘機放置在小孩無法接觸的地方。
- 清潔廚餘機時，關閉電源並拔掉電源插頭，等待廚餘機冷卻至室溫時方可進行操作。
- 請不要使用非廠家提供的配件。
- 嚴禁拉拽電源線，在移動廚餘機前需先拔出插頭，並用雙手搬動。
- 本產品只供室內使用。
- 如果電源線或本產品有損壞時，必須由授權維修點的專業維修人員進行維修，不可私自更換電源線或拆卸，以防電擊。
- 使用完後或長時間不使用，請關閉廚餘機電源並拔掉電源插頭。
- 本產品只能處理部分廚餘垃圾，其他生活垃圾嚴禁投入攪拌桶內。
- 請嚴格按照說明投入相應廚餘垃圾，否則會損壞機器。
- 本產品不能在外接定時器或獨立的遙控控制系統的方式下運行。
- 機器工作中途不要隨意開蓋，容易造成異味溢出。
- 機器工作中途不要觸摸高溫攪拌桶及提手，會造成燙傷。如需觸摸提手，請戴好防燙手套。
- 本產品一次性最大處理廚餘垃圾量為 1kg。
- 機器最長工作完成時間約 6-7 小時，（具體時間根據不同垃圾種類與含水量多少，智能控制時長變化），程式完成後機器會發出 3 聲提示音，同時會進入鎖定狀態。
- 使用前，將所有包裝材料移除。
- 產品放在平坦、乾燥、穩固的表面上。
- 產品不應放置在未經處理的木質表面上。將產品放在耐熱表面上。
- 不得將過大的食物或金屬器具放入設備中，因為它們可能會引起火災或觸電危險。
- 請注意，產品的底腳可能會桌面留下一些痕跡，如果發生這種情況，請用濕布擦去痕跡。
- 堆肥如果是用來養花，養草使用，請把廚餘垃圾裏面油鹽清洗乾淨後，再倒入廚餘機內製作。

安全指引 - 電子和熱能產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 確保本產品的周圍有足夠空間，並且不接觸易燃物料。使用時，通風口不得覆蓋或堵塞。
- 切勿在易燃材料附近使用本產品。
- 本產品運作時會發熱，不要觸摸這些部分，以防止燙傷自己。

部件示意圖

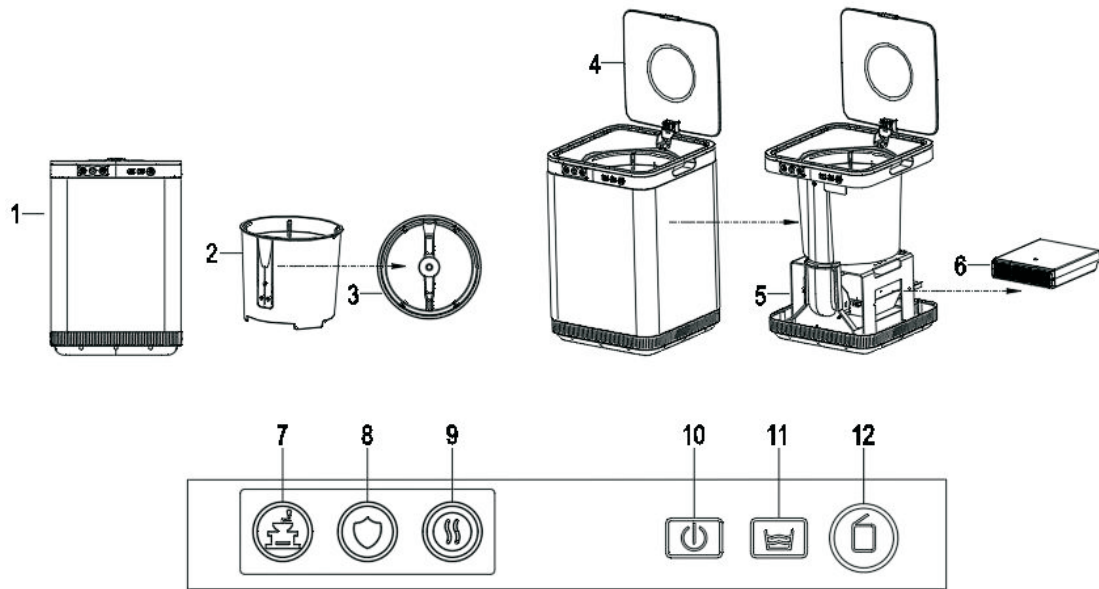


控制面板


- | | |
|-------------|-------------|
| 1.主機 | 7.研磨烘乾階段指示燈 |
| 2.廚餘鋁桶 | 8.消毒除臭階段指示燈 |
| 3.桶內攪拌器 | 9.冷卻階段指示燈 |
| 4.蓋子 | 10.電源按鍵 |
| 5.紫外線(UV 燈) | 11.自動清洗按鍵 |
| 6.活性炭盒 | 12.開蓋按鍵 |

使用說明

 
1. 插上電源

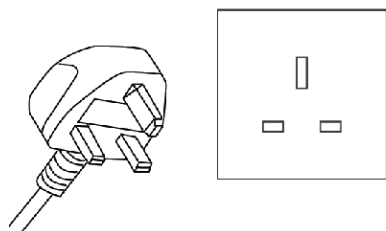


 
2. 打開蓋子

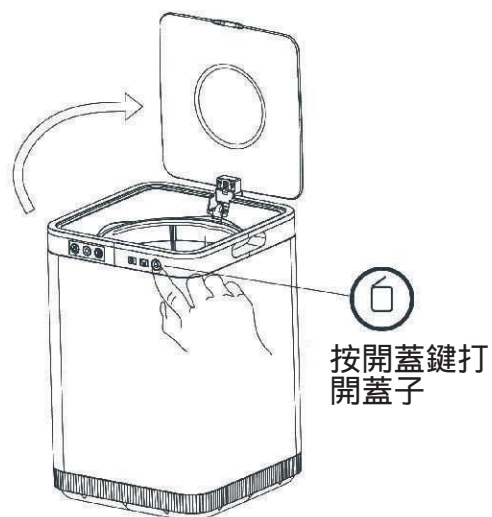

 3. 將廚餘垃圾倒入廚餘鋁桶中， 在邊上的垃圾用刷子掃入桶內

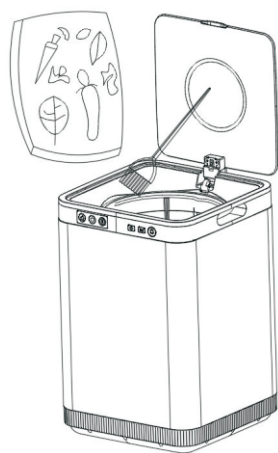

  
4. 關閉蓋子

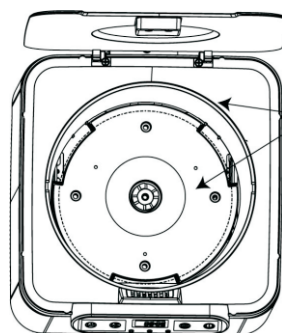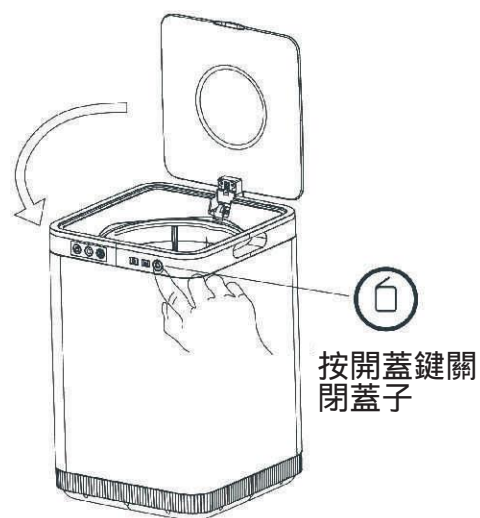

保證發熱盤表面及機器內周邊清潔，無異物；


清潔桶底部及桶上邊緣，保證清潔無異物；

 保證桶底部和桶壁的清
潔，無異物，否則影響機
器的加工效果

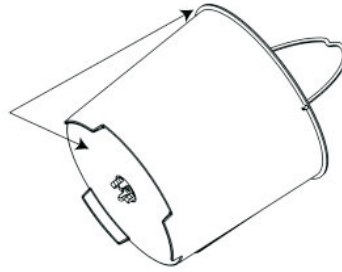

一次性裝入廚餘垃圾重量不要大於 1kg，同時體積不要超過該攪拌桶的最大容量線。否則導致機器處理效果不佳。

 
容量最大線（廚餘堆放高度不可高於此線）

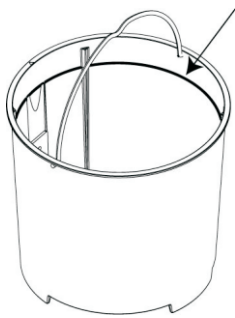




注意：

- (1). 儘量將廚餘垃圾切成小塊（例如蘋果/梨切短至50mm左右）；
- (2). 儘量將長的廚餘垃圾切短（例如黃瓜/蘿蔔/蔬菜杆切短至50mm左右）；
- (3). 儘量少投入多鹽等物品；
- (4). 請勿投入大骨湯及大的貝殼類物品，或尖銳廚餘，以免損壞塗層；
- (5). 請不要投入垃圾超過 1KG，同時不要超過最大容量線，否則機器處理廚餘物效果不佳。
- (6). 關閉蓋子工作前，要對齊標記箭頭（否則會損壞本機）。

在斷電或其他情況下，手動強制開蓋後，需在通電狀態下，按壓開蓋按鍵關閉上蓋，系統檢測到上蓋處於關閉狀態時，才能啟動機器。

5. 關好上蓋後，輕觸  按鍵開機，機器進入工作狀態，UV燈亮起；長按3秒，機器停止工作，回到待機狀態。待機狀態時，顯示面板三個圖示指示燈同時閃爍。

 
工作過程中輕觸  按鍵，機器進入暫停狀態，相應指示燈閃爍。暫停狀態可以打開上蓋，再次輕觸  按鍵，機器繼續運行當前程式。


插上電源3分鐘無任何操作，機器會關閉所有燈光，進入鎖定狀態，解鎖需長按“  ”按鍵3秒，使機器進入待機狀態。

指示燈自動顯示工作進度：


 研磨烘乾（黃色燈亮） --  消毒除臭（綠色燈亮） --  冷卻（藍色燈亮）

系統會根據垃圾乾濕程度與份量自行決定處理時間：大致分為短(2-3小時)；中(4-6小時)；長(6-7 小時)三種處理時間。

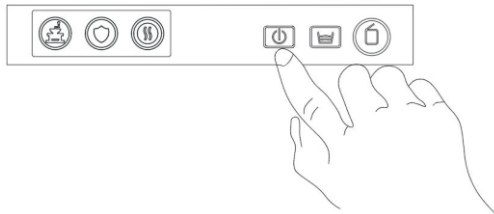

6. 輕觸  按鍵，機器進入清洗模式，顯示面板三個圖示指示燈交替點亮，機器開始工作（自動清洗時間為1小時）。

 如遇到黏實的廚餘，難以清潔，切勿用硬體或金屬刮，以免損壞塗層，可以裝不多於半桶水到桶裏（機器會把水加熱到60°C左右），然後按下自動清洗鍵，讓機器自動清洗後貼實的廚餘便會自動脫落，再沖洗廚餘鋁桶便可。

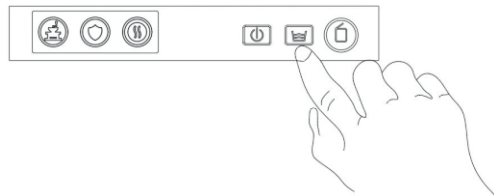

7. 工作中途想要打開上蓋時，需輕觸  按鍵，使機器進入暫停狀態，再輕觸  按鍵，打開上蓋。開蓋1分鐘後，機器會自動關閉上蓋並自動啟動，完成當前程式。清洗模式啟動工作過程中，無法自動開蓋。

 


使用後：

1. 打開蓋子




2. 將廚餘桶垂直提升取出

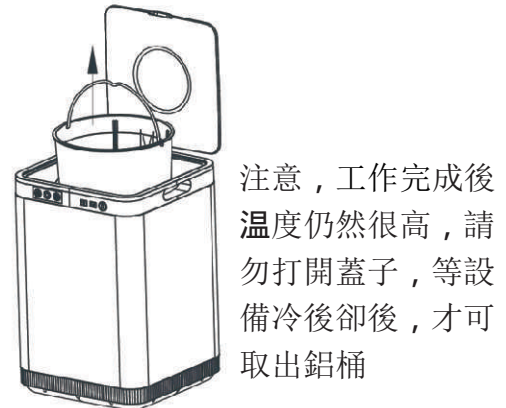


3. 將廚餘鋁桶內處理後的垃圾倒入儲物箱內



 
4. 用水清洗廚餘鋁桶或直接放入洗碗機，請使用軟布，切勿刮花塗層

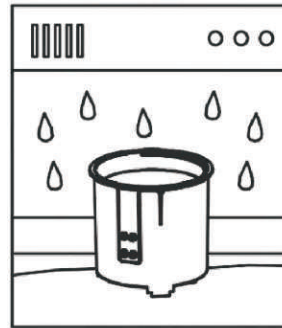

 5. 對齊標記放回廚餘鋁桶

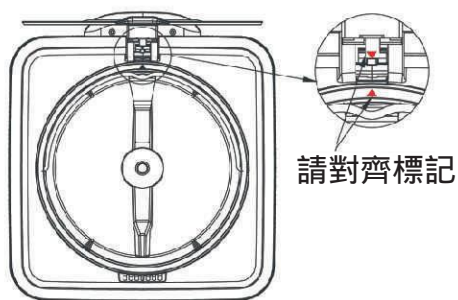

 6. 關閉蓋子後拔掉電源插頭

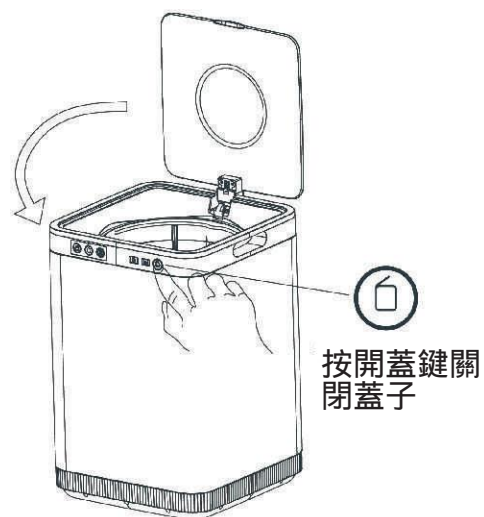

7. 將所得肥料與土壤1：30的比例混合，然後加入花園植物



8. 在水槽或者洗碗機清洗廚餘鋁桶，並用乾抹布擦拭本機外部，最後將乾燥的鋁桶放回設備中，然後存放。請使用軟布，切勿刮花塗層。

9. 機器用完後，要立刻清洗，以免發臭。

安全指引-紫外光燈

本產品包含紫外線系統。在正常操作中，紫外線不會暴露在外面。

當產品配備紫外線系統時需要有以下警告：

警告！

-高強度紫外線。

-眼睛和皮膚危險-避免接觸眼睛/皮膚。

-請勿直視紫外線，以免損傷視力。

注意：紫外線燈僅在「開機模式」時才會亮起。而且打開蓋子時它不會亮--無論機器在工作還是不工作。

注意：

1. 將廚餘鋁桶依步驟5放入設備時，稍微左右轉動，並用小力將其推到底部，確保對準三角標識完全處於正確的位置。

2. 程式結束後，鋁桶還是熱的，若要立即清洗，請用濕布包住桶柄，以免燙傷。

。

可以放入	水果和蔬菜殘渣： 果皮（西瓜、柳橘、橘子、香蕉等）邊角料（胡蘿蔔、綠花椰菜、豌豆、鷹嘴豆泥等） 食物剩菜： 穀物（麵包、麥片、燕麥片、米、麵食、煎餅等）、軟骨頭和軟殼（魚、蛋、蝦、肉碎等）、乳製品（芝士、乳酪等） 禽類骨頭（雞、鴨等）切小塊投入 可生物降解的生物材料： 茶和咖啡（濾紙、咖啡渣、茶包等）可降解材料 盆栽植物和葉子： 室內植物、花卉庭院裝飾花卉、樹葉、稻草、松針等 澱粉： 麵包、義大利面、米飯、土豆、穀物、燕麥和其他穀物
------	--

<p>不能放入</p>	<p>軟果皮或纖維廢棄物： 玉米皮、鳳梨頭、開心果殼等</p> <p>配上油和醬汁： 可堆肥紙巾、餐巾紙和紙巾食物包裝</p> <p>黏性食物： 蜂蜜、楓糖漿、果醬、堅果醬等</p> <p>硬骨類： 牛骨、豬骨、羊骨等，</p> <p>貝殼類： 花貝、扇貝、生蠔外殼等</p> <p>生活用品： 肥皂、洗髮水和護髮素、內襯袋（薯片、餅乾、寵物食物）、 髒尿布、嬰兒濕紙巾、衛生棉條、寵物糞便、香煙、金屬、 通用塑膠、玻璃、鋁箔包裝、酒精、泡沫塑膠等</p> <p>湯水類： 湯水、菜水、洗漱水等</p>
-------------	---

清潔及維護保養

保持表面清潔

1. 清洗前，請拔出插頭，切斷電源。
2. 用柔軟的濕布蘸取少量的中性洗潔液，輕輕擦拭，再用乾布擦乾，不可使用汽油或其他溶液。

保持附件清潔

1. 每次使用後，需清洗所有的配件，以防積汙結垢。
2. 長期不用時，桶及發熱盤需清潔烘乾。

注意使用環境

 
 
1. 適用溫度範圍-10 ~ 40 。
2. 空氣相對溫度在95%以下(溫度為25 時)。
3. 儲存溫度-40 ~ 60 。
4. 周圍空氣中應無易燃性、腐蝕性氣體或導電塵埃的存在。

過濾裝置更換方法：

1. 過濾器使用6個月更換一次
2. 將拉針裝好後向外抽出過濾器,更換為新的過濾器即可

提示：

1. 為保持密封，過濾裝置需要緊貼機身.因此，在更換過濾裝置時，用戶需要使用一定的力度拔出，這不是品質問題。
2. 使用後，活性炭過濾網背後會有少量水珠，這是正常現象（冷熱空氣對流產生水珠）

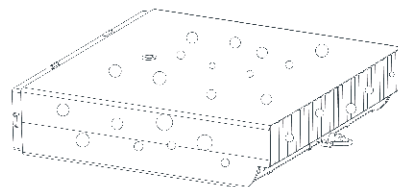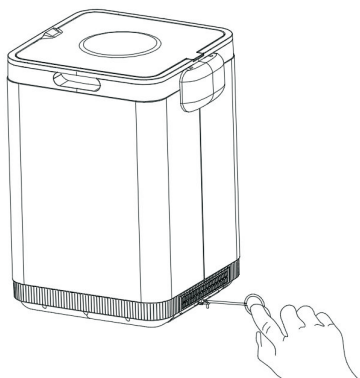

疑難解答

本疑難解答僅供您在使用過程中參考，如果懷疑機器有損壞，為避免危險和更大損失，請及時送往維修點或致電維修熱線解決問題。

現象	可能原因	解決方法
廚餘機不工作	電源是否接通	按“電源”鍵，廚餘機開始工作
	元部件損壞	送維修部檢修
有異聲	桶內是否有硬雜物	去除雜物再開機
	桶是否卡到位	將桶重新安裝到位
有異味	電源線是否損壞	避免電源線接觸到發熱物體
	桶底及發熱盤上是否有雜物	冷卻後，去除雜物再開機
	是否安裝好過濾裝置	安裝好過濾裝置
	過濾裝置是否到達使用壽命	更換為供應商指定過濾裝置

如何製作完美的堆肥

1. 了解你的棕色料與綠色料

任何成功的堆肥都有兩種主要成分；富含碳的成分和富含氮的成分

2. 達到正確的碳氮平衡

棕色料（含碳量高）
秋葉、松針、樹葉、碎樹葉/樹皮、稻草或乾草、鋸末、玉米稈、紙張（報紙、書寫/印刷紙、紙盤、餐巾紙和咖啡過濾紙）、乾燥棉絨、棉織物、瓦楞紙板
綠色材料（高氮含量）
草屑、咖啡渣/茶包、蔬菜和水果殘渣、多年生和一年生植物的邊角料、未結籽的一年生雜草、海藻等

堆肥的神奇之處在於碳化合物（棕色）和氮化合物（綠色）之間的相互作用。在適當的乾濕水平下，堆肥中碳氮的完美比例25：1至30：1。

3. 感受一下你的堆肥

A、如果你是家庭園藝愛好者，只需日常廚房的垃圾按照棕色料：綠色料1：3的體積投入堆肥即可，你也可以購買常用的微生物堆肥劑來搭配使用。

B、如果你是專業的堆肥製作者，可以查閱相關園藝書籍和網站，取得各種材料的碳、氮含量，並使用專業的計算方式來控制結果。

當比例低於理想值（氮氣過多）時，堆肥會變得粘稠且發臭；只需添加更多棕色材料即可。

當比例高於理想值（碳過多）時，堆肥會乾燥；只需添加更多綠色材料即可，一般來說，富含碳的材料應構成堆的主體，一個好的規則經驗是每次添加一批富氮成分時，添加約4倍的富碳成分（體積，不是重量）。

產品規格

型號：GFWD4WH

電壓：220-240V~ 50-60Hz

功率：500瓦

產品尺寸：395.3（高）x264（寬）x286.1（深）毫米

最終產品規格可能會根據不同批次的材料和使用區域的實際輸入電壓功率而變化。

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啓祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com