

geminipro
ITALY

**2-IN-1
GARMENT STEAMER**

2合1手提蒸熨機

MODEL NO.: GGS180

1000W



A GILMAN GROUP BRAND

Please read and retain for future reference.

SAFETY INSTRUCTION - GENERAL

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Only use the attachments/accessories supplied with the product.

SAFETY INSTRUCTION - ELECTRICITY AND HEAT

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.
- Never use the appliance in the vicinity of flammable material.
- Certain part of the appliance may get hot, such as air outlet. Do not touch these part to prevent scalding yourself.


Warning: Do not touch the hot surfaces of the steamer head when the appliance is in use.

SAFETY INSTRUCTION - DURING OPERATION

- Make sure your hands are dry before touching the appliance, power cord or plug.
- Do not pick up the appliance if it falls into water. Remove the plug from the socket immediately. Do not use the appliance again.
- Never immerse the appliance, the power cord or the plug in water or any liquid.
- Clean the appliance thoroughly after use (Please refer to “Cleaning and Storage” section).
- To avoid injury from high temperature steam, do not keep the spray head face yourself or anybody while steaming.
- After use, unplug the steamer and empty any remaining water from the tank to avoid leakage or calcification.

PRODUCT OVERVIEW

1. Indicator
2. Steam button
3. Handle
4. Protection cord bushing
5. Water inlet cover
6. Water inlet
7. Main unit
8. Steam Head
9. Heat Resistant base
10. Measuring cup

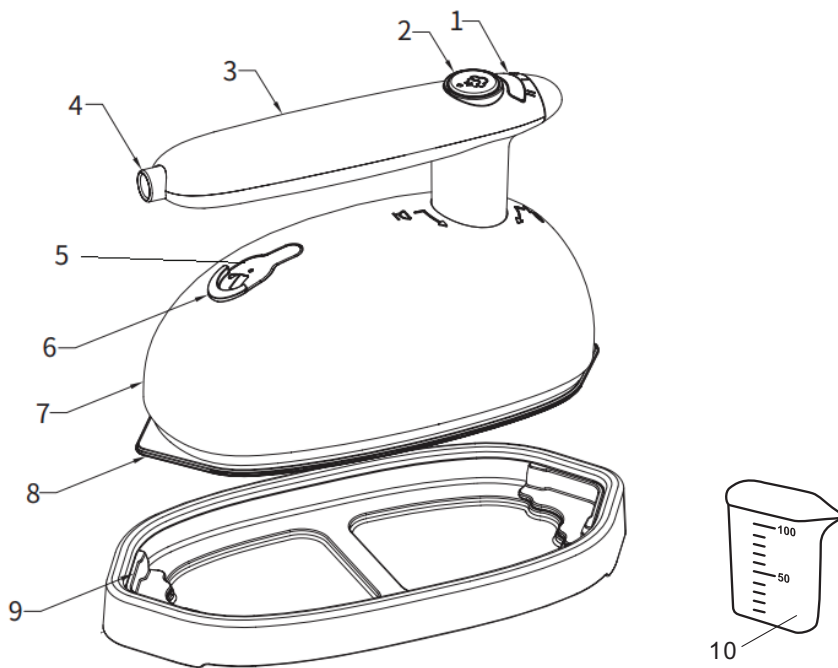

USAGE INSTRUCTION

Caution: Hot surface of steam head during operation!

Hold the main body of the steamer with one hand and rotate the handle with the other hand, this product design the rotation angle is 180°, and there will be a “click” sound during rotation. You can adjust the desired angle to use.

- Open the water inlet cover on the water inlet and add tap water (Please refer to page 6 “Steaming Tips” section) to the water tank to ensure that there is water in the water tank at least 60ml. (Note: DO NOT connect the power supply before adding water)

Dry ironing:

1. Preheat before use, connect the product to the power supply, the product all the indicator lights are flashing, when the power indicator is always on, indicating that the preheating is complete and you can start using it.
2. Dry ironing function: put the product in the Heat Resistant base during preheating, after the product is preheated, The surface has a certain temperature, and the clothes can be ironed (when using the dry ironing function, the Heat Resistant base needs to be removed).
3. Since the temperature of this product is not adjustable, please do not directly iron low-temperature woven fabrics. It is recommended to cover the fabric to be ironed with a damp felt first.

Steam ironing:

1. Steam button: When the preheating is completed, press this button to turn on the moderate steam generator mode, press this key twice to start maximum steam mode, press this key again to turn off steam, the steam indicator is off, and the power light is always on back to the Dry Ironing mode.
2. When stop using, pull out the power plug from the power socket.
3. Pour out the water in the water tank, place the product flat in the base provided with the product, etc. wait for the product cool-down completely.

STEAMING TIPS:

- To prolong the service life of the product, it is recommended use purified water or distilled water.
- When using the device for first time, please test it on an old cloth, as there may be sediment left from the manufacturing process or transportation.
- Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
- When hanging garment on a door while steaming, be careful not to damage the door with steam. Please select a suitable place to hang your clothes.
- Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place onto a towel rack.

CLEANING AND STORAGE

Tips: Always clean the steamer and accessories after using.

- Unplug the power cord plug, wait until the machine is totally cooled down.
- Before cleaning, open the top's water inlet cover of the product, pour water out the remaining water, restore the water inlet cover.
- Gently wipe the unit with a soft cloth, and put in a dry and cool place.
- It is recommended to do descaling cleaning twice a year: put 1 part of vinegar and 2 times the water of vinegar in the water tank, turn on the steam button to work for 5 minutes, then turn off the steam function, and pour out the remaining mixed water in the water tank, 10 After hours, it can be refilled with clean water for the usage.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Indicator not on	Have not connect the power supply	Check the power supply
	Have not connect the power cord plug	Check the power cord plug is connected properly
	Indicator was damaged	Contact After-Sales Service Center for assistance
No steam	Have not fill the water of the water tank	Fill the water of the water tank
	Have not press the steam button	Press the steam on button
	Machine malfunction	Contact After-Sales Service Center for assistance

*If problem exists after trying with the solution, please contact our After-Sales Service Center for assistance.

PRODUCT SPECIFICATIONS

Model no.: GGS180

Voltage: 220V~

Frequency: 50Hz

Output power: 1000W

Water tank volume: 160ml

Product dimensions: 124(H) x 184(W) x 85(D) mm

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

閱讀下列說明事項並請妥善保管，以供日後參考。

安全指引 - 一般安全

- 請按照這些說明事項, 使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 只使用隨機附送的配件。

安全指引 - 電子和熱能產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 切勿在易燃材料附近使用本產品。
- 本產品的某部分可能會發熱。不要觸摸這些部分，以防止燙傷自己。


注意：當使用本產品時，不要觸摸蒸燙頭，以免燙傷。

安全指引 - 操作期間

- 請勿用潮濕的手插拔電源插頭或接觸本產品。
- 如果本產品落入水中，立即從插槽中拔下插頭，並且不要再次使用本產品。
- 切勿將本產品、電源線或插頭浸入水中或其他液體中。
- 使用後徹底清潔本產品 (請參閱“清潔和保養”)
- 在熨衣過程中，請始終保持蒸燙機的蒸氣出口不要面向自己或其他人，避免蒸氣高溫造成傷害。
- 每次使用完畢後，記得拔掉插頭並把水箱內剩餘的水從水箱底部排出，避免漏水及產生水垢，影響使用。

部件示意圖

1. 指示燈
2. 蒸氣開關按鈕
3. 手柄
4. 護線套
5. 進水口蓋
6. 進水口
7. 主機
8. 蒸氣頭
9. 隔熱座
10. 量杯

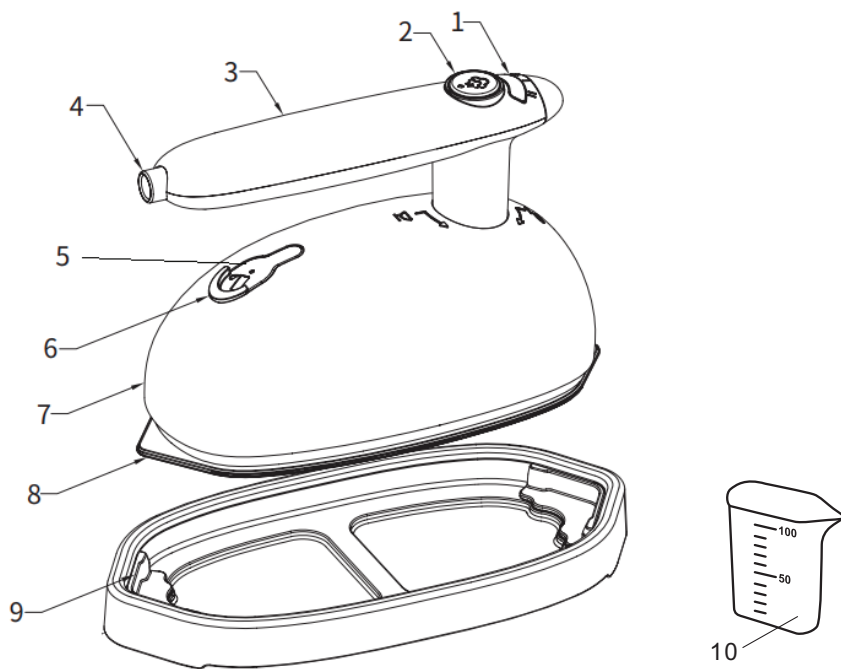

使用說明

注意：蒸氣頭在操作中會產生熱力，請不要觸摸！

一隻手握住蒸氣機機身，另一隻手旋轉手柄，本產品設計旋轉角度為180°，旋轉時會發出“咔嚓”聲。您可以調整所需的角度來使用。

- 打開進水口上的進水口蓋，在水箱裡加入自來水
(請參閱第11頁的“注意事項”)，確保水箱裡至少60毫升的水。(注意：加水前，請勿連接電源)

乾熨功能：

1. 使用前先進行預熱，將產品接通電源後，產品所有指示燈閃爍，當電源指示燈常亮時，表示預熱功能已完成，可以開始使用了。
2. 乾熨功能：預熱時將產品放在耐熱底座上，產品預熱後，蒸氣頭表面有一定溫度，即可以熨燙衣物(使用乾熨功能時，需移除耐熱底座)。
3. 由於本產品的溫度不可調節，請勿直接熨燙低溫織物面料。建議先用濕毛氈覆蓋要熨燙的織物面料。

蒸氣熨功能：

1. 蒸氣按鍵：預熱完成後，按此鍵一次，以開啟低檔蒸氣模式；按此鍵兩次進入高檔蒸氣模式；再按此鍵，關閉蒸氣功能，蒸氣指示燈熄滅，電源燈常亮。回到乾熨功能模式。
2. 當停止使用時，將電源插頭從電源插座中拔出。
3. 將水箱中的水倒掉，將產品平放回附帶的底座上，等待產品完全冷卻。

注意事項

此產品可以用自來水，但為了延長產品的使用壽命，建議使用純淨水或蒸餾水。當第一次使用蒸熨機時，請於舊衣服上作測試，因為蒸熨機可能有製造過程中或運輸中遺留的污垢。

衣物上有皺紋的地方，可能需要連續噴出蒸氣數次才能完全消除。

當在門上掛上服裝蒸熨時，強熱的蒸氣可能損壞門面，請選擇合適釣掛衣物的地方。

請於衣物表面不顯眼的地方測試顏色牢固度，蒸熨亞麻布、窗簾、毛巾、手帕、餐巾時，請放於桿子或者毛巾架上進行蒸熨。

清潔和儲存

提示：每次使用後，請清潔本機。

拔下插頭，等待本機徹底冷卻。

打產品頂部進水口蓋子，排出剩餘的水量，再進行清潔。

可用柔軟潔布輕輕擦拭蒸熨機表面，並將清潔後的產品放置於陰涼通風的地方。

- 建議1年做2次除垢處理：在水箱裡裝1份醋和2倍於醋的水，打開蒸氣開關按鈕工作5分鐘，然後關閉蒸氣功能，把水箱裡剩餘的混合水倒掉，10個小時後，可以裝入乾淨的水重新使用。

疑難排解

問題	原因	解決方法
電源指示燈不亮	沒有接通電源	檢查電源
	電源線插頭沒插好	檢查插頭是否插到位
	指示燈損壞	聯繫售後服務部協助
開機不出蒸氣	水箱沒有注水	往水箱加水
	沒按蒸氣開關鍵	重新按蒸氣開關鍵
	機器故障	聯繫售後服務部協助

產品規格

型號：GGS180

電源：220V~

頻率：50Hz

熱量輸出：1000瓦

水箱容量：160毫升

產品尺寸：124(高) x 184(闊) x 85(深) 毫米

* 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。
The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準
If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.



保養登記 Warranty Registration

於網上登記新產品保養 Register your product online
www.dchtoolbox.com



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啟祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com