

BUILT-IN / FREE STANDING 2 ZONES INDUCTION HOB 嵌入/座檯式雙頭電磁爐

MODEL NO. / 型號: GHB28IC

保養登記 Warranty



### 1. Importance Precaution

Thank you for purchasing our induction cooker. Please read this instruction manual carefully before using and keep it cautiously for your further reference. If you found some problems, please contact our after sales service center.

MARNING: All installation work must be carried out by a suitably qualified person, strictly following local building regulations and these instructions.

- This appliance is for indoor use only.
- This appliance is suitable for 220-240V voltage.
- Please use 13A or above specialized power socket individually. It is prohibited to share power jack with other appliances.
- Please check the connection between the power socket and plug to make sure they are well connected. Please do not use extension cord.
- It is prohibited to draw out or plug in the power cord with wet hand to prevent electric shock.
- It is prohibited to draw out the power socket by pulling the cable. When the power cord is damaged, please stop using it and contact our after-sales service center for assistance.
- Please unplug the power cord from the socket after the panel is completely cooled down.
- Please put the appliance at a place far from Children's reach. Children less than 8 years of age shall be kept away unless continuously supervised by adult.
- Do not use the appliance near flame or wet places.
- 10. Please put the appliance at the even place and do not move it during usage.
- Please do not dissemble or restructure the appliance arbitrarily. In case of failure, user shall contact our after-sales service center.
- Our company bears no responsibility for the failures caused by arbitrarily dissembling or restructuring the appliance.
- 13. Do not heat up unopened cans on the appliance, it may cause explosion.
- It is prohibited to heat the empty pot as it would cause the damage for the pot and the appliance. Our company bears no responsibility for the failures caused by heating empty pot.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the heating panel since they can get hot and cause scalding.
- Please make sure there is enough space around the appliance when using.
   Please keep the air inlet and air vent clear.

- 17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Please do not use the appliance on carpet or tablecloth or any other low-heat resistance article.
- Please do not place inflammable material such as paper, cloth, etc, between the appliance and the pots/pans in order to prevent the risk of fire.
- Never try to extinguish a fire with water, but switch off the appliance and then cover flame with a lid or a damp cloth.
- Do not break the surface of the appliance, if the surface is cracked, switch off immediately and unplud the power plug.
- If the supply cord is damaged, it must be replaced by the qualified person in order to avoid a hazard.
- Do not place the unit near to objects which are affected by magnet, such as Credit card. IC card. watches or radio etc...
- 24. Generation of heat will be made on the surface of the appliance and the cookware when in used. Do not touch the surface to avoid of hazard of burning. The surface will still be very hot after usage, please wait till it is completely cooled down before unplug the plug and start deaning.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
  - Δ Although this appliance complies with current safety regulations and electromagnetic compatibility regulations, it is also possible that people with other types of device, such as pacemaker, hearing aid, could experience some discomfort.

# 2. Safety Protection for Induction Cooker

- Small objects distinguish function: To avoid dangerous caused by heating small metal objects, objects with diameter 8cm will not be heated.(such as knife, fork, keys, small tea cup etc). Buzzer will make alarm sound and the cooker shut down in 1 minute.
- Inner temperature overheat protection: When the inner temperature reached 100 degrees, it will automatically stop.
- Lowest voltage and over-voltage protection: If the voltage below 100V(±10V) or over 270V(±10V), the units will stop working automatically.
- 2 hours auto shutdown function: The unit will automatically shut down if no operation within 2 hours(120 minutes).

- Plate overheat protection: The unit will stop heating and even shut down for some cooking functions if the temperature of plate center over 300°C. The unit will resume heating after the temperature drop to normal. But some functions need to press the ON/OFF icon to resume
- 6. The unit will stop heating if the inner temperature of unit is too high.

### 3. Installation Instruction


The tabletop groove for the unit can be made according to the model size. Please ensure a clear space of 55mm around the unit. The tabletop must be at least 30mm thick and made of heat resistant material to avoid deformation due to high heat from the unit


Note 1. For ventilation purposes, there should be no less than 250mm high empty space under the unit body.

Note 2. Air vent under the unit must be well circulated. Circulation between space under the unit and room atmosphere should be present.

The user should label the appliance prior to disposal. Local authorities can provide guidelines for the disposal of these materials. Do not dispose with household garbage.

Do not install the appliance in unwented ovens, refrigeration appliances, dishwashers and tumble dryes. If there is a drawer under the stove, avoid placing flammable or high-temperature-resistant items (such as sprays) in the drawer. Please follow the guidelines for the range hood regarding the distance between the stove and the range hood. If there is no explanation in the guidelines, it is recommended that the distance between the two should be at least 760 mm. After installation, the power cord should avoid pinching, such as in drawer.

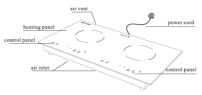

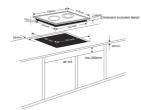



If necessary, please add the balance bar to fix the unit on the table to keep it horizontally.

Please follow the below installation instruction if the induction cooker is used for table top use.

- Please keep the following items away from the surface: plastic, aluminum, sponge, cleaner and oven cleaning spray etc.
- Please do not use the induction cooker on flammable materials, electric stoves or metal countertop.
- Please do not use the induction cooker in the bathroom, gas stove, etc. where it is damp or near flammable and explosive materials.
- 4. Put the unit on the flat surface, make the air intake and vent to be both expedite, and please do not place light table cloth/sheet under the induction cooker when using. Otherwise, heat vents may be blocked by those materials.
- 5. To avoid overloading the circuit, do not operate the other on the same circuit.
- Check the power cord if well, do not allow the power cord to touch a sharp edge or hot surface. If the power cord is damaged, use the power cord recommended by our company.
- If the extension cord is necessary, use a 13 amp cable. A smaller current than this product may cause overheating and short circuit.
- 8. When the product is not in use, disconnect the plug from the power supply.

### Contents of packaging





Item No Description

01 Induction HOB

02 Sponge Strip

[01] x1

### 4. How to use

- 4-1. Connect the main power. A "Beep" sound is heard, all the indicators will flash a time and go out, it means that the cooker is connected with power.
- 4-2. Place cookware in the centre of cooking hob. Press "On/Off" key and hold on 3 seconds on each side, a "Beep" sound is heard, display shows "- -".
- 4-3. To stop the cooking, press "On/Off" key once to switch off the cooking hob.

#### 4-4. Operation



Press "+" or "-" key when the burner is on standby mode, the LED display will show "5" which means the defaulted power level is 5. User can press "+" or "-" key to adjust the desired power level. There are 9 power levels in total from 0 to 8.

Press "Boost" key once and the LED display will show "b", it means the burner is working at maximum power 2600W.

When the two burners work at the same time, the maximum power is 2800W, their combined total level is 9, meaning that when operating the two burners at the same time the VII self adjust levels accordingly.

When you increase the power of one side, the power output of the other side will reduce automatically(i.e., one side is at level 8, the other burner automatically reduces power to level 1 creating a total of max 9 setting).

Please see the details in the following sheet.

Power Leve <b>l</b>	0	1	2	3	4	5	6	7	8	b
Watts	0	400	600	800	1200	1600	2000	2200	2400	2600

NOTE: After cooking, press "On/Off" key to switch off the burner. The hot indicator will be lighted up if the glass plate is over 60°C to remind that the cooking plate is too hot to busch.

### 4-5. Timer Setting:

Press the "Timer" key to active the timer function. The LED display shows "30" indicating the default timer setting is 30 minutes.

Press "+" key to increase the time, and press "-" key to decrease the time. User can press "+" or "-" key to set for the desired time from 00 minute to 99 minutes-2 hours-2 h

If press and hold "+" or "-" key, the timer can increase or decrease quickly. Timer will start counting down when time display stops flashing.

If user want to turn off the timer, set the desired time to "00" or just hold "Timer" key for 3 seconds.

Power Level	0	1	2	3	4	5	6	7	8	b
Available timer setting(hour)	6	6	6	6	6	6	6	6	6	6

#### 4-6,Lock Setting:

Press "Lock" key and hold for 3 seconds to lock all settings at working mode or Timer mode, Display will show "Lo".

Under lock status, the unit would not respond to any key press except the "On/Off"key. Press and hold this key for 3 seconds again to unlock "Lock" status.

### 5. Usable and Non-usable Utensils

The best choice for induction cooker is <u>strong-magnetic</u> cookware. Please use the strong-magnetic cookware which diameter is same as the cooking zone size.

### → Below material of cookware bottom is recommended:

- Cast iron:
- Enamelled coating with steel material;
- Stainless steel material and suitable for induction cooker;

Please use magnet to check the cookware whether the bottom is strong magnetic or not.



- The below cookwares are not recommended to be long used on induction cooker. These cookwares are suitable for induction cooker, but they will shorten the life time of induction cooker under long-term using.
- 1. Aluminum with ferromagnetic base
- 2. Material #304 stainless cookwares (this material is with low magnetic)
  - Material #201/#202 etc non-magnetic cookwares ( this material is with low magnetic)

## 6. The normal noise from induction cooker during heating

The heating way of induction cooker-the electromagnetism heat on the cookware bottom directly. According with the structure of different cookwares, induction cooker would cause below specific noise or vibration. It's normal presentation, not defective.

### 6-1 A low hum, similar to the transformer's sound.

Such noise would happen when you cook with high-level power. It comes from the energy which is transformed from the induction cooker to the cookware. This noise would be disappeared or reduced if the power is decreased.

### 6-2.Low whistle

Such noise would happen when there is an empty cookware on the heating zone. It would disappear if there is food or water added into the cookware.

#### 6-3 Fizz

Such noise would happen if the cookware has different-material layers. It comes from the vibration between the different materials. The volume of such noise caused by cookware would be different because of different food quantity or cooking method.

### 6-4. Sharp whistle

Such noise would happen if the cookware has different-material layers, especially when heating cookware with high-level power. This noise would be disappeared or reduced if the power is decreased.

#### 6-5. Noise from cooling fan

Induction cooker must work under controlled temperature to make sure the electronic system run well. Then there is cooking fan set in the induction cooker, it will keep running during heating. After turning off the induction cooker, the cooling fan would keep running a few minutes if the detected temperature is higher than 60°C.

### 7 How to Clean

- Remove the power plug prior to cleaning the unit. Do not use any caustic cleaning agents and make sure that water does not penetrate inside the unit.
- 2) Clean the unit when it is cool down completely.
- 3) Never immerse the unit, its cables or the plug into water or other liquids.
- Wipe off the glass cooker with a damp cloth or use a mild, non-abrasive soap solution.
- Do not use any oil based cleansing products in order not to damage the plastic parts or the casing/operating panel.
- 6) Do not use any flammable, acidic or alkaline materials or substances near the unit, as this may reduce the service life of the unit and pose a fire risk when the unit is turned on.
- In order to keep your cooker looking new, make sure that the bottom of your cookware does not scrape the glass surface, although a scratched surface will not impair the use of the unit.
- 8) Make sure to properly clean the unit before storing it in a cool, dry place.
- Cleaning and user maintenance shall not be made by children without supervision.

### 8. Care & Maintenance

During operations, if any error code occurred, please check the following table before calling for service. Below are common errors and the checks to perform.

Symptoms	Check Points	Remedy
After connecting the power and pressing	Is the electricity in suspension?	Use after resuming the electricity.
the "On/Off" key, the appliance has no response.	Is the fuse broken down?	Check the root causes carefully. If the problem cannot
Теаропас.	Is the plug connected firmly?	be fixed, please contact Service Centre for checking and repairing.
Heating being interrupted in normal	Incompatible cookware or no cookware is used?	Replace compatible cookware for the induction cooker.
use and a "Beep" will be heard.	Is the cookware not considerably placed form the center of the heating zone?	Place the cookware at the center of the defined heating zone.
	Is the cookware being heated but continually being removed?	Place a cookware inside the heating zone.
No operation during the heating being in	Is the cookware empty or the temperature too high?	Please check whether the appliance is being misused.
use.	Is the air intake/exhaust vent clogged or dirt has accumulated?	Remove the stuff clogging the air intake/exhaust vent.Operate the appliance again after cooling down.
	Is the cooker working over 2 hours without any external instruction?	Reset cooking modes or use timer function.
Error codes occur	E0 - Internal circuit error	- Keep the heat vents dear
(For induction zone)	E1 - No cookware or incompatible cookware	The induction cooker may overheat or damaged if bottom
	E2 - Internal overheat	heat vents are blocked.
	E3 - Over-voltage	Please do not place light table cloth/sheet under the induction
	E4 - Under-voltage	cooker when using.Otherwise,
	E5 - Top plate sensor open/short circuit	heat vents may be blocked by those materials.
	E6 - IGBT sensor open/short circuit	Thick table doth or plastic plate are suggested as
	E7 - Top plate overheat	replacement.
	E8 - Power sharing failed	Please contact service centre for checking and repairing.

# 9. Specification:

Product Name	BUILT-IN / FREE STANDING 2 ZONES INDUCTION HOB
Product model	GHB28IC
Power	2800W
Voltage	220 <b>-</b> 240V~
Rated frequency	50/60Hz
Dimension (mm)	95 (H) x 735 (W) x 415 (L)
Net Weight	8.3kg

Product specifications and design are subject to change without prior notice. In case of discrepancies between the English and Chinese versions, the Chinese version shall prevail.

### 1. 注意事項

感謝你使用本產品,使用前請仔細閱讀本説明書,請妥善保存,以便查閱。如 發現仔何問題,請直接與我們醫繫,我們將提供最好的服務。

▲ 警告:所有安裝工作必須由合資格人員進行,嚴格遵守當地建築法規和這 些指引。

- 1. 本產品不適用於室外。
- 本產品的適用電壓是220-240V。
- 3. 請單獨使用13A以上的專用電源插座,嚴禁與其他大功率電器同時使用。
- 使用前詰檢查插座與插頭的接觸情況,確保連接正常,切勿使用延長線。
- 5. 切勿在手濕仍未乾透時插拔電源插頭。
- 切勿用拉扯電源線的方式拔出電源插頭。發現電源線破損時,請停止使用, 應及時與客戶服務聯繫。
- 7. 亨飦完成後請待路面冷卻後再將電源插頭拔離插座。
- 請勿將本產品放置於兒童可觸及的地方,除非有成人監管,8歲以下孩童 應滾離本產品。
- 9. 請勿靠祈火源或潮濕的地方使用此電器。
- 10 請放置在水平面上使用,使用時請勿隨意移動本產品。
- 12 如因自行拆裝或改造本機遵致事故,本公司將概不負責。
- 13. 請勿加熱罐頭等密封的東西,否則會導致爆炸。
- 14. 嚴禁在本產品上將空鍋加熱,或會造成鍋具損壞,若因此而造成的機器損壞或發生危險,本公司概不負責。
- 15. 金屬物品如小刀、餐叉、湯匙和蓋子等不可直接放在爐具面板上,或會因 接觸發熱而遵致使用者湯傷。
- 16. 使用本產品時請保證產品周圍有足夠的空間,請勿堵塞進、排氣口,以保持暢通。
- 17. 8歲以上的兒童和身體、感官或智力能力下降或缺乏經驗和知識的人,如果得到關於安全使用該器具的監督或指導,並了解所涉及的危險,可以使用該器具。
- 18. 請勿在地毯、桌布等易燃物上使用此爐具。
- 19. 請勿將易燃物(如紙張)或金屬物品放置在面板與鍋具之間,或會因此而發熱或燃燒,而導致火災。
- 如發生火災時切勿使用水澆滅火種,應即時關閉爐具,並用鍋蓋合上或者 用濕布蓋住火種。
- 本產品的面板請儘量避免撞擊,萬一撞裂時,應立即關機,並拔掉電源插面。
- 22. 請勿自行更換電源線,應由符合資格的技術人員幫忙更換。

- 請勿將信用卡、磁卡、手錶或收音機等物品置於本機附近,以免受爐具受磁場影響。
- 24. 使用時,本產品會產生大量的熱量,請勿用手觸摸面板以免燙傷。使用後, 面板仍處於高熱狀態,需待其完全冷卻後,方可拔出插頭,進行清潔。
- 25. 兒童不得玩該器具。兒童不得在無人監督的情況下進行清潔和用戶維護。

 Δ儘管此電器符合當前的安全法規和電磁兼容性法規,但使用其他電子產品, 例如起演器、助聽器的人也可能會感到不適。

### 2 電磁爐安全保護

- 小物件檢測功能:為防止小金屬物加熱時發生危險,直徑8cm的鍋具或 小物件(如刀叉、鑰匙、小茶杯等)將不會被加熱,蜂鳴器會鳴叫提示, 1分雜后自動關機。
- 2. 內部超溫保護:當產品內部溫度超過100 c,將會自動停止工作。
- 高低壓保護:如果電壓低於100V(±10V)或高於270V(±10V),該產品將會自動停止工作。
- 無人看管自動關機功能:如果連續2小時未進行任何操作,電磁爐將自動 關機。
- 5. 面板過熱保護功能:如果面板中心的溫度超過300℃時,電磁爐將自動停止加熱(部份功能自動關機),待溫度恢復正常後,將自動恢復加熱(部份功能需要再按電源問關鍵重新啟動)。
- 6. 內部過熱保護功能:當電磁爐內部溫度過高時,將自動停止加熱。


### 3 安裝説明

桌面上的凹槽可以根據產品尺寸而定。請確保爐灶與牆面的淨空間為55mm。 桌面厚度最少為30mm,桌面必須為耐熱性能強的材質,以防因高溫轉致桌面 黎形。

注意1. 安裝時注意機身底部以下必須預留不少於250mm高的空間排風。 注意2. 機身底部進出風口不能設在封閉的空間裏,必須保持與不同空間的空 領連接,並儘盡與原間裏的空氣保持一定程度的連接。

用戶應在處理本產品前貼上 "廢舊電器" 的標籤。當地政府或者居委會可以提供合理處理此類廢舊電器的指引。請勿將廢舊電器直接丟棄在家民垃圾中。

請勿將爐具安装在不通風的焗爐、製冷設備、洗碗機和轉筒式乾燥機上。 若爐具下方裝有抽屜 避免將易燃或不耐高溫的物品(如噴劑)放置在抽屜內。 爐具與抽油煙機的間隔請遵從抽油煙機的指引。若指引中無説明,建議兩者距 離至少760毫米。安裝完成後 電源線應避免槽服 例如抽屜。

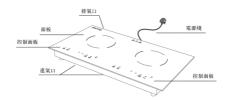



如電磁爐放置於檯面使用,請按照以下指示裝配使用:

- 1. 塑膠、鋁膜、海綿、去污粉及烤箱清潔噴霧等需遠離爐面。
- 2. 請勿將電磁爐放在易燃物品、電爐或金屬檯面等物品上使用。
- 3. 請不要在浴室、煤氣爐等受潮或靠近易燃易爆物品的地方使用電磁爐。
- 4. 請將電紐爐放置於水平面,並確保入風口和出風口保持暢通,儘量避免放 置機身於一次性膠檯布/薄檯墊上,以免檯布或輕檯墊被吸入及阻塞機底放 勢出風口。
- 5. 為避免電路負荷過重,請勿在同一電路上操作另一件電器。
- 連接電源前請先檢查電源線是否完好,請勿讓電源線接觸鋒利的邊緣或熱表面。如果電源線損壞,請使用本公司建議使用的電源線。
- 如果延長線有必要使用,應使用13安培的電線。額定電流比此產品較小的電線可能引起過熱和短路。
- 8. 當電磁爐無需使用時,請斷開插頭與電源的連接。

#### 本產品包含





[02] x1

 物品號碼
 描述

 01
 電磁爐


 02
 海綿條

[01] x1

### 4. 使用方法

- 4-1. 插上插頭於插座上,會有蜂鳴器"嗶"一聲,所有指示燈閃一下,即本機 谁入關機狀態並未正式開放。
- 4-2. 在本機加熱區域上放置合適的鍋具。兩邊爐頭分別長按 "開/關"鍵3秒, 會有蜂鳴器 "嗶" 一聲,對碼管顯示 "--"。
- 4-3. 如要停止加熱,可按"開/關"鍵一次,機器進入關機狀態。

#### 4-4. 操作

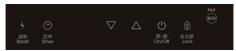

當本機處於待機模式時按 "+" 或 "-" 鍵·數碼管顯示 "5",即電磁區域默認工 作的火力檔位是第5檔。用戶可按 "+" 或 "-" 鍵設定所需的火力大小,共有9個 檔付 (0.4)。

按"速熱"鍵一次,數碼管顯示"b",即電磁區域將在最大火力2600W下工作。

兩邊爐頭同時工作時,最大總功率為2800W,左右爐頭檔位總和是9個檔,即兩個爐頭自動調節檔位,以達到功率總和為2800W/檔位總和為9檔。

當一個爐頭的火力檔位被增加時,另一個爐頭的火力檔位將自動降低(例如,一 側功率檔位是8檔,另一側功率檔位將自動降至1檔,從而滿足檔位總和9檔)。

#### 各個檔位對應的火力大小如下表:

火力 檔位	0	1	2	3	4	5	6	7	8	b
瓦數	0	400	600	800	1200	1600	2000	2200	2400	2600

注意:完成煮食后,按"開/關"鍵關機。當電磁區域的面板溫度高於60°、餘熱 燈會亮著,以提醒用戶請勿以手觸摸面板,以免燙傷。

#### 4-5. 定時設定:

- 按 "定時"鍵進入定時功能。數碼管顯示 "30",即默認設定的煮食時間為30分 鐘。
- 按 "+" 鍵增加時間,按 "-" 鍵減少時間。用戶可按 "+" 或 "-" 鍵來設定所需的煮食時間,可設定的時間範圍為0.99分鐘--2小時-3小時-4小時-5小時-6小時。

長按 "+" 或 "-" 鍵可加快時間的設定。當時間顯示停止閃爍時會自動開始倒計時。

如要取消定時功能,用戶可將時間設置到 "00" 或長按 "定時" 鍵三秒。

火力檔位	0	1	2	3	4	5	6	7	8	b
可調節的定時 時長(小時)	6	6	6	6	6	6	6	6	6	6

### 4-6. 安全鎖設定:

- 長按 "安全鎖" 鍵3秒即可在煮食過程中或定時模式中鎖定所有按鍵。數碼管顯示 "Io"。
- 在安全鎖狀態下,本機的所有按鍵的功能均無效,除了 "開/關"鍵。 再長按 "安全鎖" 鍵3秒即可解鎖。

### 5 鍋具使用的選擇

- ◆ 只有強磁類鍋具是唯一適用於電磁爐烹煮的鍋具。為了獲得良好的烹調效果,鍋具的強磁區域直徑應與電磁爐加熱盤的大小匹配。
- → 適用的鍋具底部的材料可由下列材料製成:
  - 鑄鐵製成的;
  - 含搪瓷塗層,且以鋼製成的;
  - 以不鏽鋼製成,日滴用於電磁爐的;
- ◇ 請利用磁鐵檢查鍋具底部強磁區是否適用於加熱區。



- 可吸引磁鐵範圍 不可吸引磁鐵範圍
- ◆ 以下是不推薦長期使用在電磁爐的鍋具。這些鍋具雖然能用在電磁爐上,但 長期使用會影響電磁爐的壽命:
- 1. 帶有電磁復底的鋁鍋
- 2. #304材質的不鏽鋼鍋類(此類材質屬於弱磁性)
- 3. #201/#202等不帶磁性材質的鍋類(此類材質屬於弱磁性)

### 6. 電磁爐運轉期間的正常噪音

電磁爐是透過電磁直接在鍋底產生熟能的。根據鍋具的結構,電磁可能產生如下詳述的特定噪音或振動,此皆屬下常現象,不代表有故障問題。

#### 6-1 低嗡嗡聲,類似變壓器

以大火烹煮時會產生這種噪音。此噪音來自從電磁爐轉換至鍋具的能量。此噪音會在火力減小時消失或減少。

#### 6-2.低哨聲

空鍋時會產生這種噪音。只要在鍋中加入食物或水,噪音立即消失。

### 6-3.嘶嘶聲

發生於使用各層材質不同的鍋具時。此噪音來自於不同材質的振動。這類由鍋 具造成的噪音,可能因食物份量或烹調方式而有所不同。

#### 6-4.尖哨警

此噪音多數是由各層材質不同的鍋具所產生,尤其是以大火加熱鍋具時。只要 減小火力,此哨聲就會消失或減少。

#### 6-5 來自風感的噪音

要讓電子系統運作得宜,電磁爐必須在受控溫度下運轉。為達此目的、電磁爐設 有風扇:會在加熱時運轉。在電磁爐電源關閉後,若測得的溫度高於60 c,風扇 會繼續運輸銀分鐘。

### 7維修保養及清潔

- 清潔前請關掉電源及拔下電源插頭。請不要使用任何腐蝕性的清洗劑,並且確保沒有水流進本機內。
- 2) 請在本機完全冷卻后才清潔。
- 請勿用水或其他液體沖洗本機和電源線。
- 4) 請用濕布或中性去污粉或洗潔精擦拭面板。
- 5) 請勿使用任何油性清洗產品清潔面板,以免破壞塑料部件或面板。
- 6)請勿將任何易燃、酸性、鹼性材料或物質放置在本機附近,因容易減少本機的使用壽命並在使用過程中容易引起火災。
- 7) 請注意使用時不要讓鍋底刮到玻璃面板,雖然表面劃痕不會影響本機使用。
- 8) 請保證合理清潔本機后才將它放置在乾爽的地方。
- 9) 在無人監管下不應讓孩童進行設備的清潔與維護。

# 8. 故障診斷方法

在使用期間,如出現任何故障,送去維修前請按下表檢查。以下是常見的故障和 對應的解決方法。

故障現象	分析	方法			
連接電源線後,按電源開闢鍵,	插頭是否鬆脱或接觸不良?	檢查電源。			
按电源用開鍵! 機器無響應。	插座電源有沒有連接?	仔細檢查根源,如問題不能解			
	家中的自動開闢式保險絲是否 發生短路?	快,請聯繫我們進行檢查和維 修。			
加熱中斷,伴有 蜂鳴器"嗶"聲。	面板上是否無鍋或使用的鍋 具不合適?	放置/更換合適的鍋具。			
	放置的鍋具是否偏離加熱區 域?	將合適的鍋具放置在加熱區 域的正中。			
	是否在加熱時不停移動鍋具?	請聯繫我們進行檢查和維修。			
工作但不加熱。	是否幹燒?	請檢查。			
	進、排氣口是否被堵住?	請將堵住進、排氣口的物件移 走。待本機冷卻后再使用。			
	是否已使用超過兩小時並無 任何操作?	重啟機器或使用定時功能設 定煮食時間。			
故障代碼	E0 - 內部電路故障	- 請保持機底散熱出風口暢 誦。			
	E1 - 無鍋或鍋具不合適	- 如機底散熱出風口被阻,可			
	E2 - 產品內部溫度過高	能會導致機器過熱而自動			
	E3 - 高壓	17 100-1075 55			
	E4 - 低壓	- 建議使用此產品時,儘量 避免放置機身於一次性膠			
	E5 - 主傳感器開路或短路	檯布/薄檯墊上。			
	E6 - IGBT傳感器開路或短路	- 建議用厚膠片或厚紙墊代 替,以免檯布或檯墊過輕			
	E7 - 爐面溫度過高/主傳感器 失效保護	而被吸入及阻塞機底散熱 出風口。			
	E8 - 燈板通訊失效	- 請聯繫服務中心檢查及維 修。			

產品名稱	嵌入/座檯式 雙頭電磁爐
產品型號	GHB28IC
功率	2800W
額定電壓	220-240V~
額定頻率	50/60Hz
產品尺寸 (毫米)	95 (高) x 735 (深) x 415 (長)
淨重	8.3公斤

產品規格及設計會不時更新優化,並不另行通知。如說明書內中英文有差異,以中文為準。

#### 請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中‧如功能有所更改‧忽不另行通知 如有疑問: 請與客戶服務中心聯絡‧不便之盡‧敬請原諒‧ The product specifications may be changed without prior notice. Please contact customer service for details if necessary.

說明書內容以英文版本為準
If there is any inconsistency or ambiguity

between the English version and the Chinese version, the English version shall prevail.



# 保養登記 Warranty Registration

於網上登記新產品保養 Register your product online www.dchtoolbox.com





客戶服務中心 DCH ToolBox Customer Service Centre 香港九龍灣敞祥道20號大昌行集團大廈4樓 4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210 電郵地址 E-mail: 8210service@gilman-group.com 響址 Website: www.pilman-group.com