

geminipro
ITALY

**BLADELESS WIFI UVC
HEATER & FAN
(WITH HUMIDIFIER)
無葉WIFI 紫外線
冷暖風扇 (連加濕器)**

**MODLE NO. / 型號 :
GHBFW47BK / GHBFW47BG**

Warnings & Safety Instructions



WARNING!

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.



WARNING!

To avoid fire, electric shock, or personal injury, please be sure to observe the following requirements; Please follow the local electrical regulations.


- This product is only suitable for indoor use and should not be used outdoors.
- This product must not be repaired or modified by non-professional or unauthorized personnel.
- Before plugging in the power supply, please check whether the rated voltage indicated by this product is the same as the voltage in your home.
- When the machine is in operation or idle, it should be placed more than 1.5 meters away from fire and potential fire. Avoid direct sunlight.
- It is forbidden to use in places with flammables, or explosive objects, subject to heat, deformation, discoloration and deterioration. It is forbidden to use in places with heavy dust.
- It is forbidden to use in places with hanging objects, where it can be easily bumped into or hit, or on an unstable surface.
- It is forbidden to use the method of plugging (unplugging) the power cord to replace the power on and power off switch.
- It is forbidden to use this product as heating equipment for animals or plants.
- To avoid overheating, it is forbidden to cover the product.
- It is strictly forbidden to insert any wire or other foreign matter into any hole in the machine, in order to avoid electric shock.
- DO NOT use if the product shows signs of obvious damage after a fall.
- It is strictly forbidden to immerse the machine in water.

Warnings & Safety Instructions

- Never use the machine directly facing an electrical outlet or under a power outlet.
- It is strictly forbidden to share the socket with other high-power appliances.
- DO NOT directly pull the power cord to move the body.
- If the machine is covered or incorrectly placed, it can cause a fire hazard. Therefore, it is not allowed to use a programmable automatic power-on device, timer, or any other device with the product.
- When the product is in use, the power cord should be placed behind the body. Placing the power cord in front will cause it to overheat and be damaged, or even cause an accident.
- Children, elderly people or patients who have lost the ability to take care of themselves, please use this appliance under the supervision of an adult, to prevent accidents.
- If this product fails, please turn off the power and unplug the power cord immediately. This product must be repaired by the manufacturer's maintenance department or a similarly qualified professional.
- Before use, check that the power cord and the plug are in good condition. If the power cord is damaged, in order to avoid danger, the user must not disassemble or replace it. Replacing the power cord must be performed by the manufacturer's maintenance department or a similarly qualified professional.
- To avoid burning when using this product, please DO NOT let bare skin directly contact with the surface of the air outlet.
- This product is only suitable for use in dry environment. DO NOT use around a bathtub, sprinkler or swimming pool.
- If there is a gap between the plug and the socket, or the plug has become very hot, maybe the socket needs to be replaced. Consult a qualified electrician to replace the outlet.
- This product must be connected to an EMSD certified fixed socket with the correct rated power. It is strictly forbidden to use adapters, extension cords, or share the socket with other appliances.

Product Structure


This product uses PTC heating, providing heat by hot air, which can quickly increase room temperature. It is safe, efficient and energy saving.

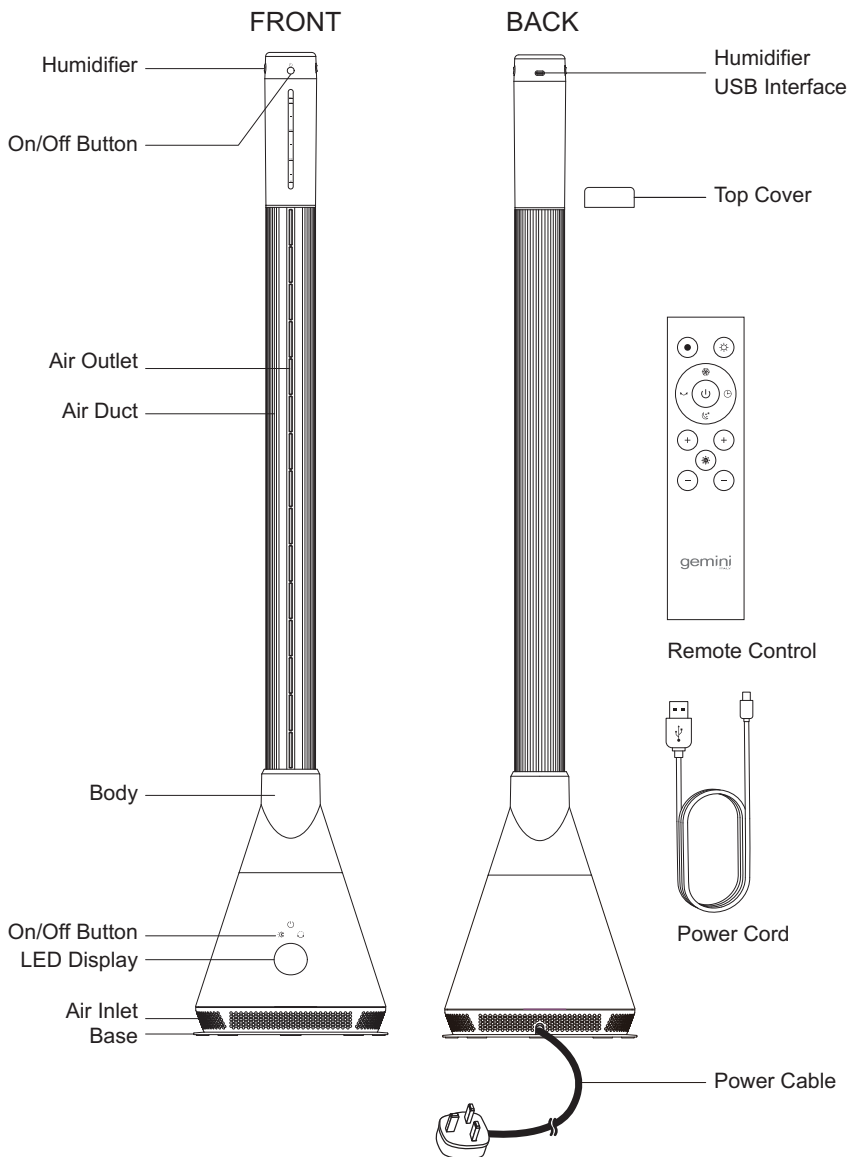

Getting Started

Location

- Please put this product in a horizontal position. Avoid putting it on a slope or a soft surface to prevent it from falling over. Please do not use it in high temperature area with high humidity, such as bathroom and kitchen.
- Avoid blocking the Air Inlet and Outlet during use. Please keep the product far away from the curtains, so that they will not block the Inlet/Outlet and obstruct the product from working.
- Do not place objects within 1 meter in front of the Air Outlet to ensure that the volume of cool air would not be reduced. Pay attention to the effects on warm air blowing on objects.

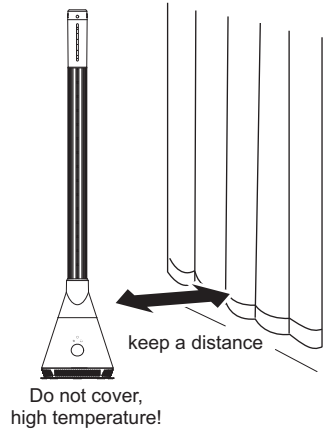

Caution:


This product includes an Overheat Protection Sensor, which is an automatic fail-proof safety protection that cuts off power automatically when the product is accidentally tipped over or overheats. If this sensor is triggered and the product is stopped, unplug the machine and let it cool. Check and remove any obstructions before restarting the product and be sure to place it on a hard, level surface.

Battery Installation Method


1. Open the Remote Control Battery Cover.
2. Load two new AAA (No. 7) dry batteries.
3. Close the Battery Cover of the Remote Control.

NOTE:

- Do not charge this battery. Please keep out of reach of children. If swallowed, please seek medical advice promptly.
- Please insert the battery + - orientation correctly.
- If you do not use the Remote Control for a long time, remove the battery.
- Dispose of used batteries in accordance with local laws or regulations.

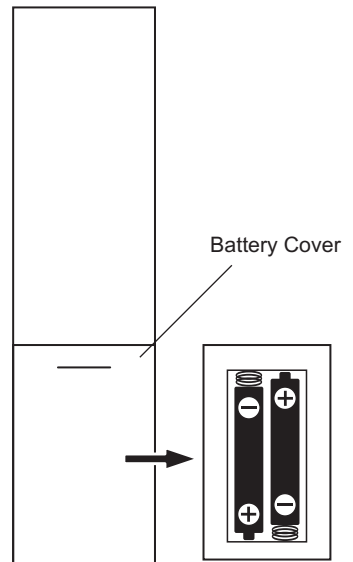

Operating Instructions

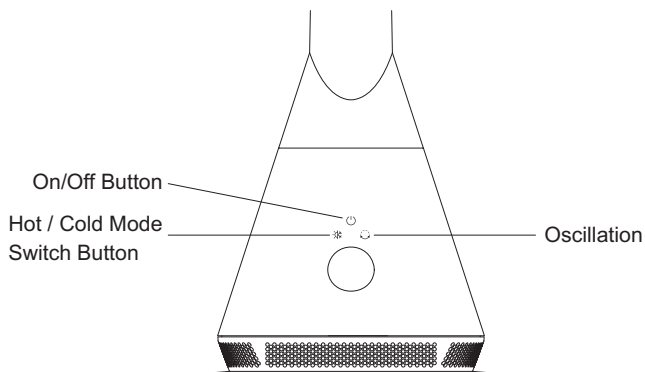

Insert the plug into the socket, the product enters the standby state.

On/Off Button

1. Short press "On/Off" Button, the buzzer will beep once and the product start running.
2. PLong press "On/Off" Button for 1 seconds, the buzzer will beep once, and then stop running after you release the hand.
3. When the machine is running in "Cool Mode", press "On/Off" Button on the body to switch the air volume from 1 to 9.

When the machine is running in "Warm Mode", press "On/Off" Button on the body to switch the air volume from 1 to 4.

(You can also use the "+ -" Buttons on the left side of the Remote Control.)

Hot / Cold Mode Switch Button


Press and hold the cold/warm switch button for 1 second to switch the cold/warm mode.

Oscillation







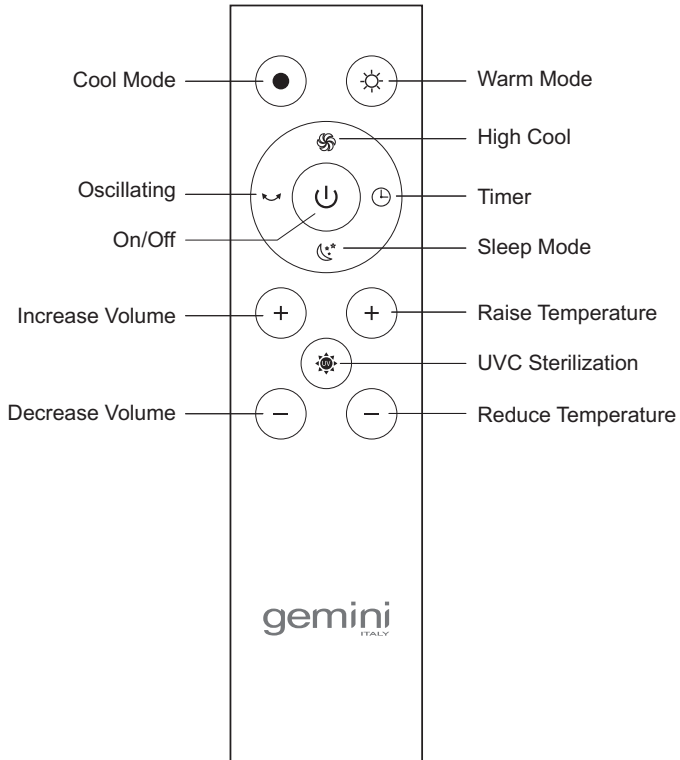



Press this key to switch the swing(left&right) angle in turn: 30°,60°,90°,120°,Off.

Operating Instructions

Remote Control



 
Operating Instructions

 On/Off	<p>The product can be switched on and off by pressing the "On / Off" Button.</p>
 Sleep Mode	<p>Press "Sleep Mode" Button on the Remote Control. The display shows "- L -" and the fan speed becomes lowest. Press again to exit Sleep Mode. (You can also exit the current mode by pressing the Wind Strength + - button.)</p>
 High Cool	<p>Press "High Cool" Button on the Remote Control. The display shows "- H -" and the fan speed become highest. Press again to exit High Cool Mode. (You can also exit the current mode by pressing the Wind Strength + - button.)</p>
 Oscillation	<p>Press this key to switch the swing(left&right) angle in turn: 30°,60°,90°,120°,Off.</p>
 UVC Sterilization	<p>Press "UVC" Button to activate UVC Disinfection function, display panel will show "☀". Press button again to turn off UVC Disinfection function (otherwise UVC Disinfection will automatically turn off after 1 hr).</p>
 Cool Mode	<p>Press "Cool Mode" Button to activate the Cool Mode. During Cool Mode, the LED Display does not show "°C". Note: The default Start Mode is Cool Mode.</p>
 Increase / Decrease Air Volume	<p>Press "+" Button on the left side of the Remote Control to increase the volume of air; press the "-" Button on the left side of the Remote Control to decrease the volume of air. Cool Mode can be used for 9-level settings, Warm Mode can be set for 4 levels.</p>
 Warm Mode	<p>Press "Warm Mode" Button to activate Warm Mode. During Warm Mode, LED Display shows "°C". Note: During Warm Mode, both High Cool and Sleep Mode are not available.</p>
 Raise / Reduce Temperature	<p>In Warm Mode, press "+ -" Buttons on the right side of the Remote Control to set the Temperature (5-35°C). Note: this button does not work during Cool Mode.</p>
 Timer	<p>Press "Timer" button to set off-timer for 1 to 8 hours. After timer is set, all other functions are still operable. When timer countdown is completed, the product will automatically stop operating; if user wishes to restart the product, please press "On/ Off" Button again. When the product is powered off, the timer will also be cancelled.</p>

Operating Instructions

Remote Control

The Remote Control should be pointed at the Remote Control Signal Receiver on the display to maximize the remote control signal. Effective distance: 5M.

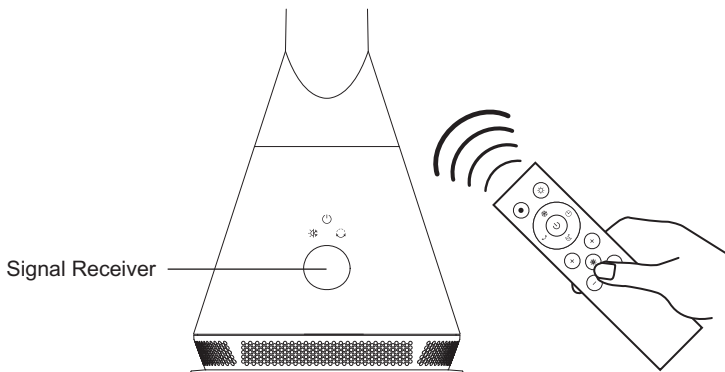


Note:

Remote Control error sometimes occurs due to the overlap of the channel frequencies. For example:

1. This product may react to the remote control of another appliances nearby; or
2. When using the remote control of this product, other electrical appliances may react.

In order to avoid misuse, please operate this Remote Control away from any other appliances.


Since using the Remote Control to turn it off would not cut off electricity completely. When the product will not be used for a prolonged period of time, please unplug the power cord.

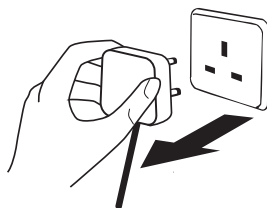

Operating Instructions

Warm Mode

1. Press "Warm Mode" Button and the display shows the ambient temperature.
2. Press "+ / -" Buttons on the right side to set the temperature, and the digital display will be flashing, which can be set to 5-35°C.
3. 10 seconds after the desired temperature is set, the flashing will stop.
4. The temperature being set should be higher than the ambient temperature, so that the heating function will be turned on.
5. When the ambient temperature reaches the set temperature, the heating function will stop and turn into a cool breeze.
6. When ambient temperature dropped to be lower than the set temperature, the heating function will automatically be activated.

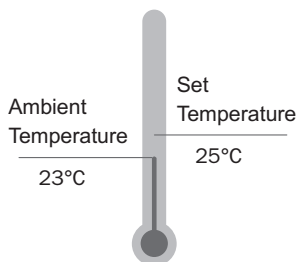

Set Temperature > Ambient Temperature: Warm Mode Turns On.
Set Temperature ≤ Ambient Temperature: Warm Mode Stops.

Note: The default temperature of the setting is 25 °C.

In Warm Mode, when the ambient temperature is below 0°C, the display only shows 01, does not display negative temperature value.

After Warm Mode has run over 9 hours, the machine will automatically stop running. Restart by pressing the host On/Off Button on the Body or by using the Remote Control.

Note:

Please use Remote Control to set temperature; the body of the product does not support this operation.

Operating Instructions

Using The Humidifier

WARNING!

- DO NOT tilt the humidifier or place it upside down, to avoid the humidifier falling off and getting damaged.
- DO NOT refill the water tank when the humidifier is placed on top of the heater, to avoid causing electric shock or fire due to short circuit.

Note:

WARNING!

- The humidifier is suitable for use when the ambient temperature is between 5°C-40°C, and relative humidity is lower than 80%.
- Use only purified water below 40°C with the humidifier.
- When using the humidifier for the first time or taking it out of storage after a prolonged period of time, please clean the water tank thoroughly before use.

1. Hold the humidifier firmly by the lid, and lift up to remove the humidifier lid and water tank from the top of the product (diagram 1).
2. Press the catch locks on both sides of the humidifier lid to separate the lid from the water tank (diagram 2).
3. Fill the water tank with purified water. DO NOT fill to above the maximum water mark (Diagram 3).
4. Attach the lid back on to the water tank, and place the humidifier back onto the top of the product (diagram 4).
5. After refilling, let the humidifier sit for 1 minute to allow the wick become fully saturated before turning on the humidifier.
6. Press "On/Off" Button once to activate Low Humidifying Mode (maximum running time is 8 hours). Indicator lamp lights up constant in blue.
7. Press "On/Off" Button twice to activate High Humidifying Mode (maximum running time is 4 hours). Indicator lamp lights up constantly in purple.
8. Press "On/Off" Button again to turn off the humidifier. Indicator lamp turns off.

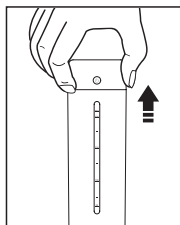


Diagram 1

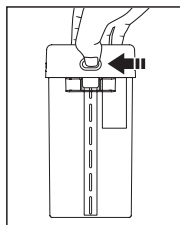


Diagram 2

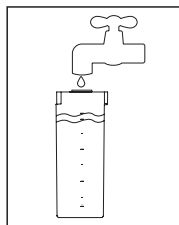


Diagram 3

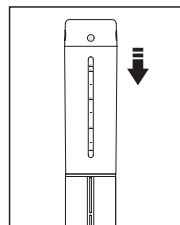


Diagram 4

Low Battery Indicator and Recharging

- When the humidifier is turned on, and there is less than 10% power left in the battery, the indicator lamp will flash in red for 5 times every 1 minutes.
- Recharging when the humidifier is turned off: Indicator lamp flashes in green; when battery is completely charged, indicator lamp will light up constant in green, and go dark after 1 minute. Humidifier will remain in turned off status.
- Recharging when the humidifier is turned on: Indicator lamp flashes in green 5 times, then turn back to blue or purple depending on the Humidifying Mode used at the time.

Connect with APP

1. The phone connect with WIFI.
2. Please download APP “TUYA smart” or “SMART life” or scan the QR code as below to download APP.



TUYA smart




SMART life

3. When using the App first time.you need to register an account.
4. Press and hold the Power button for 5 seconds until it beeps 3 times. when “F” appears and blinks .press “confirm indicator rapidly blink” to continue.select your WIFI network and input password. press “confirm” to continue.
5. Login APP and click “+” or “add device” at the upper right corner. click “all device” on right side and choose the fan.
6. The App will automatically match the device.after a match is found. you will be prompted and you can rename your device. press “done” to finish.

Cleaning & Maintenance

WARNING!

Unplug the power supply and wait till the product has completely cooled down before cleaning and performing maintenance.

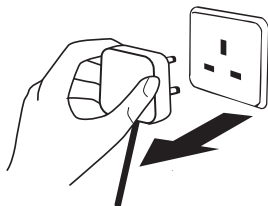

Surface Cleaning


- Please do not put the product into water or splash it, which may cause the machine to be damaged.
- Do not use banana oil, benzene, alcohol, bleach or metal objects to wipe the surface of the fan, which may scratch the surface or cause discoloration.
- Wipe the surface with a soft, dry cloth. If it is very dirty, use water with a mild detergent and wipe with a soft cloth. Then wipe with a dry soft cloth.

Air Inlet/Outlet

- Use a soft brush or a vacuum cleaner to clean the dust at the Air Inlet and Outlet. Please clean it regularly to avoid the buildup of dust. Too much dust is

Remote Control

- Gently wipe the surface of the Remote Control with a soft, dry cloth. If you don't use the product for a long time, please remove the batteries inside the Remote Control to avoid battery consumption.

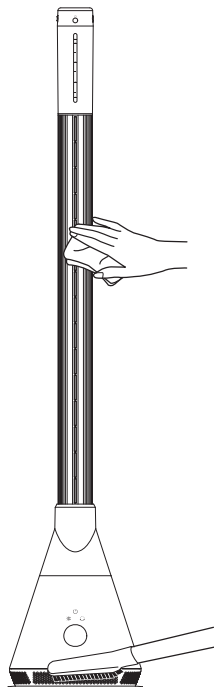

Cleaning & Maintenance

Humidifier



WARNING!

DO NOT immerse humidifier in water or liquids.

Note:

Use only purified water with the humidifier. DO NOT use tap water as it may cause scale to build up inside the tank and decrease its humidifying efficiency.

- When cleaning the water tank, add a few drops of detergent into the tank, fill up with tap water and let it soak for 15 minutes, then use a soft brush to clean off the scale built up inside the tank.
- Change water frequently and clean out the tank every week to keep the humidifier clean.
- If humidifier will not be used for a prolonged period of time, please pour out any residual water and wipe the tank dry. Wipe down the humidifier thoroughly and let it air dry completely before putting it into storage.

Storage

- If the product will not be used for a prolonged period of time, place it in a plastic bag after cleaning. Please avoid storing in a place with vibration (car trunk) or a place heated or cooled by another appliance. Please avoid placing it in direct sunlight, or a place with high temperature and/or high humidity. Please keep it out of reach of young children.

Troubleshooting



WARNING! Do not disassemble the machine or repair it yourself.

Problem	Possible Cause and Solution
Has plugged in power but the product does not work	Is the plug properly inserted into the socket?
Remote Control does not work	Are the batteries dead? Are the batteries inserted correctly? Is the Remote Control aligned with the Signal Receiver?

Technical Specification

Model	GHBFW47BK / GHBFW47BG
Voltage	220-240V~
Frequency	50 - 60 Hz
Power	30 W (Cool Mode) / 2000 W (Warm Mode) / 5 W (Humidifier)
Swing Range	30° / 60° / 90° / 120°
Timer Range	1-8 hours
Humidifier Water Tank Capacity	320 ml
Product Dimensions	(H)1190 mm (W)235 mm (D)235 mm
Net Weight	4 kg

Specifications are subject to change without prior notice.

警告及注意事項

警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。

警告！

為避免火災、電擊、人身傷害，請務必遵守以下要求；其它請遵循國家及地區的有關電氣法規。


- 本產品只適宜室內使用，不宜在室外使用。
- 非專職人員或未授權修理人員，不得自行修理或改造本機。
- 插接電源前，請檢查本產品標明的額定電壓是否與您家中的電壓相符。
- 機器正常使用或閒置時離火源和火種1.5米以上，並避免陽光直射。
- 禁止在易燃、易爆、受熱易變形、變色、變質的物體附近使用，禁止在有嚴重粉塵的地方使用。
- 禁止在有容易跌落懸掛物的地方使用，禁止在易受衝擊或擺放在不穩定的地方使用。
- 禁止用插（拔）電源線插頭的方法代替功率開關的開機和關機。
- 禁止把本機作為動植物的保溫、加熱設備。
- 為避免過熱，禁止覆蓋加熱器。
- 嚴禁用細的金屬絲或其他異物插入機內任何孔隙，以免造成觸電事故。
- 如果本產品跌落或有明顯的損壞跡象，請勿使用。
- 嚴禁將機器浸入水中。
- 嚴禁將機器對著電源插座或置於電源插座下使用。
- 嚴禁將本機與其他大功率電器共用插座。
- 嚴禁直接拉著電源線移動機體。
- 因為機器被覆蓋或不正確的放置會引起火災危險，故不得利用帶有可自動接通電源的程式器、計時器、或任何其他裝置來使用本產品。
- 本產品在使用時電源線應置於機體後面，放在機體前面會使其過熱而損壞，甚至發生安全事故。

警告及注意事項

- 小孩、喪失生活自理能力的老人或病人請在成人監護下使用本電器，以防發生意外。
- 若本產品出現故障，請立即關機並拔下電源線插頭，必須由製造商維修部或類似部門專業人員維修。
- 使用前需要先檢查電源線以及插頭是否破損，如果電源軟線損壞，為了避免危險，用戶不得自行拆卸、更換電源線，必須由製造商或其維修部或類似部門的專業人員更換。
- 使用本產品時，為避免灼傷，請不要讓裸露的皮膚直接接觸出風口表面。
- 僅適合在乾燥環境下使用。在浴缸、噴頭或游泳池的四周不得使用本產品。
- 如果插頭與插座之間出現鬆動或插頭變得很燙，可能需要更換插座。諮詢有資質的電工以更換插座。
- 本產品必須配套與插頭額定工作電流一致的有電機工程署認證的固定插座，嚴禁使用移動多用插座。
- 請勿讓兒童或身體有殘障、精神不健全或對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在對他們安全負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 如果本產品跌落或有明顯的損壞跡象，請勿使用。
- 警告！當小房間內有無法自行離開房間的人員時，請勿在小房間內使用本設備，除非提供持續的監督。
- 警告！為減低火警風險，在產品出風口 ≥ 1 米範圍內，切勿放置布料、窗簾或任何易燃物品。

產品結構


本產品採用PTC發熱體，將產生的熱量通過熱空氣送出，能夠快速提高室內溫度，取暖面積大，安全效，節能。

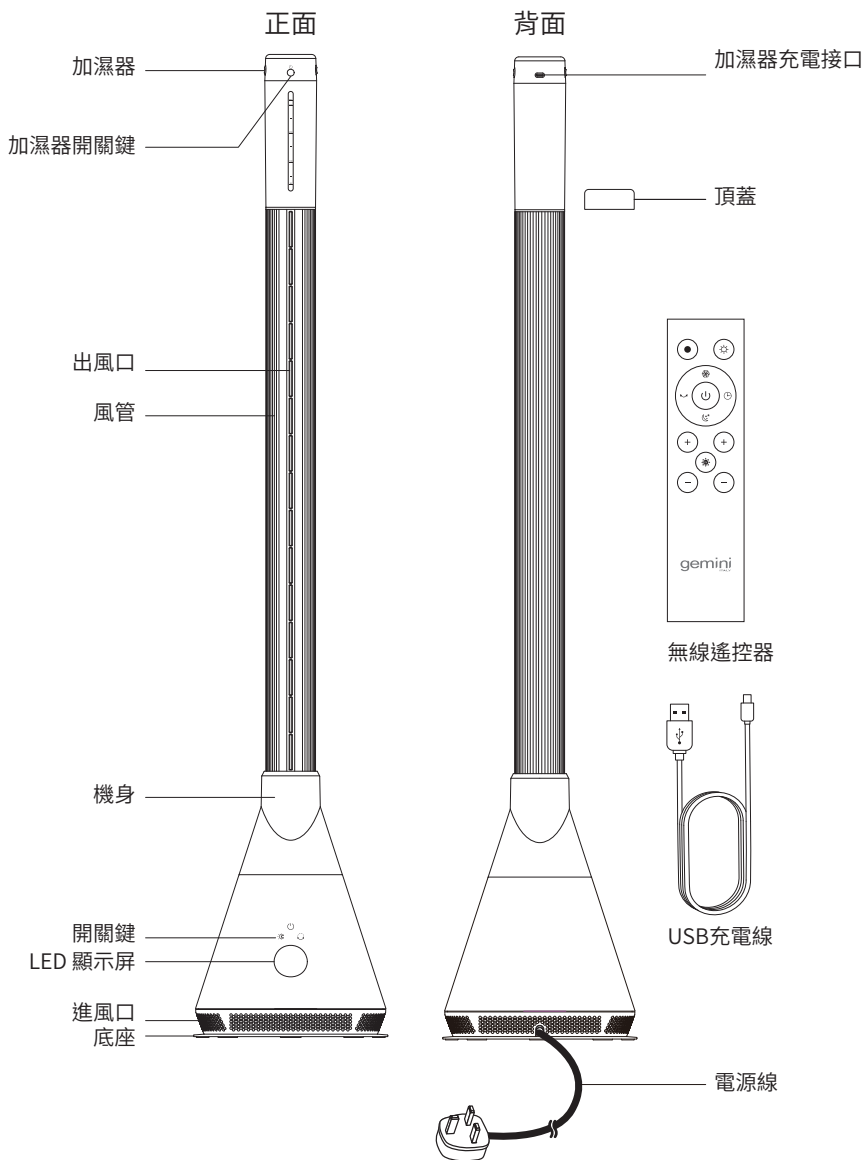

使用前的準備

安裝位置

- 請將本產品放置在水平位置使用，請不要放置在不穩定地方（如有斜度、柔軟的表面），以避免本產品翻倒造成損壞或故障；請不要在高溫多濕的地方使用（如浴室、廚房）。
- 在使用過程中，需避免擋住進風口，請遠離裝有窗簾的地方使用，以避免物體堵住進風口導致機器無法工作。
- 出風口前面1米內不要放置物體以減弱吹風效果並注意高溫。

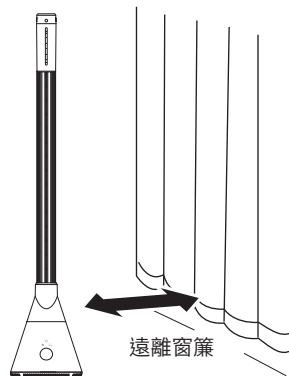

嚴禁覆蓋
注意高溫



警告！


暖風模式下風管會發熱，使用後短時間內尚有餘熱，請注意高溫。為了確保人身安全，機器上安裝了自動斷電開關，在機器傾倒或過熱時會自動關閉，如果觸發此開關，請拔出機器插頭並使其冷卻，並在重新啟動機器前檢查並清除任何阻塞物，並且確保將其放置在堅硬的水平表面。

安裝遙控器電池


1. 打開遙控器電池蓋
2. 裝入兩節全新的AAA(七號)乾電池
3. 蓋上遙控器的電池蓋

注意：

- 此電池請勿充電。請置於小孩接觸不到的地方，如若吞服請及時就醫。
- 請正確裝入電池 + - 朝向。
- 如果長時間不使用遙控器，請取出電池。
- 處置廢舊電池時需遵循當地的法令或規章。

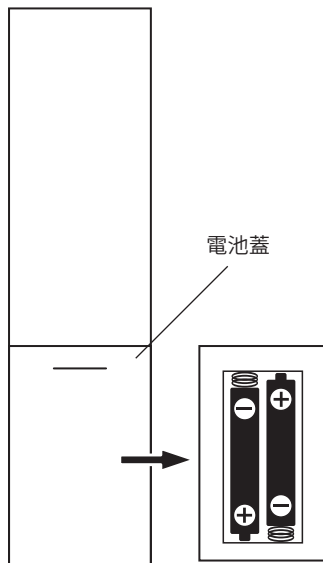

操作說明

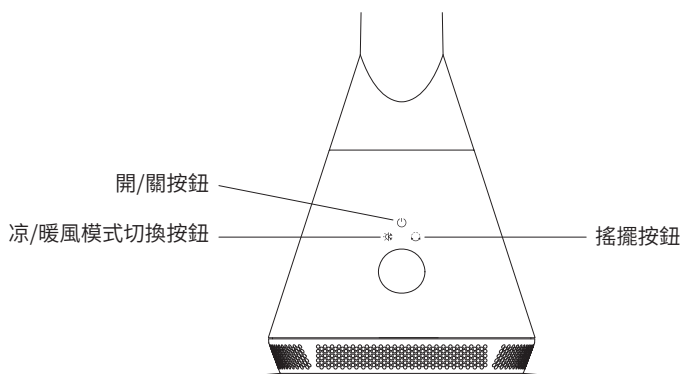

連接電源後，風扇進入待機狀態。

開/關按鈕

1. 按下「開/關」按鈕，蜂鳴器將發出一次蜂鳴聲，產品開始運行。
2. 長按「開/關」按鈕1秒，蜂鳴器將發出一次蜂鳴聲，然後鬆開手後停止運行。
3. 當機器在「涼風模式」下運行時，點按機身上的「開/關」按鈕，可進行9檔風速選擇；當機器在「暖風模式」下運行時，點按機身上的「開/關」按鈕，可進行4檔風速選擇；（您也可以使用遙控器左側的「+ - 按鈕」。

涼/暖風模式切換按鈕


按住此按鈕1秒，切換涼/暖風模式。

搖擺按鈕

按此鍵依次切換擺動（左和右）角度：30°、60°、90°、120°、關閉。

操作說明

遙控器功能介紹

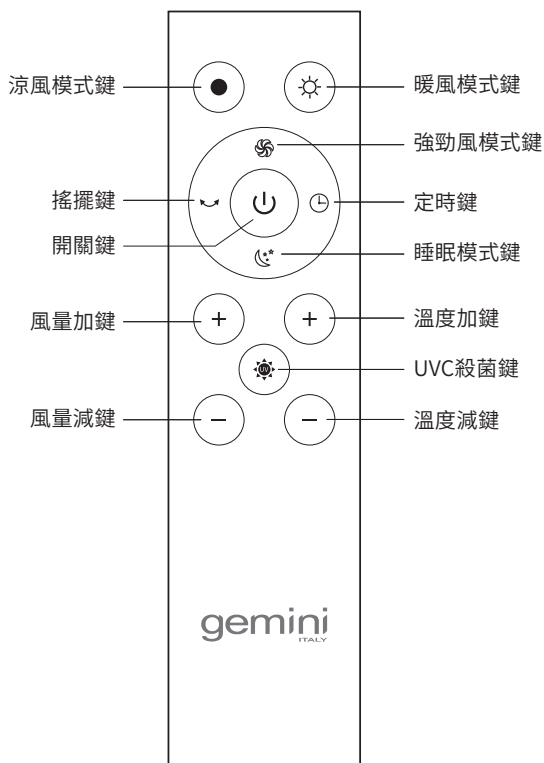


操作說明

 開關鍵	<p>當主機處於待機狀態按此鍵，啟動運行；當主機處於運行狀態按此鍵，停止運行進入待機狀態。</p>
 睡眠模式鍵	<p>按此鍵風量變為柔和，顯示屏顯示「-L-」；再按一次睡眠模式鍵或按風量加/減鍵返回涼風模式。</p>
 強勁風模式鍵	<p>按此鍵風量變為強勁，顯示屏顯示「-H-」；再按一次強勁風模式鍵或按風量加/減鍵返回涼風模式。</p>
 搖擺鍵	<p>按下此鍵依次切換搖頭(左右)角度:30°、60°、90°、120°，關閉。</p>
 UVC殺菌鍵	<p>按此鍵開啟UVC殺菌功能，顯示屏顯示「☼」；再按一次，關閉UVC殺菌功能；(UVC殺菌功能開啟1小時後會自動關閉)。</p>
 涼風模式鍵	<p>按此鍵調整為涼風模式(開機啟動預設涼風模式運行)，涼風模式下顯示屏不顯示「°C」。</p>
 風量加/減鍵	<p>按遙控器左側「+」鍵，風量變大，按遙控器左側「-」鍵，風量變小。涼風模式可進行9檔風速選擇；暖風模式可進行4檔風速選擇。</p>
 暖風模式鍵	<p>按此鍵調整為暖風模式，暖風模式下顯示屏顯示「°C」；暖風模式下，沒有強勁風和睡眠風功能。</p>
 溫度加/減鍵	<p>在暖風模式下，按遙控器右側溫度鍵設定溫度5-35°C；涼風模式按此鍵無效。</p>
 定時鍵	<p>按此鍵可以啟動1到8小時定時功能。定時功能設定後其他功能仍可正常使用，而電源關閉後，定時設定也會被取消；定時時間到，產品會自動停止運行，如果需要重新開機請重新按開關鍵。</p>

操作說明

遙控器操作介紹

使用遙控器操作風扇時，需將遙控器對準風扇顯示屏上面的遙控信號接收器，令遙控信號達到最好。有效距離為5米。

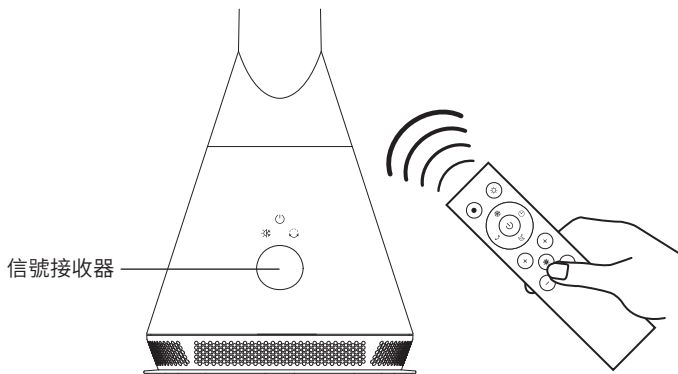


注意：

操作時有可能會發生以下現象：

1. 使用其它電器的遙控器時，本產品可能會產生反應。
2. 使用此產品的遙控器時，其它電器可能會產生反應。

這是由於遙控器的頻率產生重疊而發生的現象，產品本身並無品質問題，為了避免誤操作，操作時請將遙控器遠離其他電器。


遙控器上的開關機鍵或主機開關鍵並不能使電源完全關閉，如果長時間不使用，請拔掉電源插頭。

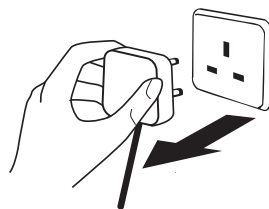

操作說明

暖風模式功能說明

1. 按暖風模式鍵，開啟暖風模式，顯示屏顯示環境溫度。
2. 按溫度鍵，顯示屏閃爍顯示設定溫度，可設定5-35°C。
3. 溫度設定好10秒後，顯示屏停止閃爍顯示環境溫度。
4. 設定溫度高於環境溫度，製熱功能開啟；
5. 環境溫度達到設定溫度，製熱功能停止並變成涼爽的微風；
6. 當環境溫度低於設定溫度，產品開啟製熱功能。

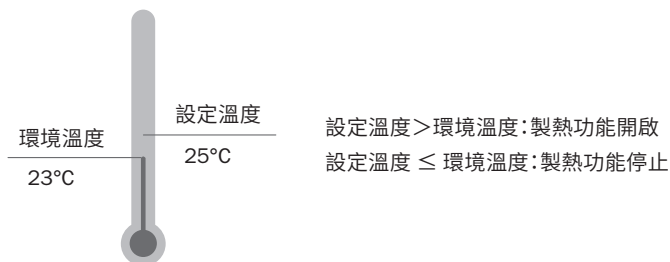

注意: 預設設定溫度為25°C。

- 暖風模式下環境溫度0°C以下時，顯示屏只顯示01，不顯示負溫度值。
- 暖風模式持續運行9小時後，產品會自動停止運行。重新開機按主機開關鍵或用遙控器開啟。

注意:

暖風模式設定溫度請用遙控器操作，主機按鍵不支援操作。

操作說明

使用加濕器



警告!

- 嚴禁將本產品傾斜或倒轉擺放，避免加濕器跌落損壞。
- 當加濕器安裝在風扇暖風機上時，不能直接加水，以免觸電或因短路引起火災。

注意：

- 適宜使用加濕器的環境溫度為5°C-40°C，相對濕度小於80%。
- 必須使用溫度低於40°C的純淨水。
- 初次使用或長時間未使用，應先將水箱清洗乾淨後再使用。

1. 握著加濕器頂蓋向上拉，將加濕器和儲水箱取出(圖1)。
2. 按住加濕器頂蓋左右2個按鈕，將頂蓋和儲水箱分離(圖2)。
3. 往儲水箱注水，嚴禁超過最高水位線(圖3)。
4. 將頂蓋裝回儲水箱，並將加濕器裝回風扇暖風機頂部(圖4)。
5. 注水後先靜置1分鐘，待吸水棉充分吸收水分後再開啟運行。
6. 按開關鍵1次，啟動低檔加濕(運作時間為8小時)，指示燈以藍色常亮。
7. 再按1次，開啟高檔加濕(運作時間為4小時)，指示燈以紫色常亮。
8. 再按1次，關閉加濕器，指示燈熄滅。

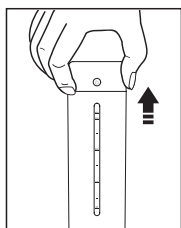


圖1

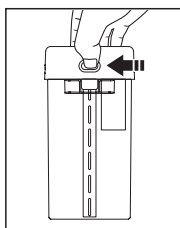


圖2

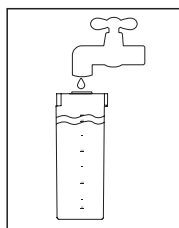


圖3

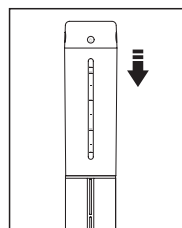


圖4

低電量提示及充電

- 在工作狀態下，如檢測到電量低於10%，指示燈每1分鐘以紅色閃爍5次。
- 在關機狀態時充電，指示燈以綠色閃爍；充滿電後，指示燈以綠色常亮，1分鐘後熄滅並維持關機狀態。
- 在工作狀態充電時，綠燈閃5次，再返回檔位指示燈。

連接APP

- 1.手機連接WiFi;
- 2.在應用商店搜索「塗鴉智能」或「智能生活」或掃描下方二維碼，下載安裝APP;



塗鴉智能




智能生活

- 3.打開APP，註冊登錄;
- 4.風扇通電後，長按開關機按鍵5秒(連續嘀三聲)，顯示屏F(閃爍)，開啟配網模式;
- 5.在APP頁面右上角點擊「+」→「小家電」→「風扇」進入添加設備頁面;
- 6.(1)確定風扇顯示屏F快閃，點擊「確認指示燈在快閃」→輸入連接密碼(WiFi密碼)進行連接;
- (2)確定風扇顯示屏F慢閃，APP右上角點擊「兼容模式」→「確認指示燈在慢閃」→輸入連接密碼(WiFi密碼)根據提示切換設備熱點進行連接;
- 7.APP顯示連接成功。

清潔及維護

警告!

清潔前必須關機並拔出電源插頭，待機器完全冷卻後再進行清潔。

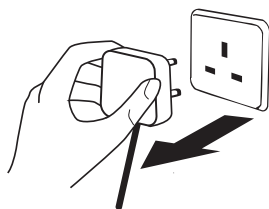

產品表面

- 保養的時候，請不要讓產品沾上水或潑上水，可能會導致機器進水而損壞。
- 請不要使用天那水、汽油、酒精、漂白劑或者金屬物體去擦拭產品表面，可能會導致表面變色、變質。
- 請用乾的軟布輕輕擦拭產品表面；如果表面比較髒，可以用中性洗滌劑稀釋後弄濕軟布擦拭；擦拭乾淨後再用乾軟布進行擦拭。

進氣口及出風口


- 請用軟刷或吸塵器清潔進風口和出風口處的灰塵，集聚太多的話可能會影響使用效果，請在灰塵較少的時候及時進行清潔。

遙控器

- 請用乾的軟布輕輕擦拭遙控器表面。如果長時間不使用，避免電池消耗，請取出遙控器內的電池。

電源插頭

- 請用乾的軟布清潔電源插頭。

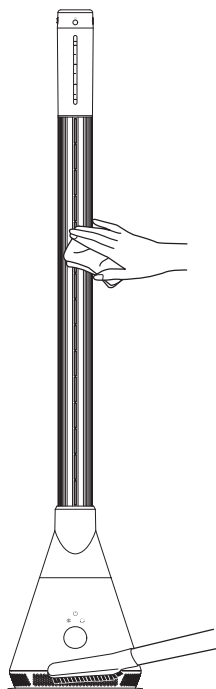

清潔及保養

加濕器

- 清潔時，將清洗劑倒入水箱內，然後加入自來水，使清洗劑全部溶解後浸泡15分鐘，再用小毛刷清洗水箱表面，直至除去水垢。
- 經常更換水箱中的水，並每週清洗水箱，以保持加濕器潔淨。
- 如長時間不使用加濕器，請倒掉水箱內的剩餘水，並以乾布抹乾水箱內外。妥善拭抹加濕器表層，讓其風乾後再包裝儲存。



警告！

嚴禁將加濕器浸入水中。

注意：

加濕器必須使用純淨水，如水質不純淨，會在加濕器箱內形成水垢，影響加濕器的使用效果。

保管方法

- 本產品保養後可以裝入塑膠袋並進行收藏；請避開震動的場所以及有製冷或制熱功能的電器；請避免放置在陽光直射，高溫潮濕的地方；請放置在幼兒碰不到的地方。

故障檢修



警告! 如無法順利排除故障，請與客戶服務及維修中心聯絡，嚴禁非專業人員對本機拆卸。

故障現象	解決方法
插上電源但是不工作	插頭有沒有正確插入插座？
遙控器不工作	電池是不是沒電了？ 電池方向是否安裝正確？ 遙控器是否有對準風扇主體的遙控信號接收器？

技術規格

型號	GHBFW47BK / GHBFW47BG
額定電壓	220-240V~
頻率	50 - 60 Hz
額定功率	30 W (涼風) / 2000 W (暖風) / 5 W (加濕器)
搖擺角度	30° / 60° / 90° / 120°
定時範圍	1-8 小時
加濕器水箱容量	320 ml
產品尺寸	(H)1010 (W)235 (D)235 mm
淨重	4 kg

產品規格及設計如有變更，恕不另行通知。

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啓祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com