

**HOT & COLD ALTERNATING
IONIC DC HAIR DRYER**
冷熱交替負離子DC風筒
Model No. / 型號 : GHDD16BK
1600W

Please read this instruction manual carefully
before use and keep it for future reference
請於使用前仔細閱讀本說明書並加以保存

IMPORTANT SAFETY INSTRUCTIONS
When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.
5. This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the service centre.
6. Do not use the unit if it has fallen or if it appears to be damaged.
7. Do not leave the unit unattended when it is plugged in or switched on.
8. Unplug the unit immediately if you have problems when using it.
9. Do not use any accessories other than those recommended by manufacturer.
10. Unplug the unit after each use and before cleaning it.
11. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
12. This unit is not intended for use by people (including children) with reduced physical, sensory or mental

capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

13. Allow the unit to cool before storing.
14. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.



INSTRUCTION FOR USE

- Towel dry and detangle the hair.
- There are 3 heat/speed settings. Use a high heat/speed setting for rough drying. Use the low heat/speed setting as hair begins to dry and for styling or to get volume and curl into your hair.
- Use hot and cool alternating mode: 5-second cool wind and 5-second hot wind will be alternated automatically, which can adjust the hair surface temperature to avoid overheating, and protect the natural radian, softness and luster of the hair.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

CONCENTRATOR NOZZLE

The concentrator nozzle is great for straightening or styling hair when using a brush. Use the professional concentrator nozzle for directing the air just where you want it. For additional control use one of the lower settings and point the air flow along the surface of the hair to be dried.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. Blocked or clogged air intake vents will cause the dryer to overheat. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.

SPECIFICATIONS

Model No:GHDD16BK
Voltage:220-240V~ 50-60Hz
Power:1600W
Product dimension:113(H)x77(W)x287(D)mm

重要安全指示

當使用電器時, 尤其有小童在場, 應小心及遵守以下安全指示:

使用前請細閱使用說明

電器應遠離水源

安全預防措施

警告: 包裝或產品上使用的膠袋可能會有危險, 請擺放在嬰兒及兒童拿不到的位置。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。膠袋的薄層可能會堵著鼻子及口腔, 阻礙呼吸。此膠袋不是玩具。



警告: 不要在盛水的浴缸、淋浴缸、洗臉盆或其他器皿附近使用本器具。



1. 當風筒在浴室使用後, 應立即拔除插頭, 因為風筒接近水會導致危險, 即使開關已關掉。為提供額外的安全性保護, 建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路掣(RCD); 如有疑問, 請向負責安裝的電機工程師查詢。
2. 切勿把電器放入或掉進水或其他液體中。
3. 如果電源線損壞, 為了避免危險, 必須由制造商、其維修部或類似部門的專業人員更換。
4. 切勿堵塞電器的入風口, 及放在柔軟表面上如床或梳化, 因有機會堵塞入風口。請避免入風口受纖維、頭髮等碎屑堵塞。
5. 這個產品已配備了溫度斷路器。如果設備過熱, 它會自動關閉或停止加熱。如果發生這種情況, 請把開關關閉及拔去電源, 讓產品冷卻10分鐘。再次使用前, 請確保沒有任何其他污垢或頭髮在後方過濾網上。插上插頭和開機。如果它再次過熱, 應立即停止使用, 關掉電源並拔下插頭。交回服務中心檢查及維修。
6. 若電器曾跌落地或有任何不妥, 請馬上停止使用。
7. 切勿將已接上電源或開啟的電器置之不理。
8. 如若在使用中有任何不妥, 請馬上拔去插頭。
9. 請不要使用非本產品提供的任何配件。
10. 每次用完後或清潔前請先拔去插頭。
11. 切勿將電器發熱的部份碰到身體, 尤其是眼睛、耳朵、面部和頸部。
12. 本產品不該讓有身體、感官或精神能力有缺陷或缺乏使用電器經驗與常識的人(包括兒童)單獨使用, 而應由有經驗及常識之監管人監察及指導下使用此產品。小孩子應被監管以保證他們不會將此產品當成玩具。
13. 待電器冷卻之後才收藏。
14. 為避免損壞電源線, 收藏時切勿將電源線纏繞在電器上並確保其不被拉扯、扭曲或屈折。



使用說明

- 用毛巾擦乾頭髮。
- 三段熱力 / 風速選擇。先使用高熱力 / 風速略為吹乾濕髮。待頭髮稍為吹乾, 可使用低熱力 / 風速為秀髮塑造立體及捲曲的效果。
- 使用冷熱循環模式: 5秒冷風及5秒熱風自動交替, 可調節頭髮表面溫度避免過熱, 保護髮絲自然弧度、柔順及光澤。
- 用畢後請即關機並拔去插頭, 待冷卻後妥善存放。

負離子科技

現代生活中很多情形都會導致靜電積聚於頭髮, 例如空調、接觸人造纖維, 以及空氣污染等等。甚至梳頭及用毛巾抹乾頭髮都可能令頭髮上的靜電增加。靜電會導致髮絲相互排斥, 令頭髮無法順滑貼服, 並顯得蓬亂不堪, 看上去顯得缺乏光澤。靜電積聚過多會令頭髮蓬亂不已、難以進行造型。本設備的內置離子產生器可透過釋放負離子, 減少秀髮上的靜電, 從而減少蓬亂髮絲, 令秀髮散發絲質順滑和天然光澤。

集風嘴

使用時配合髮梳, 可讓您更易塑造直髮或其他造型。專業集風咀可讓氣流集中吹向某一個位置。如要加強效果, 可選擇低溫度/速度設定, 並將集風咀吹向即將吹乾的秀髮。

使用者保養指示

您的風筒基本上毋須特別保養, 毋須加潤滑油。為保持風筒操作正常, 必須保持風筒清潔。堵塞的入風口會引致風筒過熱。如需要清潔, 拔去插頭, 用小刷或吸塵機的刷掃去入風口的塵垢纖維。只可用微濕布抹淨風筒外殼。若風筒過熱, 自動安全裝置會自動關掉風筒以避免損壞或引致損傷。若風筒關機, 拔去插頭, 再使用前讓風筒冷卻10至15分鐘。請確保通風口並無碎屑堵塞。

警告

切勿拉扯、扭曲、或嚴重摺曲電源線。切勿將電源線圍繞風筒。這會引致電源線連接口斷裂並引致短路。請經常檢查電源線有否損壞。若電器損壞或間歇性關機, 請立即停止使用。若電源線或風筒損壞或不正常操作, 請交到顧客服務中心檢查及維修。切勿自行維修電器。

收存指示

非使用風筒時, 拔去插頭並收存在安全、乾爽、遠離兒童的地方。切勿將電源線圍繞風筒。

產品規格

型號: GHDD16BK

電壓: 220-240V ~ 50-60Hz

功率: 1600W

產品尺寸: 113(高)x77(寬)x287(深)

請記錄下列產品資料

型號 Model No.:
機身編號 Serial No.:
經銷商名稱 Dealer:
購買日期 Date of Purchase:
單據編號 Invoice No.:

本產品不斷改進中, 如功能有所更改, 恕不另行通知
如有疑問, 請與客戶服務中心聯絡。不便之處, 敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務-自攜點
Repair Service - Collection Points



 **Gilman**
since 1841

 **DCH ToolBox**
大昌行電器維修中心

客戶服務中心 DCH ToolBox Customer Service Centre

香港九龍灣啟祥道20號大昌行集團大廈4樓

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210

電郵地址 E-mail: 8210service@gilman-group.com

網址 Website: www.gilman-group.com