

gemini
ITALY

2100W

INDUCTION COOKER

2100W

高效能電磁爐

MODEL NO./型號 GIC2100B

Before using your product for first time,please read this instruction manual.
在使用本產品前，請仔細閱讀本說明書並保存好。

Contents

Product Structure.....	2
Caution & Safety Protection	3
Operating Instructions	4 - 5
Maintenance	6
Appropriate Cookware	6 - 7
Troubleshooting	7 - 8
Product Specification	8


Please read this user manual carefully before using the product.

Please retain it properly after reading for future convenience of reference.

Product Structure

- Name of parts

Air vent

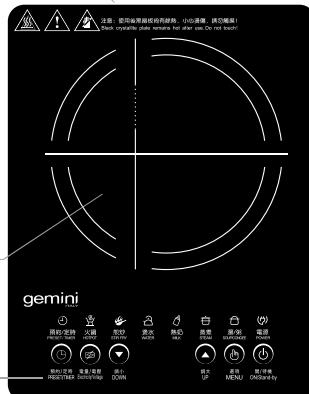

BS plug


Power cord

Air Inlet

Heating panel

Touch Control panel

- Touch Control panel

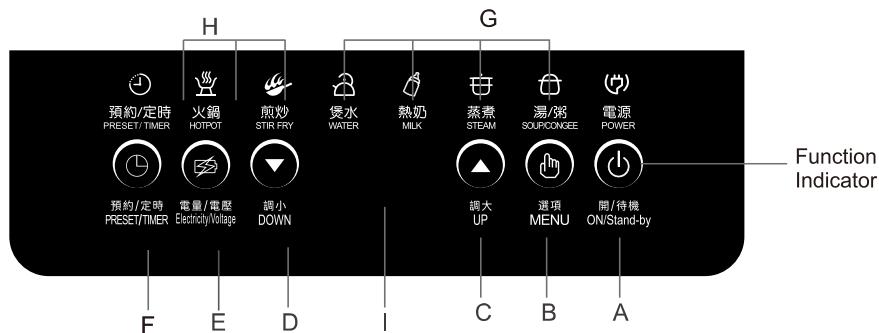

A: ON/Stand-by Key

B: Menu Key

C: Increase power Key/
Minutes adjustment key

D: Decrease power Key/
Hour adjustment

E: Electricity/Voltage

F: Timer/Preset setting key

G: Indicating lights for AUTO functions
(Water/ Milk/Steam/Soup/Congee)

H: Indicating lights for MANUAL functions
(Hot Pot/Stir Fry)

I: LED display

Caution

- To avoid any danger, please strictly accordance with the instruction when you operate the unit.
- The appliance is designed for household use only and is only be operated in accordance with this user manual. It is not for commercial use.
- Do not touch the heating panel during or after operation.

1. Put the unit on the flat surface, please keep the side and back of the unit more than 10cm away from other objects.
2. Please stop using this product if power cord is broken, Customer should bring this product to after-sales service center for repair by yourself within warranty period.
3. Do not pour water on/ into the machine body or wash directly with water to avoid electric shock.
4. Do not use this unit under the high temperature environment. Otherwise the unit may stop working.
5. Do not operate the unit on the hot surfaces, iron plates or stoves.
6. Do not heat the unit with empty pot to avoid damage of glass panel.
7. Please do not place metal or flammable things between pot and the heating panel.
8. Please unplug the unit after every use.
9. Do not touch the hot panel after cooking. Please wait the unit cool down at least 5 minutes before cleaning.
10. Please do not insert/put anything into the air vent/ inlet to avoid ma-function.
11. Please keep this machine out of reach of children.
12. Please stop using and unplug this machine if the machine panel is broken and kindly bring this unit to our CS center for repair by yourself within warranty period.
13. Home appliances should not use an additional timer or independent Trent control system operation.
14. If the power cord is damaged, please stop using the product immediately and must be replaced by an agent or qualified person to avoid danger.
15. Warning: if there is a crack on the glass-ceramics or the surface of the fuselage, please stop using the product immediately to avoid electric shock.
16. Children should be supervised to make sure they don't play with the device.
17. Children over 8 years old, persons with weak body, sense, intelligence, inexperience and knowledge can use this machine after they have been given instructions on how to use it safely and are aware of possible dangers. Children should not play with this product, cleaning and maintenance can not be handled by children.

Safety Protection

1. Small objects distinguish function: In order to prevent the danger of small metals when heated, pots smaller than 8CM in diameter will not be heated, such as knives and forks, keys, small teacups, etc. The buzzer will call prompts and shut down automatically after 1 minute.
2. Inner temperature overheat protection: When the inner temperature reached 100 degree, it will automatically shut down.
3. Lowest voltage and over voltage protection: If the voltage below 100V($\pm 10V$) or over 270V($\pm 10V$), the cooker will stop working automatically.
4. 2 hours auto shutdown function: The unit will automatically shut down if no operation for 2 hours (120 minutes) after start the manual cooking program.
5. Heating panel overheat protection: The unit will stop heating and even shut down for some cooking functions if the temperature of heating panel center over 300°C. The unit will resume heating after the temperature drop to normal. But some functions need to press the ON/OFF key to resume.
6. The unit will stop heating if the inner temperature of unit is too high.

Operating Instructions

1. Hotpot function

Under the standby mode, press the function key to select the "HOTPOT" function. The HOTPOT function indicator light is on, and the digital displays the power of 1600W by default. In the working state of hotpot, the control parameter is power, and the default shutdown time is 120 minutes. It can be timed and not reserved. The timing range is "0:00-3:00", and the power display adjustment range is adjusted according to the power grading table.

2. Frying function

Under the standby mode, press the function key to select the "STIR FRY" function. The frying function indicator lights up, and the digital displays the temperature of 270 ° by default. In the "STIR FRY" working state, the control parameter is temperature, and the default shutdown time is 60 minutes. It can be timed and can not be reserved. The timing range is "0:00-3:00", and the temperature displayadjustment range is adjusted according to the temperature grading table.

3. Water boiling function

In the working state, press the function key to select the "WATER" function. The indicator light of the WATER function is on, and the digital displays the settingvalue of 2100W by default. In the working state of boiling water, the power parameter cannot be controlled. The default working time is 25 minutes, which can be reserved but not fixed. The reservation range is "0:00-24:00".

4. Steam function

In the working state, press the function key to select the "STEAM" function. The STEAM function indicator light is on, and the digital displays the power of 1600W by default. In the cooking working state, the power parameter cannot be controlled. The default working time is 90

Operating Instructions

minutes, which can be reserved but not timed. The reservation range is "0:00-24:00"

5. Soup / Congee function

In the working state, press the function key to select the "SOUP / CONGEE" function, the "SOUP / CONGEE" function indicator light is on, and the digital tube displays the power of 1600W set value heating by default. In the SOUP / CONGEE working state, the power parameter cannot be controlled. The default working time is 120 minutes, which can be reserved but not fixed. The reservation range is "0:00-24:00".

6. Electricit/Voltage function

1. In the working state, press "Electricit/Voltage" key for the first time, and the digital displays the power: px 20. Press this key for the second time, and the digital displays the working voltage: xxxu; Press this Electricit/Voltage key for the third time to return to the normal display state.
2. In the working state, press the "Electricit/Voltage" key, the digital displays the current working voltage and the user's power consumption, and the display will automatically return to the display of the current working function after 10 seconds.
3. Pressing the "Electricit/Voltage" key in standby mode is invalid.

Maintenance

1. Check the power cord and socket

- Unplug this unit before cleaning.
- Check the connection between power cord and socket before cleaning.

2. Clean the heating plate and control panel

Slight dirt: Wipe with a wet soft cloth.

- To avoid deformation or cracking, do not use benzine, thinner or liquid cleaners.
- Do not use the chemical cloth because it will damage the surface of glass plate.
- Do not wash this unit by dishwasher or dishdryer.

3. Clean oil stain

Clean by the cloth with little tooth paste or neuter detergent, Then wipe the unit again with clean wet cloth.

Do not wash by water directly to avoid electric shock and damaged.

4. Clean the body

Use clean dry cloth for cleaning the body.

Clear the dust in the air inlet and outlet by soft brush or vacuum cleaner.

Attention:


When the induction cooker is working, be careful not to dry burn or clean the glass ceramics immediately after cooking, otherwise the glass ceramics will leave marks!

Appropriate Cookware

Usable pans and pots:

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans/pot with diameter from 12 to 26cm.

(Because of the different material of pots in market, the cooking effect and time are different.)

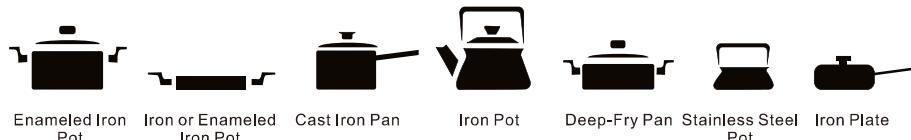

Appropriate Cookware

Non-usable pans and pots:

Heat-resistant glass, ceramic container, copper, aluminum pans/pots, round bottom pans/pots with bottom measuring less than 12cm



Ceramic Pot



Glass



Pot with unflat base



Aluminum/
Copper Pot



Pot with less than
12cm diameter



Pot with foot
on base

Troubleshooting

Symptoms	Check-up Items	Solution
Connect the power plug and press the "On/Off" key, but the power indicator does not light up.	<ul style="list-style-type: none">Check the plug if connect tightly.Check the power cord if well.Check the power supply.Check the voltage if too low.	Eliminate after inspection.
Not heat after turn on the appliance, the buzzer is beeping.	<ul style="list-style-type: none">Check if there is any pots/pan put on the heating plate.Check if the pot/pan put on the center of heating plate.Check if the pot/pan is suitable.Check if placement of small metal objects smaller than 8CM in diameter on heating panel.	Eliminate after inspection.

Troubleshooting

Symptoms	Check-up Items	Solution
Stop heating while working.	<ul style="list-style-type: none"> • The ambient temperature is too high. • Air intake or vent was jam. • Check if there is no operation within 2 hours. • Overheat protection 	<ul style="list-style-type: none"> • Relocate it to the lower temperature area. • Make the air intake and vent to be both clear. • Make the air intake and vent to be both expedite. • Normal phenomenon. • It would be inner temp. adjustment by the appliance if the fan is working normally, pls try again after few minutes.
Error codes occur.	<ul style="list-style-type: none"> • E0 Without pot • E1 Under voltage • E2 Over voltage • E3 Surface sensor overtemperature and short circuit • E4 Surface sensor open circuit • E5 IGBT sensor overtemperature and short circuit • E6 IGBT sensor open circuit • E7/E8 Furnace surface sensor failure (no temperature change detected within 6 minutes) • E9 Line fault (loop does not work) 	<ul style="list-style-type: none"> • Keep the heat vents clear • The induction cooker may overheat or damaged if bottom heat vents are blocked. • Please do not place a thin table cloth/plastic sheet under the induction cooker when using. Otherwise, heat vents may be blocked by those materials. • Thick table cloth or plastic table pad are suggested as replacement. <p>Please contact service centre for checking and repairing.</p>

Remark: For safety, if the power cord has damaged, please send the product to our after-sales service center to repair within warranty period.

Product Specification

Model No.	GIC2100B
Voltage / Hertz	220-240V~ /50-60Hz
Rated Power	2100W
Product Size	50(H)x280(W)x360(D)mm
Net Weight	2.2 kg

目錄

操作面板及各部件名稱	10
安全注意事項及安全保護	11
操作說明	12 - 13
日常保養	14
適用鍋具	14
常見故障及處理方法	15
產品規格	16


首次使用前，請詳細閱讀此說明書。

請妥善保留說明書，以便日後參考。


操作面板及部件名稱

● 各部件名稱

排氣口

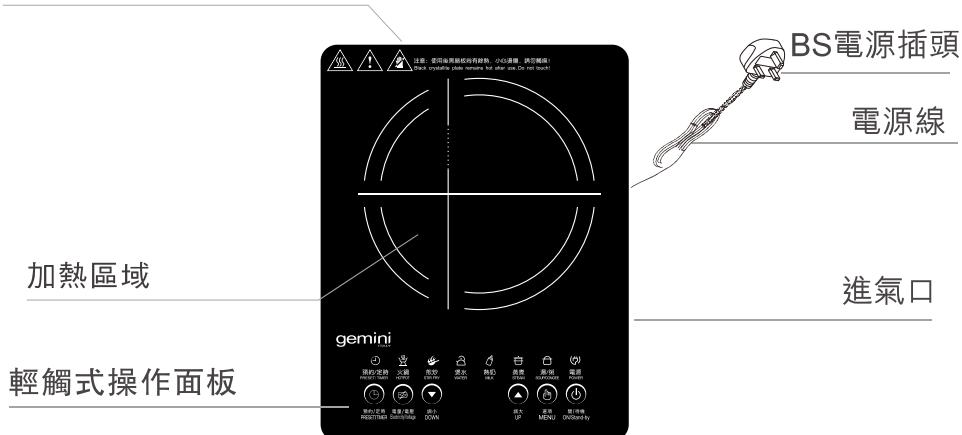

● 輕觸式操作面板

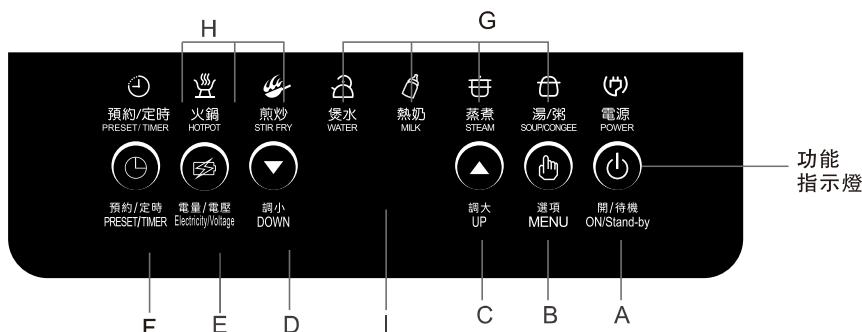

A: 開/待機

B: 選項功能鍵

C: 增加功率/調校分鐘鍵

D: 減少功率/調校小時鍵

E: 電量/電壓

F: 預約/定時鍵

G: 自動煮食功能(煲水、熱奶、蒸煮、湯/粥)

H: 自定手動煮食功能 (火鍋、煎炒)

I: LED顯示屏幕

安全注意事項

警告

- 請嚴格按照說明書上的內容操作，以免引起任何危險和損失。
- 本產品祇供家居使用，並非商業用途。請必須依照本說明書內的指示操作。
- 使用中或使用後切勿觸碰加熱區，以免燙傷。
- 1.將機體放在水平面上，與出風口與牆壁間隙大於10cm。
- 2.如電源線損壞，必須立即停止使用及自提攜產品到本公司維修部維修。
- 3.請不要用水直接沖洗/淋濕機體，以免機件損壞或漏電。
- 4.遠離高溫發熱器具，避免環境溫度過高，影響此產品運作。
- 5.請不要把電磁爐放在燃氣灶、電爐或金屬檯面等物品上使用。
- 6.請不要讓鍋具於電磁爐上乾燒。
- 7.如需要將密封食品加熱，要先打開包裝後再開始工作。
- 8.請勿將易燃或金屬物品放在面板與鍋具之間。
- 9.每次使用本電磁爐後，請拔下電源插頭。
- 10.使用後面板會存有餘熱，請勿觸摸。如需清潔，請先等候散熱約5分鐘。
- 11.請勿將任何異物插/放入機體內，以免機件故障。
- 12.請勿讓兒童操作此電磁爐，請將電磁爐放置於嬰兒/兒童不能觸及的地方。
- 13.若面板破裂，請立即切斷電源，並自攜產品到本公司售後中心進行維修。
- 14.家用電器不應使用額外定時器或獨立的遙控系統操作。
- 15.如果電源線損壞,請立刻停止使用該產品,必須由代理商或合格人員更換，以避免危險。
- 16.警告: 如果微晶玻璃或者機身表面有裂紋，請立刻停止使用該產品，以免發生觸電。
- 17.孩子們應該受到監督，以確保他們不會玩這個設備。
- 18.8歲以上的兒童、身體、感官、智力比較弱、欠經驗和知識的人士，在經過指導說明安全使用方法和知道可能的危險後，可以使用本機。兒童不可以把玩本產品，清潔和維修不可給兒童處理。

安全保護

- 1.小物件檢測功能：為防止小金屬物加熱時發生危險，直徑小於8CM的銅具，小物件（如刀叉、鑰匙、小茶杯等）將不會被加熱，蜂鳴器會鳴叫提示，1分鐘後自動關機。
- 2.內部超溫保護：當產品內部溫度超過100°C，將會自動停止工作。
- 3.高低壓保護：如果電壓低於100V(±10V)或高於270V(±10V)，該產品將會自動停止工作。
- 4.無人看管自動關機功能：如果連續2小時開機煮食後未進行任何操作指令（只供自定手動煮食程式），電磁爐將自動關機。
- 5.面板過熱保護功能：如果面板中心的溫度超過300°C時，電磁爐將自動停止加熱（部份功能自動關機），待溫度恢復正常後，將自動恢復加熱（部份功能需要再按電源開關鍵重新啟動）。
- 6.內部過熱保護功能：當電磁爐內部溫度過高時，將自動停止加熱。

操作說明

1.火鍋功能

在待機狀態下，按功能鍵選擇“火鍋”功能，火鍋功能指示燈亮，數碼管默認顯示功率1600W設定值加熱。在火鍋工作狀態下，控制參數為功率，默認關機時間為120分鐘，可定時，不可預約。定時範圍為“0:00-3:00”，功率顯示調節範圍按功率分檔表調節。

2.煎炒功能

在待機狀態下，按功能鍵選擇“煎炒”功能，煎炒功能指示燈亮，數碼管默認顯示溫度270°設定值加熱。在煎炒工作狀態下，控制參數為溫度，默認關機時間為60分鐘，可定時，不可預約。定時範圍為“0:00-3:00”，溫度顯示調節範圍按溫度分檔表調節。

3.煲水功能

在工作狀態下，按功能鍵選擇“煲水”功能，煲水功能指示燈亮，數碼管默認顯示功率2100W設定值加熱。在煲水工作狀態下，無法控制功率參數，默認工作時間為25分鐘，可預約，不可定時。預約範圍為“0:00-24:00”。

操作說明

4.蒸煮功能

在工作狀態下，按功能鍵選擇“蒸煮”功能，蒸煮功能指示燈亮，數碼管默認顯示功率1600W設定值加熱。在蒸煮工作狀態下，無法控制功率參數，默認工作時間為90分鐘，可預約，不可定時。預約範圍為“0:00-24:00”。

5.湯/粥功能

在工作狀態下，按功能鍵選擇“湯/粥”功能，湯/粥功能指示燈亮，數碼管默認顯示功率1600W設定值加熱。在湯/粥工作狀態下，無法控制功率參數，默認工作時間為120分鐘，可預約，不可定時。預約範圍為“0:00-24:00”。

6.電量/電壓查詢功能

- 1.在工作狀態下，第一次按下此鍵，數碼管顯示電量：PX.XX，第二次按下此鍵，數碼管顯示工作電壓：XXXU；第三次按下此鍵，回到正常顯示狀態。
- 2.在工作狀態下，按“電量/電壓”鍵數碼管顯示當前工作電壓及用戶用電量，顯示10秒後自動回到當前工作功能的顯示。
- 3.在待機狀態下按“電量/電壓”鍵無效。

日常保養

1. 確保插頭連接正常
 - 清潔前應先由插座拔出電源插頭，以免觸電。
 - 使用前應先檢查插頭與插座的接觸情況，確保連接正常，以免使用時發生危險。
2. 清理面板
 - 輕微污垢：請用柔軟的濕抹布擦拭
 - 避免機身變形或破裂，切勿使用揮發性、稀釋劑及液體清潔劑清洗。
 - 用含化學物質的布料清潔，會破壞玻璃面板的表面。
 - 請不要將此產品放入洗碗碟機/乾碗碟機內清洗
3. 清除油污
 - 以柔軟的濕抹布塗少量牙膏或中性清潔劑清理，再用乾淨的濕抹布擦拭乾淨。
 - 不可用水直接沖洗，以免導致觸電損壞。
4. 清理外殼
 - 請用柔軟布擦拭機身。
 - 進氣口和排氣口的灰塵，可用柔軟的毛刷或吸塵器窄咀清理。

注意事項：

電磁爐工作時，注意不能乾燒及煮食後立刻清理面板 否則面板會留痕迹!

適用鍋具

可用鍋具：

鐵類、搪瓷、不銹鋼、平底鍋，鍋底直徑從12至26厘米。
(因市場上的鍋具材質不同，烹煮效果及時間會有所不同。)



不可用鍋具：

耐熱玻璃、陶瓷容器、銅器、鋁制鍋/壺、圓底鍋/壺 底部小於12厘米。



常見故障及處理方法

故障現象	檢查事項	處理方法
連接電源線後，按電源開關鍵，機器無響應。	<ul style="list-style-type: none"> ● 檢查插頭是否插緊。 ● 檢查電源線是否完好。 ● 檢查電力供應 ● 電壓是否太低 	檢查後排除原因
開啟電磁爐不加熱，蜂鳴器鳴叫。	<ul style="list-style-type: none"> ● 檢查爐面是否放置鍋具 ● 檢查鍋具是否放置於面板正中央 ● 檢查放置的鍋具是否合適 ● 檢查是否放置直徑小於8CM的小金屬物件在加熱區域 	檢查後排除原因
在正常運作時產品停止操作。	<ul style="list-style-type: none"> ● 環境溫度太高。 ● 排氣口或進風口堵住。 ● 是否已有 2 小時未進行操作使用 ● 過熱保護 	<ul style="list-style-type: none"> ● 將機器一道溫度低的環境。 ● 出風口和進風口保持暢通。 ● 正常現象。 ● 若風扇正常轉動，可能機器在自動調整內部溫度，請過一會再試。
LED 出現錯誤代碼。	<ul style="list-style-type: none"> ● E0 無鍋提示或檢測不到鍋 ● E1 電源電壓過低 ● E2 電源電壓過高 ● E3 爐面傳感器短路、超溫 ● E4 爐面傳感器開路 ● E5 IGBT傳感器短路、超溫 ● E6 IGBT傳感器開路 ● E7/E8 爐面傳感器失效(6分鐘內檢測不到溫度變化) ● E9 線路故障(環路不工作) 	<ul style="list-style-type: none"> ● 請保持機底散熱排氣口暢通。 ● 如機底散熱排氣口被阻，可能會導致機器過熱而自動停機或損壞。 ● 建議使用此產品時，避免放置機身於一次性薄檯布/膠檯墊上。 ● 建議用厚厚膠片或厚紙墊代替，以免檯布或輕檯墊被吸入及阻塞機底散熱的排氣口

備註：為了安全著想，如果電源線插頭損壞，在保養期內請聯絡我司的售後服務中心維修。

產品規格

型號	GIC2100B
適用電壓	220-240V~ /50-60Hz
最大輸出功率(瓦)	2100瓦
產品尺寸(毫米)	50 (高) x 280 (闊) x360(深)毫米
重量(公斤)	2.2kg

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知

如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.

Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記

Warranty Registration



於網上登記新產品保養

Register your product online

www.dchtoolbox.com

小電維修服務 - 自攜點

Repair Service - Collection Points



 **Gilman**
since 1841

 **DCH ToolBox**
大昌行電器維修中心

客戶服務中心 DCH ToolBox Customer Service Centre

香港九龍灣啟祥道20號大昌行集團大廈4樓

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210

電郵地址 E-mail: 8210service@gilman-group.com

www.gemini-living.com

