

**gemini**  
ITALY

**1000W MINI CERAMIC COOKER**

**1000瓦迷你電陶爐**

**MODEL NO./型號 GMCC1000BK**

在使用本產品前,請仔細閱讀本說明書,並妥善保存本說明書以備用戶日後查詢。

Read the operation manual carefully before using and well keep it in a safe place for future reference.

## **SAFETY INSTRUCTION – ELECTRICITY AND HEAT**

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Only use the attachments/accessories supplied with the product.



## **Safety Guidelines – During Operation**

- Please unplug the power cord from the socket after used and let the panel cool down completely..
- The glass panel will become very hot during the cooking. Please use it carefully.
- Please do not use hard object to crash the glass panel.
- When glass panel is broken, please stop using the cooker and send it for repair.
- Please keep the air inlet and air outlet clear, when using the cooker.
- Please do not place inflammable material such as paper, cloth etc. between the cooker and the pots/ pans in order to prevent the risk of fire.
- When use the glass container cooking. Please do not put the cool pot on the panel. Otherwise the hot temperature may break the glass container.
- It is prohibited to put the plastic or paper or metal object such as knife, fork, ladle on the glass panel. They are easy to heat up and burn.
- Do not cook with an empty pot, it will cause malfunction or danger.
- Do not move the appliance while its switched on.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Clean the appliance thoroughly after use (please refer to “Cleaning and Maintenance” section).

## PRODUCT OVERVIEW



### Control Panel

1.  Button : On / Off Button
2.  Button : P1 – P8 : (70W, 100W, 150W, 350W, 500W, 650W, 850W, 1000W)
3. P1 : Keep Warm Function ( 70W )

Place the electric ceramic stove on a solid platform, connect the power cord plug to the power, hear the sound of "Bi", the display light on the glass panel lights up and starts flashing, and the electric ceramic stove enters standby mode for display.

### SELECTION OF POTS & PANS



Glass kettle



iron kettle



ceramic kettle



copper kettle



silver kettle



stainless steel kettle





Best effect: diameter 12–15cm, flat bottom and dark surface

Glass kettle, iron kettle, ceramic kettle, copper kettle, silver kettle, stainless steel kettle

Best effect: diameter 12–15cm, flat bottom and dark surface

## OPERATING INSTRUCTION

–Place the pot in the center of the glass panel of the electric pottery stove. For optimal results, do not use boiling utensils larger than glass panels– After powering on, the indicator light will continuously flash in P1. Press the  on/off button to start, and the indicator light will move and flash to enter standby mode. Then, press the heating function button to enter the working heating state of 1000W. The machine will enter the working state with a default power of 1000W for operation. Touch the  function button again to adjust the power for temperature adjustment, from high to low temperature. If there is no action for 20 minutes, the operation will stop.

P1- P8: (70W, 100W, 150W, 350W, 500W, 650W, 850W, 1000W)

Power	Glass Panel temperature°C
70W	140
100W	190
150W	280
350W	420
500W	440
650W	540
850W	560
1000W	580

Keep warm function P1: 70W keep warm effect of 50–60 degrees , automatic shutdown after 2 hours of operation.

Over heat protection: When the temperature reaches 550 ° C~600 ° C, the power will be reduced and maintained at this temperature point. When the temperature exceeds 700 ° C, the machine will stop working.

## Fault code or symptom:

Number	Fault Phenomenon	Fault Reason	Remarks
1	E1/Left first lamp	Thermo couple open circuit	
2	E2/Left 2nd Lamp	Thermo couple Short Circuit	
3	E3/Left third lamp	Thermistor open circuit	
4	E4/Left 4th lamp	Thermistor short circuit	
5	H1/Left 5th lamp	Furnace surface overtemperature protection	
6	H2/Left 6th light	Fan failure circuit board overheat protection	

## CLEANING AND MAINTENANCE

- Clean the appliance after every usage.
- Switch off the cooker and unplug power cord from the socket before to clean the appliance. DO NOT clean it until the surface cools down.
- Before take out the power cord please turn off the cooker, it is prohibited to wash the cooker with water or put it into water for cleaning.
- Always remove the plug from the wall socket when the appliance is not in use.
- Clean the glass panel. Use a piece of soft wet cloth to wipe the surface and dry.
- For greasy, dirt, blot, please wipe it with a piece of wet soft cloth with neutral detergent.

## PRODUCT SPECIFICATIONS

Model no.:GMCC1000BK

Voltage:220-240V~

Frequency:50-60Hz

Output power:1000W

Product dimensions:45(H) x 195(W) x 195(D)mm

閱讀下列說明事項並請妥善保管，以供日後參考。

## 安全指引- 電子和熱能產品

- 請按照這些說明事項，使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 只使用隨機附送的配件。

請把本產品放置在平穩的表面上使用。

- 使用相符的電源和電壓，以防止觸電。
  - 本產品只能使用帶接地線的電源插座。
  - 當本產品不使用時，請從牆上的插座中拔掉插頭。
  - 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
  - 確保本產品、電源線和插頭不與水接觸。
  - 確保本產品、電源線和插頭不接觸發熱表面，如明火。
  - 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 閱讀下列說明事項並請妥善保管，以供日後參考。

## 安全指引- 操作期間

- 使用後，帶風扇停止工作會，請先將電源線插頭拔掉，確保爐面完全冷卻。
- 在烹飪過程中，玻璃面板會發熱。請小心使用。
- 請勿用硬物擊碰玻璃面板。
- 若發現黑晶玻璃面板破裂，請停止使用並及時送去檢修。
- 使用電磁爐時，請保持通風口暢通。
- 請勿在鍋具和電陶爐之間放置易燃材料，如紙，布等，以免發生火災。
- 使用玻璃器皿烹調時。請勿將冷鍋直接置於已熱的發熱面板上，或是將已熱的玻璃器皿放置於冷的面板上，以免溫差過大而導致玻璃爆裂。
- 禁止將塑膠，紙或金屬物體（例如刀，叉，杓子）放在玻璃板上。它們很容易傳熱，以

免發生事故。

- 嚴禁鍋具乾燒，以避免損害本機，鍋具及發生危險。
- 本機開啟時，請勿移動本機。
- 切勿使用腐蝕性清潔劑或鋒利的物體（例如刀或硬刷）來清潔本機
- 使用後，清潔本機（請參閱“清潔和保養”）部分。

## 部件示意圖

### 控制面板示意圖



### 控制面板

1. ：開/關按鈕
2. ：功能按鈕 P1 - P8：（70W、100W、150W、350W、500W、650W、850W、1000W）
3. 保溫功能：P1（70W）

將電陶爐放在牢固的平臺上，電源線插頭接通電源，聽到“Bi”的聲音，玻璃面板上的顯示燈亮起並開始閃動，此時電陶爐進入待機模式下顯示。

## 壺具選用



玻璃壺



鐵 壺



陶瓷壺



 
銅 壺



銀 壺






不鏽鋼壺



最佳效果: 直徑12-15cm, 平底及深色表面

請建議選用平底及不反光的壺具。

## 使用說明

- 將壺具放在電陶爐的玻璃面板中央上。如欲取得最佳效果，切勿用比玻璃面板大的煮壺器皿。-通電後指示燈在P1會連續閃爍，按開/關  鍵開始，指示燈會移動閃爍，進入待機狀態，再按加熱功能鍵  進入工作加熱狀態1000W，機器進入工作狀態默認1000W功率進行工作，再次觸摸功能  鍵，可調節功率進行溫度調節，高溫到低溫。如20分鐘無操作將停止工作。

P1- P8：（70W、100W、150W、350W、500W、650W、850W、1000W）

功率	面板溫度°C
70W	140
100W	190
150W	280
350W	420
500W	440
650W	540
850W	560
1000W	580

保溫功能 P1：保溫70W，保溫效果50~60攝氏度，工作2小時後自動關機。



超溫保護：溫度達到550°C~600°C會降低功率，維持這個溫度點，當溫度超過700°C，機器停止工作。

## 故障代碼或故障現象：

序號	故障現象	故障原因	備註
1	E1/左邊第1個燈	熱電偶開路	
2	E2/左邊第2個燈	熱電偶短路	
3	E3/左邊第3個燈	熱敏點組開路	
4	E4/左邊第4個燈	熱敏點組短路	
5	H1/左邊第5個燈	爐面過熱保護	
6	H2/左邊第6個燈	風機失效線路板過熱保護	

## 清潔及保養

- 每次使用後，請清潔本機。
- 在進行清潔和保養時，請先將電源線插頭拔掉，確保爐面完全冷卻。
- 在拔插頭前必須先關機，切勿用水沖洗或將本產品放入水中清洗。
- 在不使用本機時，請務必從牆壁插座上拔下插頭。
- 在清潔控制面板。可用一塊濕軟布擦拭表面。
- 對於油跡，污垢，污點，請用一塊沾有中性清潔劑的濕軟布擦拭。

## 產品規格

型號：GMCC1000BK

電源：220-240V~

頻率：50-60Hz

熱量輸出：1000瓦

產品尺寸：45(高) x 195(寬) x 195(深) 毫米

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知  
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.  
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity  
between the English version and the Chinese version,  
the English version shall prevail.

保養登記  
Warranty Registration



於網上登記新產品保養  
Register your product online  
[www.dchtoolbox.com](http://www.dchtoolbox.com)

小電維修服務 - 自攜點  
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre  
香港九龍灣啟祥道20號大昌行集團大廈4樓  
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210  
電郵地址 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)  
網址 Website: [www.gilman-group.com](http://www.gilman-group.com)