

**gemini**  
ITALY

ULTRA THIN MINI  
DEHUMIDIFIER  
超薄迷你抽濕機

MODEL NO./型號: GMD800WH

Please read this instruction manual carefully  
before use and keep it for future reference  
請於使用前仔細閱讀本說明書並加以保存

**Please read and retain for future reference.**

## **SAFETY INSTRUCTION - GENERAL**

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Only use the attachments/accessories supplied with the product.

## **SAFETY INSTRUCTION - ELECTRICITY**

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.


Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.

- The appliance, the air vents must not be covered or blocked when use.
- Certain part of the appliance may get hot. Do not touch these part to prevent scalding yourself.

## **SAFETY INSTRUCTION - DURING OPERATION**

- The appliance should not be used in the immediate vicinity of water, such as bathtub, washbowls, etc. where the likelihood of im-mersion or splashing could occur.
- Don't close the inlet and outlet of the appliance to the wall, curtain and other entities, so as not to block the air flow, affect the air supply effect or other dangers.
- Don't place the appliance in tilted or other unbalanced places, the appliance rollover, resulting in product damage or other safety accidents.
- Don't shake the machine vigorously, so as not to damage the internal structure.

# OPERATING INSTRUCTION

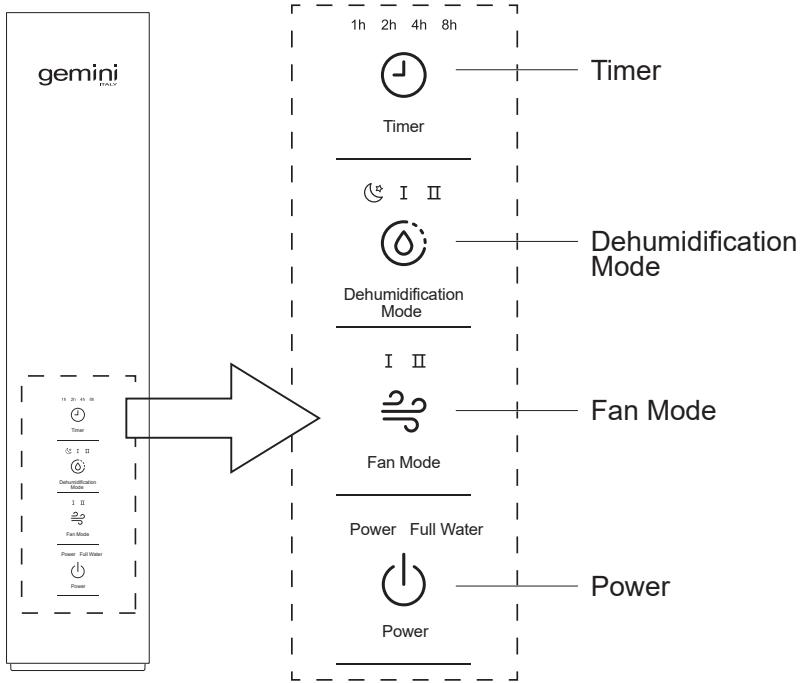

## CONNECT THE POWER

Plug the product into the power socket. When you hear a short beep, the device enters standby mode.

## ON / OFF

In standby mode, lightly press the power button. After a short beep, the device turns on.

By default, the Dehumidification Quiet mode is activated, and the UVA light turns on simultaneously.

When operating in Quiet mode, press the “” to enter Normal mode (I) ; press the “” again to enter Turbo mode (II). Press the mode button once more to return to Quiet mode. The sequence is as follows: Quiet → Normal (I) → Turbo (II) → Quiet. Each time you press the mode button, the device will beep once. To turn off the device, lightly press the power button. The device will shut down.

 
**Note: This device has a memory function; after restarting, it will operate in the mode it was in before being turned off.**

Note: This device has a memory function; after restarting, it will operate in the mode it was in before being turned off.

## FLOOR BLOWING MODE

When the device is powered on, touch the “” button.

You will hear a short beep, the semiconductor will stop operating, the fan will run at low wind speed (I), and the indicator light will turn on.

Touch the “” button again. After a short beep, the fan and indicator light will switch to high wind speed mode (II).

## TIMER SETTING

On power on state, touch the “” to timer setting, the timer setting range is 1-15H.

Every time touch the “” to increase the time by 1 hour, the buzzer will sound and the corresponding LED light will light up.

1h 2h 4h 8h

If the timer is set to turn off after 3 hours, the LED indicators for “1h” and “2h” will light up, and so on.

When the timer is set to 15 hours, all four LED indicators will light up simultaneously.

On power on state, long press the “” to exit timing setting mode.

## UVA LAMP SWITCH OPERATION

On power on state, the UVA lamp is automatically turned on by default; long-pressing the blow button “” can turn the UVA lamp off/on (pressing once turns it off, and pressing again turns it back on).

To avoid causing damage to your eyes, please do not look at the UVA lamp directly.

### Attention:


**The machine has a defrosting function, and when the ambient temperature is below 15°C, the condenser will frost. At this time, the machine will activate the defrosting function and regularly defrost.**

**In order to ensure the normal dehumidification of the machine, if the ambient temperature is below 5°C, the defrosting function of the machine will be invalid.**

# WATER TANK FULL WARNING


- During the operation of the machine, when the 「Full Water」 of panel prompt light's on, it indicates that the water tank of the machine is full and the machine stops working. It is necessary to remove the water tank and treat the accumulated water in the tank;
- After emptying the water tank and placing it back into the machine, the full water light will turn off, and the machine will shut down. You need to press the “” again to operate the machine.

## WATER TANK REMOVAL AND INSTALLATION

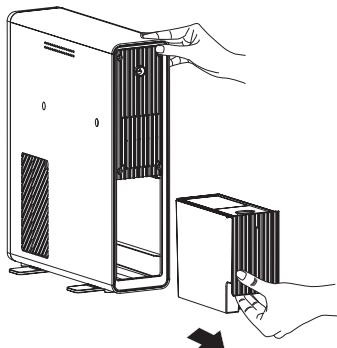

### Take out water tank

Hold onto the body, reach your fingers to the bottom of the water tank and hook onto the water tank handle. Gently pull out the water tank with force.

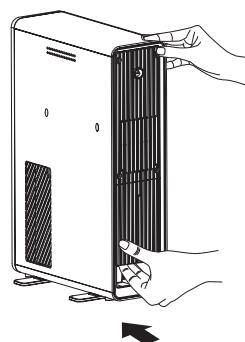


### Installation water tank

Align the water tank with the machine slot and push it inward to the end. Installation completed.

## INSTALLATION INSTRUCTIONS FOR SUPPORTING COMPONENTS

Align the support with the mounting hole at the bottom of the machine and press it down. If you hear a "click" sound, the installation is complete.

**Attention: Please make sure to install the support components before use.**

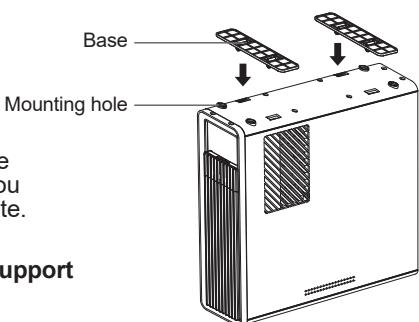

# MAINTENANCE

## **Notice**

Before carrying out any cleaning or maintenance work, always make sure that the appliance is disconnected from the mains supply by unplugging the power cord from socket-outlet.

## MACHINE CLEANING

- It is forbidden to rinse the machine directly with water. You can wipe it lightly with a soft cloth containing a little neutral detergent, and then wipe it dry.
- After cleaning and maintenance, be sure to wait until it is fully dry before it can be powered on or stored.
- When not in use for a long time, please unplug the power cord. It is recommended to wrap it in the original packaging and store it in a dry place.

# TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
Device does not work	Plug not properly inserted	Insert the power plug correctly
	Power button not turned on	Press the power button again
	Circuit board damaged	Contact professional technician to replace board
Strange noise	Fan blade cracked	Contact professional technician to replace blade
	Foreign object inside fan	Contact professional technician to remove object
	Motor damaged	Contact professional technician to repair motor
Cannot dehumidify	Motor damaged	Contact professional technician to repair motor
	Humidifier component damaged	Contact professional technician to replace part
Low dehumidification output	Room humidity too low	Ensure room humidity is above 40% for best effect
	Mist outlet clogged	Contact professional technician to clean outlet
Indicator light off	LED damaged	Contact professional technician to replace LED
	Micro switch damaged or support frame deformed	Contact professional technician to adjust micro switch position or replace frame
Water overflow	Float stuck	Adjust float so it moves freely

# PRODUCT SPECIFICATIONS

Product Name	Ultra Thin Mini Dehumidifier
Product Model	GMD800WH
Rated Voltage	AC 220-240V
Rated Frequency	50-60Hz
Rated Power	50W
Applicable environment	Temperature 20~40°C, Humidity below 95%
Water tank capacity	0.8L
Product Size	283(H) x 69(W) x 325.5(D) mm
Product Weight	2.2kg
Packing List	Dehumidifier x1, Base x2, Water pipe x1, Aroma diffuser tablet x2, Manual x1

閱讀下列說明事項並請妥善保管，以供日後參考。

## 安全指引 - 一般安全

- 請按照這些說明事項，使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 當本機開著時，頭髮、鬆身衣物、手指和身體其他部份都要離開本機。
- 只使用隨機附送的配件。


## 安全指引 - 電子產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 本產品使用時，通風口不得覆蓋或堵塞。
- 本產品的某部分可能會發熱。不要觸摸這些部分，以防止燙傷自己。

## 安全指引 - 操作期間

- 不要把本產品放在寢具或者厚厚的毛毯上，因為有可能堵塞進出風口。
- 不要在直接接近水的地方使用產品，比如浴缸、洗臉盆等，這些地方可能發生漏電。
- 不要將電器的出風口靠近牆壁、窗簾等實體，以免阻塞氣流，影響送風效果或其他危險。
- 請勿將本產品放置在傾斜或其他不平衡的地方，以免引起產品側翻，造成產品損壞或其他安全事故；
- 請勿用力搖晃產品，以免損壞內部結構。

# 操作說明

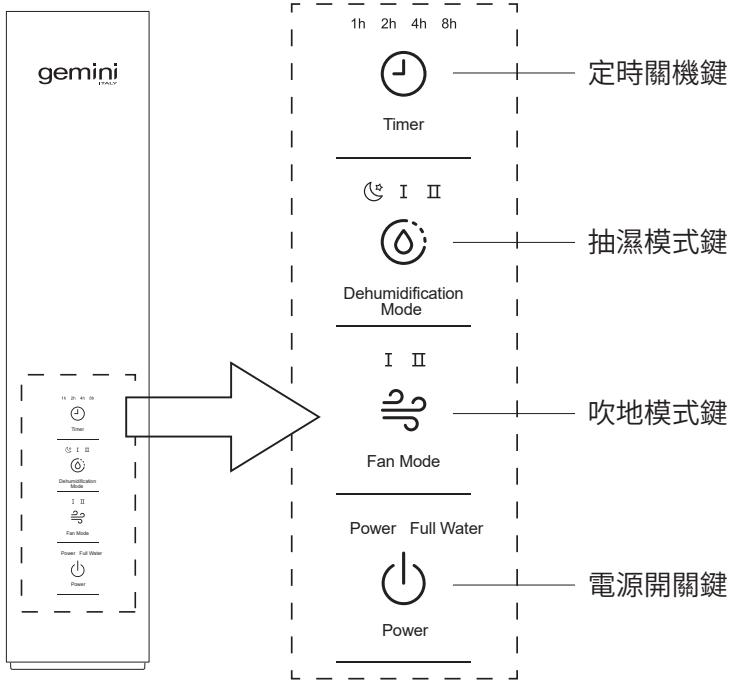

## 開機/關機

產品插上電源插頭，蜂鳴器短響一聲，進入待機狀態。

在待機狀態下，輕觸**開關關鍵** ，蜂鳴聲短響一聲，機器開啓，默認靜音抽濕模式運行，靜音抽濕模式指示燈亮起，UVA燈同時啓動。

在靜音抽濕檔運行狀態下，輕觸**模式鍵** ，進入普通抽濕模式(I)；再次輕觸**模式鍵** ，進入強風抽濕模式(II)；再次**模式鍵** ，進入靜音抽濕模式。

連續輕觸開關鍵會依次循環：靜音抽濕→普通抽濕(I)→強風抽濕(II)→靜音抽濕，每輕觸一下蜂鳴器短響一聲。

在開機狀態下，輕觸機身開關鍵使可關機。

**注意：機器有關機記憶，正常關機後重新開機，機器以關機前的模式運行。**

## 吹地模式

在開機狀態時，輕觸吹地鍵 。聽到短促蜂鳴聲後，半導體會停止運作。風扇以低風速 (I) 運轉，指示燈開啟。

再次輕觸吹地鍵 。聽到短促的「嗶」聲後，風扇及指示燈將切換至高風速模式 (II)。

## 定時關機設定

在開機狀態下，輕觸定時關機鍵 ，可設定定時關機，定時最長時間15小時，每輕觸定時關機鍵 增加1小時定時時間，每輕觸一下蜂鳴器短響一聲，對應LED燈點亮。

1h 2h 4h 8h

如預約3小時後關機，”1h”及“2h”的LED燈會亮起，如此類推。設定15小時關機時，4個LED燈會同時點亮。

開機狀態下，長按定時按鍵，即可退出定時設置模式。

## UVA燈開關操作

開機狀態下，UVA燈默認自動開啓；長按吹地鍵 ，可關閉/開啓UVA燈（按一次關閉，再次長按重新開啓）。

為避免對眼睛造成傷害，請勿直視產品的UVA燈。

### 注意：


本機具有凝露片除霜功能，當環境溫度低於15°C時，凝露片會結霜。此時機器將開啓除霜功能，定期除霜；

為保證機器正常抽濕功能，如果環境溫度低於5°C時機器的除霜功能將失效。


# 水箱水滿提醒和處理

- 開機狀態下，面板上的滿水提示燈「Full Water」亮起，表示機器水箱水量積滿，機器停止工作，需要將水箱取出清理積水。
- 當清空的水箱放回機器，滿水提示燈熄滅，機器自動關機，重按開關鍵，機器才能繼續工作。

## 水箱取出與安裝

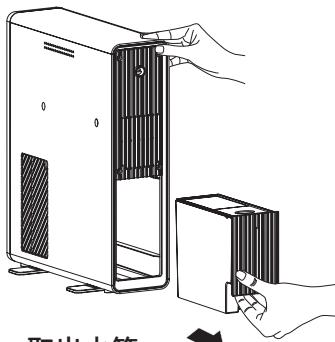

取出水箱

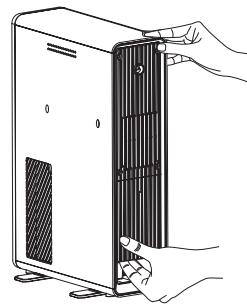


裝入水箱

扶住機身，手指伸到水箱底部鉤住水箱拉手，輕輕用力將水箱拉出。

水箱對準機身水箱槽往裏推到底，安裝完成。

## 支撐件安裝說明

支撐件對準主機底部安裝孔按下，聽到“咔噠”聲即安裝完成。（如圖）  
注意：請務必安裝好支撐件後再使用。

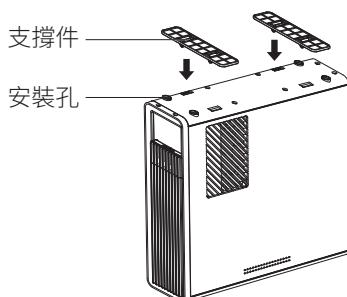

# 保養說明

**⚠ 注意 對抽濕機進行清潔維護前，請先切斷電源。**

## 機身清潔

- 禁止用水直接沖洗機身，可用含少許中性洗滌劑的軟布輕擦，然後抹乾。
- 清潔保養後，一定要等到充分乾燥才能通電使用或儲藏。
- 長期不用時請將電源線插頭拔下，建議最好用原包裝包好，收藏於乾燥的地方。

## 故障排除指南

問題	可能原因	解決方案
機器無法運作	插頭未插好	請確認電源線及插頭已正確連接
	電源按鍵未開啟	請重新按下電源按鍵
	線路板損壞	請聯絡專業維修人員更換線路板
出現異音	風葉破裂	由專業維修人員更換風葉
	風機內有異物	請聯絡專業維修人員清理異物
	電機損壞	請聯絡專業維修人員維修電機
不能抽濕	電機損壞	請聯絡專業維修人員維修電機
	抽濕組件損壞	請聯絡專業維修人員更換抽濕組件
抽濕量低	室內環境濕度過低	請保持環境濕度在40%以上，效果更佳
	過濾網堵塞	請聯絡專業維修人員清理或更換過濾網
提示燈不亮	提示燈損壞	請聯絡專業維修人員更換指示燈
	微動開關損壞、支架變形或開關內部接觸不良	請聯絡專業維修人員更換調整微動開關位置或更換損壞部件
水滿不停機	浮子卡滯	請調整浮子，確保其能自由上下活動

## 產品規格

產品名稱	超薄迷你抽濕機
產品型號	GMD800WH
額定電壓	AC 220-240V
額定頻率	50-60Hz
額定功率	50W
適用環境	溫度20~40°C 濕度95%以下
水箱容量	0.8L
產品尺寸	283(H) x 69(W) x 325.5(D)毫米
產品重量	2.2kg
裝箱清單	抽濕機主機X1、支撐件X2、水管X1、說明書X1、香薰片X2

## 請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知

如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.  
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity  
between the English version and the Chinese version,  
the English version shall prevail.

保養登記

Warranty Registration



於網上登記新產品保養

Register your product online

[www.dchtoolbox.com](http://www.dchtoolbox.com)

小電維修服務 - 自攜點

Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre

香港九龍灝啟祥道20號大昌行集團大廈4樓

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210

電郵地址 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)

[www.gemini-living.com](http://www.gemini-living.com)