

gemini
ITALY

 
 
 
RECHARGEABLE
COOL MIST FAN

充電式便攜
冷霧風扇


MODEL NO. / 型號 : GMF15GR

Please read this instruction manual carefully
before use and keep it for future reference
請於使用前仔細閱讀本說明書並加以保存


PRODUCT STRUCTURE

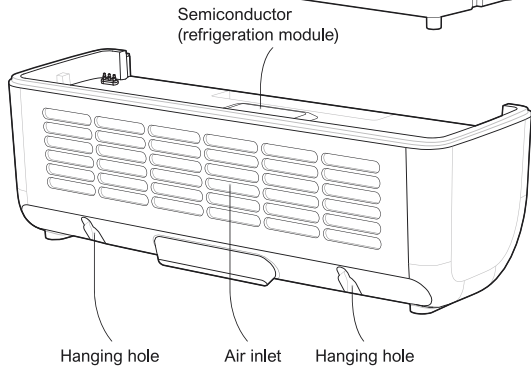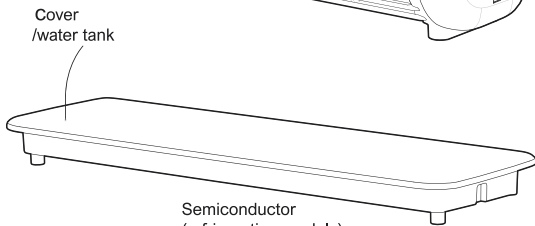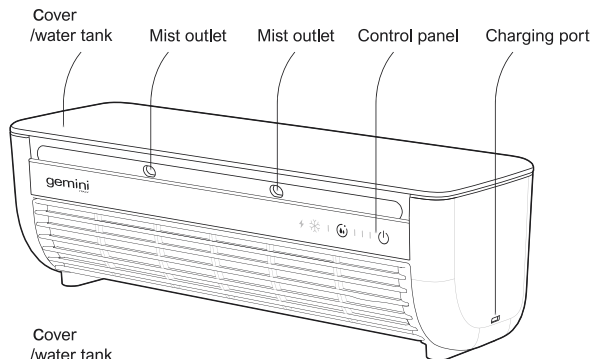


ADDING WATER TO THE WATER TANK

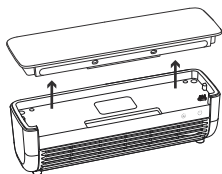 

 
Gently lift the cover (water tank) on the product and discard the protective cotton underneath the cover.

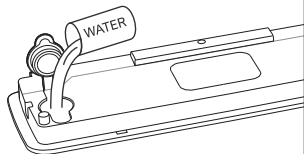

 Turn the cover (water tank) upside down, lift the silicone sealing cover, and add clean water to the hole.

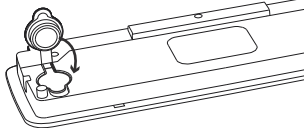

 After adding water, tighten the silicone sealing cap again.

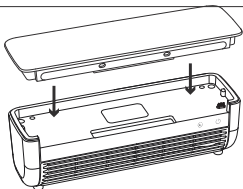

Simply reinstall the cover (water tank) onto the product

Kind reminder: If there is residual water in the water tank, it is caused by leak proof testing before leaving the factory, which is a normal phenomenon

BATTERY DESCRIPTION

 
When the battery level remains at 30%, ⚡ the light will flash at a low frequency (with an interval of 2 seconds), indicating that the battery level is low. The wind speed can only work in 1st or 2nd gear, and cannot be upshifted. The cooling plate will stop working.

When the battery level is less than 10%, ⚡ the light will flash at high frequency (with an interval of 0.5 seconds), and the buzzer will sound two beeps to indicate charging. The wind speed can only work in first gear and cannot be upshifted.

When the battery level is zero, all functions are turned off and all lights are turned off.

When charging, ⚡ the light is in a breathing state. After being fully charged, ⚡ the light remains on; Fully charge and unplug the adapter, the light goes out.

USING GUIDE

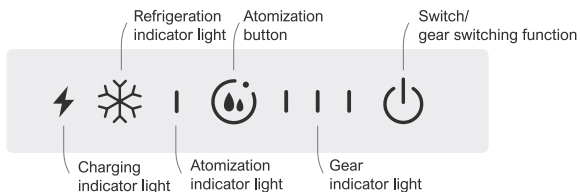

⏻ Switch/gear switching function

In standby mode, press and hold the button ⏻ for 2 seconds to turn on the device. The product enters first gear wind speed, and the corresponding gear indicator light lights up. Afterwards, with each short press of the ⏻ key, the wind speed will increase by one gear, starting from 1st gear - 2nd gear - 3rd gear - shutdown, and so on. Press and hold the button ⏻ for 2 seconds in any gear to turn off the device.

⦿ Atomization function

When turned on, press the short button ⦿ once, the ultrasonic atomizer and semiconductor cooling chip start working, and the atomization indicator light on, the light ❄️ is in a breathing state.

Press the short ⦿ button again, and the atomizer and semiconductor cooling chip will stop working, and the corresponding indicator light will turn off.

When it is detected that the atomizer has no working current (the water tank is removed or not installed in place), the semiconductor cooling chip will stop working after 3 minutes.

The working principle of semiconductor refrigeration chips: turn on for 5 minutes, turn off for 10 minutes, turn on for 5 minutes, and cycle like this;

 
 
 
 
The atomizing and cooling blades only work when turned on, and stop working when the fan is turned off.

REMOTE CONTROL PANEL



- ⏻ Turn on/off the fan.
- ⦿ In working mode, press the button ⦿ to switch the wind speed, and the product will use 1st to 2nd, 3rd to 1st wind speed work quickly and cycle through it.
- ⦿ In the working mode, press the key ⦿ to turn on/off the spray and refrigeration functions.
- ❄️ In working mode, press the button ❄️ to activate the ice mist mode, and the wind speed will enter 3rd gear for operation.
The spray and refrigeration functions are turned on at the same time.
In ice mist mode, press the button ❄️ to exit the ice mist mode, and the wind speed will change to first gear operation, turn off the spray and refrigeration functions at the same time.

WALL MOUNTED FUNCTION

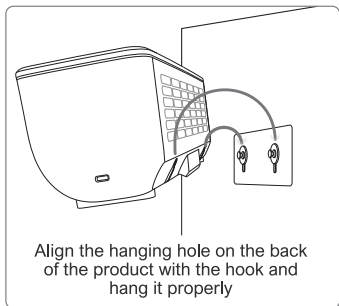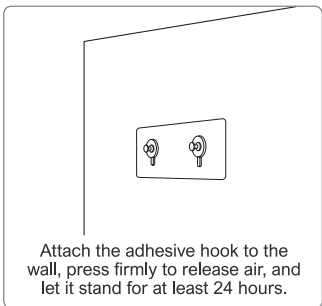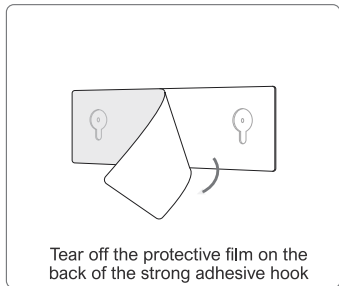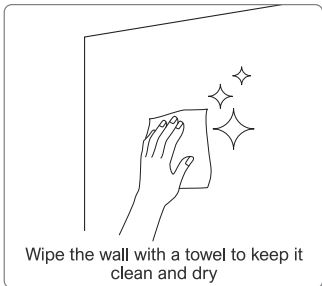

Attention


- Strong adhesive hooks are recommended for indoor areas with smooth walls. Please do not install them outdoors in areas with dust, potholes, and other non smooth surfaces;
- Wall surfaces suitable for adhesive hooks: smooth tiles, smooth glass, painted panels, smooth metals, etc;
- Adhesive hooks are not suitable for walls: wall paper, putty walls, cement walls, wooden board walls, diatomaceous mud walls, unsmooth, non hard walls, etc.

PRODUCT INFORMATION


Product parameters

Product name	RECHARGEABLE COOL MIST FAN	Model	GMF15GR
Wind speed gear	3 gear switching	Rated power	15W
Output	5V --- 2A	Working voltage	5V ---
Product weight	1.05KG	Battery capacity	6000mAh

 Product size

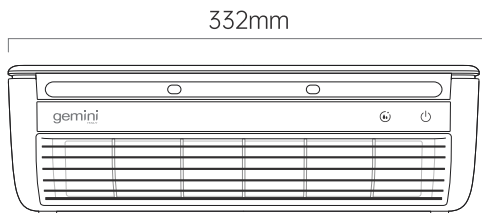

Front view

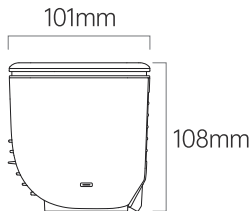 

Side view

SAFETY AND MATTERS NEEDING ATTENTION

- Please read the user manual carefully before use and use it correctly according to the instructions;
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department, or similar departments;
- Sharp objects such as metals and needles are prohibited from falling into this product to prevent short circuits;
- Do not use corrosive cleaning agents or diluents to clean products;
- Please do not let pets such as cats and dogs play or bite on this product to prevent pets from damaging the power supply and wiring;
- Do not pull or entangle the internal power cord of the product;
- Individuals who are unable to take care of themselves, infants and young children, or those who are not sensitive to heat must be accompanied by a guardian for use;
- When not in use, please turn off the power promptly and unplug the power plug;
- When the product is hung on the strong adhesive hooks, the hooks should be perpendicular to the ground (cannot be tilted left or right) and smoothly pasted on a smooth wall surface for 24 hours before the entire machine can be hung on the wall.
- When using hooks for products, the place where the hooks are hung should be stable and firm to prevent them from falling off;
- Do not use wet hands to unplug the power plug to avoid the risk of electric shock;
- When there are stains on the surface of the product, you can use a soft cloth dipped in soap to wipe it clean. Do not use organic solvents such as gasoline or alcohol to scrub;
- Do not use in areas with high temperature, humidity, high dust, or volatile acidic or alkaline oils;
- If the machine is damaged or the body is damaged, please unplug the power in a timely manner and contact after-sales service for assistance.

PROTECTING THE ENVIRONMENT

This product contains recyclable materials. Recycling and disposal should refer to local laws and regulations. Protecting through recycling and reuse
Our environment has made significant contributions to our environmental protection. Before disposing of equipment, the battery must be removed from the equipment; When removing the battery, the appliance must be powered off; The battery should Safely dispose of.

- ① Gently lift the cover (water tank) on the product
- ② Use a screwdriver to remove the two screws on the machine casing and the air outlet network component Remove the bottom screw
- ③ from the air mesh component, and then remove the three screws
- ④ After removing the upper shell, you can see the battery. Remove the red terminal on the battery cable to remove the battery.

MAINTENANCE AND STORAGE

 
- Cut off the power supply before maintenance
- When there is oil stains on the body, it must be cleaned thoroughly to avoid discoloration and damage.
- After maintenance and cleaning, pack each component into a packaging box in the original packaging order and place it in a dry place for proper storage.
- This machine only requires general external cleaning and maintenance.
- Do not rinse the body directly with water.
- Avoid wiping with diluents, toluene, acidic detergents, oil, etc. to prevent discoloration or deterioration.

THE FRONT GRILLE IS REMOVABLE AND WASHABLE


When there is a lot of dust accumulation on the current mesh cover, it can be disassembled and washed in the shutdown state. After the front mesh cover is fully dried, it can be installed and the product can be reopened.

Safety reminder: Before removing the front grille, it is necessary to confirm that the fan and power supply are disconnected; Do not disassemble the front grille while the fan is in operation;


Do not turn on the machine if the front grille is not installed properly or the fan blades are exposed.

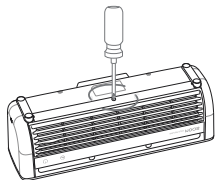

 
At the bottom of the product body, remove the screws that secure the front grille cover.

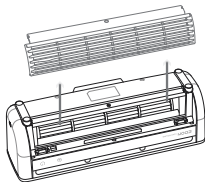

 Lift the front grille with both hands and pull it out along the card slot to remove it.



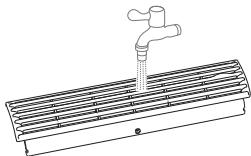


 The front grille can be individually rinsed with water.

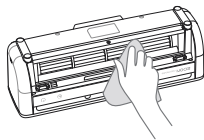


The body and internal wind turbine cannot be rinsed with water. Please gently wipe with a clean towel.

   
產品結構

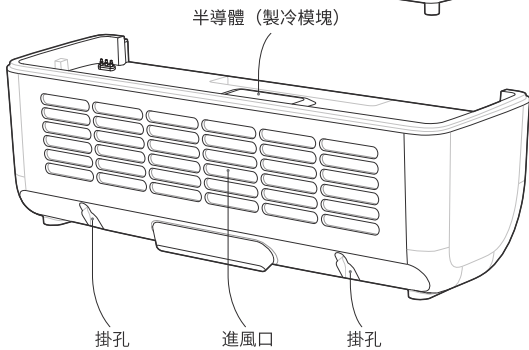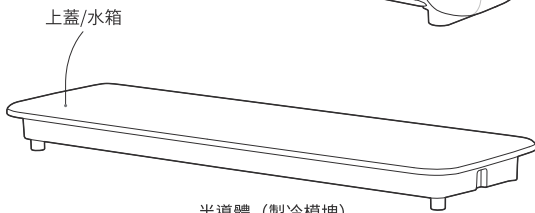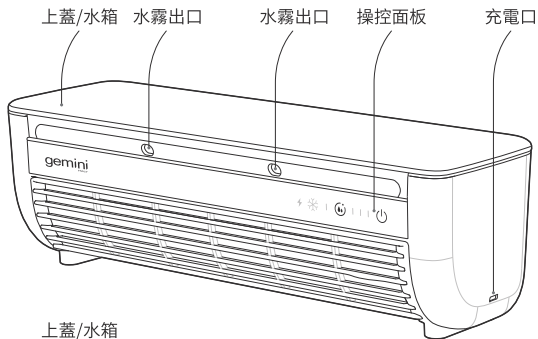


水箱加水

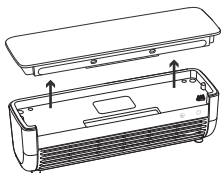 


小心拉出產品上的蓋子(水箱)，
扔掉蓋子下的保護棉

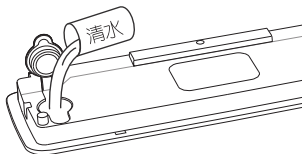 

將蓋子(水箱)倒轉，打開膠蓋，
向孔內加入清水

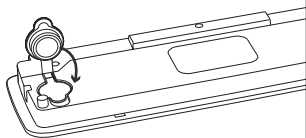 

注入清水後，將膠蓋重新蓋實

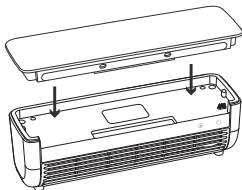 

重新把蓋子(水箱)裝在產品上即可

溫馨提示：若水箱有水份殘留，為出廠前防漏檢測所致，屬正常現象。

電量說明

當電量剩下30%時，⚡燈低頻閃爍(間隔2秒)，提示電量不足，風速僅可以1檔或2檔工作，無法升檔，製冷片停止工作。

 
當電量不足10%時，⚡燈高頻閃爍(間隔0.5秒)，蜂鳴器響「滴滴」兩聲提示充電。風速僅可以1檔工作，無法升檔。

當電量為零時，所有功能關閉，燈光全部熄滅。


 

充電時，⚡燈呈呼吸狀態。充滿電後，⚡燈常亮；充滿電拔掉適配器，⚡燈熄滅。

使用指南

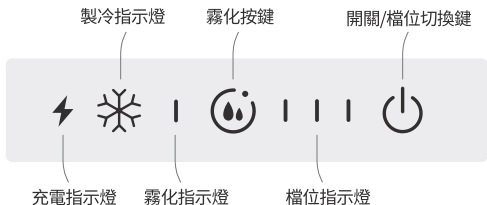


機身面板



開關/檔位切換功能

待機狀態下，長按  鍵2秒開機，產品進入1檔風速，對應的檔位指示燈亮起，此後每短按一下  鍵，風速遞增一檔，以1檔-2檔-3檔-開機，如此循環。
在任意檔位下，長按  鍵2秒關機。






 
 

霧化功能

開機狀態下，短按  鍵一下，超聲波霧化片與半導體製冷片開始工作，霧化指示燈亮起， 燈呈呼吸狀態。
再次短按  鍵一下，霧化片與半導體製冷片停止工作，對應指示燈熄滅。
當檢測到霧化片無工作電流後 (即水箱被拿開或安裝錯誤)，半導體製冷片將於3分鐘後停止工作。

 
半導體製冷片工作規律：開5分鐘-關10分鐘-開5分鐘，如此循環；
霧化片和製冷片只有在開機狀態下才工作，隨著風扇關機就停止工作。

遙控面板




-  開啟/關閉風扇。
-  工作狀態下，按  鍵切換風速，產品以1檔-2檔-3檔-1檔風速工作，以此循環。
-  工作狀態下，按  鍵開啓/關閉噴霧和製冷功能。
-  工作狀態下，按  鍵打開冰凍功能模式，風速進入3檔工作，噴霧和製冷功能同時開啓。
冰凍模式下，按  鍵退出冰凍功能模式，風速變為1檔工作，同時關閉噴霧和製冷功能。


掛牆指南

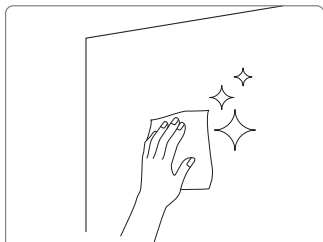


用毛巾清潔牆面，並確保表面潔淨乾爽

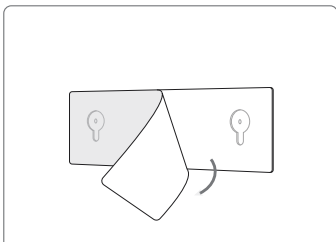 

將強力黏鈎背面的保護膜撕開

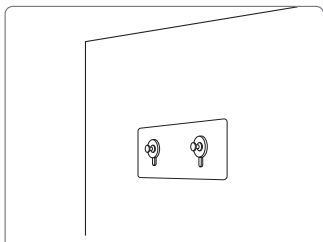 

將掛鈎貼於牆身，用力按壓排出空氣
靜置24小時以上

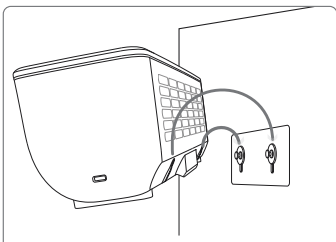 

將產品背面的掛孔對準掛鈎並掛好



注意


- 強力黏鈎建議用於有光滑牆面的室內區域，請勿安裝在戶外，有灰塵、坑坑窪窪有小洞等不光滑區域的牆面；
- 黏鈎適用的牆面：光滑瓷磚、光滑玻璃、烤漆面板、光滑金屬等；
- 黏鈎不適用牆面：牆壁紙、膩子牆、水泥牆、木板牆、硅藻泥牆等所有不光滑、非硬質的牆面

產品信息


產品參數

產品名稱	充電式便攜冷霧風扇	型號	GMF15GR
風速檔位	3檔切換	工作功率	15W
輸出	5V = 2A	工作電壓	5V =
產品重量	約1.05kg	電池容量	6000mAh

 產品尺寸

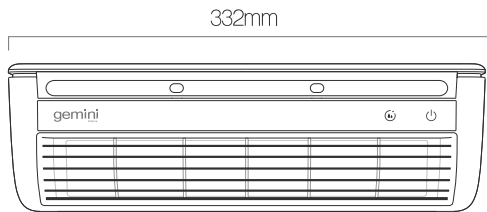

正面

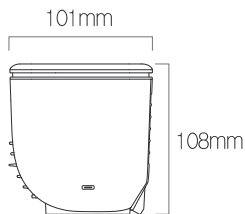 

側面

安全及注意事項

- 使用前請仔細閱讀使用說明書並按照說明書內容正確使用；
- 如充電器或充電線出現損壞，必須用專用充電器/充電線或從其製造廠或維修部買到的專用組件來更換；
- 禁止金屬、尖針等鋒利物件掉入本產品中，以免造成短路；
- 請勿用腐蝕性洗潔劑或稀釋劑等化學劑清潔產品；
- 請勿讓貓、狗等寵物在本產品上玩耍或撕咬，以免寵物破壞電源及線路；
- 請勿拉扯或纏繞產品內部電源線；
- 不能自理人員、嬰幼兒或對熱不敏感者必須在監護人的看管下陪同使用；
- 不使用時，請及時關閉電源並拔掉電源插頭；
- 產品掛在黏牆掛鉤使用時，掛扣垂直於地面（即左右不能傾斜）平整黏貼在光滑的牆面24小時後，才可整機掛牆使用；
- 產品使用掛鉤時，掛鉤掛住的地方需要穩定牢固，以免脫落；
- 勿用濕手拔電源插頭以免引發觸電危險；
- 產品表面有污漬時可用軟布沾皂液擦淨，切勿用汽油、酒精等有機溶劑擦洗；
- 勿在高溫、潮濕、灰塵多或有酸鹼油等揮發性的地方使用；
- 如果機器或機體損壞，請及時拔掉電源並聯繫售後服務。

保護環境

本產品含有可回收材料。回收處理參照當地法律法規處置。通過回收再利用，為我們的環境保護作出重要貢獻。

在廢棄器具前，必須將電池從器具中取出；在取出電池前必須關掉電源；電池應安全地處置。

- ① 輕輕提起產品上的蓋子(水箱)
- ② 用螺絲批卸下機器上殼的兩顆螺絲及出風網組件底部的一顆螺絲
- ③ 往下拆出風網組件，再卸上下殼與下殼的三顆螺絲
- ④ 拆掉上殼後可看到電池，拔掉電池線上的紅色端子，即可拆出電池。

保養與儲存

 
- 保養前先切斷電源
- 機體有油污時，必須清除乾淨，以免造成變色、破損。
- 保養清潔後，按原包裝順序將各部件裝入包裝盒，放置於乾燥的地方妥善保管。
- 本機只需做一般性外部清潔保養。
- 機身切忌用水直接沖洗。
- 忌用稀釋劑、甲苯、酸性洗劑、油等擦拭，以免變色或變質。

前網罩可拆洗


當前網罩積塵較多時，可在關機狀態下拆洗，待前網罩完全乾燥後裝上，再重新開啓產品。

安全提示：拆下前網罩前必須確認風扇與電源已斷開；禁止在風扇工作狀態下拆卸前網罩；


前網罩未安裝好或扇葉裸露情況下請勿開機。

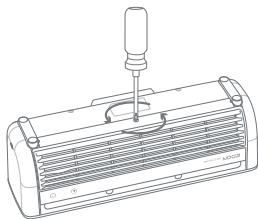


在產品機身底部，
卸下用於固定前網罩的螺絲

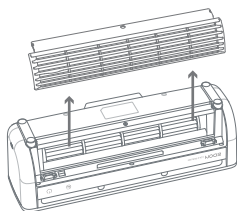 

雙手提起前網罩，
順着卡槽拉出，即可拆卸

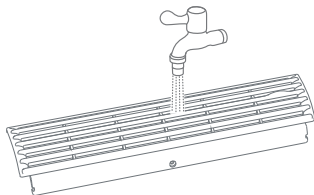 

前網罩可單獨用水沖洗

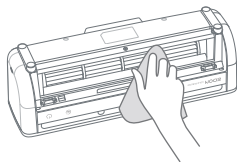 

機身及內部風輪不可用水沖洗，
請用乾淨的毛巾輕輕擦拭。

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre

香港九龍灣啓祥道20號大昌行集團大廈4樓

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210

電郵地址 E-mail: 8210service@gilman-group.com

www.gemini-living.com