

gemini
ITALY

15L ELECTRIC OVEN
15公升電焗爐

MODEL NO 型號: GOV15GN
1300W



A GILMAN GROUP BRAND

Please read and retain for future reference.

SAFETY INSTRUCTION - GENERAL

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Only use the attachments/accessories supplied with the product.

SAFETY INSTRUCTION - ELECTRICITY AND HEAT

- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.

- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance, the air vents must not be covered or blocked when use.
- Never use the appliance in the vicinity of flammable material.
- Certain part of the appliance may get hot during operation. Do not touch these part to prevent scalding yourself.

SAFETY INSTRUCTION - DURING OPERATION

- Before using the appliance for the first time, remove any promotional materials, and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth.
- When operating the appliance keep at least four inches of space on all sides of the appliance to allow for adequate air circulation.
- Place the appliance on a flat, dry, stable surface.
- Ensure that the appliance is completely dry before use.
- The appliance should not be placed on untreated wooden surface. Place the appliance on a heat resistant surface.
- Oversized foods or metal utensils must not be inserted into the appliance as they may create a fire or risk of electric shock.
- Do not place any item onto the oven or cover the oven with inflammable material during operation as it may cause fire.
- Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
- Be aware that the feet of the appliance can leave some marks on the table, if this happens, remove the marks with a damp cloth.

 
PRODUCT OVERVIEW




1. Temperature adjustment knob
2. Heating element selection knob
3. Preset timer setting knob
4. Operation indicator light
5. Glass door
6. Door handle
7. Baking tray
8. Gril rack
9. Handle

CONTROL PANEL


Temperature adjustment knob:
80 / 130 / 180 / 230 degrees

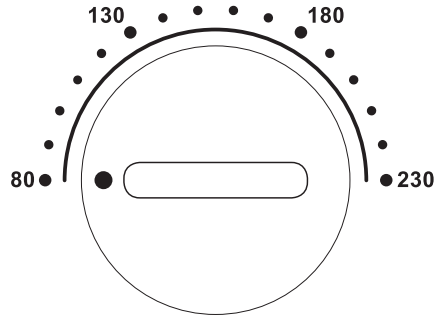

 Heating element selection knob:
Off / Upper heating element / Down heating element /
Upper and lower heating element

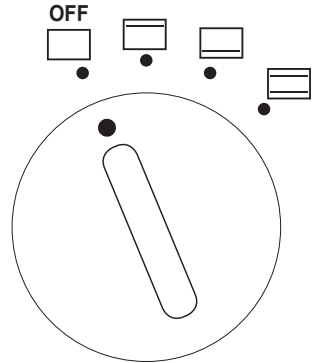

 Preset timer setting knob:
Off / 10 / 20 / 30 / 40 / 50 / 60 minutes

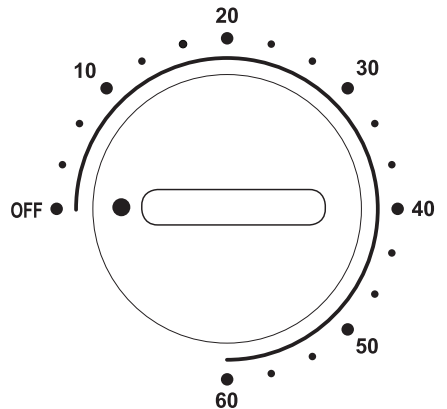

OPERATING INSTRUCTION

Before using the appliance for the first time, remove any promotional materials, and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. When first time use, the Oven may emit smell. A small amount of smoke may also be noticeable. It is recommended heating the appliance for approx. 5 minutes. Ensure the room is well ventilated.

- Turn the temperature adjustment knob clockwise to the desired temperature.
- Then select the desired position of the heating element.
- Turn the preset timer setting knob to the desired cooking time.
- The indicator light will light up until the desired temperature is reached.
- When the cooking program is complete, the preset timer setting knob will return to the OFF position. The appliance turns off automatically and heard the bell sound.
- If cooking is done earlier than the set cooking time, turn the preset timer knob to the OFF position to cancel it.

Note:

- Use extreme caution when removing bake tray or disposing of hot grease or other hot liquids.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.

CLEAN & STORAGE

- Disconnect the power plug and cool down completely of the appliance before cleaning.
- Remove the accessories for cleaning. Wash bake tray/ grill rack in hot water with sponge after each use.
- Wipe the housing with a damp cloth and dry with a soft dry cloth.
- Do not immerse the appliance in water or other liquids.
- Make sure the appliance is cool and dry completely before storing.
- Do not clean the appliance with metal scouring pads.
- Do not use abrasive cleaner like thinner or solvent to clean the appliance.

PRODUCT SPECIFICATIONS

Model No.:	GOV15GN
Voltage:	220-240V~
Frequency:	50/60Hz
Power consumption:	1300W
Product dimensions:	280(H) x 400(W) x 340(D) mm

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

閱讀下列說明事項並請妥善保管，以供日後參考。

安全指引 - 一般安全

- 請按照這些說明事項, 使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 當本機開著時，頭髮、鬆身衣物、手指和身體其他部份都要離開本機。
- 只使用隨機附送的配件。

安全指引 - 電子和熱能產品

- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。
- 確保本產品的周圍有足夠空間，並且不接觸易燃物料。使用時，通風口不得覆蓋或堵塞。
- 切勿在易燃材料附近使用本產品。
- 本產品運作時會發熱，不要觸摸這些部分，以防止燙傷自己。

安全指引 - 操作期間

- 使用前，將所有包裝材料移除，檢查烤盤是否已清洗乾淨，沒有灰塵。有需要的話，使用濕布擦拭。
- 操作產品時，在產品四周至少留出四英寸的空間，以便空氣充分流通。
- 產品放在平坦、乾燥、穩固的表面上。
- 使用前確保產品完全乾燥。
- 產品不應放置在未經處理的木質表面上。將產品放在耐熱表面上。
- 不得將過大的食物或金屬器具放入設備中，因為它們可能會引起火災或觸電危險。
- 請勿在烤箱上放置任何物品或在烤箱上蓋上易燃材料，否則可能會引起火災。
- 請勿將以下任何材料放入烤箱：硬紙板、塑料、紙或任何類似物品。
- 請注意，產品的底腳可能會桌面留下一些痕跡如果發生這種情況，請用濕布擦去痕跡。

部件示意圖

 


1. 溫度調節旋鈕
2. 發熱管選擇旋鈕
3. 預設時間設置旋鈕
4. 運作指示燈
5. 玻璃門
6. 機門手柄
7. 烤盤
8. 烤網
9. 手柄

控制面板


溫度調節旋鈕：

80 / 130 / 180 / 230 度

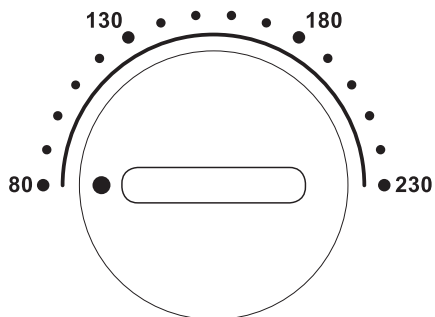


發熱管選擇旋鈕：

 關閉 / 上發熱管 / 下發熱管 / 上及下發熱管

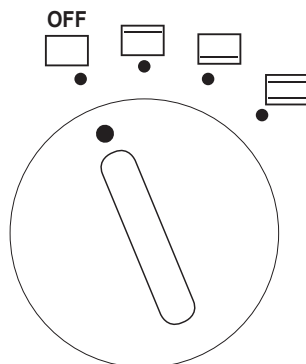

預設時間設置旋鈕：

 關閉 / 10 / 20 / 30 / 40 / 50 / 60 分鐘

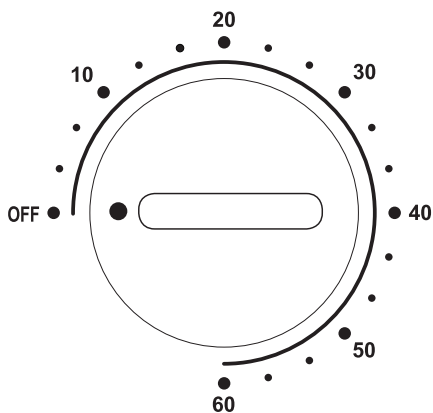

使用說明

首次使用前，將所有包裝材料移除，檢查烤盤是否已清洗乾淨，沒有灰塵。有需要的話，使用濕布擦拭。第一次接通電源，會發出氣味和少量的煙霧。建議先加熱約 5 分鐘，確保室內通風良好。

- 順時針轉動溫度調節旋鈕至所需溫度。
- 再選擇發熱管所需位置。
- 轉動預設時間設置旋鈕至所需的烹飪時間。
- 到達致所需溫度，指示燈將亮起。
- 烹飪程序完成後，預設時間設置旋鈕將回到關閉的位置。產品自動關閉，鈴聲會響起。
- 如果烹飪完成時間早於設定的烹飪時間，將預設時間旋鈕轉動至關閉位置以取消加熱。

注意：

- 取下烤盤或處理熱油脂或其他熱液體時，請格外小心。
- 將產品放入熱烤爐或從熱烤爐中取出食物時，請務必戴上隔熱手套。

清潔與儲存

- 在清洗工作前，先掉電源插頭及冷卻本產品。
- 取出配件進行清洗。每次使用後，用海綿在熱水中清洗烤盤/烤網。
- 用一塊濕的布、擦拭產品外殼，並用柔軟的乾布抹乾。
- 請勿將本機浸入水中或其他液體中。
- 儲存前確保本機已冷卻並且是乾的。
- 請勿使用金屬百潔布清潔本產品。
- 請勿使用研磨性清潔劑（如稀釋劑或溶劑）清潔本產品。

產品規格

型號:	GOV15GN
電壓:	220-240V~
頻率:	50/60Hz
功率:	1300瓦
產品尺寸:	280(高) x 400(闊) x 340(深) 毫米

* 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啟祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com