

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啟祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: <https://www.dchtoolbox.com/collection>

gemini
ITALY

7L STAINLESS STEEL
MICRO PRESSURE COOKER
七公升304不銹鋼復合底微壓鍋
MODEL NO/ 型號.: GPCO7BG

Before using your product for first time, please read this instruction manual.
在使用本產品前，請仔細閱讀本說明書並保存好

SAFETY ATTENTION


1. Please read the instructions carefully
2. Do not Heat empty pot
3. The pot temperature is high after cooking, please pay attention to the position where it is placed, and keep it away from children to avoid burns
4. If the pot catches fire, turn off the stove first and then quickly cover the pot to extinguish the fire and let the pot cool down completely before handling

WARNING

Before each use, make sure all valves are not blocked or damaged and that they are functioning properly

1. Please do not change the structure of the micro pressure cooker, especially for some safety devices.
2. please do not carry out unnecessary modifications except for the maintenance operations mentioned in the instruction manual.
3. When you use this product more than a certain number of times, it is necessary to replace the worn parts, such as silicone rings or other rubber parts, when there is visible wear (such as cracks, discoloration, deformation) or mismatch, please replace it immediately. Otherwise, it will affect the working performance and safety of the pot.
4. When replacing parts, please use the original products. Please do not use mismatched pot body and lid.
5. Children should not touch the pressure cooker under any circumstances to avoid injury; Therefore, please ensure the following:
6. This product should only be used under adult supervision.
7. This product should be kept out of reach of children.
8. The packaging of this product must be safely handled to prevent children from choking.


INSTRUCTIONS (BUCKLE DESIGN HANDLE)

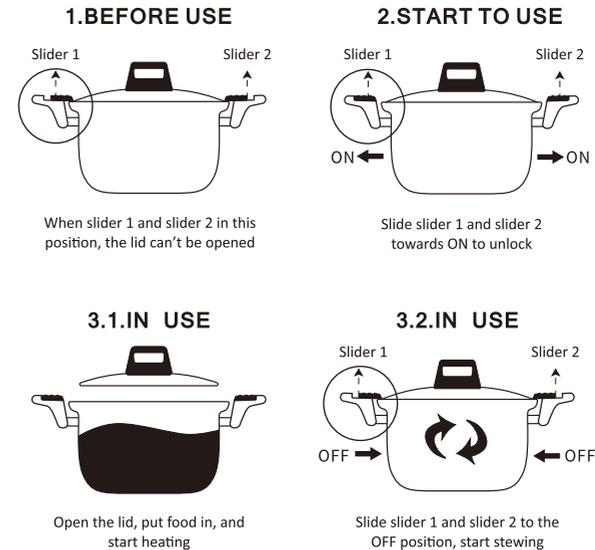

SPECIALIZED COVER SEALED SILICONE COVER + SAFETY VALVE

The safety valve can leak when the pressure in the pot reaches a certain level. Please confirm that the safety valve is not blocked or damaged before use (Keep away from steam when using, be careful of high temperature burns)

(Keep away from steam when using, be careful of high temperature burns)

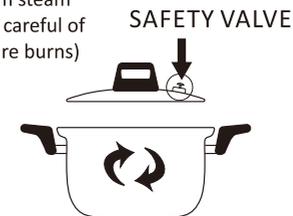

MAINTAINANCE

1. Wash it with detergent first, then wash it with hot water, dry the surface, put a little oil, spread it evenly, heat it for 30 seconds, and finally turn off the fire and wipe it clean
2. Do not use bleach or detergents containing ammonia. These ingredients will react with the metal, accelerate the corrosion of the metal, and will be rusted over time
3. Dry immediately after washing. This will avoid water stains and rust spots. Add salt after the water boils. Adding salt before the water boils may cause some small spots which are difficult to brush off. Wash the pot after cooling. Washing hot pans with cold water may cause warping
4. Try not to use sharp tools such as wire brushes for cleaning, we recommend using sponges, cloth, etc. Because wire brushes are easy to scratch stainless steel pans

Product specifications:

Model.: GPC07BG

Capacity (approx.) : 7 Liter

Product size(H x W x D) (about) : 220X380X270 mm

*The cavity capacity is calculated according to the maximum width, depth and height, and the actual storage capacity of food is slightly smaller than this value

安全注意事項

1. 請仔細閱讀說明書
2. 不要加熱空鍋
3. 烹飪後 鍋溫度較高，請注意放置位置，並遠離兒童，以免燙傷
4. 如果鍋著火，先關掉爐子，然後迅速蓋上鍋蓋滅火，讓鍋完全冷卻後再處理

警告


每次使用前，確保所有閥門沒有堵塞或損壞，並且功能正常

1. 請不要改變微壓鍋的結構，特別是對於一些安全裝置
2. 除了說明書中提到的維護操作外，請不要進行不必要的修改
3. 當您使用本產品超過一定次數時，需要更換磨損的部件，如矽膠圈或其他橡膠部件，當出現可見磨損（如裂紋、變色、變形）或不匹配時，請立即更換。否則，會影響鍋的工作性能和安全
4. 更換零件時，請使用原裝產品。請不要使用不匹配的鍋體和蓋子
5. 兒童在任何情況下都不應觸碰微壓鍋，以免造成傷害；因此請確保以下幾點：
6. 本產品應在成人的監護下才能使用
7. 本產品應該放在兒童碰不到的地方
8. 本產品的包裝必須經過安全處理，以避免兒童窒息

使用方法


卡扣式手柄

1. 使用前

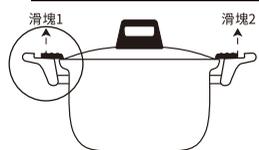


“滑塊1”“滑塊2”處於如圖狀態蓋子無法打開

2. 開始使用時

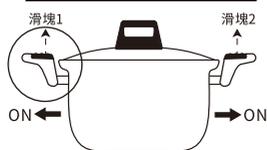


將“滑塊1”“滑塊2”向手柄上得ON方向滑動，解開鎖定

3. 使用過程

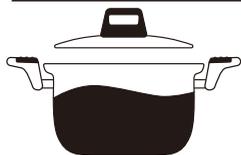

打開鍋蓋倒入食材，開始加熱

3. 使用過程

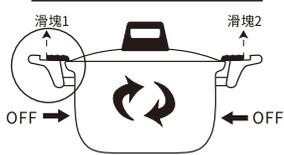


將“滑塊1”“滑塊2”向手柄上得OFF方向滑動，進入微壓悶燉狀態

專用鍋蓋

1. 密封矽膠蓋+安全閥

安全閥在鍋內達到一定氣壓時可以漏氣，使用前請確認安全閥未被堵塞和損壞

(使用時遠離蒸汽小心高溫燙傷)安全閥

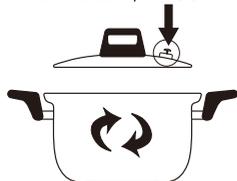

維護保養

1. 先用洗滌劑清洗，然後用熱水清洗，表面乾燥，塗上少量油，均勻塗抹，加熱30秒，最後關火擦拭乾淨
2. 不要使用漂白劑或含氨的洗滌劑。這些成分會與金屬發生反應，加速金屬的腐蝕，並隨著時間的推移而生銹
3. 洗滌後立即擦乾。這樣可以避免水漬和鏽斑。水沸騰後加鹽。在水沸騰之前加鹽可能會導致一些難以擦掉的小斑點
冷卻後清洗鍋。用冷水清洗熱鍋可能會導致變形
4. 儘量不要使用鋼絲刷等鋒利工具進行清潔，我們建議使用海綿、布等。因為鋼絲刷容易劃傷不銹鋼鍋

產品規格：

型號：GPC07BG

容量(約)：7升

產品尺寸(高x寬x深)(約)：220X380X270毫米

*空腔容量根據最大寬度、深度和高度計算，食物的實際儲存容量略小於此值