

gemini
ITALY

**2200W Inner/Outer
Zone Ceramic Cooker**

MODEL NO.: GPC2200



A GILMAN GROUP BRAND

Please read and retain for future reference.

SAFETY INSTRUCTION - GENERAL

- Use this appliance solely in accordance with these instructions.
- This appliance is for household use only, not for commercial purpose.
- Remove all packaging material from the appliance before use.
- This appliance shall not be used by children of 0 to 8-year old.
- This appliance can be used by children older than 8-year old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance must not be done by children.
- Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Children shall not play with the appliance.
- Do not leave the appliance unattended when connected to the mains supply.
- Only use the attachments/accessories supplied with the product.

 
SAFETY INSTRUCTION - ELECTRICITY AND HEAT

- Ensure the appliance is in placed on a horizontal, even and stable surface.
- Verify that the mains voltage is the same as that indicated on the rating plate on the appliance before use.
- Make sure that you always use a grounded wall socket to connect the appliance.
- Always remove the plug from the wall socket when the appliance is not in use.
- Remove the plug from the wall socket by pulling the plug, not the power cord.
- Make sure that the appliance, the power cord and plug do not make contact with water.
- Make sure that the appliance, the power cord and plug do not make contact with hot surface, such as a hot hob or naked flame.
- Check the appliance's power cord regularly to make sure it is not damaged.
- Do not use the appliance if the power cord is damaged. If the power cord is damaged, it must be replaced by an electrical technician or a person with similar qualification, in order to avoid any hazards.


SAFETY INSTRUCTION - DURING OPERATION

- Please unplug the power cord from the socket after used and let the panel cool down completely..
- The glass panel will become very hot during the cooking. Please use it carefully.
- Please do not use hard object to crash the glass panel.
- When glass panel is broken, please stop using the cooker and send it for repair.
- Please keep the air inlet and air outlet clear, when using the cooker.
- Please do not place inflammable material such as paper, cloth etc. between the cooker and the pots/ pans in order to prevent the risk of fire.
- When use the glass container cooking. Please do not put the cool pot on the panel. Otherwise the hot temperature may break the glass container.
- It is prohibited to put the plastic or paper or metal object such as knife, fork, ladle on the glass panel. They are easy to heat up and burn.
- Do not cook with an empty pot, it will cause malfunction or danger.
- Do not move the appliance while its switched on.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Clean the appliance thoroughly after use (please refer to “Cleaning and Maintenance” section).

PRODUCT OVERVIEW

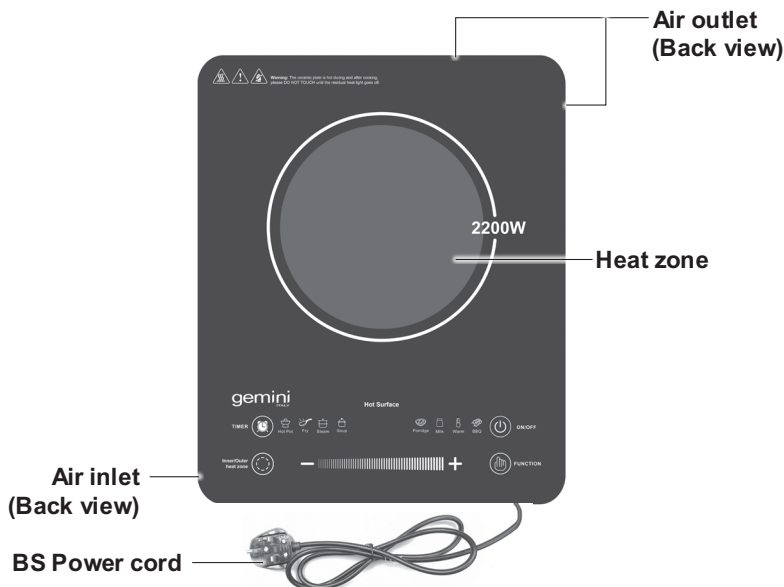


Control Panel

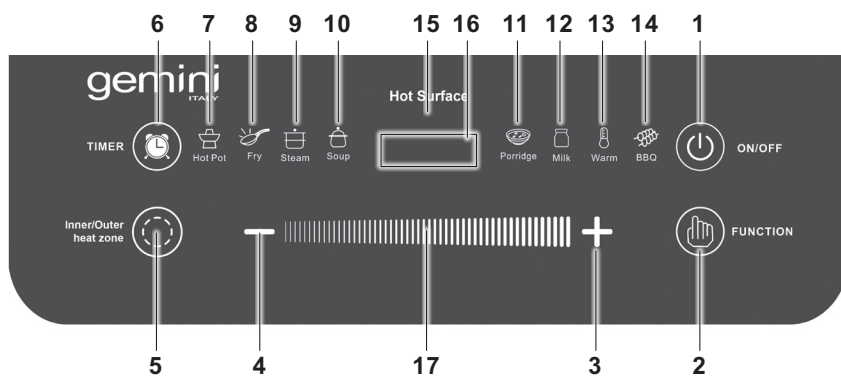 

- | | |
|--|---|
| 1. Power on/off touch button | 10. Indicating light for Soup |
| 2. Function touch button | 11. Indicating light for Porridge |
| 3. Increase touch button | 12. Indicating light for Milk |
| 4. Decrease touch button | 13. Indicating light for Warm |
| 5. Inner /outer heat zone touch button | 14. Indicating light for BBQ |
| 6. Timer touch button | 15. Hot surface indicator |
| 7. Indicating light for Hot Pot | 16. LED display |
| 8. Indicating light for Fry | 17. Increase/Decrease setting touch bar |
| 9. Indicating light for Steam | |

SELECTION OF POTS & PANS

 Applicable pots and pans with flat base and matt surface.



OPERATING INSTRUCTION

- Put the cooker on a stable platform and connect the socket to power source, a sound “Bi” is heard. And ‘----’ is shown on display and the ceramic cooker when enters into the standby mode.
- Placement of pots and pans
- Put the pots or pans on the glass panel of the cooker.
- During standby mode, press “On/Off” button to start. The LED display show ‘On’.

Hot Pot Function:

- Press the “function” button until the indicator of “Hot Pot” indicator lights up, the default power (W) is “2200” watt. Press “+” or “-” or sweep the bar “||||” to adjust the heating power.
- Can adjust the heat zone individually and provide below power heat levels,
Inner heat zone: 100, 200, 400, 550, 650, 800, 950, 1100 (watt)
Outer heat zone: 200, 400, 800, 1100, 1300, 1600, 1900, 2200 (watt)
- The cooker will shut off automatically if without any operation in 2 hours.

BBQ Function:

- Press the “function” button until the indicator of “BBQ” indicator lights up, the default temperature (°C) is “400”. Press “+” or “-” or sweep the bar “||||” to adjust the temperature level. (100, 180, 240, 320, 400, 480, 520, 600)
- Can also adjust the inner/ outer heat zone for the desired cooking, but can not adjust power heat levels.
- The cooker will shut off automatically if without any operation in 2 hours.

Tips: Under the BBQ function, suggest using a grill rack (excluded) for better cooking result.

Fry Function:

- Press the “function” button until the indicator of “Fry” indicator lights up, the default temperature (°C) is “600”. Press “+” or “-” or sweep the bar “||||” to adjust the temperature level. (100, 180, 240, 320, 400, 480, 520, 600)
- Can also adjust the inner/ outer heat zone for the desired cooking, but can not adjust power heat levels.
- The cooker will shut off automatically if without any operation in 2 hours.

Steam Function:

- Press the “function” button until the indicator of “Steam” indicator lights up, the default power (W) is “1600”. After working for 12 mins, the power (W) and LED display change to “800”.
- The power and the inner/ outer heat zone cannot be adjusted.
- The cooker will shut off automatically if without any operation in 1.5 hours.

Soup Function:

- Press the “function” button until the indicator of “Soup” indicator lights up, the default power (W) is “1900”. After working for 12 mins, the power (W) and LED display change to “800”.
- The power and the inner/ outer heat zone cannot be adjusted.
- The cooker will shut off automatically if without any operation in 2 hours.

Porridge Function:

- Press the “function” button until the indicator of “Porridge” indicator lights up, the default power (W) is “1600”. After working for 12 mins, the power (W) and LED display change to “800”.
- The power and the inner/ outer heat zone cannot be adjusted.
- The cooker will shut off automatically if without any operation in 2 hours.

Milk Function:

- Press the “function” button until the indicator of “Milk” indicator lights up, the default power (W) is “800”.
- The power and the inner/ outer heat zone cannot be adjusted.
- The cooker will shut off automatically if without any operation in 20 mins.

Warm Function:

- Press the “function” button until the indicator of “Warm” indicator lights up, the default temperature (°C) is “100”.
- The temperature and the inner/ outer heat zone cannot be adjusted.
- The cooker will shut off automatically if without any operation in 2 hours.

Timer mode:**Timer off function for Hot Pot, BBQ and Fry programs.**

- Press the “function” button, select Hot Pot/ BBQ/ Fry program, then press “Timer” button until the indicator of “Timer” lights up.
- Press “+” or “-” button to select the desired time.
- Press and hold the “+” or “-” button for 3 seconds to access quick adjustment the time.
- Timer off setting: max. 4 hours of Hot Pot, BBQ, Fry functions only.

Preset timer on function for Steam, Soup, Porridge, Milk, warm programs.

- Press the “function” button, select Steam/ Soup/ Porridge/ Milk/ warm program, then press “Timer” button until the indicator of “Timer” lights up.
- Press “+” or “-” button to select the desired time.
- Press and hold the “+” or “-” button for 3 seconds to access quick adjustment the time.
- Preset Timer on setting: max. 24 hours of Steam, Soup, Porridge, Milk, Warm functions only.

Warning: The ceramic plate is hot during and after cooking, please DO NOT TOUCH until the surface cools down.

FAULT INTRODUCTIONS

Error code:

1. When the voltage is less than 100V, it will stop working and the alarm will be on, the display shows E1.
2. When the voltage is greater than 280V, it will stop working and the alarm will be on, the display shows E2.
3. If the furnace surface is open or short-circuited, it will stop working and the alarm will be on, the display shows E3.
4. If the furnace surface temperature is too high, it will stop working and the alarm will be on, the display shows E4.
5. When the inductive sensor over-temperature or the fan does not operate, it will stop working, and the alarm will be on, the display shows E5.

CLEANING AND MAINTENANCE

- Clean the appliance after every usage.
- Switch off the cooker and unplug power cord from the socket before to clean the appliance. DO NOT clean it until the surface cools down.
- Before take out the power cord please turn off the cooker, it is prohibited to wash the cooker with water or put it into water for cleaning.
- Always remove the plug from the wall socket when the appliance is not in use.
- Clean the glass panel. Use a piece of soft wet cloth to wipe the surface and dry.
- For greasy, dirt, blot, please wipe it with a piece of wet soft cloth with neutral detergent.

PRODUCT SPECIFICATIONS

Model no.: GPC2200
Voltage: 220-240V~
Frequency: 50/60Hz
Output power: 2200W
Product dimensions: 320 (W) x 51 (H) x 390 (D) mm

* The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

閱讀下列說明事項並請妥善保管，以供日後參考。

安全指引 - 一般安全

- 請按照這些說明事項，使用本產品。
- 本產品僅供家用，不作商業用途。
- 使用前，請將所有包裝材料拆除。
- 0至8歲的兒童不應使用本產品。
- 超過8歲的兒童可使用本產品，但請勿由肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
- 請務必看顧好兒童，以確保他們不玩耍本產品。
- 兒童不應清潔或維修本產品。
- 當需進行任何維修，必須由專業維修人員進行維修。永遠不要嘗試自己修理本產品。
- 手濕時不可以接觸電源插頭或本機。
- 主機不可以浸入水中。
- 兒童不可以把玩本機。
- 本機開著後不可以無人監管。
- 只使用隨機附送的配件。

安全指引 - 電子和熱能產品

- 請把本產品放置在不平穩的表面上使用。
- 使用相符的電源和電壓，以防止觸電。
- 本產品只能使用帶接地線的電源插座。
- 當本產品不使用時，請從牆上的插座中拔掉插頭。
- 從牆上插座中拔掉插頭時，應拿著插頭而不是電源線。
- 確保本產品、電源線和插頭不與水接觸。
- 確保本產品、電源線和插頭不接觸發熱表面，如明火。
- 定期檢查本產品的電源線以確保其沒有損壞。如果電源線損壞，請勿使用其產品，並須由專業維修人員來更換，以避免出現任何危險。

 
安全指引 - 操作期間

- 使用後，請先將電源線插頭拔掉，確保爐面完全冷卻。
- 在烹飪過程中，玻璃面板會發熱。請小心使用。
- 請勿用硬物擊碰玻璃面板。
- 若發現黑晶玻璃面板破裂，請停止使用并及時送去檢修。
- 使用電磁爐時，請保持通風口暢通。
- 請勿在鍋具和電陶爐之間放置易燃材料，如紙，布等，以免發生火災。
- 使用玻璃器皿烹調時。請勿將冷鍋直接置於已熱的發熱面板上，或是將已熱的玻璃器皿放置於冷的面板上，以免溫差過大而導致玻璃爆裂。
- 禁止將塑料，紙或金屬物體（例如刀，叉，杓子）放在玻璃板上。它們很容易傳熱，以免發生事故。
- 嚴禁鍋具乾燒，以避免損害本機，鍋具及發生危險。
- 本機開啟時，請勿移動本機。
- 切勿使用腐蝕性清潔劑或鋒利的物體（例如刀或硬刷）來清潔本機
- 使用後，清潔本機（請參閱“清潔和保養”部分。）

部件示意圖




控制面板示意圖

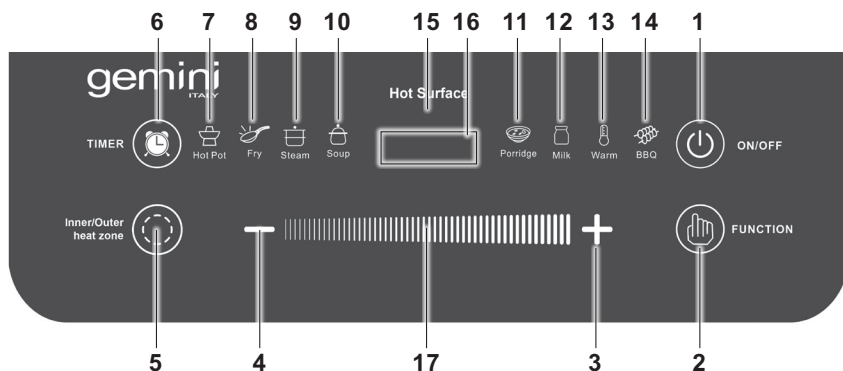

- | | | |
|---------------|-------------|-----------------|
| 1. 電源開/關輕觸感應鍵 | 7. 火鍋功能指示燈 | 13. 保溫功能指示燈 |
| 2. 功能輕觸感應鍵 | 8. 煎炒功能指示燈 | 14. 燒烤功能指示燈 |
| 3. 增加輕觸感應鍵 | 9. 蒸煮功能指示燈 | 15. 烹調區域餘熱指示燈 |
| 4. 減少輕觸感應鍵 | 10. 煲湯功能指示燈 | 16. LED顯示屏 |
| 5. 內/外環輕觸感應鍵 | 11. 煮粥功能指示燈 | 17. 增加/減少設定輕觸區域 |
| 6. 定時設定輕觸感應鍵 | 12. 熱奶功能指示燈 | |

鍋具選用

 請建議選用平底及不反光的煲具及平底鍋。



使用說明

將電陶爐放在牢固的平台上，電源線插頭接通電源，聽到“Bi”的聲音，玻璃面板上的顯示屏“----”，此時電陶爐進入待機模式下顯示。

鍋具放置

- 將鍋具放在電陶爐的玻璃面板中央上。如欲取得最佳效果，切勿用比玻璃面板大的煮食器皿。
- 在待機模式下，按“On / Off”鍵開始。LED顯示屏顯示“on”。

火鍋功能：

- 按下“功能”鍵，直到“Hot Pot”的指示燈亮起，預設加熱火力(瓦)為“2200”。按“+”、“-”或於“||||”增加/減少設定區域調較所需的加熱瓦數。
- 可自行調較內外環火力鍵供其煮食需要，如下：
內環火力：100、200、400、550、650、800、950、1100 (瓦)
外環火力：200、400、800、1100、1300、1600、1900、2200 (瓦)
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

燒烤功能：

- 按下“功能”鍵，直到“BBQ”指示燈亮起，預設加熱溫度(°C)為“400”。按“+”、“-”或於“||||”增加/減少設定區域調較所需的加熱溫度。(100、180、240、320、400、480、520、600)
- 可自行調較內外環鍵供其煮食需要，但不能調較加熱瓦數。
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

提示: 在燒烤時，建議使用網架(不包括)，以達至更佳煮食效果。

煎炒功能：

- 按“功能”鍵，直到“Fry”指示燈亮起，預設加熱溫度(°C)為“600”。
- 按“+”、“-”或於“||||”增加/減少設定區域調較所需的加熱溫度。(100、180、240、320、400、480、520、600)
- 可自行調較內外環火力鍵供其煮食需要, 但不能調較加熱瓦數。
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

蒸煮功能：

- 按“功能”鍵，直到“Steam”指示燈亮起，預設加熱火力(瓦)為“1600”。
- 工作12分鐘後，LED顯示屏的加熱瓦數下降至“800”。
- 此功能不可自行設定加熱瓦數及調較內外環火力。
- 如果1小時30分鐘內沒有任何操作，電陶爐將自動關閉。

煲湯功能：

- 按“功能”鍵，直到“Soup”指示燈亮起，預設加熱火力(瓦)為“1900”。
- 工作12分鐘後，LED顯示屏的加熱瓦數下降至“800”。
- 此功能不可自行設定加熱瓦數及調較內外環火力。
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

煮粥功能：

- 按“功能”鍵，直到“Porridge”的指示燈亮起，預設加熱火力(瓦)為“1600”。工作12分鐘後，LED顯示屏的加熱瓦數下降至“800”。
- 此功能不可自行設定加熱瓦數及調較內外環火力。
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

暖奶功能：

- 按下“功能”鍵，直到“Milk”指示燈亮起，預設加熱火力(瓦)為“800”。
- 此功能不可自行設定加熱瓦數及調較內外環火力。
- 如果20分鐘內沒有任何操作，電陶爐將自動關閉。

保溫功能：

- 按下“功能”鍵，直到“Warm”指示燈亮起，預設加熱溫度(°C)為“100”。
- 此功能不可自行設定加熱溫度及調較內外環火力。
- 如果2小時內未進行任何操作，電陶爐將自動關閉。

定時功能：

定時關機功能-火鍋/燒烤/煎炒程式：

- 按下“功能”鍵，選取火鍋/燒烤/煎炒程式，再按下定時設定鍵，當按下此鍵時數碼器顯示0:00在閃爍。
- 按“+”或“-”鍵調較所需的時間。
- 按住“+”或“-”鍵3秒鐘以進行快速調整時間。
- 定時關閉設置：只適用於火鍋，燒烤，煎炒功能，可調較最長4小時。

預設開機功能-蒸煮/煲湯/煮粥/暖奶/保溫程式：

- 按下“功能”鍵，選取蒸煮/煲湯/煮粥/暖奶/保溫程式，再按下定時設定鍵，當按下此鍵時數碼器顯示0:00在閃爍。
- 按“+”或“-”鍵調較所需的時間。
- 按住“+”或“-”鍵3秒鐘以進行快速調整時間。
- 預設開機設置：只適用於蒸煮，煲湯，煮粥，暖奶，保溫功能，可調較最長24小時。

警告：在烹飪過程中和烹飪後，陶瓷板很熱，在表面冷卻之前，請勿觸摸。

故障模式

故障代碼：

1. 當使用電壓小於100V，則停止工作並有警報提示，顯示屏顯示E1。
2. 當使用電壓大於280V，則停止工作並有警報提示，顯示屏顯示E2。
3. 爐面感應開路或短路，則停止工作並有警報提示，顯示屏顯示E3。
4. 爐面溫度過高，則停止工作並有警報提示，顯示屏顯示E4。
5. 感應傳感器超溫顯示或風扇不轉，則停止工作並有警報提示，顯示屏顯示E5。

清潔及保養

- 每次使用後，請清潔本機。
- 在進行清潔和保養時，請先將電源線插頭拔掉，確保爐面完全冷卻。
- 在拔插頭前必須先關機，切勿用水沖洗或將本產品放入水中清洗。
- 在不使用本機時，請務必從牆壁插座上拔下插頭。
- 在清潔控制面板。可用一塊濕軟布擦拭表面。
- 對於油跡，污垢，污點，請用一塊沾有中性清潔劑的濕軟布擦拭。

產品規格

型號： GPC2200

電源： 220~240V~

頻率： 50/60Hz

熱量輸出：2200瓦

產品尺寸：320 (寬) x 51 (高) x 390 (深) 毫米

* 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

- 型號

- 機身編號

- 經銷商名稱

- 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com



Proudly Serviced by:



太平家庭電器