

gemini
ITALY

**350ML MULTI-FUNCTIONAL
COLD & HOT HEALTHY BLENDER**

350毫升多功能冷熱養生機

Model NO. /型號: GSB350WH

400W

Before using your product for first time, please read this instruction manual carefully.
在使用本產品前，請仔細閱讀本說明書並保存好。

Safety Precautions

To prevent accidents such as electric shock, fire, burns, etc., please observe the following.

 
1. Please clean the cup body, blade, and cover in time. The blade has a sharp edge. Be careful of cuts when wiping and cleaning. Protective gloves can be worn.
2. When the product is boiled and before cooling after the work is completed, the temperature of the inside of the cup, the upper cover, the blade, and other components is relatively high. High, please do not touch it to avoid burns.
3. Do not plug or unplug the power cord with wet hands to prevent electric shock.
4. During the pulping process, do not quickly open the lid or move the product to avoid being scalded by steam or causing Overflowing of ingredients may cause burns, electric shocks, and other accidents.
5. Do not lift the whole machine with the cover to avoid the cup body from slipping off.
6. Do not use damaged power cords or plugs to prevent electric shock or short circuit from causing injury, accidents or fire. If the power cord is damaged, a special power cord must be purchased for replacement.
7. Do not add hot water above 70°C to make slurry, so as not to affect the taste or cause poor crushing and slurry overflow Wait for the exception.
8. Do not drink if the pulping is not completed. After drinking uncooked soy milk, it will be harmful to the human body.
9. Do not immerse the machine in liquid, and do not splash it with water. Do not get water into the power socket and the bottom of the cup. If water enters, please suspend use or wipe dry and dry before use to avoid short circuit or electric shock.
10. Children should be taken care of to ensure that they cannot play or approach the product to avoid burns or personal injury caused by misoperation.
11. Only with the company of an experienced guardian or coach can people with abnormal or no independent behavior use this product.
12. Before use, please confirm that the local power supply should be consistent with the power supply marked on this product, otherwise it will cause product damage or fire.
13. Please operate on a stable water platform and stay away from the edge of the platform to prevent bumping.
14. Do not use this product under or near curtains and other flammable materials, otherwise it may cause a fire.
15. The cover is rotated and fastened to the cup body, and the power cord is inserted into the power socket. Please make sure to install it in place to prevent loosening, power failure or overheating.

16. When the product is working, keep a certain distance from live objects such as sockets, keep the plug within reach, and keep away from flammable and explosive materials. At the same time, the grounding wire of the power socket must be well grounded.
17. After the product starts working, if there is a power failure or other abnormalities, please pay attention to replace the ingredients and re-make it, otherwise it will cause problems such as paste bottom, slurry overflow, and alarm.
18. After the production is completed, please cut off the power first, and then pour the slurry to avoid electric shock due to the movement of the cup body and the inaccessibility of the wires.
19. The temperature of the freshly made beverage is relatively high. Please use high temperature resistant utensils to store it and pay attention to safety to prevent scalds caused by splashing of the beverage.
20. If you need to filter, please pay attention to the high temperature of the residue attached to the filter. When cleaning the filter, do not face people and pay attention to safety to prevent the residue from splashing and causing burns.

Use tips:


1. This product is for household use, please do not use it for commercial purposes.
2. Some ingredients contain natural pigments, which may cause staining of the upper lid.
This is a normal phenomenon and does not affect the drink. Please rest assured that it will not damage your health if you drink it.
3. In order to fully smash and release nutrients, it is a normal phenomenon that intermittent noises appear when the machine is beating.
4. Do not make continuous pulping for a long time, otherwise the motor may start the automatic protection function, and the motor will temporarily not work. It can be used normally after the motor is completely cooled.
5. After the pulping is completed, the next pulping should be performed at an interval of more than 8 minutes, otherwise the service life of the product will be affected.
6. Infants, people with renal failure and weak gastrointestinal function should choose low-concentration soy milk or reduce the amount of drinking as appropriate.

Panel operation and function description

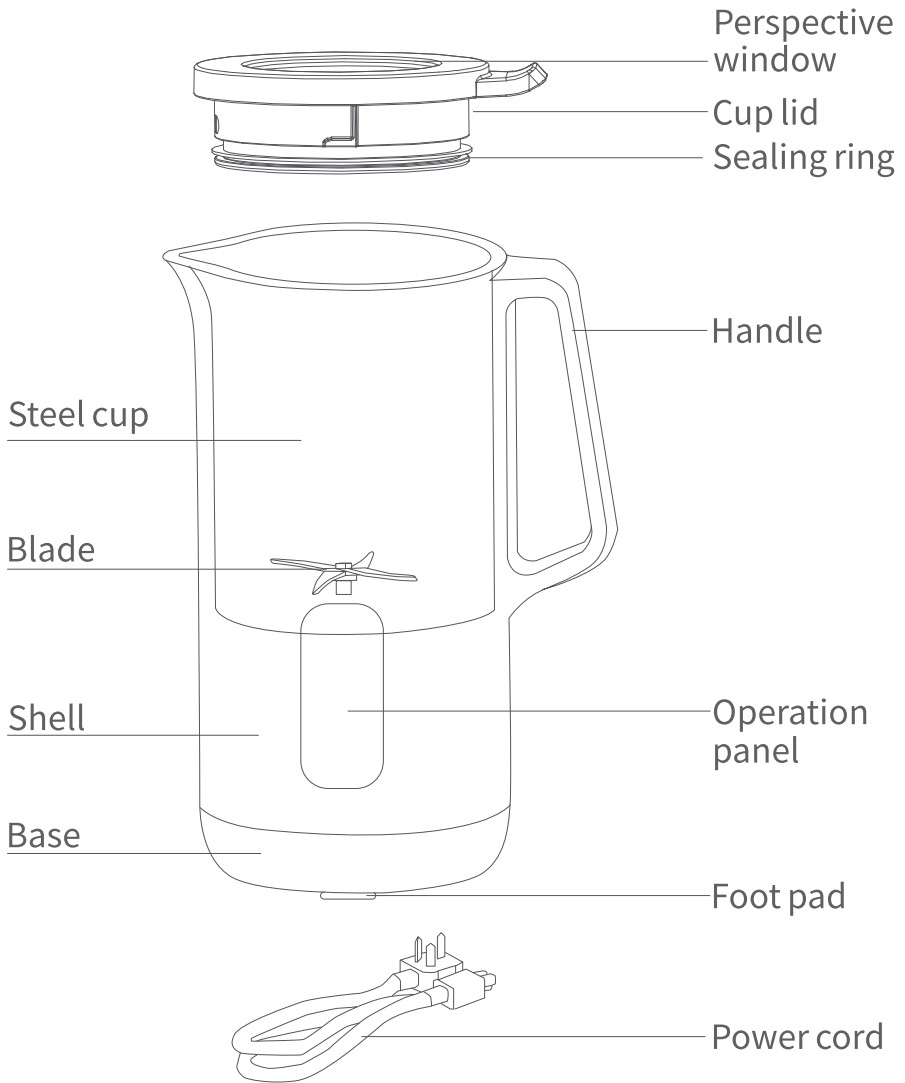


※Do not touch the blade with your hands

   
Instructions

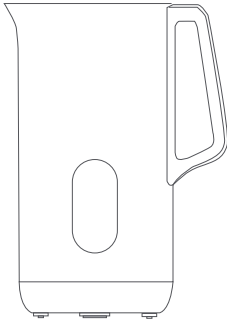


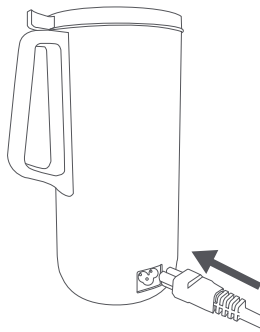 
① Please clean the inner wall of the cup and knife with clean water before use

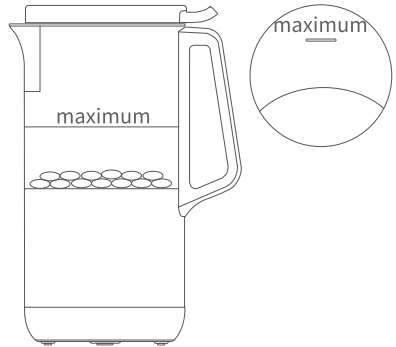


② Put the ingredients and water to the maximum water level mark

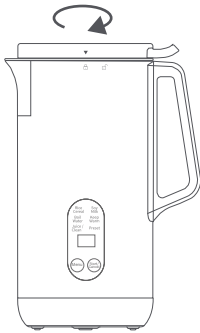

③ Install the lid, ▼ and  are aligned and the installation is successful



 ④ After installing the cover, you can plug in the power cord

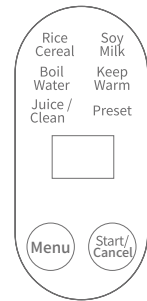


⑤ After the machine is powered on, you can press the " Menu/Start " button to select the menu

A. Use of menu function keys

Plug in the power and the indicator lights will be on for about 1.5 seconds, then enter the standby state



Click the "Start/Cancel| Menu" function key to enter the function selection state, after clicking the "Start/Cancel|Menu" function key to select the function: [rice cereal/soy milk/boil water/Keep warm/juice/clean] several The function is switched, the selected function light is flashing (other function lights are always on), the function will automatically enter the working mode after 3 seconds after the function is selected, the started function light is always on (other function lights are off), the machine automatically completes the program, and the work is finished Automatically return to standby mode, 3 buzzers.

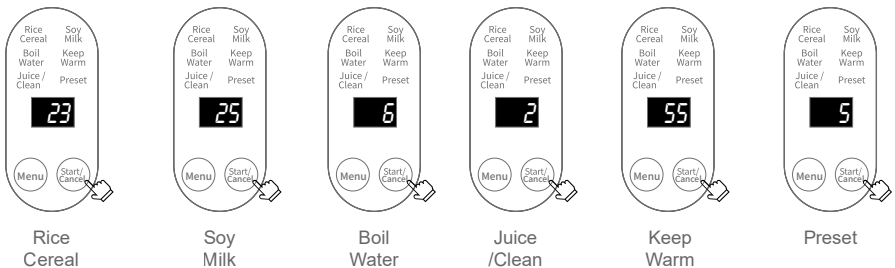 

Cancel key: Press the "Start/Cancel|Menu" function key for 3 seconds to cancel the corresponding function and return to the standby state
Shutdown: cut off the power

B. Use of the "Preset" function key

1. Select the appointment function:

In the standby mode, long press the "Preset" function key for 3 seconds to enter the Preset state, and the display shows 05 (representing 30 minutes)



2. Countdown time selection:

Click the "Start/Cancel|Function/Reservation" function key to select the countdown time (05/1H/15/2H...175/18H), in 30-minute increments, the maximum time is 18 hours, after selecting the time, press "Start/Cancel|Function/Reservation" function key for 3 seconds to confirm to enter the function selection interface (the rice cereal function light is flashing/the soybean milk function light is always on, and the other function lights are off)



3. Function selection:

Click the "Start/Cancel|Function/Reservation" function key to select the function: rice cereal, soy milk, two functions to choose (the selected function light is flashing, and the other function lights are always on) after the function is selected, the countdown counts down to 3 seconds (The buzzer will beep for a long time) to complete the appointment operation.



4. The appointment is complete:

The selected function light is always on, the other function lights are off, and the display shows the set time and starts counting down.

Note:

In order to prolong the service life of the machine, after the machine has completed two consecutive cycles, it can continue to work after at least one hour of rest.

Functions and recipes


Please use the measuring cup equipped with this product to take the ingredients. Please add the ingredients according to the amount of the recipe. Please add water to the water level mark (if the recipe has a clear water amount requirement, please follow the recipe requirement). Please process large pieces of food into the size of peanuts.

Function	Ingredients	Matters needing attention
Rice cereal (About 23 minutes)	25g of pure rice (a measuring cup), Add water to the highest water level(350ml)	Do not open the lid of the cup to add ingredients during the mixing process to avoid local burns.
Soy milk (About 25 minutes)	25g dried soybeans (a measuring cup), Add water to the highest water level(350ml)	1. Adding too much water or soybeans may cause overflow and decrease in taste; 2. Do not open the lid of the cup to add ingredients during the mixing process to avoid local burns.
Boil water (About 6 minutes)	Add appropriate amount of pure water, the highest can not exceed the water level(350ml)	1. Do not add too much water to avoid high temperature water splashing and scalding; 2. Do not open the lid of the cup during boiling to avoid local burns.
Keep warm (About 55 degrees, 12 hours)	The liquid food that needs to be kept warm should not exceed the water level (350ml)	Do not add excessive liquid ingredients, it may cause overflow and taste loss.
Juice/Clean (About 1.5minutes)	Add no more than 60 grams of fruit (need to be cut into squares no more than 1.5x1.5cm in advance) and pure water to just exceed the maximum water level (350ml) of the ingredients	If the water exceeds the fruit, the mixing effect will be affected, so do not exceed the maximum water level.
Preset	Put in the corresponding food and do not exceed the maximum water level	0.5~12 hour setting appointment, 0.5 hour increment, up to 12 hours can be set


Note:

Due to the different voltages, climates, and food ratios in different regions, they will affect the total function time. The plateau area can only be used below 1200 meters above sea level. The above time is for reference only.

 
Cleaning demonstration

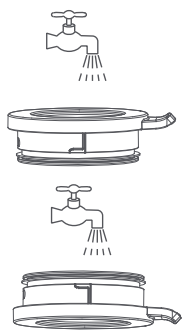

 
A. The lid can be rinsed directly inside and outside

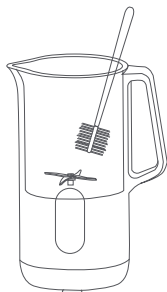

 B. The stainless steel inner wall can be cleaned with a brush

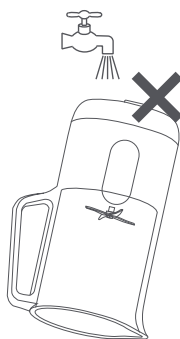

 C. The bottom of the machine cannot be washed with water

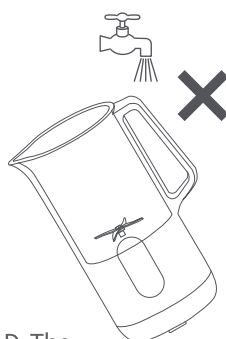

D. The handle of the machine cannot be washed directly with water

Cleaning storage

1. After cleaning, it is recommended to wipe or dry, and then assemble it into a complete machine for storage.
2. Please store the product in a dry and ventilated place.
3. Do not put it in a disinfection cabinet or dryer for disinfection or drying.
4. If the stainless steel surface such as the inside of the cup is partially discolored or bluish after pulping, this is a normal phenomenon and is harmless to the human body. Please rest assured to drink. (The phosphate ions and calcium and magnesium ions in the food will crystallize at a constant temperature and cause blueing, which can be removed by wiping with vinegar.)
5. Please wipe or dry the cleaned lid before putting it in the cup to avoid odor.
6. After the standby unit has cooled down, please clean it in time, wipe it dry or dry it, and store it in a dry and ventilated place.

Tips:

Do not use steel wool to clean the machine. It is recommended to soak in hot water and detergent before cleaning.

Simple troubleshooting

Fault code	Cause of failure	Treatment plan
The indicator light does not light up	The power cord is not plugged in properly	Insert the power cord to the end
No response to keystrokes	Cup lid is not aligned with the indicator line	Close the lid of the cup as required and align it with the indication mark
Machine not working	<u>No function selected</u> Machine failure	<u>Select the corresponding function</u> Send to after-sales service department for repair
E1	NTC short circuit	Send to after-sales service department for repair
E2	The lid is not closed or is not aligned with the indicator	Close the lid as required
E3	Dry burning of the machine, high temperature fault code	Cut off the power and stop working
<u>Unbreakable ingredients</u> Overflow pot	<u>Wrong function</u> <u>Too much or too little ingredients</u> Machine failure	<u>Choose the right function</u> <u>Add ingredients according to the instructions and recipes</u> <u>Send to after-sales service department for repair</u>
Paste pot	<u>The inside of the cup is not cleaned</u> Add too much ingredients	<u>Clean the inside of the cup</u> <u>Add ingredients according to the instructions and recipes</u>

Tips:

- 1.If the problem cannot be solved, do not disassemble the machine privately, please send it to the after-sales service department for repair.
- 2.If the above content is inconsistent with the actual product due to changes in model or parts, please refer to the actual product without prior notice. Please understand!

Precautions



warning

Failure to follow the instructions will be dangerous



Notice

Operation in violation of regulations may damage your belongings, property, and even endanger your personal safety



Notice

The product needs someone to be present during long-term operation or use. If it is not suitable for a long time, or if people leave or go out, please unplug it.

 
- Some parts are still energized during standby, which may cause a fire due to insulation cracking or leakage.



Notice

When going out or sleeping at night, the power should be cut off.

- It can avoid the fire accident caused by the aging of the line, and can save power.



Prohibit

Do not spray volatile oil, paint, or insecticide on the product.

- It may cause electric shock and fire accidents.



Prohibit

Do not allow the product to inhale or throw flammable materials and do not use it where the oil components of the machine are floating.

- It will cause cracks, peculiar smell and fire accidents.

 




Unplug

When not in use for a long time or when going out, be sure to unplug the power plug.

- Some parts are still energized during standby, which may cause fire accidents due to insulation cracking or leakage.

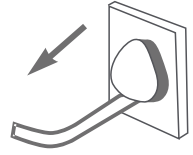

- Do not pull the power cord when unplugging, and be sure to unplug it from the plug.



No water drenching

Do not use in places with heavy humidity such as bathrooms.

 
- It will cause poor insulation, resulting in leakage or failure.



Notice

Please make sure that the power cord is plugged in before use.


- Please make sure that the plug fits tightly with the socket, and there should be no looseness or incomplete insertion.

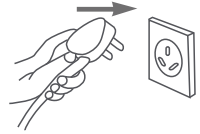

Prohibit

Do not use damaged power cords or plugs.

 
- This is the cause of electric shock, short circuit and fire.

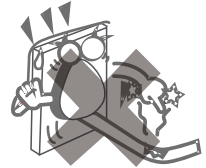

Prohibit

Do not use multi-head power cord sockets.

 - Do not use extension cord sockets or share power sockets with other electrical appliances. There is a danger of fire caused by overheating

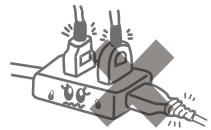



Prohibit

Do not trample on the power cord.

- Do not damage the wires and power plugs, which may cause electric shock, short circuit or fire. If the power cord is damaged, in order to avoid danger, if the power cord is damaged, you must use a special cord or a special component purchased from its manufacturer or maintenance department To replace.



No touch

Do not unplug the power cord with wet hands.

- When the power plug needs to be unplugged, do not pull out the plug with wet hands. There is a risk of electric shock.



Product Specifications

Model No.: GSB350WH

Power: 400W

Voltage frequency: 220-240V~ 50-60Hz

Maximum capacity: 350ml

Product dimension: 112(H) x 152(W) x 227(D) mm (with power base)

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

安全注意事項

 
為防止觸電、火災、燙傷等事故，請遵守以下內容。

- 杯體、刀片、蓋子請及時清洗乾淨，刀片刃口鋒利，擦拭清洗時小心割傷，可佩戴保護手套。
- 產品在煮漿時、工作完成後冷卻前，杯體內部、上蓋、刀片，等部件溫度較高，請勿觸摸以免燙傷。
- 請勿用濕手插拔電源線，以防觸電。
- 制漿過程中，請勿快速打開蓋子或移動產品，避免被蒸汽燙傷，或造成食材溢出導致燙傷、觸電等事故。
- 請勿用蓋子提起整機，以免杯體滑落。
- 請勿使用破損的電源線或插頭，防止觸電或短路造成傷害事故或火災等。電源線發生損壞，必須購買專用電源線進行更換。
- 請勿加入70℃以上熱水制漿，以免影響口感或造成粉碎不良、漿液溢出等異常。
- 制漿未完成，請勿飲用。未煮熟的豆漿飲用後，對人體會有傷害。
- 請勿將機器浸入液體中，請勿淋水。電源插座、杯體底部請勿進水。如果進水，請暫停使用或擦幹、晾乾後再使用，以免引起短路或觸電。
- 應照看好兒童，確保他們不可能玩耍、接近本產品，以免燙傷或誤操作造成人身傷害。
- 在具有經驗的監護人或教練員的陪同下，才可讓行為能力異常或沒有獨立行為能力的人使用本產品。
- 使用前請確認，當地電源應與本產品標示的電源相符，否則會造成產品損壞或發生火災。
- 請在穩定的水準臺面上操作，並遠離臺面邊緣，防止碰跌。
- 不得在窗簾及其他易燃材料下方或附近使用本產品，否則可能引起火災。
- 蓋子旋轉扣合到杯體上，電源線插入電滷座，請確保安裝到位，以防松脫斷電或過熱燃燒。
- 產品工作時，與插座等帶電物體保持一定的距離，使插頭處於可觸及的範圍，並遠離易燃易爆物品，同時電源插座接地線必須保持良好接地。
- 產品開始工作後，如遇停電或發生其他異常，請注意更換食材後重新製作，否則會造成糊底、漿液溢出、報警等故障。
- 製作完成後，請先斷電，再倒漿，以免因為杯體移動，電線接觸不了導致觸電。
- 剛製作完成的飲品溫度較高，請使用耐高溫器皿盛放並注意安全，防止飲品濺出造成燙傷。
- 如需過濾，請注意附看在濾網上殘渣溫度較高，清洗濾網時，不要對向人並注意安全，防止殘渣濺出剛燙傷。

使用提示：


- 本產品於家庭使用，請勿用於商業用途。
- 部分食材含天然色素，可能造成上蓋染色，屬正常現象，不影響飲品，請放心飲用無損健康。
- 為充分粉碎釋放營養，機器打漿時出現間歇性忽快忽慢的聲音，屬正常現象。
- 請勿長時間連續制漿，否則電機可能啟動自動保護功能，電機會暫時不工作，待電機完全冷卻後才能正常使用。
- 制漿完成後，應間隔8分鐘以上再進行下一次制漿，否則將影響產品的使用壽命。
- 嬰兒、腎功能衰竭及腸胃功能弱的人群，應酌情選擇低濃度豆漿或減少飲用量。

產品結構圖

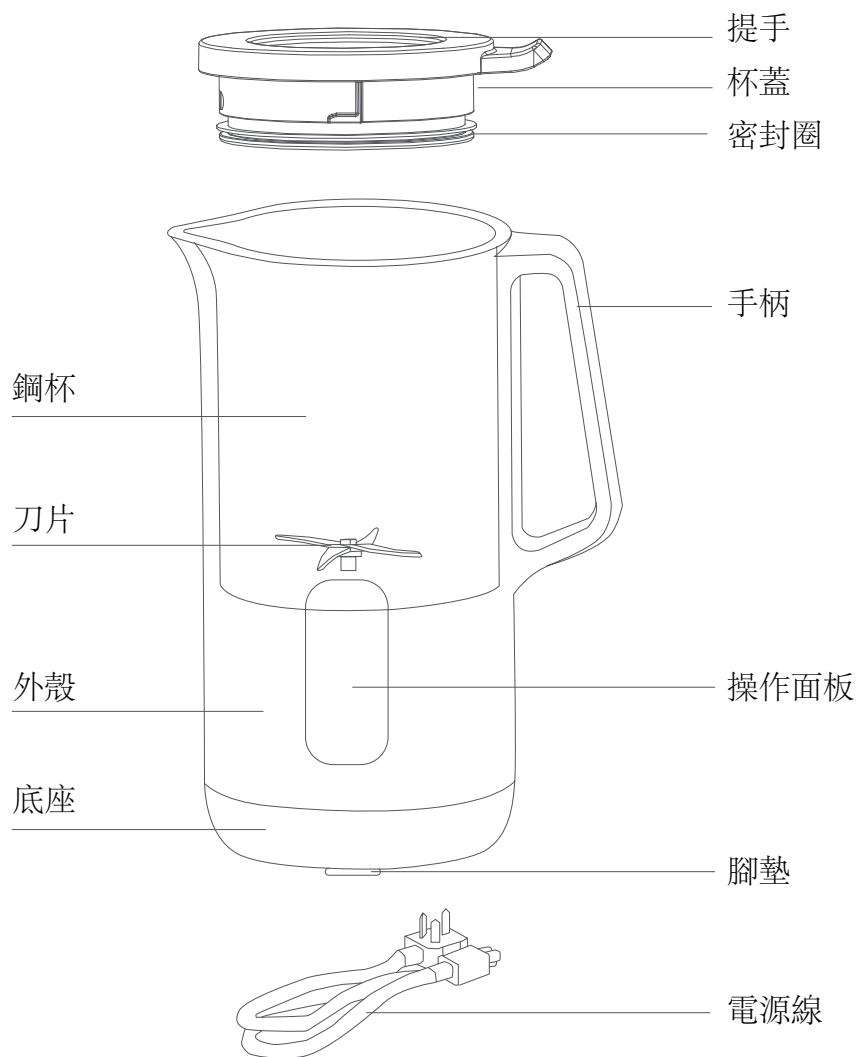


- ※ · 請取出杯體內所有物體。
- 請勿用手觸摸刀片。

 
使用說明

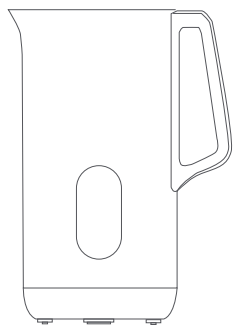


①清洗杯子內壁和刀片

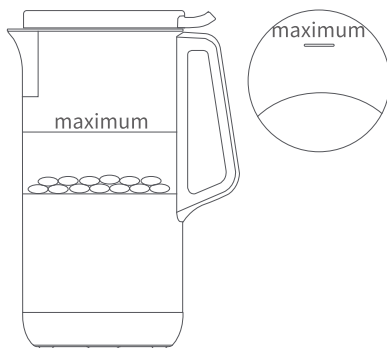 

②放食物和水至最高水位刻度線

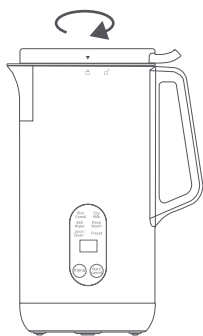 

③旋上蓋子
對準標誌

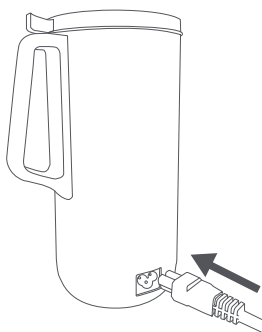 

④插上電源線




⑤選擇功能

操作步驟

插入電源顯示燈全亮約1.5秒，之后进入待機狀態。



 點擊“功能進入功能選擇狀態，經過點擊功能鍵選擇功能：米糊/豆漿/燒水/保溫/果汁/清洗/預約幾個功能進行切換，選中的功能燈閃亮(其他功能燈常亮)，選擇好功能3秒後自動進入工作模式，啟動的功能燈常亮(其他功能燈熄滅)，機器自動完成程式，結束工作後自動回到待機狀態，蜂鳴提示3聲。

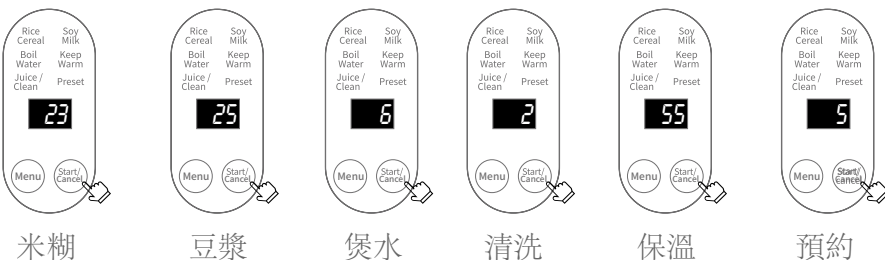

取消鍵：“長按功能鍵”3秒取消對應功能返回待機狀態。(注意：只能在功能選擇確認後取消鍵起作用，功能選擇過程中長按不能取消，確認功能超過5分鐘後不能取消，如需取消或關機需切斷電源。)

預約操作步驟

1、選擇預約功能：

在待機狀態下長按功能鍵3秒，進入預約狀態，顯示屏顯示05（代表30分鐘）



2、倒計時時間選擇：

點擊功能鍵選擇倒計時時間（05/1H//2H.....18H），以30分鐘遞增，最長時間為12小時，選擇好時間後，長按功能鍵3秒確認進入功能選擇界面(米糊功能燈閃亮/豆漿功能燈常亮，其他功能燈熄滅，)



3、功能選擇：

點擊功能鍵選擇功能 米糊、豆漿、兩種功能中選擇(此時被選擇的功能燈閃亮，其他功能燈常亮)，選擇好功能後倒計時3秒(蜂鳴器長響一聲)，完成預約操作。



4、預約完成：

被選擇的功能燈常亮，其他功能燈熄滅，顯示屏顯示設定的時間開始倒計時

注意:為了延長機器的使用壽命，機器連續完成兩次後，最少休息1個小時後才可以繼續工作。


功能及食譜

請使用本產品配置的量杯取食材，請按照食譜量添加食材，請加水至水位刻度線（食譜有明確水量要求的按食譜要求）。大塊食材請處理成花生粒大小。


功能	食材分量	注意事項
米糊 (約23分鐘)	純大米25克，加水至最高水位線（350mL）	切勿在攪拌過程中打開杯蓋添加食材，免引起局部燙傷。
豆漿 (約25分鐘)	幹黃豆25克，加水至最高水位線（350mL）	1.加入過量的水或者黃豆可能導致溢出及口感下降； 2.切勿在攪拌過程中打開杯蓋添加食材，以免引起局部燙傷。
煲水 (約6分鐘)	加入適量的純淨水最高不能超過水位（350mL）	1.切勿加入過量的水以免高溫度水飛濺燙傷； 2.切勿在煲水過程中打開杯蓋以免引起局部燙傷。
保溫	放入需要保溫的流質食物最高不能超過水位（350mL）	切勿加入過量流質食材，可能導致溢出及口感下降。
果汁/清洗 (約1.5分鐘)	加入不超過60克的水果（需要提前切成不超過1.5*1.5cm的方塊）加純淨水至剛剛超過食材，最高不能超過水位線（350mL）	如水超過水果會影響攪拌效果，切勿超過最高水位線。
預約	加入適量的食物和水最高不能超過水位線（350mL）	以30分鐘遞增，最長時間為12小時。

保養和維護

 
清洗方法

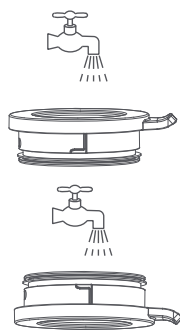


杯蓋里外可
直接沖洗

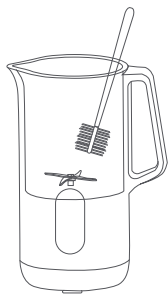 

不鏽鋼內壁
可用刷子清洗

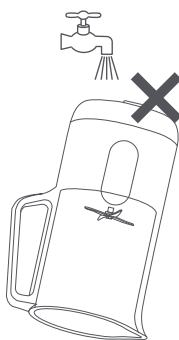 

機器底部
不能用水沖洗

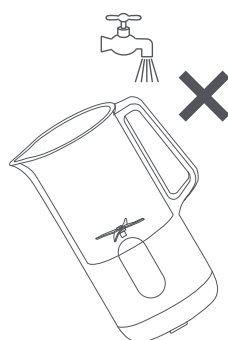 

機器把手不能
用水直接沖洗

清洗收納

- 清洗後，建議擦幹或晾乾後，再組裝成整機存放。
- 請將產品存放於乾燥通風的地方。
- 請勿放入消毒櫃或烘乾機中消毒、供幹。
- 如果制漿後，杯體內部等不銹鋼表面產生局部變色、發藍，屬正常現象，對人體無害，請放心飲用。
(食材中的磷酸離子與鈣、鎂等離子，在一定溫度條件下結晶導致發藍，可用食醋擦拭去除。)
- 清洗後的蓋子請擦幹或晾乾後，再放於杯體內，以免產生異味。
- 待機器冷卻後，請及時清洗，擦幹或晾乾後存放於乾燥通風處。

溫馨提示

- 請勿用鋼絲球清洗機器，建議用熱水加清潔劑浸泡後清洗。

故障分析及排除

故障	原因說明	對策
指示燈不亮	電源線未插好	電源線插到底
按鍵無反應	杯蓋沒有對準指示線	按照要求合上杯蓋，對準指示標識
機器不工作	未選擇功能 機器自身故障故障	選擇相應的功能 送售後服務部維修
E1	NTC短路	送售後服務部維修
E2	杯蓋沒有合上 或者沒有對準指示標識	按要求合上杯蓋
E3	機器幹燒，高溫故障碼	切斷電源，停止工作
食材打不碎 /溢鍋	選錯功能 食材太多或太少 機器自身故障	選擇正確的功能 按說明書食譜用量要求加入食材 送售後服務部維修
糊鍋	杯體內部未清洗乾淨 加入食材太多	將杯體內部清洗乾淨 按說明書食譜用量要求加入食材

溫馨提示：

- 如問題不能解決，切勿私自拆卸機器，請送售後服務部進行維修。
- 以上內容如因型號或零部件變更與實物不符，請以實物為準，恕不另行通知，敬請諒解！

機器規格

機器規格	
型號	GSB350WH
加熱功率/攪拌功率	400W/130W
額定電壓/頻率	220-240V~ 50-60Hz
容量	350mL
淨重	1080g
產品尺寸	112(H) x 152(W) x 227(D) mm

請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啓祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com