

gemini
ITALY

Multi-Functional Electric Cooker
電子多功能萬用鍋
Model No.型號：GSC500
500-550W

Before using your product for first time, please read this instruction manual.
在使用本產品前，請仔細閱讀本說明書並保存好。


SAFETY INTRUCTIONS

1. Please read these instructions carefully and retain them for reference.
2. This appliance is not intended for use by persons (including children under 8 years old) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. All the repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.
4. Use this appliance solely in accordance with these instructions.
5. Never use the appliance at outdoor or in a humid room.
6. Before start use, ensure the power supply same as indicate at the appliances. All power supply should has earth wired.
7. Appliances should place at a stable platform, and keep away from children.
8. Power cable find damage kindly contact service center to replace a new cable. Do not change yourself.
9. While selecting the features, kindly do not press the button with great force, it will damage the buttons and panel.
10. Any faulty operation, must turn off the power and unplug the power supply. Do not unplug while your hand is wet, because will get electric shock.
11. Do not pull the line along sharp object / sharp edges, crimp the wire or let it hang down. Also put away from hot heating and wet condition.
12. Do not insert any metal object into to the heat dissipation holes / gaps, otherwise it will damage and may cause electric shock.
13. Do not place the product on the surface or beside extreme heat condition, such as oven.
14. It is forbidden to use this product on an unstable/inclined platform to avoid accident such as injury or fire cause by products falling over.
15. Keep away from children or in-experienced person to operate this product.

16. While in process, it is normal the pot body is always hot when pouring water or soup out, please lift the pot by holding the handle. Do not touch the pot body with hands directly, this would get hurt.
17. Please keep the surface of the heating plate clean. After using it for a period of time, you need to clean the dirt on the surface of the heating plate.
18. The product will generate steam when it is working. It is easy to cause burns from the steam port. Please be careful while using it.
19. Do not allow liquid to flow into the product during cleaning, and to avoid danger do not allow the power cord, plug, main body, etc. to dip in the water.
20. The ceramic container is specially designed ONLY for this product and cannot be used on a naked flame.

PRODUCT REVIEW

This unit is for HOUSEHOLD USE ONLY

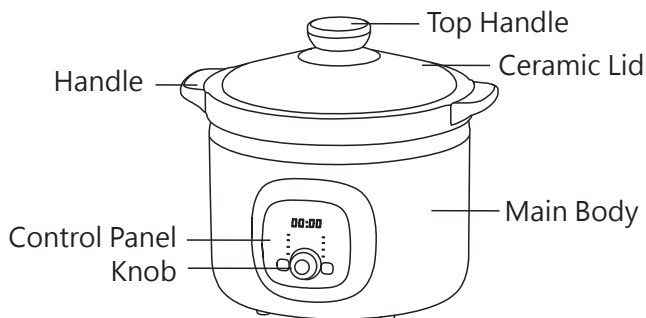

Note : The pictures are for reference only, assemblies maybe different from the picture.

PANEL INSTRUCTION



“Function & Time” Knob: Select the function and add/subtract time by rotating the knob. Press the knob to confirm the selection.


“Cancel” Button: Press this button in the operation mode, the product will stop working, the panel will display "OFF" and return to the standby mode.

“Preset” Button: Make a preset in accordance with the set function, then enter the function mode after the preset time.

USAGE

1. Preparation

- a. Put ingredients into ceramic pot and add appropriate amount of water (Do not exceed the 85% of overall capacity), then cover the ceramic lid.

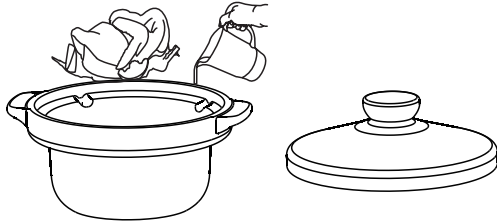

Tips: When first time to use, it might has burning smell and slight smoke, this is normal. After using for more than ten minutes, the burning smell and slight smoke will be disappeared, please clean the ceramic pot and the glass cover with clean water and detergent.

- b. Put the pot loaded with ingredients into the main body.



Tips:

1. Please place the appliance on a horizontal and stable table and make sure it is away from child.
2. Be careful of the steam to avoid burning.
3. It is suggested to stir the congee periodically to avoid stewing.

2. Preset setting

- a. Connect to power; the display shows "OFF" .
- b. Press "Preset" button, the appliance turns into preset setting mode.
Rotate the knob to adjust the preset time.

Tips: The preset time is from 0.5 - 9.5 hours.

3. Function Selection

- a. Press the knob to confirm the preset time and enter the function selecting mode.
- b. Rotate the knob and select the function, the corresponding indicator is on, and the display shows the default working time.
- c. Press the knob to select the function, and rotate the knob to adjust the working time. The appliance will start working after 10 seconds automatically.

Menu Time Instruction

Function	Default Time	Adjustable Time	Automatically Keep Warm
Soup	1 : 30	0:10-5:00	12 : 00
Bone Soup	2 : 00	0:10-6:00	
Congee	1 : 40	0:10-4:00	
Baby Congee	2 : 30	0:10-6:00	
Braise	1 : 00	0:10-4:00	
Stew	1 : 30	0:10-4:00	
Dessert	2 : 00	0:10-6:00	

Tips :

1. Please adjust the working time according to the size and nature of the ingredients.
2. If lifting the pot during working process, the appliance will stop heating, the display will show "00" and flash. The appliance will get into standby mode after 10mins.
3. For food which is easily perishable, it is not recommended to keep in Keep Warm mode for a long time.
4. Users cannot select Keep Warm function after Preset set.
5. Depends on different food types and cooking environment, please adjust the appropriate working time for your function. The table shown above is for reference only.

4. Completion

After finished cooking, it will enter to Keep Warm mode automatically. Users can also rotate the knob to Keep Warm mode directly. Please press "Cancel" button if users need to exit the Keep Warm mode. The cooker will return to standby mode.

Cleaning and Maintenance

1. After use, unplug the power cord and wait until the cooker cool down before cleaning.
2. Use soft cloth or sponge to clean the pot and make sure there is no liquid left inside. Do not wash it with water directly.
3. Do not wipe with lacquer thinner, gasoline, detergent powder, hard brush or stainless-steel wire ball to avoid damaging the surface.
4. Do not immerse the whole unit into the water. The surface of the slow cooker can be wiped by a wet cloth instead of be washed in water directly.
5. If the product cannot run well, please make sure the power plug is well plugged. If it still can't work, please call our service hotline. For your safety, do not disassemble for repair by your own.

6. Please handle the ceramic products with care and avoid placing it in a high temperature place that would reduce the product life.
7. When the product is not used, please clean it, pack it in the box, and put it in a ventilated and dry place to prevent moisture from affecting the performance of the products.

Frequently Asked Question

1. There is no display and the product cannot be used normally
 - a. Whether the power is accessible
 - b. Whether the power plug is well plugged
 - c. Whether the power socket is turned off
2. The food is not well stewed
 - a. Whether the stewing time is too short. When the room temperature is between 20°C and 35°C, please refer to the default menu time; When the room temperature is between 10°C and 20°C, please add 0.5-1 hours for cooking time; when the room temperature is below 10°C, please add 1-1.5 hours to for cooking time.
 - b. Whether the ceramic pot contains enough water and the function selection is correct.

NOTE:

If reviewed the above situations, and still cannot solve the problem, please contact our hotline. It is strictly prohibited for non-professional individuals to disassemble and assemble the product.

SPECIFICATION

Model No.: GSC500

Voltage & Frequency: 220-240V~ 50-60Hz

Power: 500-550W

Max. Capacity: 2.8 liters

Product Dimension: 310(W) x 280(H) x 286(D) mm (With ceramic pot)


***The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.**

安全指引

1. 請於操作前詳閱操作指引,避免使用不當而造成損壞或危險。
2. 8歲以下兒童、傷健人士、精神及感官受到影響及缺乏操作常識和經驗者,不適合獨立操作此產品。如需操作需有相關人士從旁指引及對其行為安全負責。
3. 如電陶瓷鍋出現問題,請聯絡代理商或合資格人士處理,不要自行進行維修以免發生危險。
4. 請遵從電陶瓷鍋上的規格表資料連接電源。
5. 此電陶瓷鍋只適用於家居室內操作,並不適用於商業用途及不要在濕度高的室內使用
6. 使用前請確保插座的正確接地,同時請確認輸入電壓為220-240V~50-60Hz。
7. 如電源線損壞,請聯絡維修部安排更換。
8. 操作按鍵時不可用力過猛,以防按鍵損壞。
9. 在使用過程中,若發生問題時,請先將電源插頭從插座上拔下;請勿濕手拔/插插頭,以免觸電。
10. 請勿以尖端物或鋒利邊沿來拽線、壓線或讓它懸垂下來,同時要遠離熱源和濕源。
11. 不要將金屬等異物插入散熱孔或間隙中,否則可能導致電路損壞。
12. 切勿將本產品放置在帶熱源的表面上或熱源旁,如焗爐。
13. 禁止放置在不平或傾斜的枱面上使用本產品,避免產品容易傾倒引起傷害或火災等事故。
14. 不要在地毯、塑膠凳這些不耐熱的表面或者附近使用,會因蒸氣受損的物體不要放置在本產品上方。
15. 本產品不適用於兒童、精神病患者或缺乏經驗的人使用或把玩本產品。
16. 產品使用過程中,其鍋身變熱是一種正常現象,當倒水時,請拿起手柄來提鍋身,切勿用手接觸鍋身的高溫表面,以免燙傷。
17. 若產品出現乾燒情況,冷卻後請往陶瓷鍋內加水或拔掉電源,切勿觸摸主機以防燙傷。
18. 請保持機器發熱板表面清潔乾爽,使用一段時間後,需清理發熱板表面的污垢。
19. 產品工作時會產生蒸氣從蒸氣口噴出易引起燙傷,請務必小心。
20. 清洗時請勿讓液體流入產品內部,也不可將電源線、插頭、整機等浸入液體裏,以免發生危險。

注意! 此產品只適合家庭用途。

部件示意圖

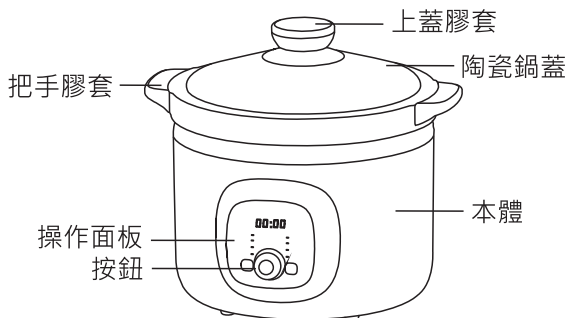

注意:如產品圖片與實物略有不同,請以實物為準。

使用步驟



“功能/時間”旋鈕：在待機狀態下，旋轉旋鈕可依次選擇相應的功能：煨湯、肉骨湯、白粥、嬰兒粥、燉煮、燜燒、甜品、保溫，選定好功能後，對應指示燈閃亮，顯示屏顯示其默認工作時間，若無其他操作10秒後自動進入工作狀態，功能指示燈變為常亮；當選定好功能後，按下旋鈕，功能指示燈常亮，顯示屏顯示的時間閃爍，再次旋轉旋鈕可調節對應的工作時間，調節好時間後，再次按下旋鈕本機直接進入工作狀態，顯示屏顯示的時間變為常亮。若調節好時間後，無其他操作10秒後自動進入工作狀態。

預約” 鍵：在待機狀態下，觸摸此鍵進入預約設置，預約指示燈閃亮，顯示屏閃亮顯示默認預約時間，旋轉旋鈕可調節預約時間，設定好預約時間後，按下旋鈕，預約指示燈常亮，功能指示燈閃亮進入功能選擇，再旋轉旋鈕可選擇所需功能，選定後對應功能指示燈閃亮，若無其他操作10秒後本機自動進入預約倒計時；當選定好功能後，按下旋鈕，功能指示燈常亮，顯示屏顯示的時間閃爍，再次旋轉旋鈕可調節對應功能的工作時間，調節好時間後，再次按下旋鈕本機直接進入預約倒計時，顯示屏顯示的時間為常亮，此時顯示的為預約倒計時。

在選定功能後，按此鍵進入預約設置，此時對應的功能指示燈長亮，旋轉旋鈕可調節預約時間，再次觸摸鍵則取消預約，回到待機狀態；若只進行預約時間設定，無任何操作10秒後，預約功能自動取消，本機進入待機狀態。

“取消” 鍵：在工作過程中或設置狀態下，觸摸此鍵本機回到待機狀態，顯示屏顯示 “OFF” 。

使用方法

溫馨提示：

- 首次使用時會有燒焦味及微煙產生，此乃正常現象。使用約十分鐘後燒焦味及微煙便會消失。請用清水加適量的洗碗液沖洗陶瓷鍋和陶瓷蓋；
 - 陶瓷鍋屬於陶瓷類易碎品，請輕放。
 - 禁止將陶瓷燉盅直接放在明火上烹煮食物。
1. 根據不同的烹煮要求，進行食材處理及相關準備。
 - ①將需要燉煮的各類食材放入陶瓷鍋內並加入適量的水（以恰好浸沒食材或略多一點為宜），蓋上陶瓷鍋蓋。（如下圖）



- ②將裝滿食材的陶瓷鍋放入機體內，並確保本機放置平穩且兒童不能觸及的位置。（如下圖）



溫馨提示：

- 陶瓷鍋放入本機中，須確保放置到位再啟動電源；
- 陶瓷鍋內食材和水的量不要超過陶瓷鍋內臺階，以免溢出；
- 煮粥或類似容易溢出的食材，水和食材的量建議為建議為陶瓷鍋的85%容量，以免溢出；
- 燉煮粥時，建議定時攪拌一下，以免煮糊。

2.預約設置

- ①接通電源，本機進入待機狀態，顯示屏顯示“OFF”。
- ②按“預約”鍵，本機進入預約設置狀態，顯示屏顯示默認預約時間，此時旋轉“功能/時間”旋鈕，可以對調節預約設置時間。

溫馨提示：

- 預約設定時間為0.5- 9.5小時。
- 容易變質的食材或天氣炎熱時，不要設定長時間預約，也不要設定長時間保溫，避免食材變質。
- 可以在選擇好功能後再進行預約設置。
- 本機工作時間=預約時間+功能程式工作時間。

例：煨湯需要燉煮2小時，希望7小時後可以喝到燉好的湯品，那麼需將預約時間設置為5小時，“煨湯”程式設定時間為2小時

3.功能選擇

預約時間設定好後，按下“功能/時間”旋鈕，進入功能選擇，旋轉“功能/時間”旋鈕選擇所需功能，此時對應功能指示燈閃亮，顯示屏顯示對應功能的默認工作時間，此時按下“功能/時間”旋鈕後，在旋轉“功能/時間”旋鈕對工作時間進行調節，確認好後10秒本機自動進入工作狀態。

功能	預設工作時間	最大工作時間	最小工作時間
煨湯	1 : 30	0:10-5:00	12 : 00
肉骨湯	2 : 00	0:10-6:00	
白粥	1 : 40	0:10-4:00	
嬰兒粥	2 : 30	0:10-6:00	
燉煮	1 : 00	0:10-4:00	
燜燒	1 : 30	0:10-4:00	
甜品	2 : 00	0:10-6:00	

溫馨提示：

- 不同食材燉煮時間有所不同，請根據實際情況進行調整。
- 不同功能加熱程式不一樣，請根據食材的大小及性質選取合適的功能。
- 如已進行預約設置，則保溫功能不可選擇。
- 如不需要預約時，可直接旋轉“功能/時間”旋鈕，跳過預約設置操作。
- “保溫”默認工作時間12小時，進入保溫開始正計時顯示。
- 燉煮過程中提起陶瓷鍋，本機停止加熱，顯示屏顯示“00”並閃爍，如10分鐘內不將陶瓷鍋放回，本機自動進入待機狀態。

4.工作完成後狀態

當烹煮工作完成後，按“功能/取消”鍵，顯示屏顯示“OF”，指示燈熄滅；不按“功能/取消”鍵，本機發出Di.....提示聲，隨後本機自動進入保溫功能，此時保溫功能指示燈常亮，顯示屏顯示保溫正計時。

清潔及保養

1. 清潔保養前，務必拔掉電源插頭，等主機冷卻後再進行清潔，陶瓷鍋不要用鋼絲球清洗。
2. 用柔軟的布或海綿擦拭本機內面，擦拭乾淨後確保無液體殘留，切勿用水直接清洗。
3. 不要用天拿水、汽油、去污粉、硬質刷或鋼絲球等來擦拭，以免破壞表面。
4. 切勿將整部機放入水中清洗，本機外表面可用擰幹的濕毛巾擦拭，不得用水沖洗，以免漏電及發生故障。
5. 使用陶瓷製品時，請輕放，以延長陶瓷製品的使用壽命。
6. 本機長時間不使用時，請清潔乾淨，裝入包裝箱中，放於通風和乾燥的地方，以免受潮，影響使用。

常見問題分析

1. 顯示屏無顯示，本機不能正常使用：
 - a. 是否停電？
 - b. 電源插頭是否插好？
 - c. 電源插座是否處於關閉狀態？
 - d. 電源線尾插與機體插座是否連接插緊？
2. 食物沒有燉熟：
 - a. 燉煮時間是否太短？
 - b. 所選功能是否正確？

備註：

經以上現象分析後仍無法排除故障，請與本公司維修點或經銷商聯繫，嚴禁非專業人員對本機自行拆裝。

產品規格

型號：GSC500

電壓：220-240V ~

頻率：50-60Hz

功率：500-550W

容量：2.8公升 (最大)

產品尺寸: 310(闊) x 280(高) x 286(深) 毫米 (含陶瓷內膽)

*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

● 型號

● 機身編號

● 經銷商名稱

● 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com

Proudly Serviced by:



太平家庭電器

订单号： BE2349

注：以下内容为审核专用，非印刷内容，请须知！

变更简要说明：		小熊电器股份有限公司	
设计	林延施	图号	DSG-B28C1(GSC500)-45-05
(校对) 业务	徐嘉宝/陈敏珠	物料名称	GSC250 说明书
(校对) 项目工程师	陆汉英	物料编码	4084100001169
批准	陈智秒	图纸版本	A 版
日期	2021年04月20日		