

gemini
ITALY

46" WIFI IONIC
TOWER FAN
46吋WIFI負離子直立風扇
MODEL NO./型號:GTFW46WH
45W

Before using your product for first time, please read this instruction manual carefully.
在使用本產品前，請仔細閱讀本說明書並保存好。

SAFETY INSTRUCTION

Thank you for purchasing this fan. This product has passed through extensive quality assurance process. Every care has been taken to ensure that it reaches you in perfect condition.

Attention! When using electric tools, basic safety precautions should be followed to reduce the risk of fire, electric shock and personal injury, including the following,

Read all these instructions before operating this product and keep these instructions for easy reference.

1. Check the voltage indicated on the rating plate. This fan is designed for a 220-240V~50-60Hz electric supply.
2. Do not use electrical extension cord with this fan.
3. Do not introduce your fingers through the front housing. Do not let children put any objects into the front housing.
4. Do not let hair, curtains, tablecloth, clothes or other objects next to the air outlet of the fan. They could be sucked into the fan, causing damage or injuries.
5. Do not use the fan having a cord or a plug damage, operation failure the fan is fallen or have been damage by any method.
6. Periodically check the electric cable of this fan. If the electric cable is damaged, it must be replaced by the After-sales Service Center or by a similar qualified person in order to avoid a danger.
7. Do not use this fan outdoor.
8. Do not use this fan in a damp area such as bathroom.
9. Do not use this fan on a window.
10. Do not use this fan with any semi-conductors speed control.
11. The fan should not be operated without a base nor used laying on its side.
12. Do not cover the electrical cord by any objects. Do not overlay the cord with little covers or such element. Place the cord in an area where there are not any risk to stumble over it.
13. The fan must be unplugged when not in-use. To unplug the fan, all the switches must be on the position "OFF", and then the plug could be disconnected.
14. Do not operate the fan in an area where gasoline painting or such flammable liquids is used or stocked.
15. Use this fan only as it is describe in this manual.
16. Do not try to disassemble this fan and fix it by user, If you need maintenance, please send back the fan to our After-sales Service Center.
17. All componets of this fan must not be replaced by the user.
18. If the supply cord is damaged, it must be replaced by the After-sales Service Center or a similarly qualified person in order to avoid a hazard.
19. The safety standard of this fan is without earth connection.
20. Keep this fan out of reach from Children or infirm persons and do not let them use the fan without supervision.

WARNING:

 
1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.

NOTE:

There are no serviceable parts in this unit. Do not attempt to disassemble.

WARNING: Never use this fan with any solid-state speed control device. Doing so will create fire and/or shock hazards.


APPLIANCE COMPONENTS

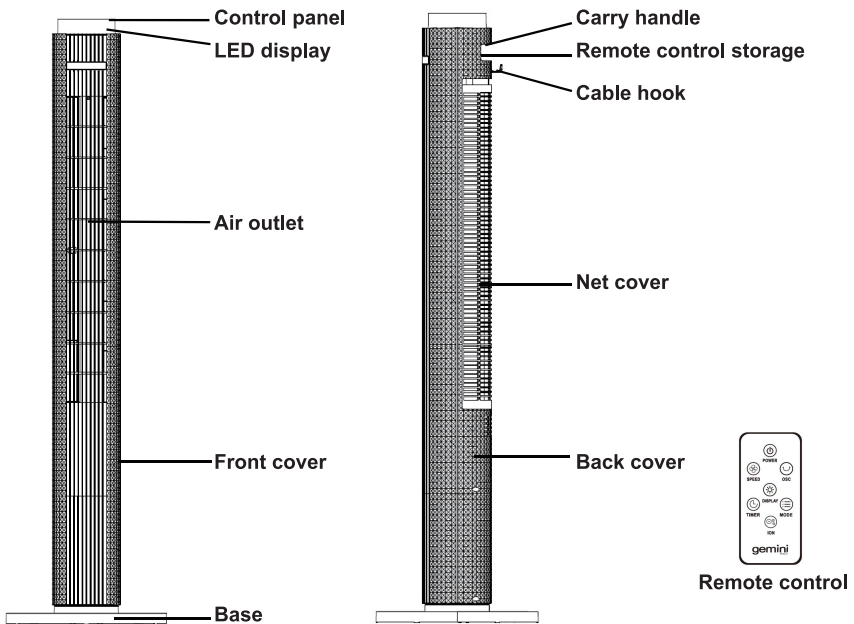

CAUTION: THIS FAN MUST OPERATE IN THE UPRIGHT POSITION ONLY. DO NOT LAY FAN ON ITS SIDE OR IN ANY OTHER POSITION. DOING SO MAY CAUSE DAMAGE TO THE FAN AND/OR PERSONAL PROPERTY. DO NOT USE THIS FAN WITHOUT ITS BASE.


FAN BASE ASSEMBLY

 1. Take out the two parts of the base from packing box. Then, align the centers of the two parts of the base and place them in a crossed form. Rotate one of the two bases to align its hole site and make it stuck correctly. (Fig 1)

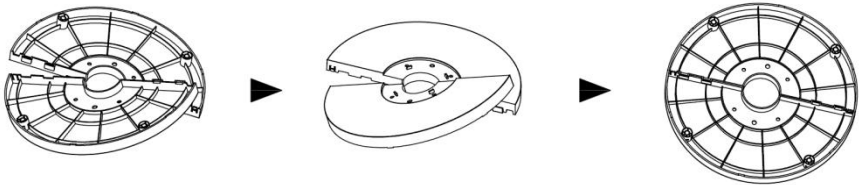

(Fig 1)

 
2. Put the wire in the recess, then fix the base on the fan body with four screws (included), and turn the screws clockwise. (Fig 2)

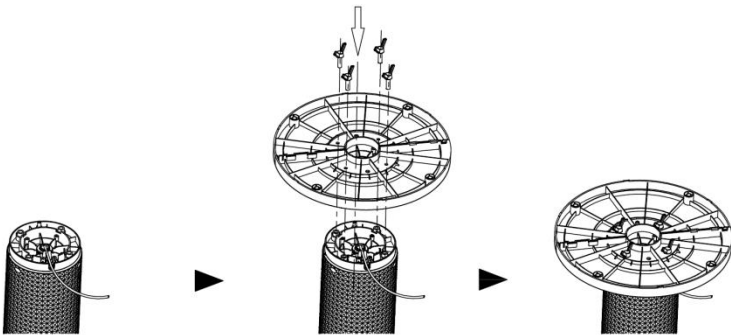


(Fig 2)

REMOTE CONTROL

 1. The remote control can be stored at the back storage slot of the fan.
2. Before using the remote control, remove the plastic protection from the battery.
3. A button cell battery is included. (Battery type: CR2025).
4. The Remote Control button is labeled as such(Fig 3). All the functions performed with the Remote Control work identically to the Manual Controls.

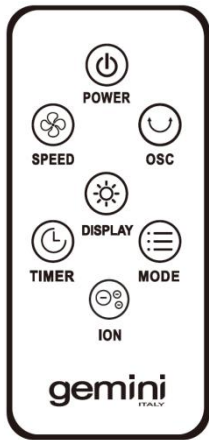


Remote control (Fig 3)

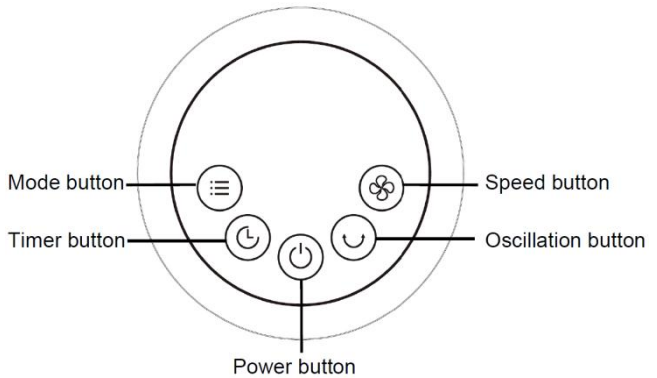 


Top Control Panel (Fig 4)

 OPERATION

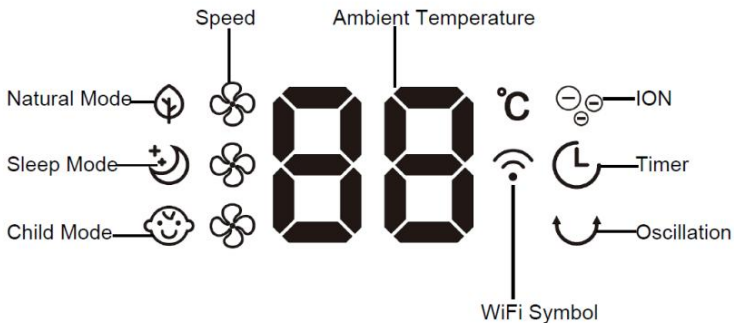



LED Display(Fig 5)


The FAN may be operated by the manual controls located on the FAN (Fig 4) or by your remote control. (Fig 3)


1. Place the FAN on a stable flat surface. Plug the cord set into a **220-240V~** electrical outlet. Plug on the FAN, WiFi symbol will blink and displayed at LED display.
2. **POWER**  : Turn the FAN on by pressing the '**POWER**' button; Turn


the FAN off by pressing the '**POWER**' button again.


3. **SPEED**  : You can adjust the fan speed to the desired level: low, medium, or high by pressing '**SPEED**'. The speed setting is displayed on the LED display. (Fig 5)
4. **MODE**  : Pressing the '**MODE**' button will set the FAN into **NORMAL**, **NATURAL**, **SLEEP** and **CHILD** mode.


- **NORMAL Mode**: The default mode is normal mode. Fan will start work at any speed you set up.


- **NATURAL Mode**  : Fan will start work at low speed(5s)→medium speed(5s)→high speed(5s)→medium speed(5s), it works as per this recycle.


- **SLEEP Mode**  : 1) If you set the fan at high speed, fan will work at high speed at 30 mins, then the fan will transfer to medium speed and work at 30 mins, later the fan transfer to low speed and keep working until the fan stops working. 2) If you set the mode at medium speed, fan will work at medium speed at 30 mins, then the fan will transfer to low speed and keep working until it stops working. 3) If you set the mode at low speed, fan will work at low speed until the fan stops working. The LED display will turn off if you don't control the fan in 30 seconds, touch any button to turn on the display.

- **CHILD Mode**  : Fan will auto. set up timer at 3 hours and oscillation function will start. The fan will work at high speed for 15 minutes, and it will transfer to medium speed at 15 minutes, then it will transfer to low speed until it is turned off automatically. You can turn off "oscillation function" manually. The LED display will turn off if you don't control the fan in 30 seconds, touch any button to turn on the display.

 
5. **TIMER** : The fan is equipped with a timer that allows you to set its length of operation from 1 hour to 12 hours. The LED display will turn off if you don't control the fan in 30 seconds, touch any button to turn on the display.

6. **OSCILLATION** : Pressing the **OSCILLATION** button will start and stop the oscillation function. The symbol is displayed on the LED display.

7. **DISPLAY**  DISPLAY: Can be switched off temporarily by pressing the LED button on the remote or by pressing and holding the **SPEED** button on the control panel for more than 3 seconds, the display will light up again once any control button is activated.

8. **IONIZER**  ION: Pressing the '**ION**' button on remote control or pressing the **MODE** button on the control panel for more than 3 seconds will start and stop the Ionizer function. The '**ION**' symbol is displayed on the LED display.


9. **CABLE HOOK**: The cable hook is packed in the user manual, take it out and install on the back side of the fan. The power cord can be hung at the cable hook when the fan is not used. (Fig 6)

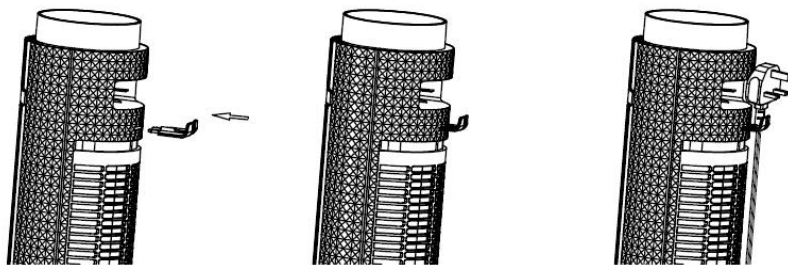

(Fig 6)

NET COVER AND WIND WHEEL CLEAN & ASSEMBLY

 
1. Always disconnect the fan from the mains by switching it off and removing the plug from the power outlet before cleaning.
 2. Do not allow water to penetrate into the motor during cleaning.
 3. Use only a soft or slightly damp cloth to clean the appliance, use a soft brush to clean the air inlet. Never use solvent or abrasives. Do not use very wet substances, liquids or cloths to prevent water entering into the appliance and irreparably damaging it.
 4. Clean the air inlet grille cover, filter and air outlet grilles regularly with a vacuum cleaner if it is used frequently.
 5. To clean the net cover and wind wheel, gently remove the screw at the bottom part of the net cover by a screw-driver, push the net cover up from the buckles and take out the net cover. (Fig.7)
 6. Loosen the screw at the bottom part of the wind wheel by a screw-driver. (Fig.7)
 7. Pushing the wind wheel to top a little bit will be able to take out the wind wheel. (Fig.7)
 8. Gently remove the dust or clean the net cover and wind wheel, after the net cover and wind wheel is dry, replace them into the fan. Then, fasten the screws at the bottom of the wind wheel and back of the net cover.
 9. Wrap well and store the appliance in a dry ventilated place after cleaning.
- Note: Never immerse the appliance into the water.

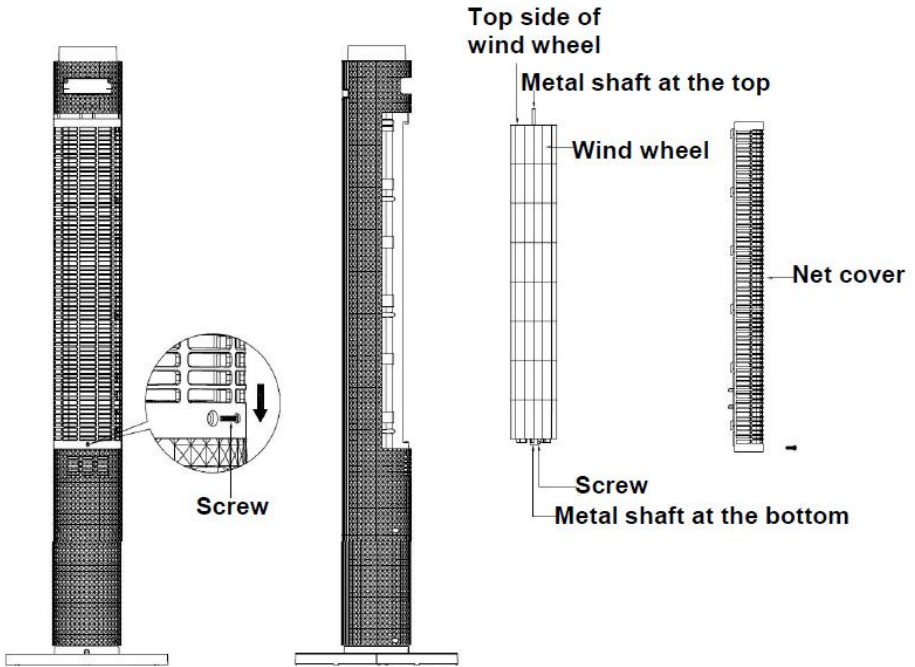

(Fig. 7)

CAUTION



The  symbol on the product means that at the end of its life, the appliance must not be considered normal waste but hazardous waste and, as such, must be disposed of in specific recovery and disposal areas, as prescribed by the EC Directive 2002/96/EC(WEEE). By disposing of this product correctly, you can prevent negative consequences for the environment and for human health, due to the presence of potentially hazardous substances in the product.

TECHNICAL DATA

Model No.: GTFW46WH

Power supply: 220-240V~50-60Hz

Power: 45W

Product Dimensions: 1170(H) x315(W)x315(D)mm (with base)

Net Weight:4.30KG

 
 
*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

WiFi Operation manual-TuyaSmart App


1. Download “TuyaSmart” APP from the APP Store from your mobile phone or scan the right QR code to download.



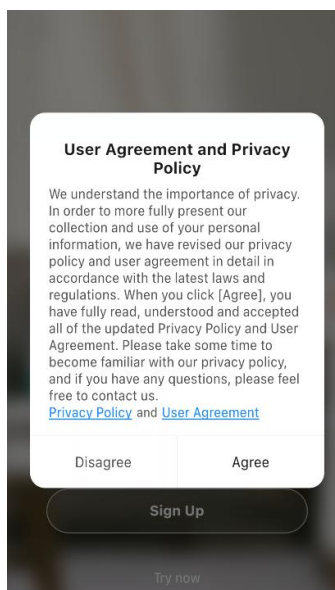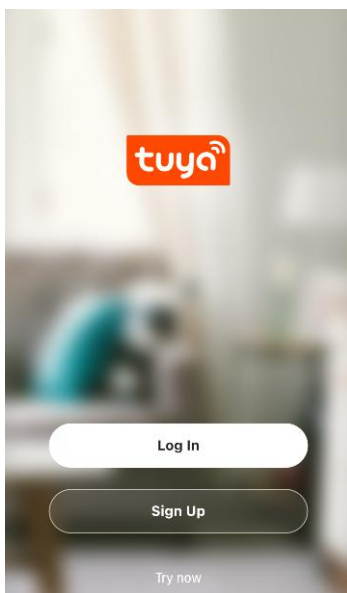

 
2. After installation, click “Sign up”. Then, agree the privacy policy and user agreement.

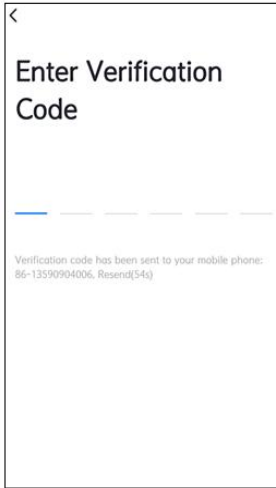

  
3. Register by entering the mobile number or email, then press "get verification code". Enter the verification code you receive, then you will need to Set Password. Click "Done" to complete it.




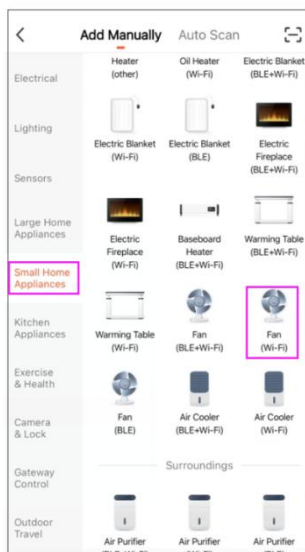 
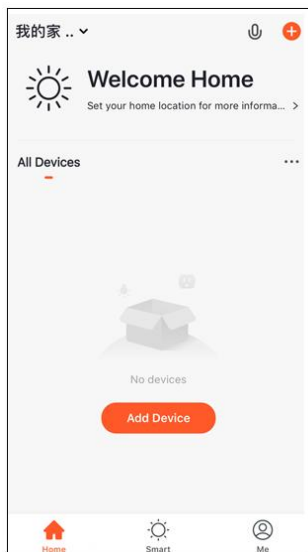 
4. When the WiFi Symbol  flashes on the LED display. The fan will be ready to connect. If no WiFi icon appears, hold and long press the oscillation button  on the control panel for 5 seconds.

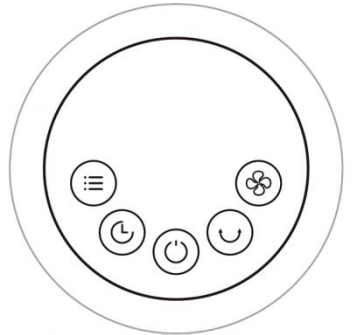


5. After login the APP, it may remind you to add the fan, click “Go to add” and add the device automatically.

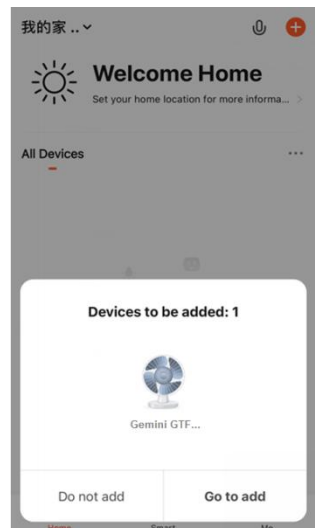


(If the APP does not remind to add the fan as the above, it can be added manually by clicking “Add Device” icon or clicking  icon at the top right corner). Go to “Small Home Appliances” and select “Fan”.



 
6. This APP is supported only on **2.4GHz Wi-Fi** network. Please ensure your phone is 2.4GHz capable. (Note: this device will only work within your home WiFi system. This does not operate on 3G, 4G or 5G internet connections.)

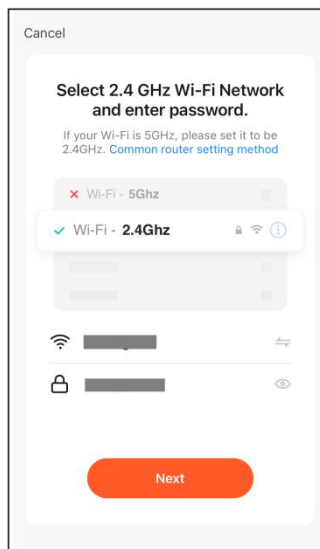

 7. Select the correct option at the right top corner. WiFi symbol can be changed to blink fast or slowly by hold and long press the OSCILLATION button on control panel of the fan.


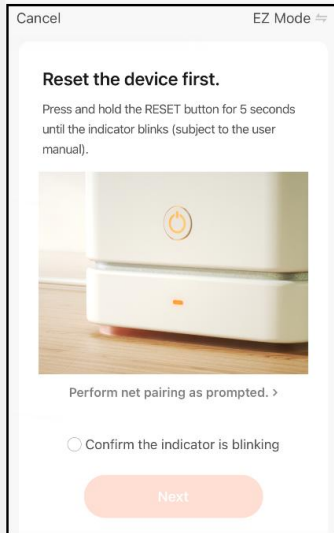


WiFi symbol blinks fast

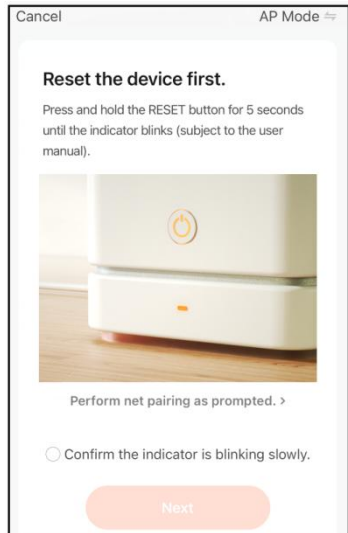 

WiFi symbol blinks slowly

  8. After adding successfully, go “Next”.

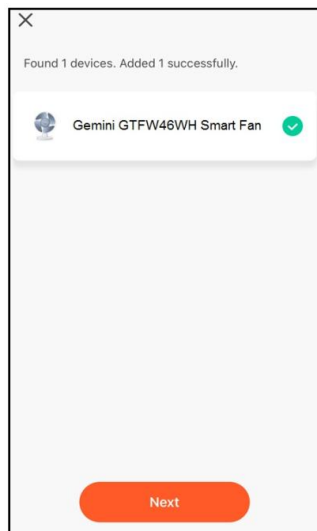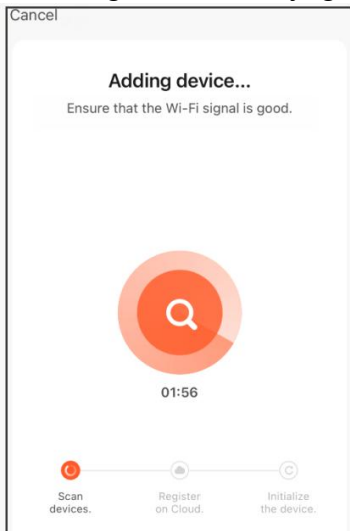

9. After connecting successfully, the WiFi symbol on the LED display will stop blinking. It may disappear for a second, and then will be always on.

10. Tap “Switch” at the left bottom, the fan (Figure 1) will be turned on as Figure 2. Fan speed can be adjusted to low (Level 1), medium (Level 2) and high (Level 3) by touching the bar. Oscillation function will be started or stopped by pressing the following icon in Figure 3.

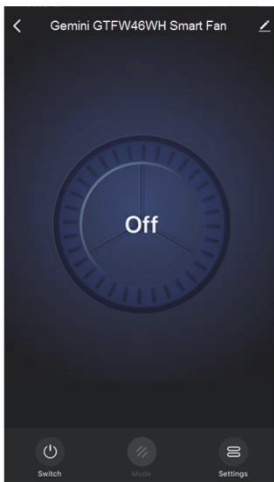 


Figure 1



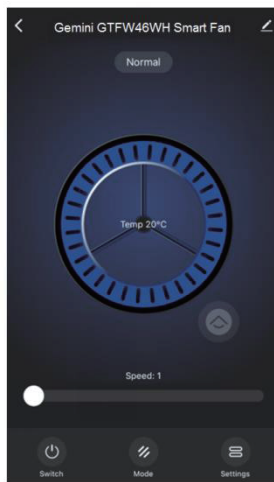 


Figure 2

 

Figure 3

 11. Press “Mode”, you will be able to choose Normal, Natural, Sleep or Child mode, and it will be shown accordingly at the top. Touch “Setting” in the right bottom, ION, Timer and Display functions can be operated.

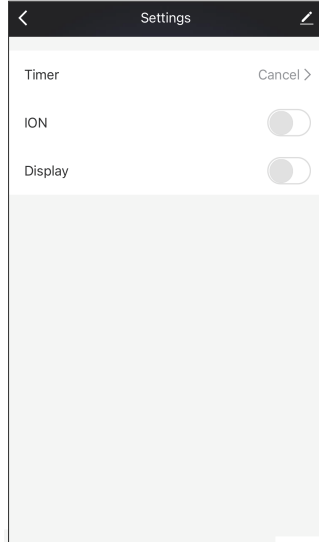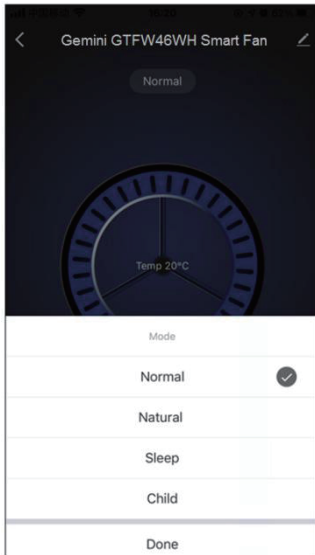

重要安全事項

注意: 當使用電動工具時, 應遵循基本的安全預防措施, 以減少火災, 觸電和人身傷害的風險, 包括以下內容:

首次操作本產品前, 先閱讀所有說明, 並保存各有指示:

1. 檢查銘牌上標示的電壓。本產品應在220-240V~50-60Hz的電力供應中使用。
2. 不要使用電源延長線。
3. 不要把你的手指穿過前方的出風口。不要讓孩子把任何異物插進前方的出風口。
4. 不要讓頭髮、窗簾、桌布、衣服或窗簾旁邊的物件放在的風扇的出風口。它們可能被吸入風扇內, 造成損壞或人身傷害。
5. 如風扇的電源線或插頭。在工作後、風扇跌落地或以任何方式損壞, 不要繼續使用。
6. 定期檢查風扇的電源線。如果電源線損壞, 必須由售後服務部或合格的電器技師更換, 以避免危險。
7. 不要在戶外使用這風扇。
8. 不要在潮濕的地方, 如浴室使用這風扇。
9. 不要在窗口附近使用這風扇。
10. 不要使用任何半導體速度控制器來控制這風扇。
11. 如沒有底座或把風扇橫放都不應操作。
12. 請勿覆蓋電源線。將電源線放於沒有任何絆倒風險下的位置。
13. 風扇不工作時, 請把插頭拔出。在拔走插頭前, 所有的開關必須是在“OFF”位置, 然後才把插頭拔除。
14. 不要在有汽油、油漆或易燃液體的地方使用。
15. 只使用本說明書中描述的方法使用這風扇。
16. 不要試圖拆開這風扇, 用戶不可以自行進行維修。如果您需要維修, 請送回售後服務中心處理。
17. 這風扇的所有部件或零件不可由用戶進行更換。
18. 如果電源線損壞, 必須由售後服務部或合格的電器技師更換。
19. 此風扇的安全技術標準是不可連接地線的。
20. 確保本風扇不可被兒童或體弱者接觸。不要讓他們在沒有監督下使用本產品。

注意:

1. 本產品不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用, 除非他們曾經接受負責安全人士的監督或指導使用此電器。
2. 成年人必須指導小孩不可把玩本電器。

 
注意:

這風扇沒有可由用戶進行更換的部分，用戶不可自行拆開風扇更換配件。

警告:

不要使用非本產品的控制器或硬物來控制這風扇，這會引致火警或觸電。

部件名稱

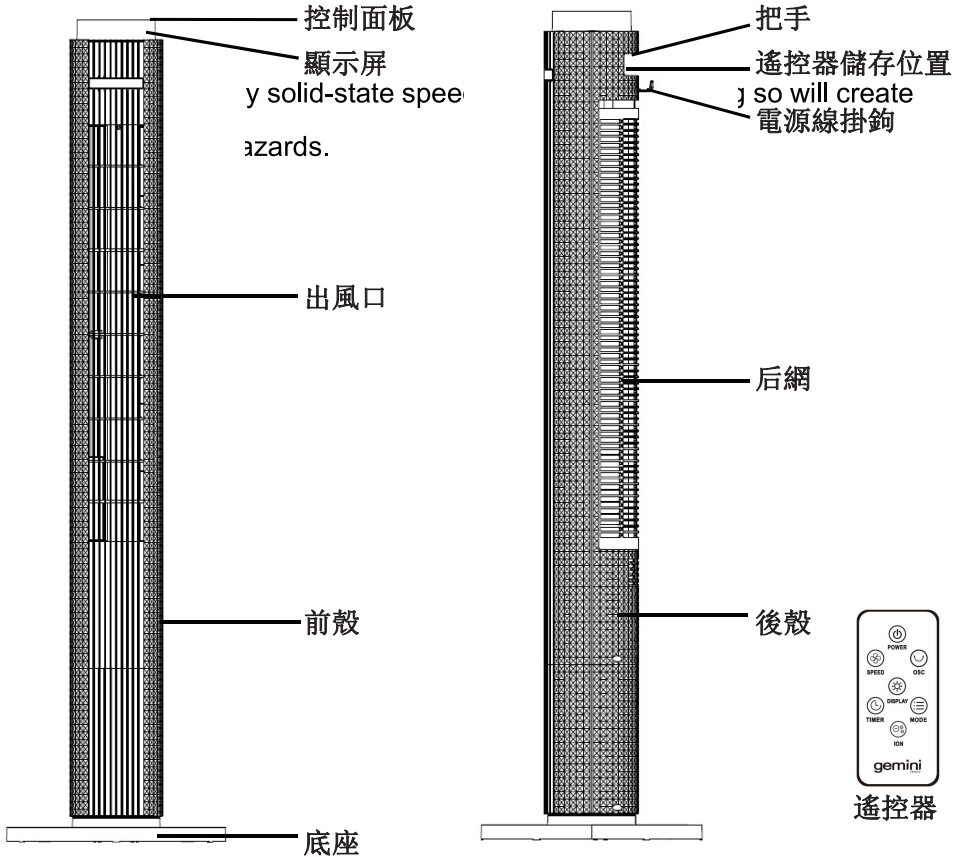


警告

該風扇僅在直立的位置使用。不要將風扇放側或打平使用。這樣做可能會對風扇造成損壞的和/或對個人造成損失。不要在沒有底座時使用這風扇。


底座安裝方法

 1. 從包裝盒中取出 2 塊底座，2 塊底座的中心對齊，呈交叉形式。旋轉其中 1 塊底座，對齊孔位並使其正確拼合起來。（圖 1）

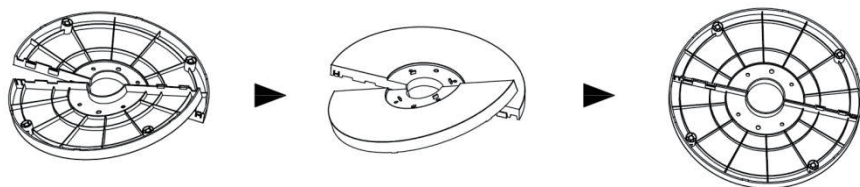

(圖 1)

 
2. 將電線放入風扇底部的凹槽中，然後用 4 個螺絲（隨附）將底座固定在風扇主體上，然後順時針旋轉螺絲。（圖 2）

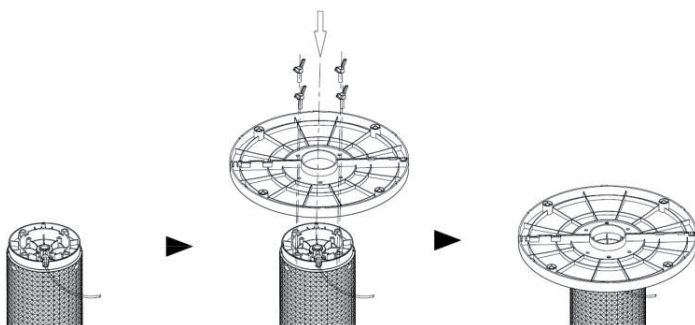


(圖 2)

遙控器

 1. 遙控器可以存儲在風扇的後部存儲位置中。
2. 使用遙控器之前，請將遙控器的絕緣片取出來。
3. 配有 1 個鈕扣電池。（電池類型：CR2025）
4. 遙控器按鍵如圖所示（圖 3）。所有遙控功能都與控制面板手動控制功能一致。

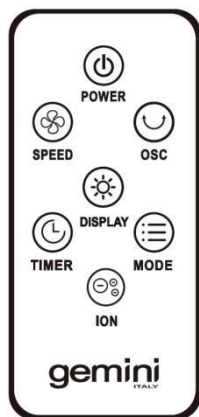


遙控器 (Fig 3)

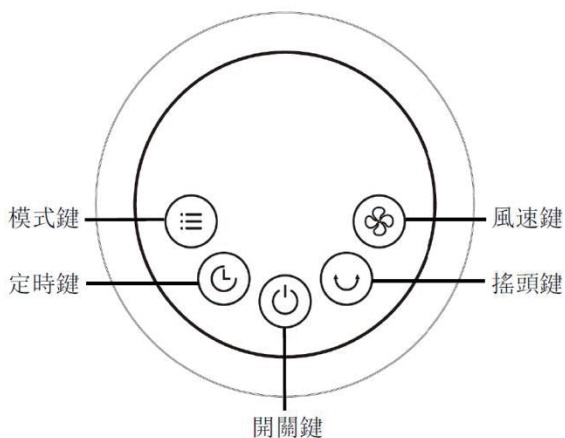 


控制面板 (Fig 4)

 
使用方法

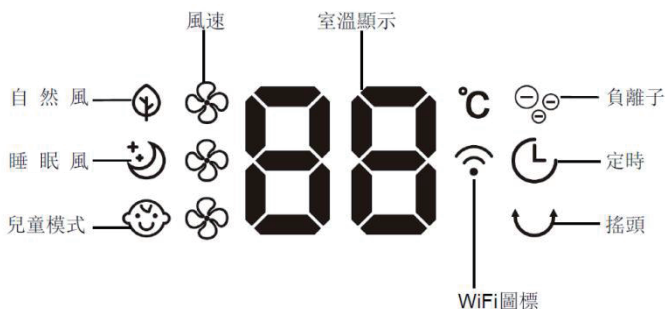


LED 顯示屏 (Fig 5)


風扇可以通過風扇上的控制面板 (圖 4) 或您的遙控器操作。 (圖 3)


1. 將風扇擺放於穩固的平面上，將插頭插入 220-240V~電壓的獨立插座。
通電之後，WiFi 圖標會在顯示屏閃爍。
2. **開關** ：按開關鍵開機，再按一次便關機。


3. **風速** ：按風速鍵設定所需的風速：低、中和高檔。LED 顯示屏會顯示風速圖標。（圖 5）





4. **模式** ：按模式鍵可以設定送風模式：正常風、自然風、睡眠風和兒童模式。

 
-**正常風**：風扇默認的模式是正常風，風扇將以您設置的速度開始工作。

-**自然風** ：風扇將以低速（5 秒）→中速（5 秒）→高速（5 秒）→中速（5 秒）開始工作，按這個模式循環。

-**睡眠風** ：1) 如果設置的風速是高檔，風扇將在高檔運行 30 分鐘，然後自動降到中檔運行 30 分鐘，然後降到低檔，並一直運行關風扇為止。 2) 如果設置的風速是中檔，風扇將在中檔運行 30 分鐘，然後降到低速並持續在 1 檔運行。 3) 如果設置的風速是低檔，風扇將以低速工作，直到關掉風扇。如果 30 秒內不控制風扇，LED 顯示屏將會熄屏，請觸摸任何按鈕以點亮顯示屏。

-**兒童模式** ：風扇將自動設置 3 小時定時，搖頭功能也會開啟。風扇將在高檔工作 15 分鐘，然後轉到中檔運行 15 分鐘，然後轉到低速，直到自動關閉。您可以手動關閉搖頭功能。如果 30 秒內不控制風扇，LED 顯示屏將會熄屏，請觸摸任何按鈕以點亮顯示屏。

5. **定時** : 風扇有定時功能，可設置 1 小時到 12 小時的定時時長。如果 30 秒內不控制風扇，LED 顯示屏將會熄屏，請觸摸任何按鈕以點亮顯示屏。
6. **搖頭** : 按搖頭鍵後開啟搖頭功能。搖頭圖標會顯示在LED屏。
7. **熄屏**  **DISPLAY**: 按遙控器的LED鍵或長按控制面板上的風速鍵3秒可以熄掉顯示屏的燈。按任意鍵可以點亮顯示屏。
8. **負離子**  **ION**: 按遙控器的負離子鍵，或長按控制面板上的模式鍵3秒可以開啟和關閉負離子功能。LED顯示屏也會顯示負離子圖標。
9. **電源線掛鉤**: 電源線掛鉤和說明書包裝在一起，將掛鉤取出後裝到風扇背後。風扇不使用時，可以把電源線掛在電源線掛鉤上。（圖 6）

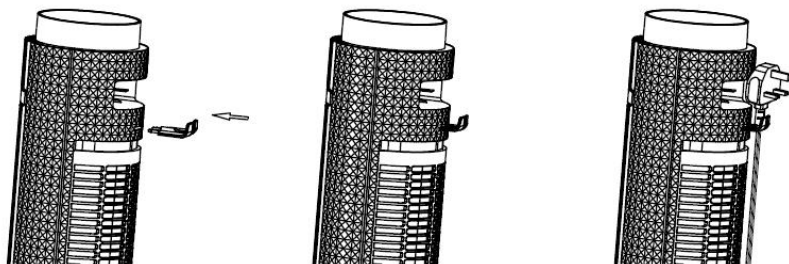


(圖 6)

後網和風葉清潔及安裝說明

1. 清潔前必須先關掉風扇並拔除電源插頭，切斷電源。

2. 清潔時切勿將此機浸於水或其他液體中。
3. 僅使用柔軟或略微濕的布清潔設備，使用軟刷清潔進風口。切勿使用溶劑或磨料。請勿使用非常濕的物質，液體或布料清潔，防止水進入風扇並徹底破壞風扇。
4. 如果經常使用，請用吸塵器定期清潔進風口塑料殼和出口風塑料殼。
5. 清潔後網和風葉前，請先用螺絲刀擰開後網底部的螺絲，把後網往上推開所有扣位，便可把後網拿出來（圖 7）
6. 用螺絲刀擰松風葉下面的螺絲。（圖 7）
7. 把風葉往上推一點，便可拿出風輪。（圖 7）
8. 輕輕地清除表面的灰塵，然後清潔後網和風葉。待後網和風葉晾乾後，把風葉和後網裝回風扇上。然後，鎖緊風葉底部和後網後面的螺絲。
9. 清潔完畢後，包好風扇，並存放在乾燥通風的地方。

 注意：切勿直接將整台機器浸入水中清潔。

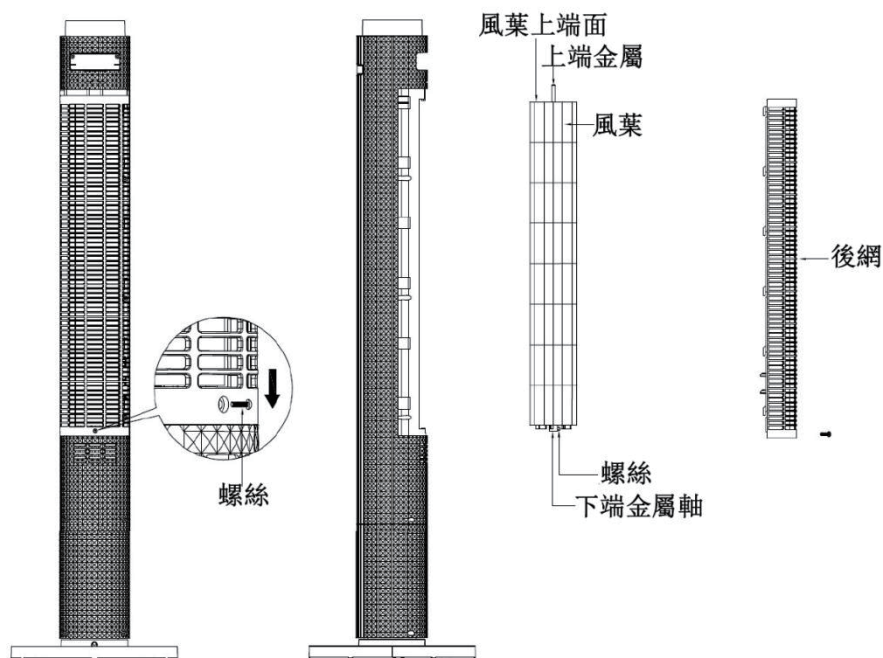

(圖 7)



此產品含有可回收材料，不可把本產品作為未分類廢物。
請聯繫就近指定回收點。

產品規格

型號: GTFW46WH

電源: 220-240V~50-60Hz

功率: 45W

產品尺寸: 1170(高) x315(闊) x315(深)毫米 (連底座)

淨重重量:4.30公斤

*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

WiFi 操作說明——塗鴉智能 APP

 
1. 請通過手機 APP 商城或掃描右邊二維碼下載並安裝塗鴉智能 APP。




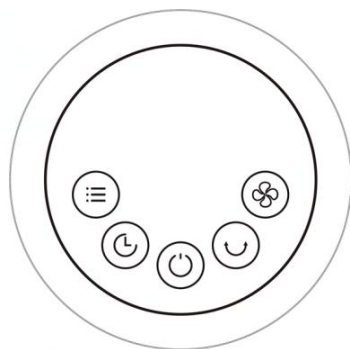 
2. 安裝完成後，註冊新賬戶。



3. 通過手機號碼或電子郵件註冊，點擊“獲取驗證代碼”。輸入收到的驗證代碼，接著設置密碼，點擊“完成”。

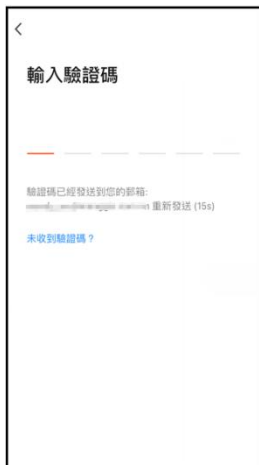


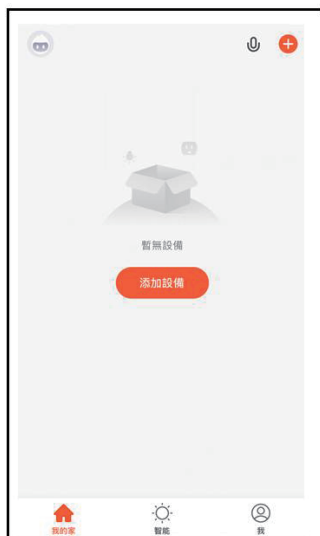 
4. 當 WiFi 圖標  在 LED 顯示屏上閃爍時。風扇可以隨時連接。如果沒有出現 WiFi 圖標，請長按 5 秒鐘控制面板上的搖頭按鍵。



5. 登錄應用程序後，它可能會提醒您添加風扇。單擊“去添加”並添加設備。



(如果 APP 不提醒自動添加風扇，可以點擊“添加設備”圖標或點擊右上角的  圖標來手動添加風扇)。選擇“小家電”，然後選擇“風扇”。



6. APP 僅支持 **2.4GHz Wi-Fi** 網絡。請確保您的手機能使用 2.4GHz Wi-Fi 網絡。
(注意：此設備只能在您的家庭 WiFi 系統中工作。無法在 3G，4G 或 5G 網絡上連接運行。)



7. 在右上角可以選擇正確的連接方式。（長按風扇控制面板上的搖頭鍵可以切換風扇 Wi-Fi 圖標快閃或慢閃）



WiFi 圖標快閃



WiFi 圖標慢閃

8. 添加成功後顯示完成。



9. 成功連接後，LED 顯示屏上的 WiFi 符號將停止閃爍。它可能會消失一會兒，然後始終處於常亮狀態。
10. 點擊左下方的“開關”，將風扇（圖 1）打開為圖 2。風扇速度可以通過觸摸欄來調整到低檔（1 檔），中檔（2 檔）和高檔（3 檔）（圖 3）。按下圖 3 中的以下圖標將啟動或停止搖頭。



Figure 1

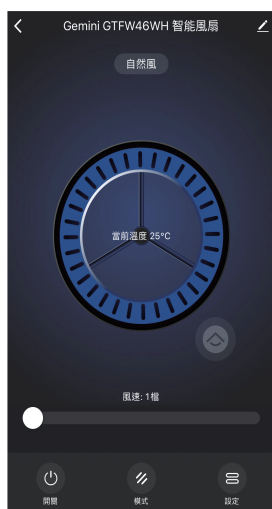 


Figure 2



Figure 3

11. 按“模式”，可以選擇正常風，自然風，睡眠風或兒童模式，並且將相應地顯示在頂部。點擊右下角的“設定”可以開啟負離子，定時功能和熄屏功能的。



請記錄下列產品資料

型號 Model No.:

機身編號 Serial No.:

經銷商名稱 Dealer:

購買日期 Date of Purchase:

單據編號 Invoice No.:

本產品不斷改進中，如功能有所更改，恕不另行通知
如有疑問，請與客戶服務中心聯絡。不便之處，敬請原諒。

The product specifications may be changed without prior notice.
Please contact customer service for details if necessary.

說明書內容以英文版本為準

If there is any inconsistency or ambiguity
between the English version and the Chinese version,
the English version shall prevail.

保養登記
Warranty Registration



於網上登記新產品保養
Register your product online
www.dchtoolbox.com

小電維修服務 - 自攜點
Repair Service - Collection Points



客戶服務中心 DCH ToolBox Customer Service Centre
香港九龍灣啓祥道20號大昌行集團大廈4樓
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

客戶服務熱線 Customer Service Hotline: (852) 8210 8210
電郵地址 E-mail: 8210service@gilman-group.com
網址 Website: www.gilman-group.com