

2.5L Smart Auto-Lifting
Multi - Functional Hot Pot Cooker
2.5公升智能升降火鍋蒸鍋
Model No: GUM15V

 
Before using your product for first time, please read this instruction manual.
在使用本產品前,請仔細閱讀本說明書並妥善保管。

Safety Precautions

- Please read the instructions and all the illustrations carefully before using this product. Keep this description for future reference.
- Before plugging in the power supply, please check whether the voltage indicated on the product (on the bottom of the electric cooker and the base unit) matches the voltage in your home (AC220, 50Hz).
- Connect the product power cord to a grounded power outlet to ensure personal safety. If there is any damage to the power cord of this product, please contact our after sales service center and it must be replaced by our maintenance personnel.
- When using this product, it should be placed on a stable platform and placed out of reach of children.
- Do not use this product on or near the surface of hot heat-resistant objects such as carpets and plastics. Do not place the items that are susceptible to steam on top of this product.
- When the product is used, a large amount of steam will be sprayed from the spout of the pot, and the steam will be carefully burned.
- Please keep the surface of the heating stain base of the machine clean. After every use, you must clean the dirt or water on the surface of the base.
- When cleaning the body of the cooker, do not immerse it in water or allow liquid to flow into the interior of the product or inside the base to avoid danger!
- If there is no water in the cooker, please do not dry-cooking, otherwise it will affect the service life of the product.
- This product has an dry boil protection function. When the temperature of the heating base is overheated, it will automatically power off.
- If you accidentally dry boiling without water during use, first unplug the power plug from the power socket, then let the unit cool for 15 minutes, then fill in cold water, the unit will automatically return to normal.
- The product must be taken care of while the boiling or cooking process. Please do not allow children to approach the cooker, and do not let the children pull the power cord or tap the electric cooker.
- Please do not immerse the power cord, plug, and the whole machine or base in water or other liquids to prevent damage to the product and electric shock.
- If the machine, base or other parts are damaged, please stop using it immediately. Please contact our after-sales service department for repair.
- Place the product on the platform or on the table to make sure that the cooker and base are not tipped over and that water does not spill into the base unit.
- When adding water to the cooker, do not exceed the maximum water mark line inside cooker. When the water volume exceeds MAX Level, the water will overflow after the boiling water boils.



Safety Precautions

- During the work process, please do not touch the Metal parts by hand to avoid being burnt.
- When using this product, make sure that the power outlet is in good contact. Do not operate the product with an extension cord.
- When pulling the power cord plug, hold the plug part. Do not forcibly pull the power cord. Otherwise, it may cause electric shock or short circuit.
- Do not connect and pull the power cord with wet hands, otherwise it may cause a short circuit or electric shock.
- Except professional maintenance technicians, please do not disassemble, repair or modify the machine yourself, otherwise it may cause fire and electric leakage.
- When the water is boiling, do not move the cooker.
- This product is for indoor use and household only and should not be placed outdoor. Do not use this product for non-designated purposes.
- The appliance can be used for children over 8 years of age and for people with physical, sensory or intellectual abilities and lack of experience and knowledge. Their use of the appliance requires supervision or guidance from safe use of the appliance and an understanding of the hazards involved.
- Adults should instruct children not to play this appliance.
- Regularly check the power cord of this product. If the power cord is damaged, it must be replaced by our after-sales service department qualified electrician to avoid danger.
- When the water is boiled several times, white water stains will adhere to the stainless steel heating plate. This is a normal phenomenon, which is caused by impurities in the water, suggesting that you use Lemon Acid to remove the stains after use.
- When cooking food, the amount of water and food should not exceed Max Line. Max Line to prevent the water from boiling out. If the water is sprayed out, immediately turn off.
- When the cooker works to boil water and cook, user need to look after when in use. When the water boils, the water spray is violent. Please shut down immediately to avoid the danger of boiling water.
- Do not place the cooker near a heat source such as a water heater, electric stove or microwave oven.
- When using the cooker, make sure that there is at least 10 cm of space on each side of the main unit to allow air to circulate.
- When not using the cooker or cleaning, please unplug the power cord first, and then cool down before disassembling the accessories.
- When using, the surface temperature of the product is very high. Do not touch the lid

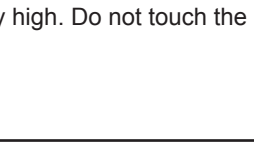


Safety Precautions

  - And Metal parts to prevent burns. When uncovering the lid, be careful to avoid the steam hole and prevent burns.
- When steaming food: First put in about 1L of water then put the basket in the cooker, press the "Hot Pot" mode, and then press the rising key, lift the top of the glass cover, cooking should not exceed 10-15 minutes, user must not leave it unattended while in use. Prevent not to dry-burn the cooker.
- Before cleaning this product, if there is a basket in the pot, please take out the basket now, switch the power to standby state, you can pick up the cooker body to cleaning.
- Do not place this product on a hot area.
- This product cannot be used for deep-fry cooking.
- Do not cook large size of food or glass and plastic utensils in the pot so as avoid danger.
- Do not store any flammable articles (such as towels, paper, etc.) in the pot, easy to cause fire, when used. No flammable articles (such as curtain, paper, etc.) should be placed around them, which can easily lead to fire. Do not put cardboard, plastic, paper and other similar flammable articles in the pot heating, do not use accessories not supplied with this cooker.
- Do not use accessories not supplied with this cooker to avoid danger and cause injury.
- When the cooker not in use or before cleaning the product, must not plug-in.
- When boiling state, it is prohibited to pick up the body during the lifting mode.
- Do not touch the glass lid and steam hole outlet position and glass surface by hand during cooking to avoid scalding.
- The product with a "warning" sign, please pay attention to compliance before use.

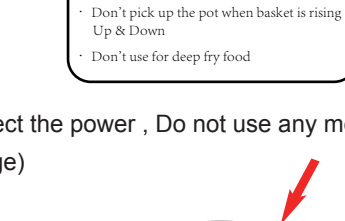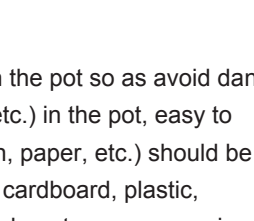


 - After connect the power, Do not use any metal to touch the coupler (electrified in below image)

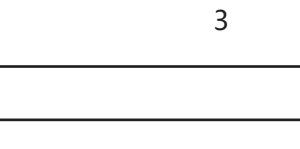


Safety Precautions

 
- It is not allowed to lift the pot when the basket is rising up.

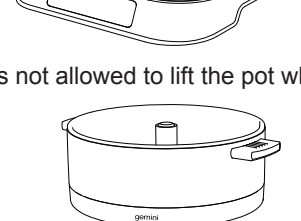

 - It is not allowed to lift the pot when cooking.

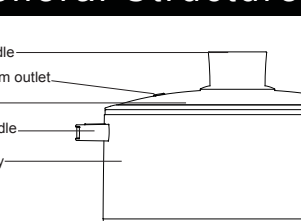

General Structure


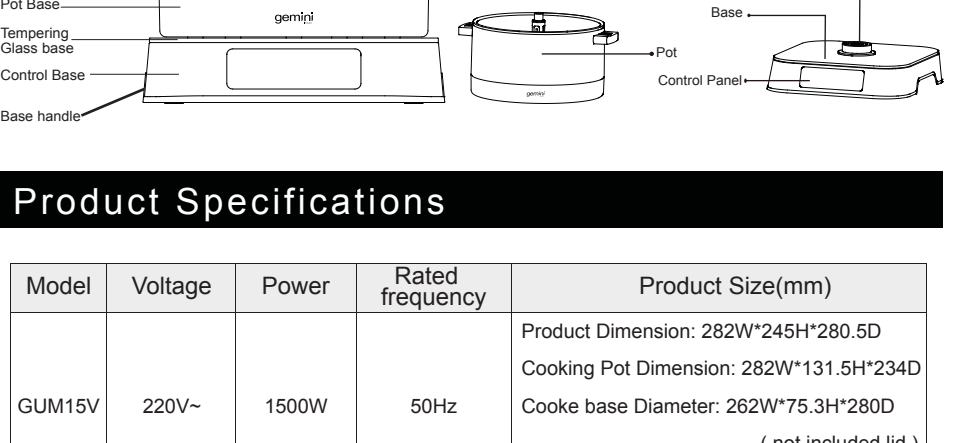 


Product Specifications

Model	Voltage	Power	Rated frequency	Product Size(mm)
GUM15V	220V~	1500W	50Hz	Product Dimension: 282W*245H*280.5D Cooking Pot Dimension: 282W*131.5H*234D Cooke base Diameter: 262W*75.3H*280D (not included lid) Pot maximum diameter: φ219


First time using

  - Install glass lid handle For the first time, the pot cover handle needs to be installed to the glass lid. (The installation method is shown in the figure)
- Plug in to power source The power indicator light will flashing

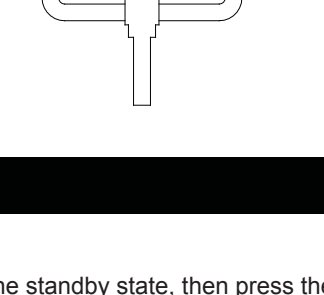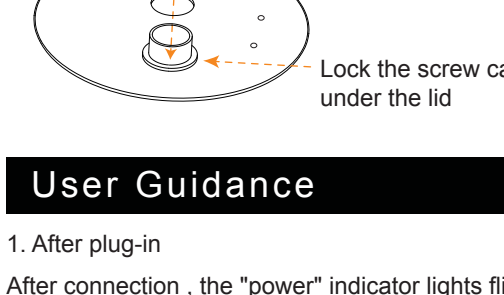


User Guidance

 - After plug-in After connection, the "power" indicator lights flicker into the standby state, then press the "power" key and start the working state.

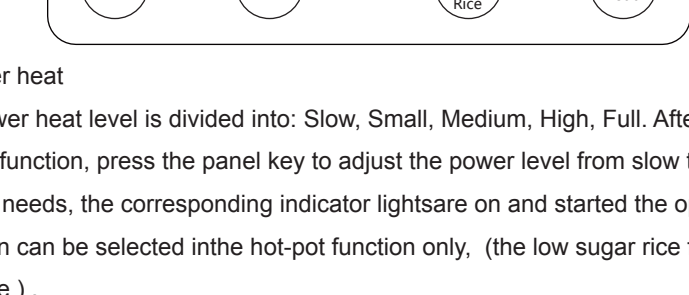


 - Power heat The power heat level is divided into: Slow, Small, Medium, High, Full. After selected the Hot pot function, press the panel key to adjust the power level from slow to full according to your needs, the corresponding indicator lights are on and started the operation. Power selection can be selected in the hot-pot function only, (the low sugar rice function is not available).

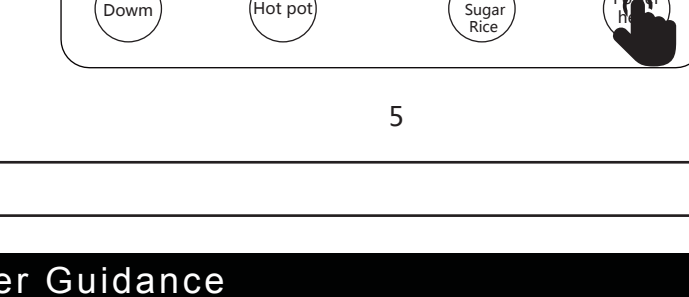


User Guidance

 - Rise up the basket (Hot pot function) Under the Hot pot function, the basket can be rise Up, according to your needs. If you need to rise up the basket, press "Up" key once, its indicator is ON while is rising Up. The indicator is OFF once the movement is completed. You may also set the travel distance by pressing "Up" or "Down" key again to stop the movement. (the low sugar rice mode is not available).

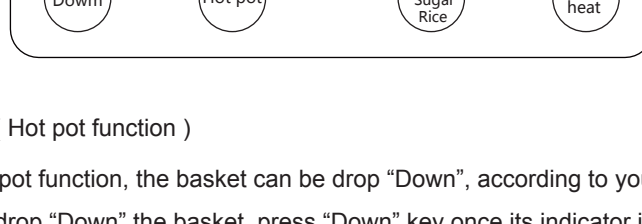

- Drop down (Hot pot function) Under the Hot pot function, the basket can be drop "Down", according to your needs. If you need to drop "Down" the basket, press "Down" key once, its indicator is ON while is dropping down. The indicator is OFF once the movement is completed. You may also set the travel distance by pressing "Down" or "Up" key again to stop the movement. (the low sugar rice mode is not available).

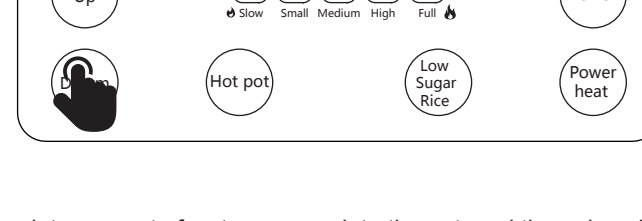 


- Hot Pot First take appropriate amount of water or soup into the pot, and then place basket inside the pot, the highest water capacity plus food must not exceed the MAX line of the pot, then cover the pot lid. Do not put meat or ingredients in the dropping down movement, causing the bottom of the pot to stick to the ingredients or meat. Place basket first, and then add meat or ingredients on the basket. Press power to turn the machine on, select hot pot mode the Hot pot light on. The heating process will start working, and after the water boils, you can adjust the power heat by pressing the "power heat" key the indicator light will on. (Slow, Small, Medium, High, Full.) You can select the heat mode from Slow to Full

User Guidance

- by each press on "Power heat" key. At this time press the "Up" key, lift the basket to the top, you can put the food into the basket in turn, press the "down" key the LED light will on. If the power heat mode is selected in "Full" heat, when select "Up" key to lift the basket for food filling, the cooker will change to medium heat mode automatically, and after the food are added, press "down" key, the cooker will return to "Full" heat power mode. This setting is to prevent the water or soup in the pot boiling out to avoid scalding. According to the boiling time of different ingredients, press the "Up" key again, lift the basket to the top if needed.

 - Warm tips: If user cover the pot lid, the minimum water quantity in the pot shall not exceed half of the basket, so to avoid no water and dry-burn. Dry-burning to reduce product life.

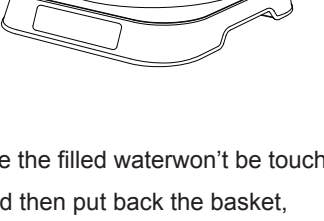

- When cooking food with soy sauce or dark color in the pot, clean it immediately after use, otherwise the pot will be stained with soy sauce color.

- Low sugar rice Fill 1.4-1.5L of clear water into the pot first, please ensure the filled water won't touch the surface of basket when it's moved to down bottom and then put back the basket, pour about 160g rice into the basket and put it on the basket, cover the pot lid, plug-in the power cord to the power supply. Select the mode of "Low sugar rice". On control panel the texture of rice is defaulted at "hard" rice LED is on. Press the same key to select (Soft Standard Hard), as the machine will starts to work after set, and the basket will automatically rise up and down during cooking. In the whole process is automatic, the buzzer will give a long sound after the rice cooking is completed, and enter the heat preservation state, the LED of the selected texture of rice will flash. When the temperature of water is lower than 80 °C, the heating element will automatically heat, keep the water temperature at 80 °C, and return to the standby state after holding for one hour. Note: you can't adjust the basket by pressing the "up" and "down" key in the "Low sugar rice" mode.

User Guidance

Menu	Cooking method	Cooking time	Rice meals
Soft	Note : To cook 160g rice, set basket drops at the bottom first, fill water of around 1.4-1.5L to the pot and must not overflow to reach the surface of the basket	Around 30 minutes	Around 3 Bowls of rice
Standard		Around 26 minutes	Around 2 Bowls of rice
Hard		Around 22 minutes	Around 2 Bowls of rice

- The above cooking time is controlled by intelligent heating through the heating element. Actual water filled in and atmospheric pressure, cooking time are for reference.
- Different brands of rice, cooked rice will have different cooking result.
- You cannot press the "up" or "down" button in the "Low sugar rice" mode.



The water content of low sugar rice is about 1.4-1.5L Or the water will not be over the basket surface after the basket falls



Cleaning and Maintenance

- Allow the machine cooled down, Please keep the glass base of the machine clean. After every use, the dirt or water stain on the surface of the cool-touch pot and glass base must be cleaned in time. At boiling and cooking process, there may dirt and water stain remains on the surface of cool-touch pot and stainless heating base after heating. It is normal phenomenon and user must clean with detergent after every use, use lemon acid to clean the water stain in cook pot regularly.
- Do not immerse the cooker in the water or allow liquid to flow into the interior of the product or inside the base when cleaning the cooker to avoid danger!
- If there is no water in the cooker, do not start any operation function includes heating and drying, otherwise it will affect the service life of the product.
- Please do not immerse the power cord, plug, and the whole cooker or machine base in water or other liquids to prevent damage to the product and electric shock.
- This product can only be used within the safe voltage range provided.
- Please do not use sharp objects or fingernails to damage the cooker.
- White vinegar cleaning scale method: use hot pot cooking food must immediately clean the pot stains and oil. Methods are as follows:

 
- Mix the daily vinegar and water in a ratio of 1:2, fill the pot (maximum water level line) and start to boil the water, and wait after boiling, turn off the power and return to standby mode
- Keep the mixture in the pot for about 30-60 minutes.
- Pour off the mixture.
- Fill the fresh water to the highest level and restart the hot pot mode for boiling.
- Pour out the water that has been boiled. Clean the pot and the surface with a towel and complete the cleaning procedure.

安全注意事項


- 使用前,請仔細閱讀說明書及所有圖解。保留此說明書以便將來參考。
- 連接電源前,請先檢查本產品所標明的電壓(在鍋體及底座裝置的底部上)是否與您家中的電壓(AC220V,50Hz)相符。若電壓不相符,請不要使用本品。
- 請將產品電源線接有地線的電源插座,以確保人身安全。本產品的電源線有任何損壞時,請將產品銷商或與在當地特種維修點聯繫,必須由本公司維修人員更換。
- 使用本產品時應將插頭固定在平面上,並放置在兒童觸摸不到的地方。
- 不要在地毯及塑膠等不耐熱的物體表面(或其附近)使用本產品,容易受蒸汽影響的物體不要置於本產品上。
- 產品使用時會產生大量蒸汽從鍋口或蒸汽口噴出,小心被蒸汽燙傷。
- 請保持本機的底座表面清潔,使用一段時間後,必須及時清理底座表面的污垢或水垢。
- 發現鍋體時請勿浸入水中或液體中避免流入產品內部,以免發生危險。
- 如果鍋中無水時,請不要乾燒操作,否則會影響到產品的使用壽命。
- 本品有自主保護功能,發熱體溫度過熱時,溫控器會斷開停止加熱。
- 使用過程中不小心使水燒乾時,電路保護功能會先使底座工作模式退出,回到待機狀態,然後讓本品冷卻15分鐘,再注入冷水,重新點按功能操作即可。
- 產品在煲水或煮食的過程中必須有人看管,請不要讓小孩接近,並且防止讓小孩拉扯電源線或鍋體。
- 請不要將電源線、插頭及鍋體或底座等浸入水裏或其他的液體中,防止損壞產品。
- 發現鍋體、底座或其他部件損壞時,請立即停止使用,請聯絡我們可獲後服務和維修。
- 在平穩的表面上放置本產品,以確保設備及底座平穩不會翻倒。
- 不要在鍋體上加水時,不可超過最高水位標志MAX,當加水量超過MAX時,從水沸騰後,水會溢出,屬於正常現象。
- 產品在工作過程中,請勿用手去觸摸鍋體金屬部分,避免被燙傷。
- 使用本產品時,必須確定電源插頭接觸良好,不可使用延長線操作本產品。
- 當電源線插頭時,請握住插頭部分,切勿用力拉扯電源線,否則可能導致觸電或短路等危險。
- 請勿用濕手觸摸及拔電源線,否則可能導致短路或觸電等危險。
- 除專業維修技術員外,請勿對機器進行自行拆卸、修理、改裝,否則可能導致起火漏電等危險。
- 當鍋體中水沸騰時,不要移動產品,避免熱水沸出燙傷。
- 本產品只作家庭用途,不能放於戶外使用,不可讓本產品作非指定用途使用。
- 該電器可適用於18歲以上的兒童及身體、感官或智力下降和缺乏經驗和知識的人。他們使用該電器需要得到安全使用說明書、警告或指示,並且理解所涉及的危險。
- 成人應檢查指導小孩不可把本產品當玩具使用。
- 定期檢查本產品的電源線,如果電源線損壞,必須由本公司售後服務部或合格的電器技師更換,以避免危險。
- 當煮水多次以後,會有白色水垢附著在不滿鍋發熱盤及塑料機身上,這是正常現象,

安全注意事項

- 這是水中的雜質所致,建議使用檸檬酸把它去除。
- 煮食及煮粥時,水量加食材不能超過MAX最高水位線,以免水沸騰噴出。如果遇到有水噴出來的狀況,請立即閉機降溫。

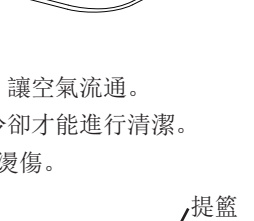

- 不要將本產品放在靠近熱水器、電爐或微波爐等熱源的地方。
- 在使用本產品時,要保證底座每一邊至少有10釐米的空間,讓空氣流通。
- 當不使用本產品時,請先待機再拔電源線插頭,要讓鍋體先冷卻才能進行清潔。
- 煮食物時,產品玻璃表面溫度非常高,不要觸碰玻璃蓋,防止燙傷。
- 蒸食物時:將產品配件提籃放在鍋體內,倒入約1L的水,在工作狀態下,點按火鍋模式,再次點單上升鍵,提籃升頂部時,蓋上玻璃蓋,煮食時間建議不超過10-15分鐘,並有人在旁看護及不可在煮食中途離開本機,以免乾燒。
- 清洗本產品之前如鍋體內有放置提籃時,請先將提籃取出,將電源指示燈回至閃爍狀態,即可端出鍋體清潔。
- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

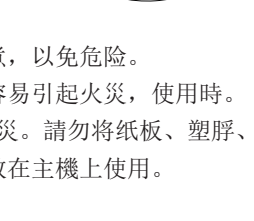 

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱,不要把非本機配備的配件放在主機上使用。
- 本產品沒有外部通風口和運轉器,不可私自安裝外網定時器。
- 不要使用時須注意,清洗前和維護產品前,插頭一定要處於未接通電源的狀態。
- 鍋體中煮完外部湯品和深紫色食物,必須要即時清潔,否則鍋體會染上醬油色等深顏色。
- 請將鍋體和底座配套使用。
- 當鍋內裝有沸騰液體時,禁止在升降過程中提拿鍋體。
- 使用過程中請勿用手觸摸玻璃蓋和蒸汽孔出口位以及底座玻璃面,以免燙傷。
- 產品上貼有"警告"標識,使用前請注意遵守。

- 請勿將本產品放置在濕熱的平面上。
- 本產品不能用作油炸煮食用途。
- 對於鍋體較大的食物或玻璃及塑膠類器皿切勿放入鍋體內煮食,以免危險。
- 不得對鍋體內存放任何易燃物品或易燃物品(如窗簾、報紙等),容易引起火災,使用時,周邊不得放置任何易燃物品(如窗簾、報紙等),容易引起火災。請勿將紙板、塑膠、紙等類易燃物品放在鍋內加熱