

gemini
ITALY

**25V Cordless
Rechargeable Water
Cyclonic Dust Mites
Vacuum Cleaner**

**25V 無線充電式
水龍捲除塵蟎吸塵機**

MODEL NO.: GWC25R



Please read and retain for future reference.

IMPORTANT SAFEGUARDS

WARNING

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance as it is not a toy.
- Children should be supervised at all times to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be performed by children.
- The appliance is only to be used with the power supply unit provided with the appliance.
- Using any other recharging unit will void the warranty.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

WARNING: The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.
- Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in the order to protect the environment.
- Regarding the detail on how to remove the battery, thanks to refer to the section "Remove the Battery (Waste disposal)" of the manual.

IMPORTANT SAFEGUARDS

- The external flexible cable of the transformer cannot be replaced, if the cord of this transformer is damaged, it is necessary to dispose the transformer and replaced by a transformer of the same model.
1. This product is intended for indoor / household use on light dry household dust and debris only.
 2. This product is designed for vacuuming small areas of dry material only; do not use for vacuuming water or other liquids.
 3. Sparks inside the motor can ignite flammable vapors or dust. Do not vacuum or use this product near flammable or combustible liquids (e.g., gasoline or other fuels, lighter fluid, cleaners, oil-based paints), gases (e.g., natural gas, hydrogen), explosive dust (e.g., coal dust, magnesium dust, grain dust, gunpowder) or any fire sources.
 4. Do not vacuum anything that is smoking or burning (e.g., cigarettes, matches, hot ashes).
 5. Never vacuum toxic materials as the vapors or dust may cause a health hazard.
 6. Do not use the machine to vacuum clean gypsum plaster, cement, etc. that can harden on coming into contact with water and can thus hamper the normal functioning of the machine.
 7. This product is not a toy. Close attention is necessary when used by or near children or pets. Never use this product on pets.
 8. Never use a damaged Vacuum or AC Adapter.
 9. Do not mutilate or incinerate the Battery Packs, as they will explode at high temperatures.
 10. Do not plug/unplug the AC Adapter into/from the electrical outlet with a wet hand.

IMPORTANT SAFEGUARDS


11. Do not place or drop the product into water or other liquids. If the product falls into water or other liquid, do not touch or reach into the water. Immediately unplug it from the electrical outlet before retrieving the product from the water/liquid.
12. Do not charge the product if the power cord is cut, damaged, or if the wires are exposed.
13. Keep the adapter cord and the product away from heated surfaces.
14. To disconnect the AC Adapter from an electric outlet, pull directly on the adapter base; do not pull on the cord.
15. Do not put any stress on the adapter cord where it connects to the product, as the cord may fray and break.
16. If using an extension cord with this product, the marked electrical rating of the cord set or extension cord must be at least as great as the electrical rating of the product.
17. Do not operate this product if it has a damaged adapter cord or plug, malfunctions, dropped or damaged, left outdoors, or dropped into water. Do not attempt to repair this product yourself. Take the defective product to the service centre for inspection and repairs.
18. To avoid the risk of electric shock, do not immerse the adapter cord, plug or appliance into water or other liquids.

IMPORTANT SAFEGUARDS

PRECAUTIONS

1. Do not use this product outdoors. For optimal operation, keep the product in a location that does not exceed 40°C. Do not store in a vehicle under the sun or near heating equipment.
2. Do not operate the product while it is charging.
3. Do not touch the rotating parts of power brush when in operation.
4. Never insert objects into any of the openings in the product. Do not use the product if any of the openings are blocked.
5. Do not use the product to vacuum metal objects such as screws, nails, tacks and metal filings etc.
6. Empty the product after each use. Keep it free of dust, lint, hair, or anything that reduces airflow.
7. Keep hair, loose clothing, and body parts away from openings or moving parts, especially the part of the product where there is suction.
8. Never place the vacuum nozzle near your face, especially eyes and ears, during operation.
9. Do not use the product without the filter and filter cover securely in place.
10. Be careful when using the product on stairs in order to prevent falls.
11. The battery charging terminals on the vacuum cleaner must be kept clean and free of debris.
12. Only use the AC/DC adapter provided with the product.

PRODUCT OVERVIEW

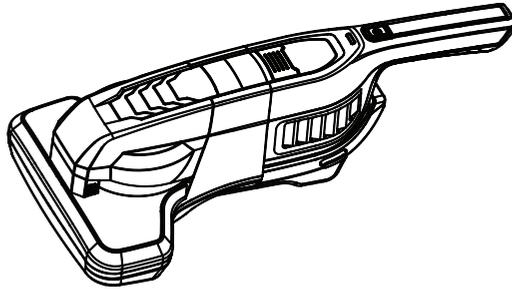

POWER UNIT

- | | |
|----|--------------------|
| 1. | ON/OFF switch |
| 2. | Charging indicator |
| 3. | Release button |

BEDDING CLEANER BRUSH


- | | |
|-----|--|
| 4. | Upper cover |
| 5. | Upper cover release buttons |
| 6. | Power unit release buttons
(2 buttons at two sides) |
| 7. | Water tank |
| 8. | Roller brush cover |
| 9. | Roller brush |
| 10. | HEPA Filter |
| 11. | Front wheels |
| 12. | Rear wheel |
| 13. | Charging port |

WATER TANK

- | | |
|-----|----------------------|
| 7a. | Water tank cover |
| 7b. | Water tank bottom |
| 7c. | Active carbon filter |
| 7d. | Tube head |

HEPA Filter Body

- | | |
|------|------------------|
| 10a. | HEPA Filter body |
| 10b. | HEPA Filter |
| 10c. | Filter handle |

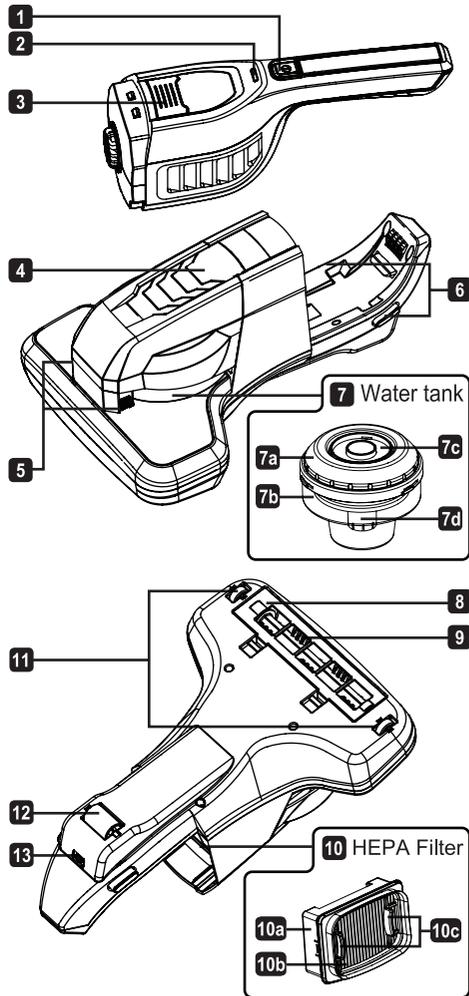


ASSEMBLY & OPERATING INSTRUCTION


OPERATION STEPS

1. Press the upper cover release buttons **3** to open the cover **2**.
2. Take out the water tank **5**.
3. Turning the water tank cover **5a** in an anti-clockwise direction to open the cover.
4. Pour the water into water tank bottom **5b** up to the "Max" water line.
5. Close the water tank cover **5a** in an clockwise direction.
6. Put the water tank **5** back into the Bedding Cleaner.
7. Fit the power unit onto the Bedding Cleaner.
8. Press the Power Button on the power unit to turn it on and slide the cleaner on the surface of your bed to clean in back and forth direction.
9. Do not overturn the unit when there is water inside the water tank .


STEP 1

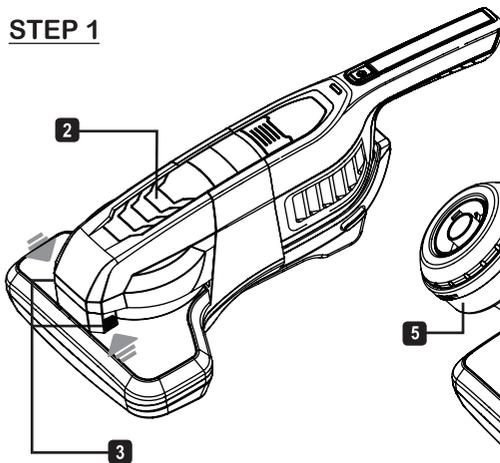


STEP 2

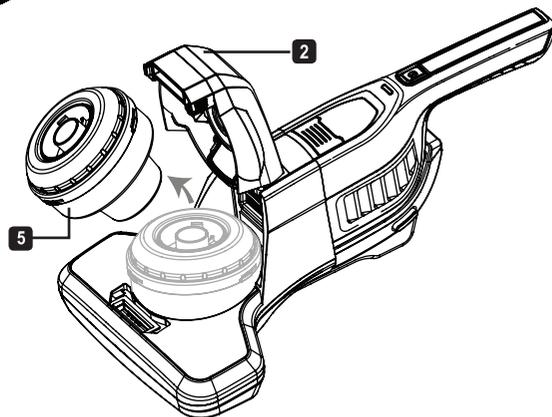


STEP 3

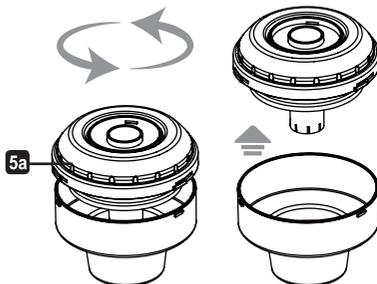

STEP 4

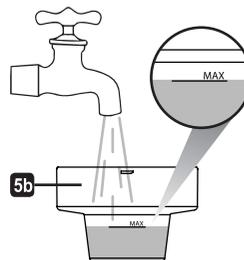


STEP 5

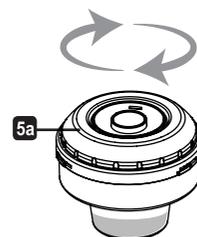


ASSEMBLY & OPERATING INSTRUCTION


STEP 6

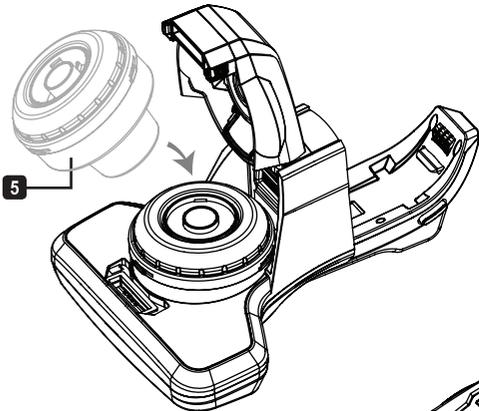

STEP 7

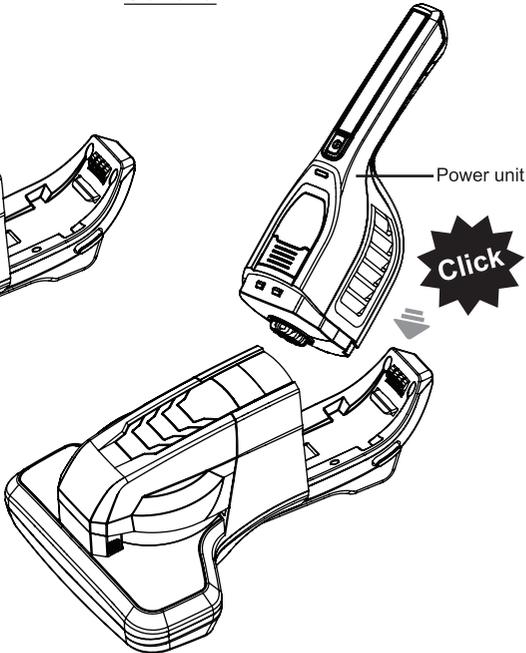


STEP 8

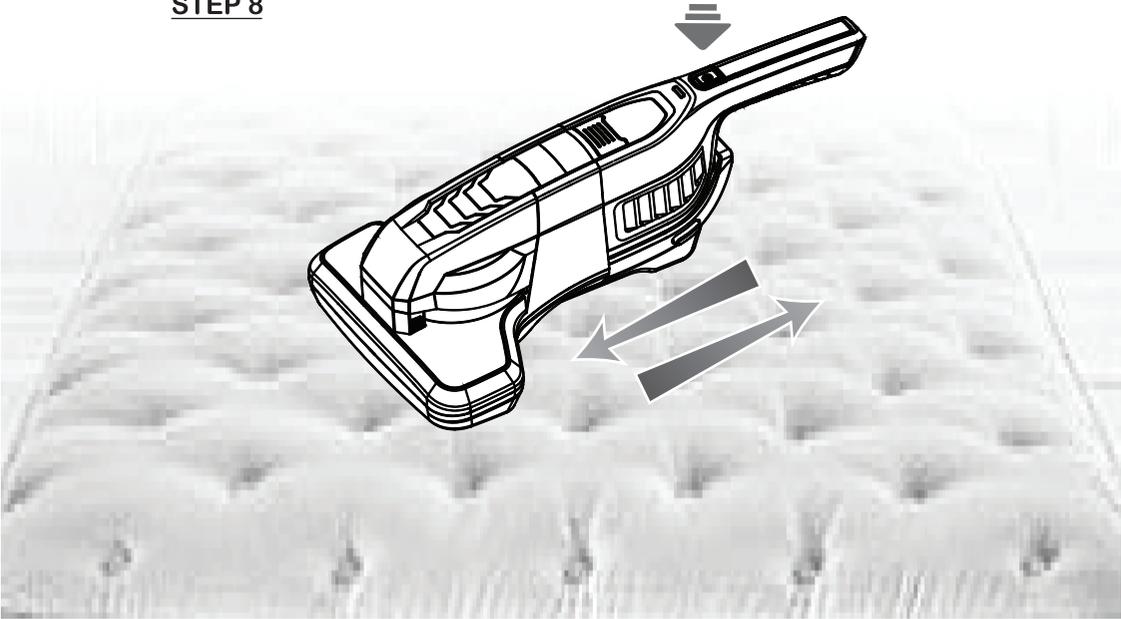


ASSEMBLY & OPERATING INSTRUCTION

- How to detach water tank and power unit from bedding cleaner.

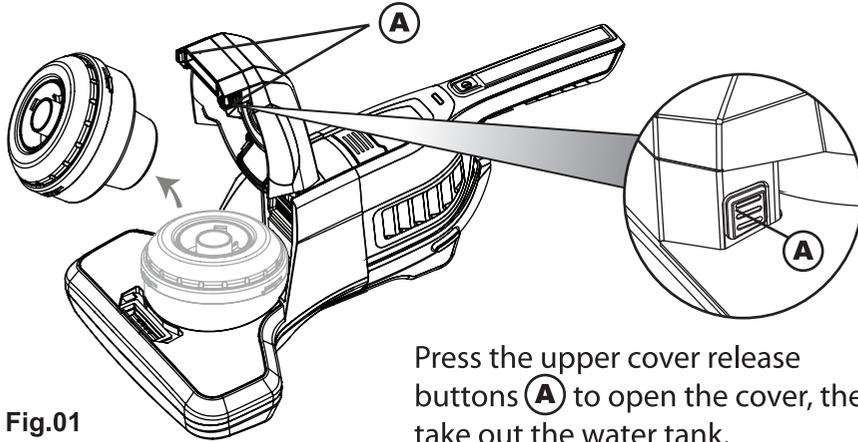

- Hold the power unit (B) tightly with one hand, then press the two release buttons (C) simultaneously to unlock the power unit.

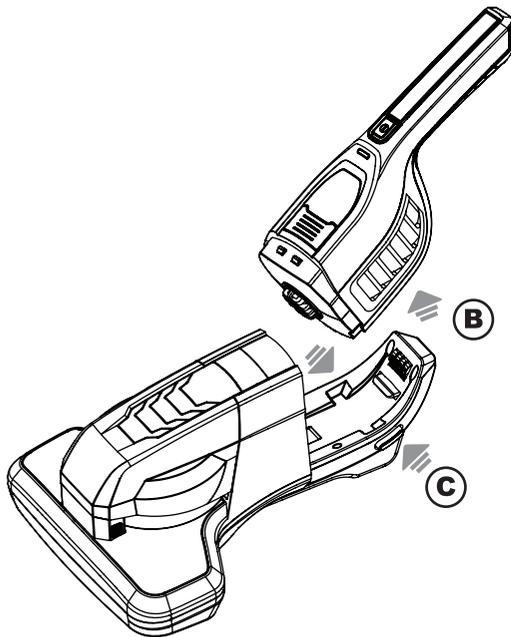


CAUTION:

Before turning the bedding cleaner over, please ensure that there is no water in water tank or take off the water tank to avoid water leakage.


CHARGING

- Plug in the power cord into the Bedding Vacuum Cleaner for charging.

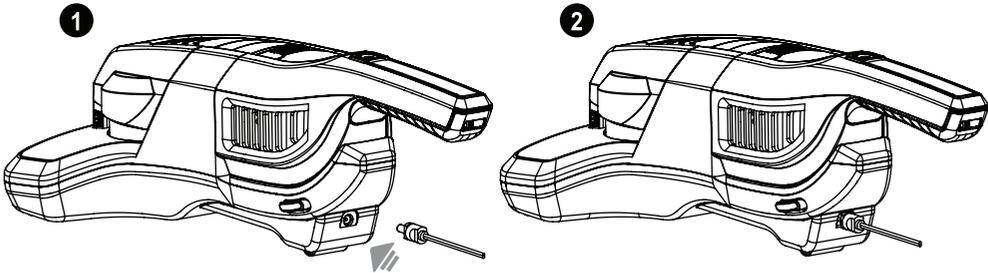


CLEANING AND STORAGE

- How to clean the Bedding Cleaner.

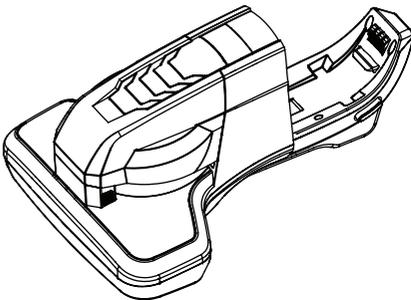


- Wipe off any dirt from the Bedding Cleaner using a dry and soft rag.
- In case of stubborn dirt, clean the unit with slightly damp cloth and then wipe clean with a dry rag.
- Do not use soap powder, detergent and solvents like thinner, benzene, and spray type cleaners.
- Dry immediately.
- Ensure that there is no water in the nozzle after cleaning the handheld unit.
- **DO NOT IMMERSE THE BEDDING CLEANER IN WATER.**

-
- How to clean the HEPA Filter

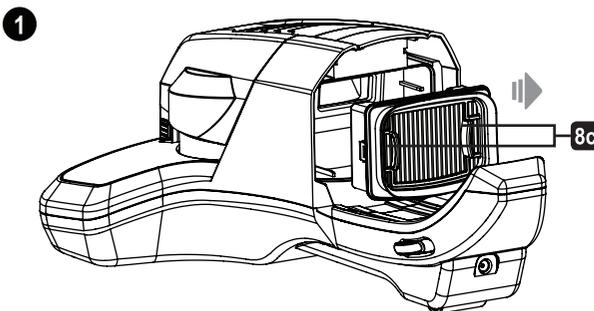


1. Take out HEPA Filter by Filter handle **8c**.

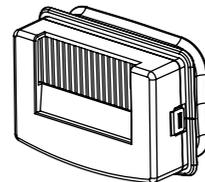


CLEANING AND STORAGE

- How to clean the HEPA Filter

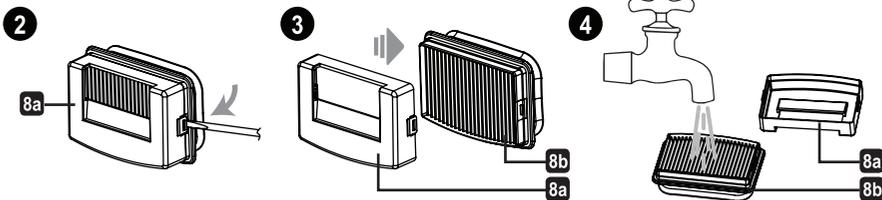

2. Use tool to open the HEPA Filter body 8a .
3. Take off the HEPA Filter 8b , then wash with tap water.
4. Let the parts dry completely before reinstall it to the Bedding Cleaner.

- How to clean the water tank.

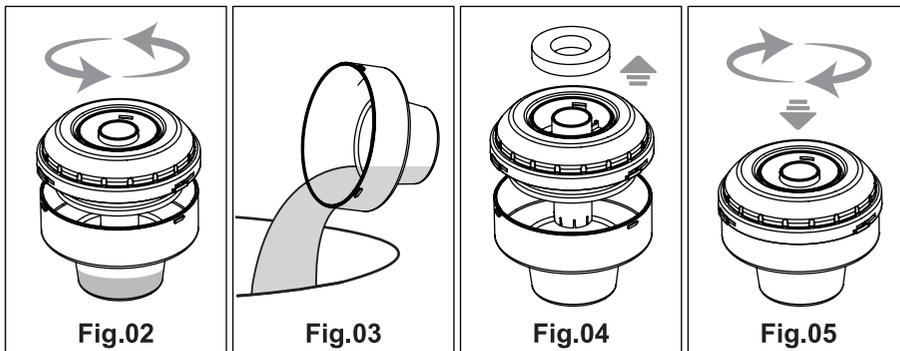

1. Press the release button to open the upper cover. (P.9 Fig.01)
2. Take off the water tank and turning the water tank cover in an anti-clockwise direction to the unlock. (Fig.02)
3. Empty the water tank and wash thoroughly. (Fig.03) Please use a strainer to filter the hairs and lint before you throw the waste water.
4. Pull out the tube head and take off active carbon filter, then wash with tap water. (Fig.04)
5. Let the parts dry completely before reinstall it to the water tank.
6. Put the water tank back into the Bedding Cleaner and lock it. (Fig05)


CAUTION:

To avoid inhalation of moisture into power unit, resulting in internal parts damage, the water tank parts must be completely dry before they are reinstalled to the Bedding Cleaner.
If the activated carbon filter has not been dry, please use the spare activated carbon filter provided.

CLEANING AND STORAGE

- How to clean the roller brush.

1. Use your fingers to pull away the two brush cover locks.
2. Detach the roller brush cover
3. Take out the roller brush and clean it.
4. Use a cutter to remove any hair, if needed, sliding a scissors along the pit.

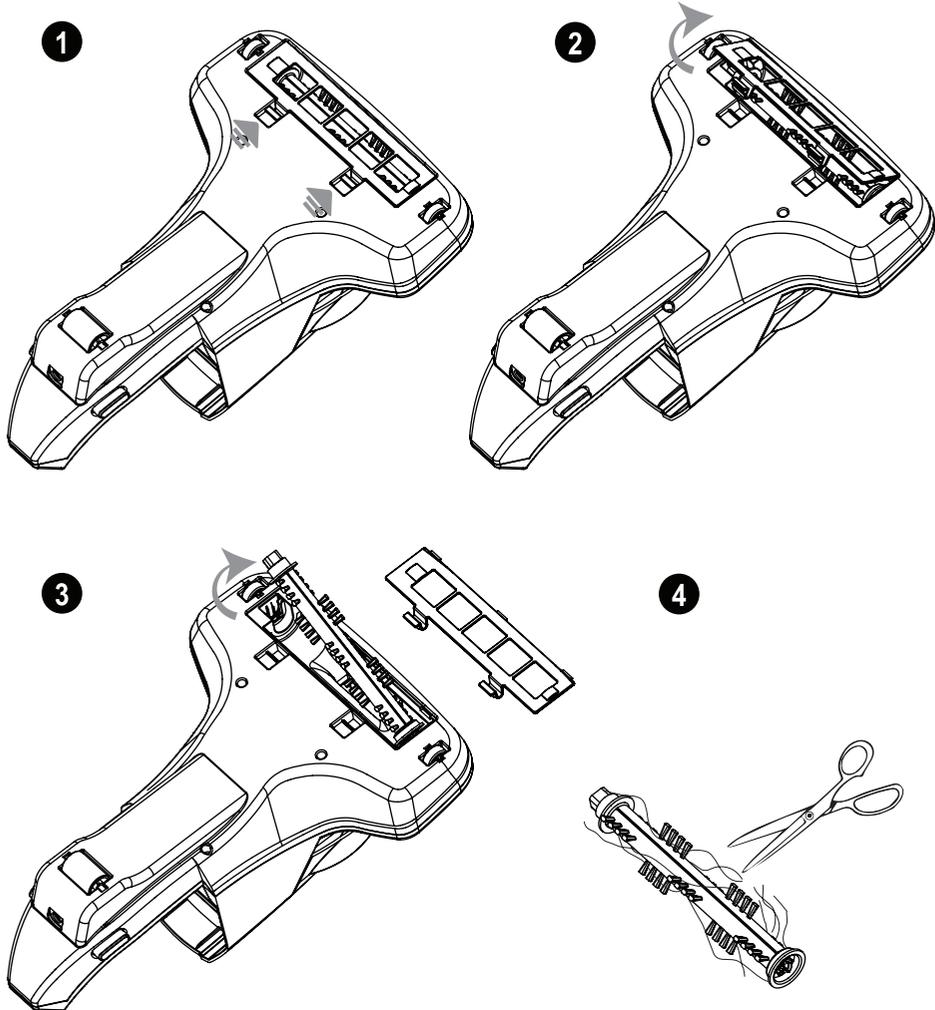

WASTE DISPOSAL

- When the battery pack no longer maintain a charge, the product may has reached the end of its lifespan. Before discarding the product, the rechargeable battery pack must be removed and recycled in accordance with the federal and local laws. Do not dispose the battery pack with other household waste.

TROUBLESHOOTING

Problem (s)	Possible cause (s)	Solution (s)
The Bedding Vacuum Cleaner will not start	The Bedding Vacuum Cleaner has not been charged	Make sure the Bedding Vacuum Cleaner has been fully charged for using the first time or if it has not been used for a long time.
	Bad contact between the power unit and the Bedding Vacuum Cleaner	Detach the power unit from the Bedding Vacuum Cleaner and re-assemble, ensure they are attached probably.
	Power unit incompatible for the Bedding Vacuum Cleaner	Check the specification / rating on your power unit.
The air coming out of the bedding cleaner smells	Filter is dirty	Check the filter and clean thoroughly.
	Filter is not dry	Make sure the filter has been fully dried before inserting back into the Bedding Cleaner unit.
The battery/charging indicator light is blinking (red)	The Bedding Vacuum Cleaner is out of power	Recharge the power unit to its full capacity. The light will stop blinking.
Rotating brush not running	Rotating brush is trapped	Clean the rotating brush as instructed in this manual.

PRODUCT SPECIFICATIONS

Model no. : GWC25R

Battery : 25.2V Li-ion 2000mAh

Adaptor (Input) : AC 100-240V 50/60Hz

Adaptor (Output) : DC 32V 400mA

Charging Time : 5 - 6 Hours

Operation temperature : 0°C to 40°C

Product dimension : 490(W) x 168(H) x 251(D) mm

* The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

閱讀下列說明事項並請妥善保管，以供日後參考。

安全使用注意事項

警告：

- 本產品僅適用於8歲以上的兒童在成人監督或指導下安全地使用。
- 這產品不是玩具。
- 請確保兒童不玩弄本產品。
- 兒童不得使用本產品進行清潔及維修。
- 本產品只能與本產品附帶的充電器一起使用。
- 使用任何其他充電器將導致保養失效。

警告：

- 只能使用本產品附帶的充電器進行充電。

警告：

- 在清潔本產品前，必須拔離電源。
- 取出電池時，必須先把充電器拔離電源。
- 電池要安全處理。
- 注意不要把電池棄置於垃圾桶內。
- 有關如何取出電池的詳細信息，請參閱手冊內的產品棄置處理部分。
- 如果變壓器的電線損壞切勿使用及自行維修，必須更換為同一型號的變壓器。

安全使用注意事項

警告:

1. 此產品設計為適用於室內及家庭使用，只適用清理乾透的家庭灰塵及碎屑。
2. 此產品只適合用於吸塵和細小垃圾，不能吸任何水和液體。
3. 此產品內的摩打在開動時會產生火花，所以此產品不可吸入易燃性物品或在易燃性物品附近開動（如氣油或燃料、打火機氣油、清潔液、油性油漆），氣體（如天燃氣、氫氣），或爆炸物（如煤、鎂、火藥）。
4. 不能吸入正在出煙或燃燒中的物品（如香煙、火柴、熱灰）。
5. 不能吸入有毒物品，會對身體做成傷害。
6. 不能吸入石膏，水泥等建築物料，此等物料接觸水後會硬化及堵塞吸塵機，影響產品正常運作。
7. 這產品不是玩具，當在小朋友或動物附近使用時要特別小心，不要對動物使用此產品。
8. 如吸塵機或充電器損壞，請不要使用。
9. 請勿破壞，燃燒電池組，這會引起爆炸。
10. 手濕時請勿插入或拔出充電器，吸塵機必須乾透後才可以放回充電座。
11. 不要把吸塵機放入水中，如果吸塵機已沉入水中，而吸塵機是連著充電器，請先把充電器拔離電源，再把吸塵機從水中取出。
12. 如充電器電線損壞，請不要用來充電。
13. 吸塵機和充電器不要放近發熱地方。
14. 當拔出充電器時，請不要只拉電線，要拉整組充電器。
15. 不要拉扯充電器電線，會使電線斷開損壞。
16. 如用拖板，拖板的可用功率必須比充電器大。

安全使用注意事項


17. 如吸塵機，充電器，電線損壞，請不要使用，也不要自行修理，必須送回生產商或代理商維修。
18. 避免觸電危險，不要沉浸充電器電源線，插頭或產品於水或其它液体。
19. 當UV燈亮起動時，不要直接照射皮膚或眼睛，不要直視UV燈光。
20. 本產品並不傾向提供給體能弱，反應遲緩，有精神障礙的人或缺乏相關經驗和常識者（包括兒童）使用。除非在對其負有安全責任的人仕指導或幫助下安全使用。

安全使用注意事項

注意:


1. 此產品不可以在戶外使用，理想使用溫度是不高於攝氏40度，不適宜儲存於陽光照射下的車輛內或靠近任何加熱裝置。
2. 充電時不要使用吸塵機。
3. 當產品操作時，請勿觸摸旋轉中的電動刷毛部件。
4. 不應把吸塵機上的孔堵塞，也不應使用被堵塞的吸塵機。
5. 不要吸入金屬物品如硬幣、螺絲、釘、大頭釘。
6. 每次使用完後都要清理吸咀內的垃圾，特別是頭髮，絨布等會對風量有影響的垃圾。
7. 使用時注意不要吸到頭髮，鬆身衣服或身體。
8. 不要把吸塵機的吸咀靠近頭，眼睛和耳朵。
9. 使用前吸塵機必須裝上過濾網及確保所有部分安裝牢固在產品上。
10. 在樓梯上使用本產品時，請務必小心，以防止跌倒。
11. 機身上的充電接觸片部份，必須保持清潔。
12. 此機只可使用附上的充電座和充電器。

部件示意圖

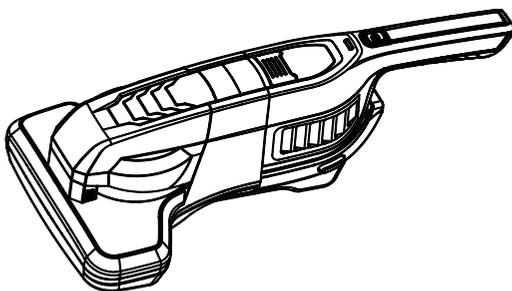


吸塵機主機體

- | | |
|----|----------|
| 1. | ON/OFF開關 |
| 2. | 充電指示燈 |
| 3. | 吸咀解除按鈕 |

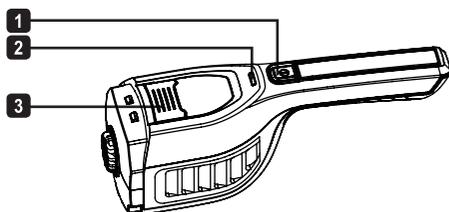


水濾吸塵機

- | | |
|-----|--------------------|
| 4. | 上蓋 |
| 5. | 上蓋鎖扣 |
| 6. | 吸塵機解除按鈕
(兩側的按鈕) |
| 7. | 水箱 |
| 8. | 毛刷蓋 |
| 9. | 毛刷 |
| 10. | HEPA 過濾網 |
| 11. | 前輪 |
| 12. | 後輪 |
| 13. | 充電接口 |

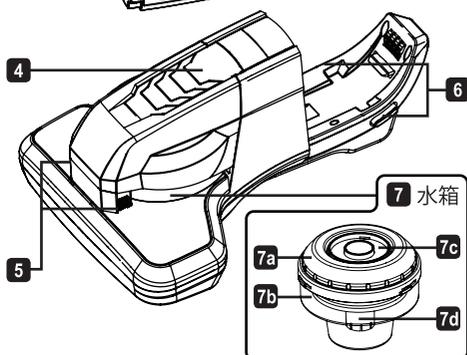



水箱

- | | |
|-----|--------|
| 7a. | 水箱蓋 |
| 7b. | 水箱 |
| 7c. | 活性炭過濾網 |
| 7d. | 吸槽罩 |

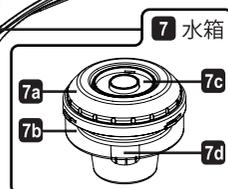

HEPA 過濾器

- | | |
|------|------------|
| 10a. | HEPA 過濾器外殼 |
| 10b. | HEPA 過濾網 |
| 10c. | 過濾網把手 |

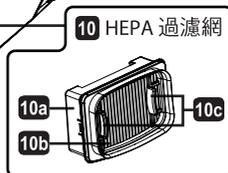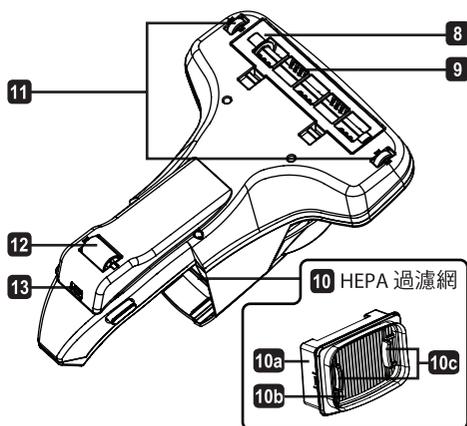


安裝及使用說明


產品使用程序

1. 按下上蓋鎖扣**3**打開上蓋
2. 取出水箱**5**
3. 沿逆時針方向旋轉打開水箱蓋**5a**
4. 將水倒入水箱**5b**直到水線標記
5. 鎖緊水箱蓋**5a**
6. 放回水濾吸塵機內
7. 將主機體安裝到水濾吸塵機上
8. 按下主機體上的電源按鈕啟動水濾吸塵機，前後來回緩緩地推動水濾吸塵機進行清潔
9. 當水箱盛有水時請不要將本機翻轉


步驟1

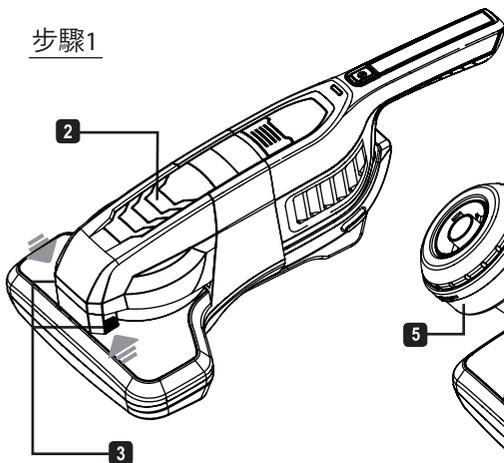


步驟2

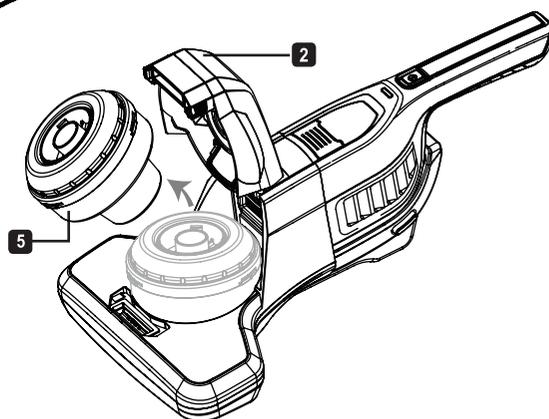


步驟3

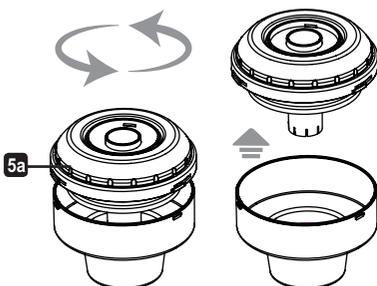

步驟4

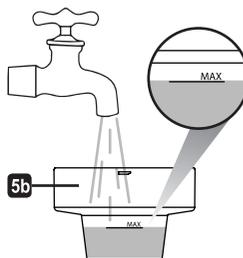


步驟5

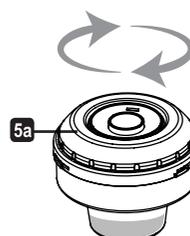


安裝及使用說明


步驟6

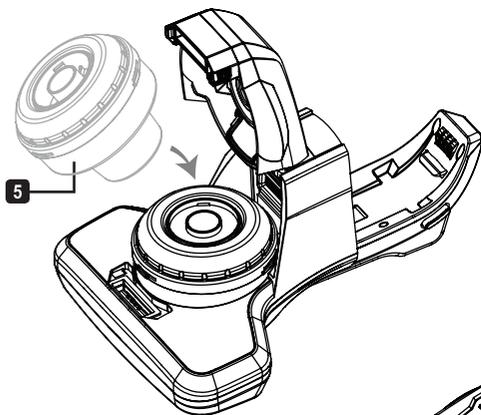

步驟7

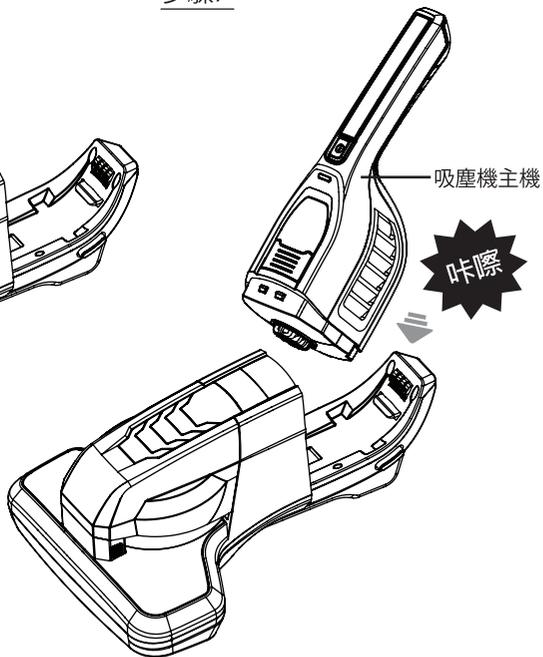


步驟8

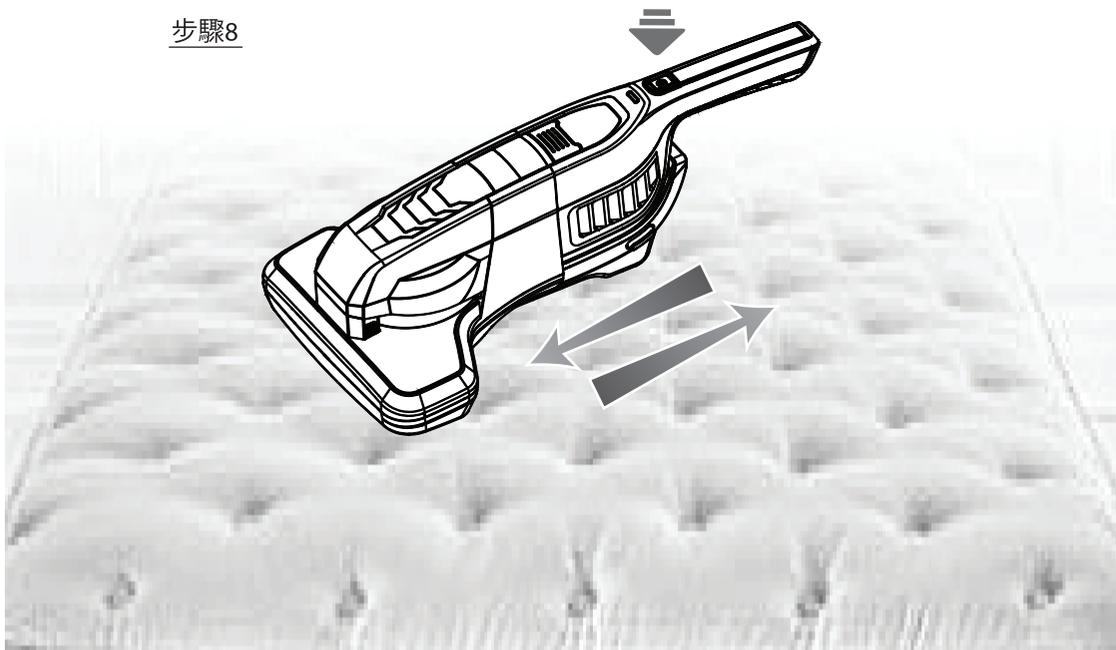


安裝及使用說明

- 從水濾吸塵機上拆下水箱和吸塵機主機

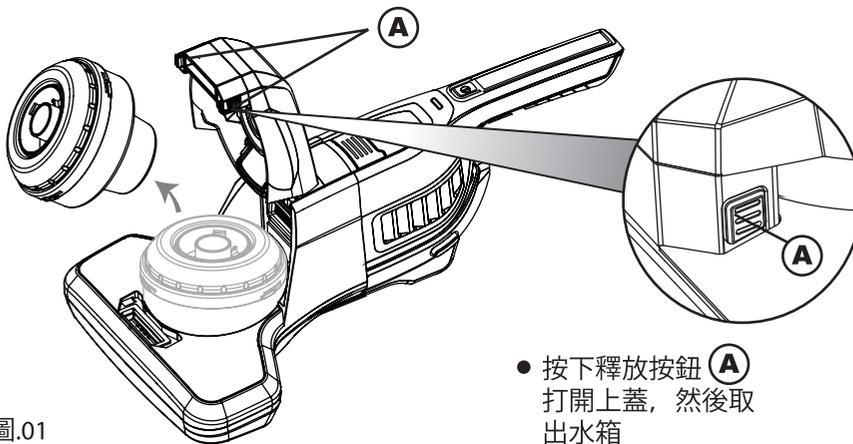

- 緊握水濾吸塵機主機 **(B)** 然後同時按下吸塵機主機釋放按鈕（兩側的按鈕）**(C)** 以解鎖

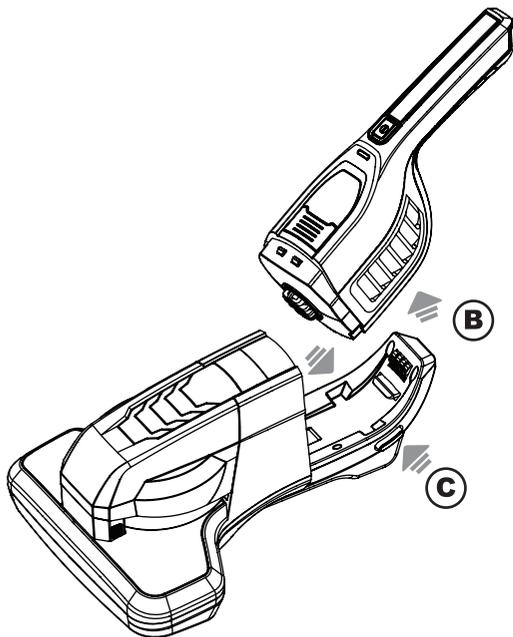


注意

請確保在翻轉水濾吸塵機之前取走水箱或水箱內沒有水，以避免水溢出


充電

- 從水濾吸塵機後方插入電源充電線進行充電

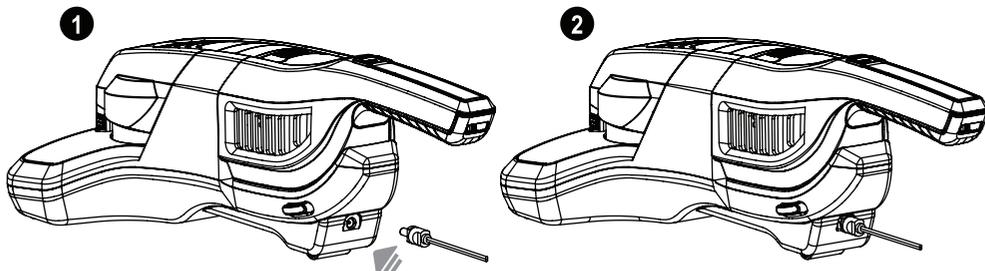


清潔和保養

- 清潔水濾吸塵機

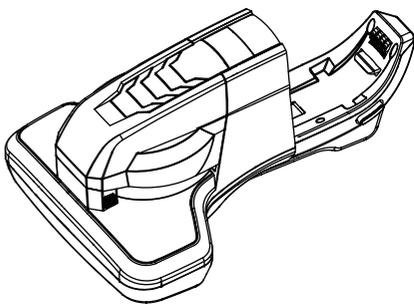


- 用乾或濕的毛巾抹走機身的塵埃。
- 如有頑固的污跡，可用有清潔劑的濕布把污跡抹走，之後用乾布把機身抹乾。
- 不可用溶劑如稀釋劑，苯或清潔噴劑。
- 清理後可用水清洗，之後用乾布抹乾。
- 清潔水濾吸塵機後，請確保沒有水殘留於內部。
- 請勿將水濾吸塵機放進水中。

- 清潔HEPA過濾網

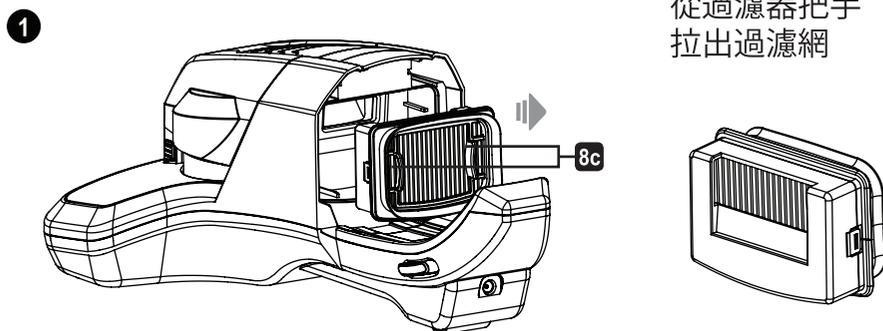


清潔和保養

● 清潔HEPA過濾器

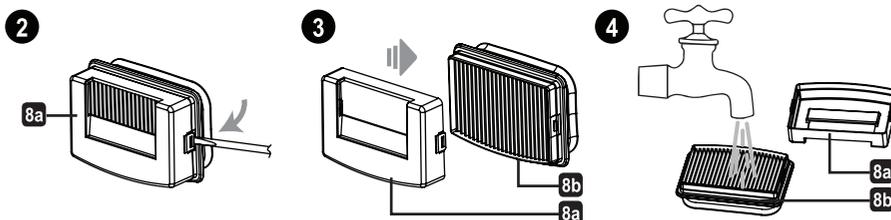

2. 利用工具把HEPA過濾器大身 **8a** 打開。
3. 取出HEPA過濾網, **8b** 然後用水清洗。
4. 清洗完後, 待各部件完全乾透後重新組裝並放回水濾吸塵機內。

● 清潔水箱

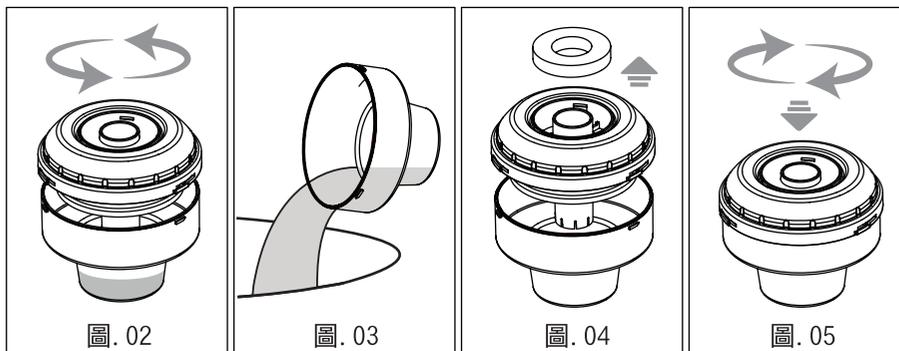

1. 按下釋放按鈕以打開上蓋。(P. 23 圖. 01)
2. 取出水箱, 然沿逆時針方向旋轉水箱蓋, 拿走水箱蓋然後清空水箱及徹底清洗。(圖. 02)
3. 傾倒污水時, 建議使用隔篩, 將大體積的塵埃及毛髮會從污水中分隔, 再倒入垃圾桶內。(圖. 03)
4. 拔掉吸槽罩及取出活性炭過濾網, 徹底清洗水箱蓋、吸槽罩、內外管壁及活性炭纖維過濾網。(圖. 04)
5. 清洗後, 待各部件完全乾透後重新組裝並放回水濾吸塵機內。(圖. 05)


注意

避免吸塵機吸入水份, 導致內部零件損壞, 各部件必須完全乾透才能使用。
如活性炭過濾網還未能乾透, 可使用配備的活性炭過濾網來交替使用。

清潔和保養

• 如何清潔旋轉毛刷

1. 拉開兩個毛刷蓋鎖扣。
2. 拆下毛刷蓋。
3. 取出旋轉毛刷，並清潔。
4. 使用剪刀去除任何頭髮。 如果需要，可沿著坑槽滑動剪刀。

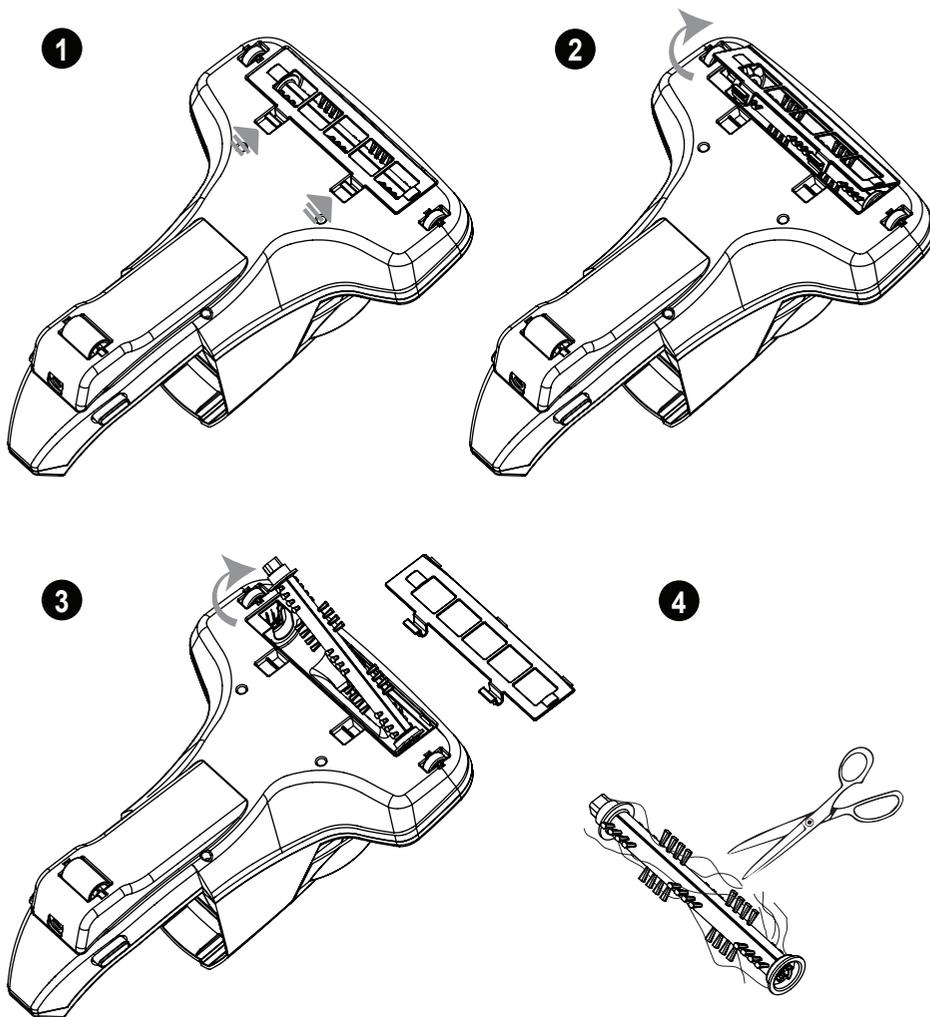

產品棄置

- 當電池組不能再充電時，即代表此產品使用壽命已經殆盡。丟棄該產品時，請根據當地法律或指引進行循環回收。請勿將電池組與其他生活垃圾一起丟棄。

疑難排解

問題	問題可能的成因	解決方法
水濾吸塵機 無法啟動	水濾吸塵機主機並未充電	當購買後第一次使用或者經過很長一段時間沒有被使用。請確保主機重新被充滿電。
	主機和水濾吸塵機之間接觸不良	拆下主機並重新安裝，確保已安裝妥當。
	主機不兼容此水濾吸塵機	檢查機主機上的規格/ 額定值。
吸塵機排出 異味	過濾網很骯髒	檢查及清洗過濾網。
	過濾網清洗後並未乾透	清洗後，請確保過濾網已經乾透才放回產品內使用。
電池/ 充電指示燈閃爍 (紅)	水濾吸塵機主機電量已經降至低水平	請將水濾吸塵機主機充電充滿。該指示燈將停止閃爍。
旋轉毛刷無法轉動	旋轉毛刷被堵塞	按說明書中的“清潔與保養”來進行清潔。

產品規格

型號 : GWC25R

電池: DC 25.2V Li-ion 2000mAh

充電器(輸入) : AC 100-240V 50/60Hz

充電器(輸出) : DC 32V 400mA

充電時間 : 5 - 6 小時

操作環境溫度 : 0°C to 40°C

產品尺寸 : 490(闊) x 168(高) x 251(深) 毫米

* 相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而不同。

請記錄下列產品資料

- 型號

- 機身編號

- 經銷商名稱

- 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210

Service E-mail 電郵地址：8210service@gilman-group.com

Please register now at 請即上網登記：www.toolbox.hk

Website 網址：www.gilman-group.com



Proudly Serviced by:



太平家庭電器