

**gemini**  
ITALY

**2-IN-1 MUG WARMER &  
WIRELESS CHARGER**

**2合1恆溫保溫杯連無線充電器**

MODEL NO. / 型號: GWC55B  
GWC55P

Before using your product for first time, please read this instruction manual.  
在使用本產品前, 請仔細閱讀本說明書並保存好。

 
# Safety precautions

1. Before using this product, please read the instructions and read all illustrations carefully. Keep this user manual for future reference!
2. Except for professional maintenance technicians, do not disassemble or refit the machine by yourself!
3. When plugging in the power supply, it is necessary to use the provided power fast charging QC 3.0 adapter and type-c wire to connect the product. Otherwise, the warmer/charging pad may not work properly.
4. When using this product, it should be placed on a stable platform and out of reach of children.
5. Do not use this product on the surface of woolen blankets and non-heat-resistant objects.
6. During the use of the product, there still have heat on the pad. Do not touch with your hands to prevent scalding.
7. If there is no water in the mug, do not place it on the pad for heating, otherwise it may affect the service life of the product.
8. This product has an automatic power-off design. When the mug is placed on the warmer/charging pad for 8 hours continuously, it will automatically power off, or when there is no water in the mug, it will start dry-burning safety protection.
9. If you find that the mug, power cord, wireless charging pad and power adapter are damaged, please stop using immediately. Please contact our after-sales service department for repair.
10. This product is only for indoor use, not for outdoor, not for commercial use, etc.
11. The appliance can be used by people over 8 years of age, children and people whose physical, sensory or intellectual abilities are impaired. They need to be monitored or instructed to use the appliance safely and understand the risks involved.
12. Adults should instruct children not to play with the appliance.

13. Do not use this product on hot platforms.
14. Do not use third party power adapter QC3.0 and type-c power cord that are not attached to this unit, because it may cause the wireless charging pad fail to work properly.
15. Keep the pad surface clean. If there is water, wipe it with a dry towel or paper towel.
16. If you need to clean the charger, please cut off the power supply, and can use cotton cloth or paper towel wipe clean!
17. Maintain ambient working temperature at 0-45°C.
18. It is forbidden to place metal or magnetic materials such as coins, keys or bank cards on warmer/charging pad, which will affect normal operation.
19. Ceramic mug can only be washed by hand. It is forbidden to place them in dishwasher for cleaning.
20. Cover the mug with a ceramic lid while the mug is placed on the warmer pad.
21. Ceramic mug is forbidden to be placed on electromagnetic ovens, microwave ovens, ovens and other household appliances.
22. When charging a mobile phone, please make sure that there is no metal material on the back of the mobile phone or on the protective cover of the mobile phone, such as iron sheet, or else it may cause heat and damage the mobile phone.
23. If there are metal objects such as coins and keys on the wireless charging pad, don't let the objects press the silicone buttons on the pad, otherwise it will heat small metal objects and bring scald risk.
24. When the ceramic mug is placed on the pad and heated, it is forbidden to touch the bottom of the mug or the surface of the pad by hand to prevent scalding.
25. After more than 100 hours of dry-firing and heating test, the bottom of the ceramic mug will gradually show discoloration, light and pink discoloration is more obvious which is normal phenomenon. It may also caused the minor uneven on the supporting edge at the bottom rim, it is normal for operation.

# General Structures


1. Ceramic mug lid
2. Ceramic mug
3. Type-C wire
4. Silicon sensor button
5. QC 3.0 adapter
6. Warmer/Charging pad
7. LED indicator on pad
8. Spoon

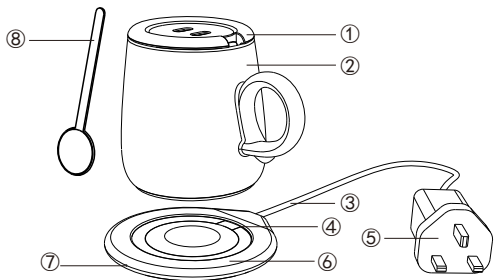

## Product Specifications:

MODLE	Colour	Input	Output	Constant temperature	Product size
GWC55B GWC55P	Black Pink	12V/1.5A	5V/2A 9V/1.2A 12V/1.5A	50°-55°C	mug capacity : 300ML mug size (W x H x D) : 132mmX100mmX90mm
 
# User's Guidelines of Warmer Pad with mug

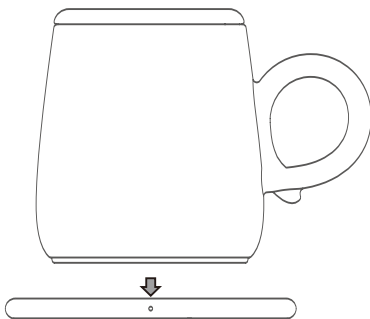

1. Use the provided QC3.0 fast charging power adapter to plug in the power supply and connect the warmer/charging pad with the provided type c wire.

2. After connection, place the ceramic warm mug with lid on the pad. When placed, place the bottom of the mug in the middle area of the pad so that the bottom of the mug can be pressed on the silicon button to switch to the heating mode. If the indicator lights are always on constantly, the mug will enter the normal heating working state.

## Indicator light indication:

 
- The LED indicator is always on, representing the normal working state.
- The LED indicator flashes fast, representing abnormal working status, it may be caused of the improper mug placement on the pad, the ceramic mug is not placed in position which presses on the silicon sensor button directly or on the pad.
- The LED indicator goes off, representing not in working status. It may be the heating process is reached 8 hours working continuously as safety protection or other type of mug is used!

Mode of Indicator on pad	Status
Power on	The indicator flashed one time
Standby	The indicator is not ON after flashing
Ceramic mug heating	The indicator light is always ON after flashing
Abnormal State Protector Start	Indicator light is flashing: Reference Troubleshooting part
Error prompt	Indicator light is flashing: Reference Troubleshooting part

After the ceramic mug is placed on the pad for warming, the temperature of water in the ceramic cup will be kept constant between 50 to 55 degrees. (Due to different environmental factors and volume of water in the mug, the temperature of water will be deviated.)

Proper mug as heating equipment, do not use third party ceramic mug with this product.


With supplied ceramic mug to be heated on the supplied warmer pad ,can not be heated to ordinary daily mug products on this model.

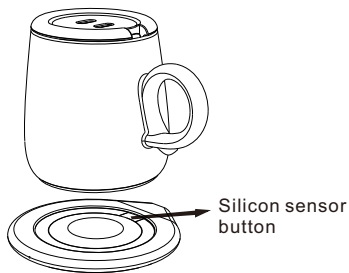

The warmer/Charging pad is equipped with an silicon sensor switch "heating mode" and auto smart switch mode for wireless charging When the mug presses on the switch in position, it can automatically switch to heating function.

Heating mode: When the provided ceramic mug s' foot rim touches the silicon sensor switch in position, the heating mode will start to heat the drinks in mug. Please ensure the indicator is on constantly which means the mug is placed in correct position.


# Instructions for the Use of Wireless Charger

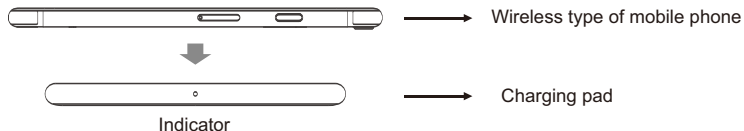 

Place the mobile phone which equipped with wireless charging function(built-in function) in the middle of the charging pad, and the indicator lamp is normally on constantly at charging state.

To switch on the charging mode, user just place the mobile phone with the wireless charging function in the middle of the charging pad. It starts operation automatically. Do not place any metal parts or press directly on the silicon sensor button to avoid heat up and scalding!

 To ensure the phone is charging properly, the charging icon is displayed on the phone when placed in proper position for charging.

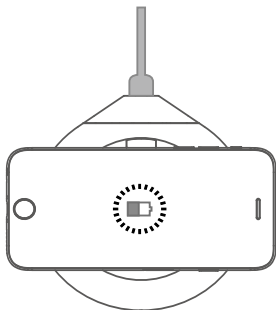

**LED indicator:** when place the wireless type mobile phone in the middle of the wireless charging pad , The mobile display is facing upwards,the battery side is downwards to place in the middle of the charging pad indicator is always ON. If the indicator is flickering rapidly, it is an abnormal working state.

Wireless charger has foreign body detection function. If there is a metal object on the back of the mobile phone, it will detect the metal object on the back of the mobile phone and stop charging when charging. The indicator lights will flicker quickly to avoid the metal sheet being heated to damage the mobile phone or burn the user.

Mode of indicator	Status
Power on	The indicator flashed one time
Standby	The indicator is not ON after charging
Wireless Charging	Indicator light is always ON
Abnormal State Protector Start	Indicator light is flashing: Reference Troubleshooting part
Error prompt	Indicator light is flashing: Reference Troubleshooting part

**Tip:**

1. Due to the different code-setting time of each mobile phone, some wireless charging mobile phones will not start charging after 3-5 seconds, which is a normal phenomenon. In order to achieve the best charging speed, it is necessary to place the mobile phone on the wireless charging pad in right position.
2. the wireless charging function is terminated immediately if user remove the mobile phone away from the wireless charging pad, placed the phone back to the middle of charging pad with indicator on constantly ,it can start recharging again.

**Applicable to wireless charging equipment:**

The device must have built-in wireless charging receiving devices (Please check the service provider of your mobile phone).



# Cleaning and maintenance

1. Wipe the matching adapter, Type-C charging line and charging base with a clean rag or paper towel. Cleaning in water is strictly prohibited.
2. If the ceramic cup is stained for a long time, don't scratch the surface with sharp objects such as blades, so as to avoid scratches. It can be washed with lemon juice or vinegar and dried.
3. Ceramic cup is light and thin. Do not collide with hard objects to avoid damage. The decorative pattern of the cup body contains k-gold plating, and the bottom of the cup is covered with metal materials. It is strictly prohibited to put them into microwave ovens, ovens, dishwashers, etc. Ceramic cup manufacturing process is complex, difficult, many manual procedures, there are inevitable traces of manual, please understand..

# Troubleshooting

Problem	Possible causes	what to do
Indicator light is not ON	The power connection problem	Check the power connection properly
	Failure of adapter or type-c cable	Replacement a new adapter/type-c cable
	Electronic circuit damage	Contact distributors
Indicator light flicker fast	Ceramic cup is not accurately placed on the pad	Pick up the cup and place it on the center of the pad
	Full 8 hours of continuous work at one time	After replacing the beverage in the cup, place the ceramic cup in the center of the base again
	Poor contact of Type-C cable	Reconnect the Type-C cable after unplugging it
	Using the wrong cable	Replacement of appropriate qualified cable
	Using the wrong adapter	Replacement of Qualified QC3.0 Adapter
	Detection of metal objects during wireless charging	Check whether there are metal objects on the back of the phone or on the cover of the phone

# Product characteristics

1. Wireless mobile phone charging is compatible with fast charging using QC 3.0 adapter, and FOD foreign body detection to avoid metal empty consumption and fever danger and charge safely.
2. Wireless heating ceramic cup at constant temperature: The temperature of the water in the mug can be kept at around 50-55 degrees. (Due to different environmental factors and volume of water in the mug, the temperature of water will be deviated.) .
3. Automatically switch the charging mode of mobile phone and the heating mode of ceramic mug. No special manual operation is required. Convenience and simplicity.

 
## 安全注意事項

1. 使用本產品前，請仔細閱讀說明書及所有圖解。保留此說明書以便將來參考！
2. 除了專業維修技術人員外，請勿對本產品進行自行拆卸或者改裝本產品！
3. 插接電源時，必須使用本產品配套的電源適配器及電源線來連接產品，否則可能不能進行正常工作。
4. 使用本產品時候應放置於穩固的平臺上，並放置在兒童接觸不到的地方。
5. 不要在毛絨毯及不耐熱的物體表面使用本產品。
6. 產品使用過程中，無線充電底座會有餘熱，請勿用手觸碰以防止燙傷。
7. 如果杯子裏面沒有水，請勿放置於底座上加熱，否則會影響產品的使用壽命。
8. 本產品有自動斷電設計，杯子放置於底座上連續加熱8個小時會自動斷電，或者杯子中的水完全沒有的情況下，會啟動乾燒保護裝置。
9. 發現配套的陶瓷杯、充電線、無線充電器、電源適配器有損時，請立即停止使用，請聯絡我司售後服務部檢查。
10. 本產品只作室內用途，不能放置於戶外使用，不可讓本產品作非指定或商業用途等。
11. 該電器可適用於8歲以上的人群使用，兒童以及身體、感官或智力能力下降的人群，他們使用該電器需要得到安全使用電器的監督或者指導，並且瞭解所涉及的危險。
12. 成人應該指導小孩不可把玩此電器。

13. 請勿將此產品置於熱的平臺上使用。
14. 不要使用非本機附送的電源適配器和電源線，以免對無線充電底座造成不能正常工作。
15. 請保持充電器底座表面乾淨，若有積水請用幹毛巾或者紙巾擦拭乾淨後使用。
16. 如需清潔充電器，請切斷電源。
17. 使用環境溫度保持在0-45°C。
18. 禁止將硬幣、鑰匙等金屬材料或者銀行卡等帶金屬或者磁性的材料放置於充電器上，將影響正常工作。
19. 陶瓷杯易碰碎，只可以手洗，禁止放置於洗碗機等清洗機器內清洗。
20. 杯子置於底座上保溫期間請蓋上陶瓷杯蓋。
21. 陶瓷杯禁止放置於電磁爐或微波爐，烤箱等其他家用電器上加熱使用。
22. 手機充電的時候，請保證手機背面或者手機保護套上沒有金屬材料，比如鐵片等，否則可能會引起手機發熱而損壞手機。
23. 如果有金屬物體比如硬幣，鑰匙等置於無線充電底座上時候，不要讓物體壓到底座的矽膠按鍵，否則會給小金屬物體加熱而帶來燙傷風險。
24. 陶瓷杯放置於底座上加熱後，禁止用手觸摸杯子底部或底座表面，防止燙傷。
25. 陶瓷杯底部經歷一百多個小時的乾燒加熱測試後就會慢慢呈現出變色，淺色及粉色變色比較明顯，這是正常的。每個陶瓷杯圓形腳墊位置經過燒製會有點不平均或者少許凹凸均屬於正常現象。

# 產品結構圖


- 1 陶瓷杯蓋
- 2 陶瓷杯
- 3 Type-C 電源線
- 4 矽膠按鍵
- 5 QC3.0 適配器
- 6 無線充電器
- 7 開啟指示燈
- 8 不銹鋼勺子

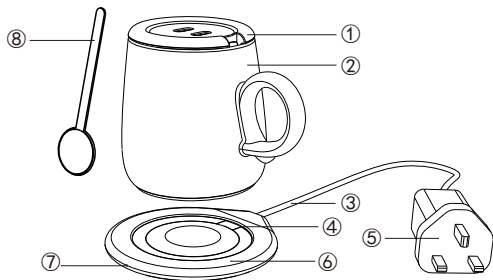

## 產品規格：

型號	產品顏色	輸入	輸出	恆溫溫度	產品尺寸
GWC55B GWC55P	黑色 粉紅色	12V/1.5A	5V/2A 9V/1.2A 12V/1.5A	50°-55°C	陶瓷杯容量：300ML 陶瓷杯尺寸(闊 x 高 x 深)： 132毫米X100毫米X90毫米
 
# 恆溫保溫杯功能使用說明

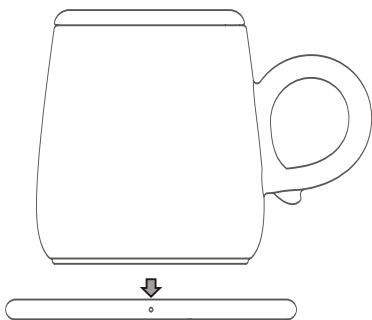

恆溫杯墊/無線充電器

1. 使用配套的QC3.0電源適配器插上電源，用配套的Type-C電源線連接無線充電底座。
2. 通電後，放置配套陶瓷杯連杯蓋於底座上，放置時，用杯底部放置於底座中間區域，使杯底部能壓在矽膠按鍵上，以切換成加熱模式，底座指示燈常亮，則進入正常加熱工作狀態。

## 指示燈提示說明：

LED指示燈持續常亮，代表正常狀態。

LED指示燈快速閃爍狀態，代表非正常工作狀態，這可能原因是：

- ① 陶瓷杯的放置位置不準確，未能在放置的時候將陶瓷杯底壓在底座的矽膠按鍵上導致不能正常工作。
- ② 超過8小時連續加熱時間，指示燈從常亮轉為快速閃爍狀態。
- ③ 使用了非配套的陶瓷杯。

底座上指示燈模式	指示燈狀態
通電開機	指示燈閃爍一下
待機	指示燈不亮
陶瓷杯恆溫	指示燈呈常亮狀態
異常狀態狀態保護程序啟動	指示燈閃爍:參照“故障排除”提示中解決方案
錯誤提示	指示燈閃爍:參照“故障排除”提示中解決方案

陶瓷杯放置在無線充電器上加熱一段時間後，陶瓷杯內的水或者飲料溫度會恆溫在50-55度左右。(由於不同的環境因素和杯子中的水量，水的溫度會稍有偏差)。

#### 配套陶瓷杯：

只能用本型號配置的陶瓷杯作為恆溫加熱，不能選用其他日用杯子類產品放置於恆溫杯墊上加熱。

 


無線充電器上配置有“自動切換智能感應器/矽膠按鍵”，當保溫杯放上底座壓住此按鍵便能自動切換至加熱功能。


#### 矽膠按鍵

加熱模式切換開關：當配套杯子腳墊觸動矽膠按鍵開關才會啟動加熱模式，經陶瓷恆溫杯加熱。

# 無線充電器使用說明

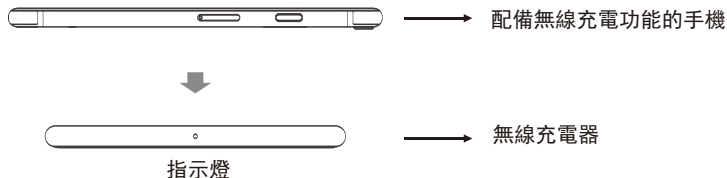

將手機放置於無線充底座中間，當充電器上的指示燈常亮為正常充電工作。

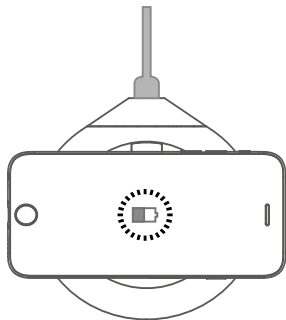 

無線充電器上配備有自動切換智能感應器，切勿用金屬外物加壓按在硅膠按鍵上，避免燙傷使用者，只需把有無線充電功能的手機放在充電器中間便可，留意手機充電指示符號，是否正在啟動充電操作。

**LED指示燈提示：**將手機放置於無線充電器中間，指示燈常亮狀態為充電狀態，指示燈快速閃爍為異常工作狀態。

無線充電器有異物檢測功能，如果手機背面有金屬物體，充電的時候會檢測到手機背面的金屬物體而停止充電，指示燈變為快速閃爍，避免金屬片被加熱而損壞手機或者燙傷使用者。



無線充電器上的指示燈模式	指示燈狀態
開機	指示燈閃爍一下
待機	指示燈不亮
無線充電工作	指示燈呈常亮狀態
異常狀態保護程式啟動	指示燈閃爍:參照“故障排除”提示中解決方案
錯誤提示	指示燈閃爍:參照“故障排除”提示中解決方案

提示：

1. 由於各個手機連接時間不一樣，有些無線充電手機放上去會在3 - 5秒左右才會開始進入充電狀態，屬於正常現象。為充電達到最佳速度，一定要將手機放置於無線充電器中心位置（手機平常電池中心區域貼在無線充電器的中心位置）。
2. 若無線充電過程中將手機拿開，充電操作立即停止。閣下需重新把手機放置於無線充電器中心並指示燈常亮才能重新再次充電。

適用的無線充電設備

設備內置無線充電接收裝置(請詢問手機供應商是否有此裝置)。

# 清洗和保養

1. 用乾淨的抹布或紙巾擦拭適配器、Type-C 充電線和充電底座。嚴禁放入水中清洗。
2. 如果長期使用有污漬，不要用刀片等銳利物體刮擦陶瓷杯表面，以免留下刮痕，可以用檸檬汁或者食醋清洗後，晾干即可。
3. 陶瓷杯輕薄，使用過程中請勿與硬物碰撞以免損壞，杯體裝飾圖案有鍍金成分，杯底也覆蓋有金屬材料，嚴禁放入微波爐、烤箱、洗碗機等使用。陶瓷杯製作工藝複雜，難度高，手工程式多，有不可避免的人工痕跡，敬請諒解。

# 故障排除

問題	可能原因	解決方案
指示燈不亮	連接問題	重新檢查連接電源是否準確
	適配器或者充電線損壞	更換相應合格適配器或者充電線
	電子電路不良	聯繫經銷商
指示燈閃爍	陶瓷杯放置底座位置不準確	將陶瓷杯放置於底座的中心位置
	陶瓷杯連續加熱時間超過 8 小時	更換杯中飲料後，重新將陶瓷杯放置於底座的中心位置
	Type-C 充電線接觸不良	拔掉電源線後重新連接充電線
	使用了錯誤的充電線	更換相應合格的充電線
	使用了錯誤的適配器	更換相應合格 QC3.0 適配器
	無線充電時候檢測到金屬物體	檢查手機背面或者手機套上是否貼有金屬物體

## 產品特點

1. 無線手機充電---使用配套QC 3.0適配器可以相容快速無限充電及FOD異物檢測避免金屬空耗及發熱危險，安全充電。
2. 無線加熱保溫---給陶瓷杯加熱恆溫，可以將水杯中水的溫度恆溫在50-55度左右。（由於不同的環境因素和杯子中的水量，水的溫度會產生偏差）。
3. 自動模式切換---自動切換手機充電與陶瓷杯加熱模式，不需要手動設定，方便簡捷。

請記錄下列產品資料

- 型號 \_\_\_\_\_
- 機身編號 \_\_\_\_\_
- 經銷商名稱 \_\_\_\_\_
- 購買日期 \_\_\_\_\_

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

### **ToolBox Customer Service Centre 客戶服務中心：**

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong  
香港九龍灣啟祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210  
Service E-mail 電郵地址：8210service@gilman-group.com  
Please register now at 請即上網登記：www.toolbox.hk  
Website 網址：www.gilman-group.com



**太平家庭電器**

Proudly Serviced by:

