



gemini
ITALY

**WiFi SMART 12-INCH AIR
CIRCULATION STAND FAN**

WiFi無線網絡智能12吋循環座地扇

MODEL NO.型號:GWSF12

Before using your product for first time, please read this instruction manual.

在使用本產品前，請仔細閱讀本說明書並保存好。

Safety Precautions

Thank you for choosing our products. For your consumer rights and interests, please carefully read the warranty card and keep it properly. Items related to the product warranty are specified as follows:

- This appliance is not intended for the use by person (including children under 8 years old), with reduced physical, sensory or mental capabilities or lack of experiences and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Please read and comply with the user manual prior to the initial operation of your appliance and keep the user manual for later use.
- Do not operate the appliance in way that does not mentioned at the user manual to avoid accident.
- Children shall not play with the appliance, power cord, any parts and accessories at any time. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Never connect to power supply socket and turn on the appliance if the blades, front / rear guard are not welly assembled to avoid serious accident.
- Do not turn on the appliance if there is no people supervision.
- Do not let children and pets get close with it, close adult supervision is necessary when appliance is used by or near children and pets.
- If the appliance fall down, unplug from power supply socket immediately, place the appliance well on floor, check all parts to confirm no problems, then appliance can be used again. If you are not sure the appliance is safe to use, take it to repair center for checking.
- This appliance is not water resistance, never immerse the main body, power plug, power cord and remote control in water nor rinse it under the tap to avoid accident. Only use soft dry cloth to clean the main body case.
- This appliance is not water resistance, never use and keep this appliance at or near bathroom, shower nozzle, swimming pool or outdoor.
- Do not expose the product to high temperatures, hot gas, steam or damp heat from other sources and under sunlight. Do not place the product on or near an operating or still hot stove or cooker, do not use the appliance under humidity environment.
- Do not place any combustibile and explosion object such as petroleum, paint around the appliance. Do not use the appliance in an area full of combustibile gas. Do not use spray pesticide or other spray items near the appliance.
- Any time when appliance is operating, do not use anything to cover the front, rear guard and mist outlet.
- When appliance is operating, do not get close with the front and rear guard to avoid

twisting of hair by the blades and get injury.

- Do not place the appliance near curtain, clothes to avoid being inhaled and damage the appliance.
- Never put your fingers and other objects into the front and rear guard, or any moving parts of the appliance to avoid injury. Especially take care of children.
- Do not adjust the appliance facing angle horizontally by hands to avoid appliance damages.
- Do not adjust the facing angle when the appliance is operating, adjust only when appliance is turned off.
- This appliance must be placed on level and solid surface.
- Do not carry and move the appliance when operating. To carry and move the appliance, make sure it is turned off and unplug from power supply socket.

Caution

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord, the appliance itself, water tanks and mist transfer pipe is damaged to avoid accident. It must be repaired by our service center to avoid a hazard. Never repair, assembly and re-equip by yourself.
- Never press, roll, bend the power cord, and keep the power cord away from hot surfaces.

Never pull the power cord to avoid loosen. And do not put the power cord under carpet and any other things to avoid damages.

- Power cord must not be stepped or pressed by any things, or bitten by any pets to avoid damages.
- Do not connect with external timer. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Do not use the same power sources with other appliances to avoid overload.
- Do not plug or unplug the appliance into power socket with wet hands.
- Make sure the air circulation is enough when using the appliance.
- If you drop the screw inside the appliance when install or uninstall the front guard, please send the appliance to repair service center for checking and handle.
- Do not disassembly the appliance by yourself.
- Do not expose yourself to wild generated by the appliance for a long time, especially elder, children and sick people, it may cause health related issues.
- Do not operate the appliance under humid, dusty environment and surface. And do not keep the appliance under sun light.
- Do not give impact or fall the appliance and press the front and rear guard to avoid


damages and accident.

- Before cleaning, assembling or disassembling, make sure the appliance is turned off and unplug from power supply socket, and it is completely cool down.
- Clean the appliance regularly to avoid too many dust on blades, rear and front guard.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- The appliance is mainly for indoor and household use only.
- If the appliance has abnormal smell, smoke, overheat or abnormal noise or any problems occur, stop using the appliance immediately, unplug from power supply socket.
- Remote control use one piece CR2025 3V battery, if you find the remote control is not function, it may be battery running out of power, change a new battery immediately.
- If you do not use the appliance for long period of time, take the battery out from remote control, keep it at a safe place which is not easily access by children and pets.
- All photos are for reference only.

Warning

1. Do not connect or disconnect with wet hands as it will cause short circuit or electric shock.
2. Please keep the fans in steady state using.
3. Without the guidance of technicians, automatic dismantling is not allowed. The inside of the machine is charged body, so do not wash or plush.
4. Do not cut, damage, pull, twist, knot or press the power wire.
5. Do not put your fingers or other objects into the fan net frame.
6. When cleaning and maintaining this product, the power plug must be disconnected.
7. Do not let the children to operate the fan by themselves.
8. Do not exertly more the oscillation manually, because Up-Down and Left-Right Oscillation is by automatically.

The structure of the product

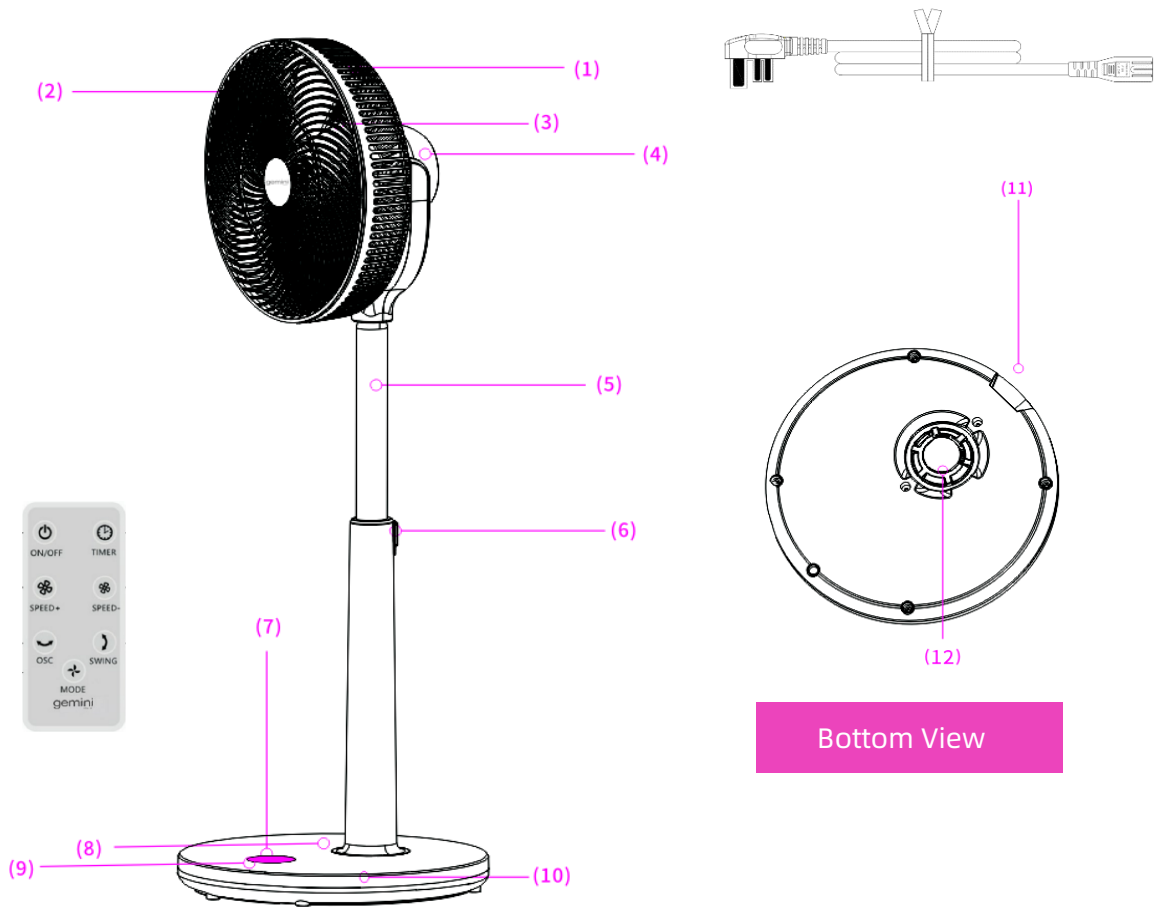


(1)Rear Grille	(2)Front Grille	(3)Blade	(4)Back Cover
(5)Extension Tube	(6)Extended Tube Switch	(7)Control Display	(8)Remote Control Placement
(9)Infrared Receiving Point	(10)Pedestal	(11)AC Connector	(12)Base Fixed Knob

Accessories

- Fan *1
- User Manual *1
- Warranty Card *1
- Power Line *1
- Remote Controller *1

Product Introduction

 1.Introduction of Control Panel

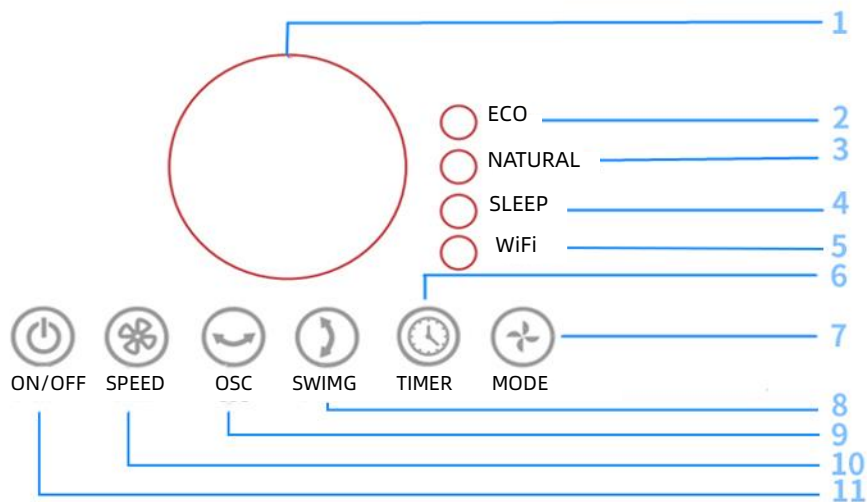


1.LED Display	2.ECO Wind Indicator	3.Natural Wind Indicator	4.Sleep Wind Indicator
5.WiFi Function Indicator	6.Timer Key	7.Model Conversion Key	8.Up-Down Swing Key
9.Left-Right Oscillation Key	10.Wind Speed	11.On/Off Key	

- **ON/OFF Key** (power icon): After connect the main power plug to wall socket,press the ON/OFF key to turn the fan on.It will be started at a default speed of 8 level once it is on.Press the key again to turn off the machine.
- **TIMER OFF Key** (clock icon): Press Timer Off Key to set the turn off hour,the fan will switch between 1h-9h.Without operation the fan after 5 seconds,the display screen shows the wind speed and timing switch alternatively switching.
- **SPEED Key** (fan icon): Product has 12 speed with LED display, from 01-12 as speed. You can adjust the speed by press "SPEED" key.
- **SWING Key** (swing icon): Press the swing key to activate the up & down vertical direction of fan head.
- **OSC Key** (oscillation icon): Press OSC key to start left & right.
- **MODE Key** (mode icon): There are ECO Wind Mode 、 Natural Wind Mode 、 Sleep Wind Mode.Press the mode key to choose the mode.Under the ECO Wind Mode,the display screen will display the ambient temperature.The fan will adjust the wind speed into ideal fan speed according to the ambient automatically.Under the Natural Wind


Mode, the fan will work at the system setting gear speed. The fan will be quite operation in Sleep Wind Mode which is soft wind for sleeping.

2. Function Key of Remote Controller

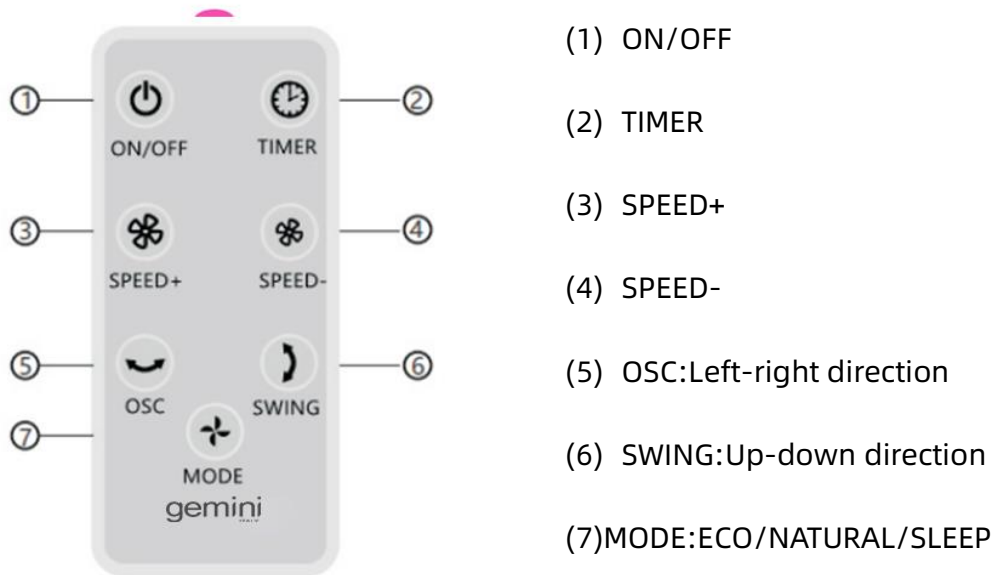

Note:

1. The remote controller is normally used within 6 meters in the front of the fan and the deviation angle is within 45 degrees.
2. Put a CR2025 battery on the holder, make sure the "+" side face top, and face down.
3. There has a battery inside the remote controller, please take off the insulating strip before use. After the battery's power is using out, please throw according to battery classification collection.

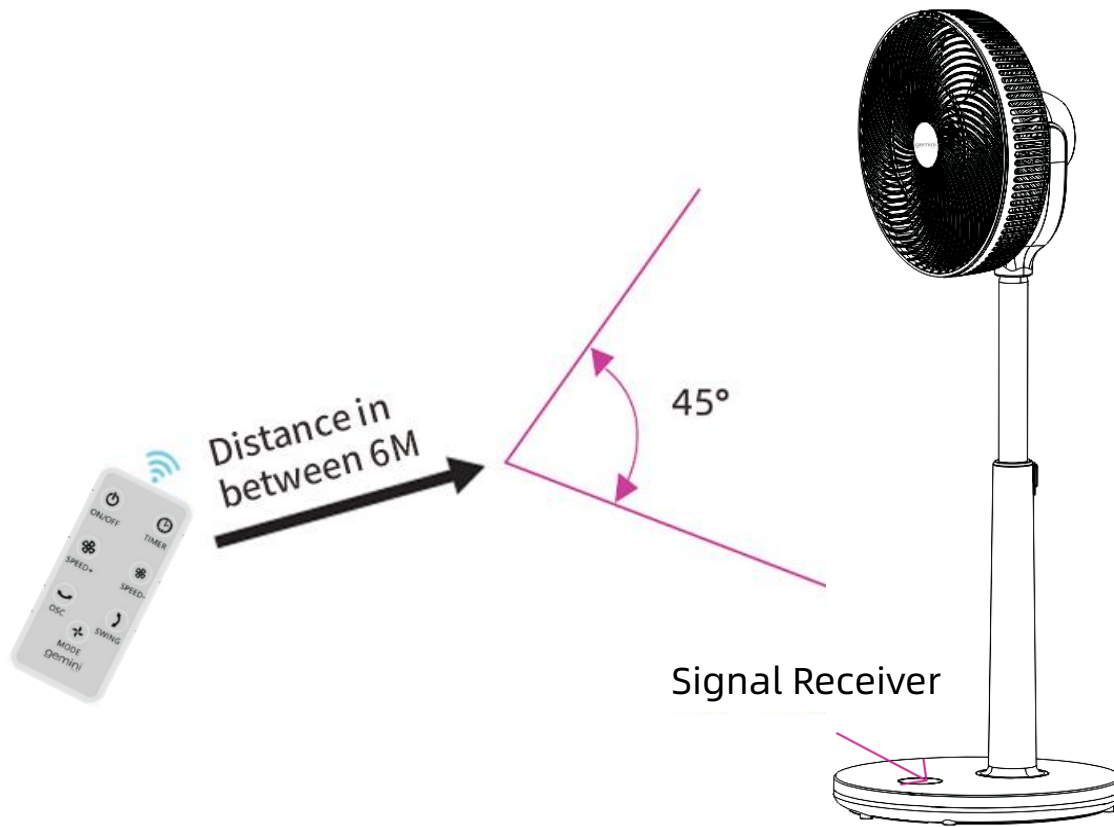


3. Swing & Oscillation

Press the OSC & SWING key to turn on the automatic oscillation mode.

Left-right oscillation in 100° by automatically

Up-down swing in 90° by automatically

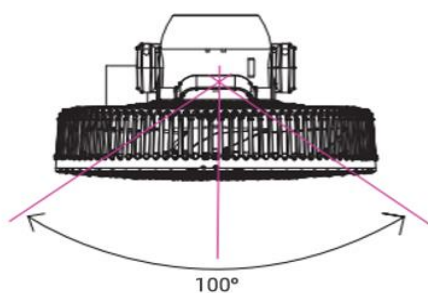


Note: It is forbidden to twist the fan head at up-down or left-right oscillation direction over 90° manually.


4. Installation

1. Take out the fan's assemble parts


Take out the fan's assemble parts from the packaging and disassemble the fan parts from the rear head grille. Rotate the front grille at clockwise direction, remove the front grille and take out the blade.

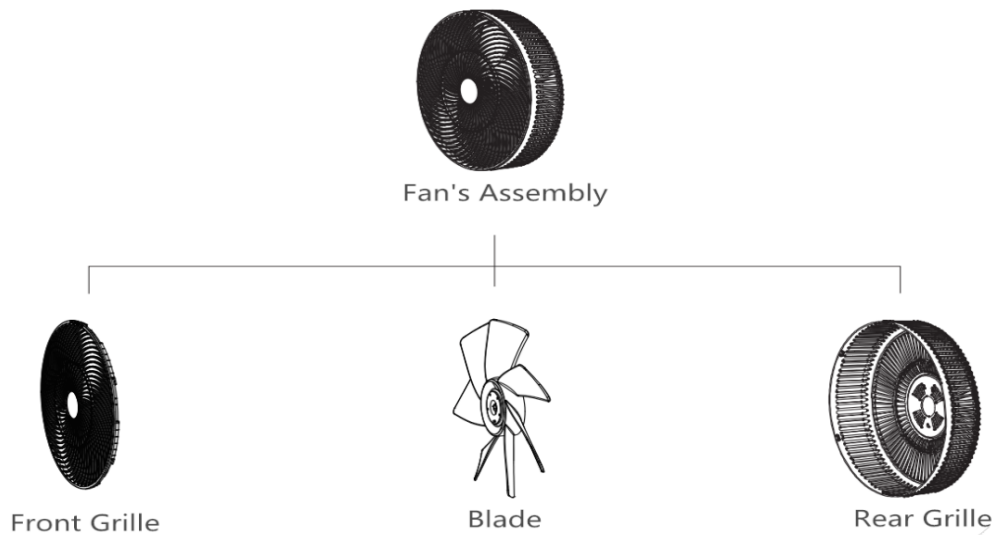

2. Install the fan Pedestal

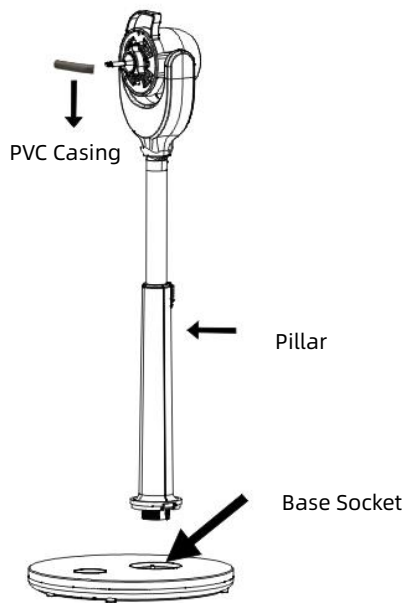

(1) First, remove the PVC casing, align the motor and pillar with the base socket in the direction shown, and insert the lower end of the pillar into the base socket.

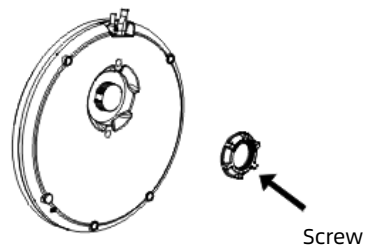


(2) Put the screw into the bottom.




(3) Turn the screw clockwise direction and tighten the base bolt to fix it.

Put the position of the fan rear grille on the motor head (STEP1) , and tighten the knob clockwise to fix the rear grille cover to motor head(STEP2).

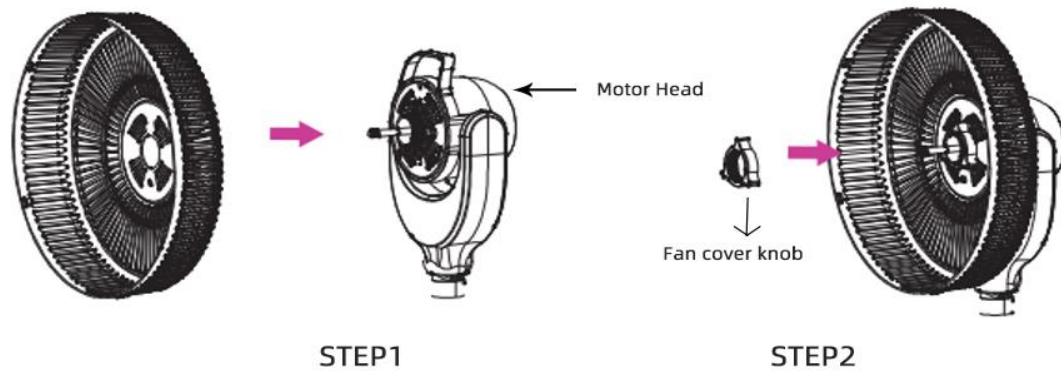

4. Install the Fan Blade

Put fan blade to the motor shaft, and tighten the knob in clockwise direction(STEP1). Then use the screw to fix the front grille.

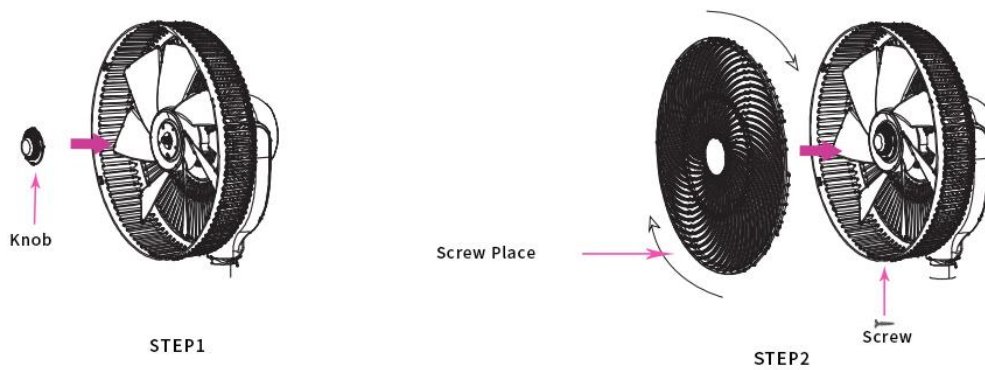

Note: Please make sure the fan blade is tightened, otherwise there will be danger!

Cleaning and Maintenance


- Warning

Before clearing, please turn off the power switch and pull out the plug, do not spray water or spray mist directly on the fan.

- Cleanable Parts

Use the screwdriver to remove the screws between the front grille and the rear grille. Use the soft cloth or sponge and neutral detergent to wipe the exterior. And let the parts drying completely after cleaning.

See below Images:

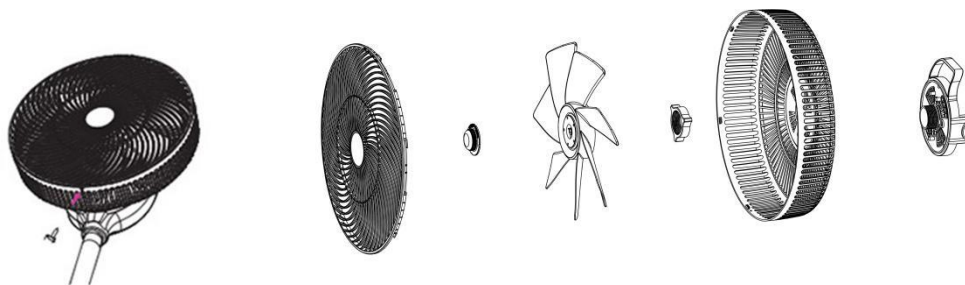

Fixed Screw

- Cleaning of external non detachable parts

Use the soft cloth in warm water below 40°, then wipe off the fan surface stains.

- Storage

If product is not used for a long time, clean it and dry it, then put it into the original packing box and store in a dry place.

Mobile APP's TUYA Operation Manual

Note:User needs to install Tuya App correctly to connect the WiFi function of the fan successfully!


1.Download Tuya Smart APP

Please use your mobile phone to scan the QR code, then download and install the Tuya Smart APP for mobile control function, Please reference the APP interface below.




2.Tuya App Connection Instruction


1.Download TUYA APP from APP store.

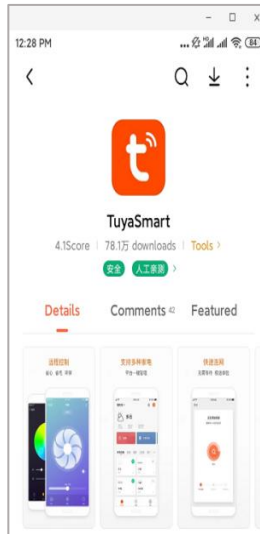


2.Create a new user account.

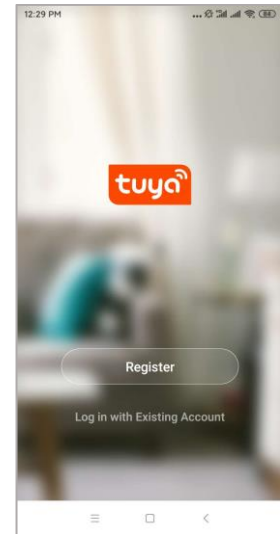


3.Register an account to get verification code.

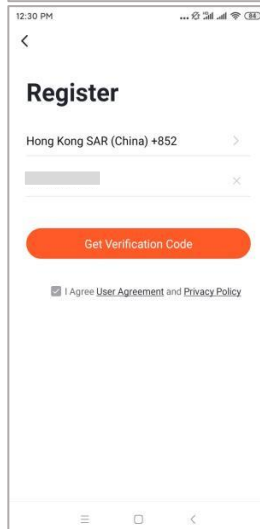


4.Enter the verification code.

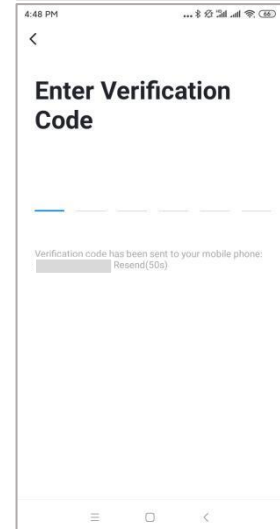

 
5.Set your password.

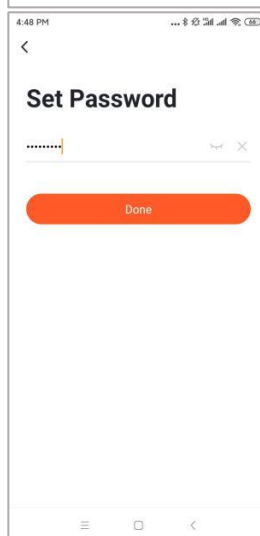


6.Tap the "+" icon on the right corner of "Home" page to enter into "Select Device Type" interface.

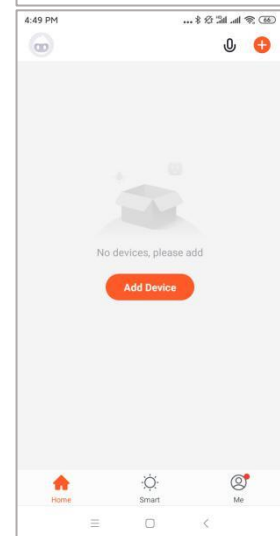


7. Select the "Fan" option in "Small Home Appliances".

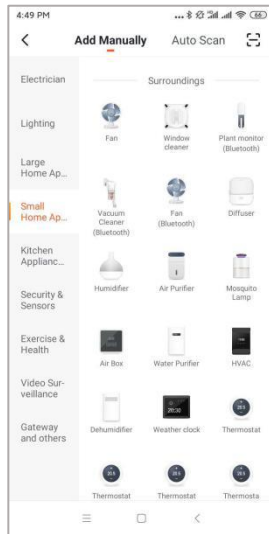


9. In shutdown mode of the fan after connecting the main power, press the fan's ON/OFF key and MODE key at the same time until the WiFi indicator light is released from slow flash to fast flash, then loosen your grip, and according to the instructions to operate the APP.

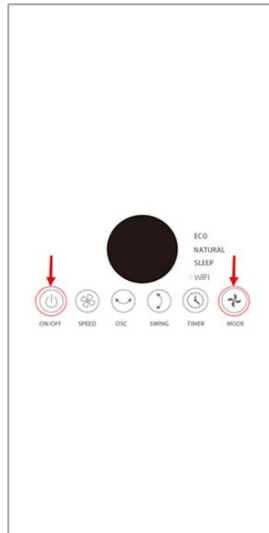


8. Choose the local WiFi routers (Only supports 2.4GHz) and enter the correct password, then click next to complete.

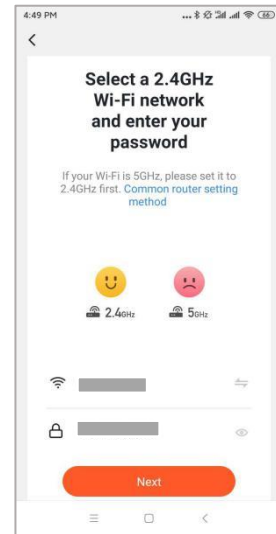

 
10. Select the corresponding option according to the WiFi indicator status prompt.

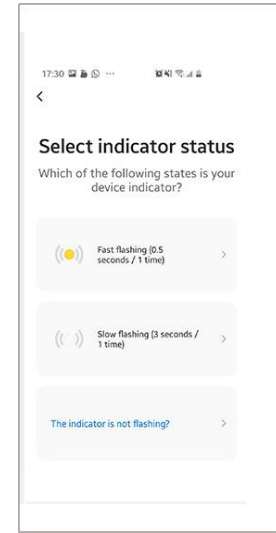


11. Please ensure the device is powered on when connecting.

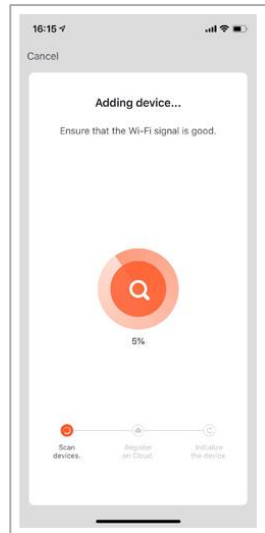

 12. Add device successfully, then click finish.

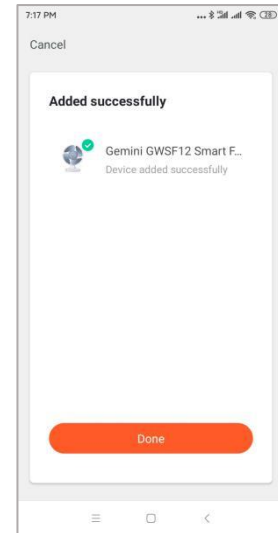


13. The fan can be controlled after connecting the device.

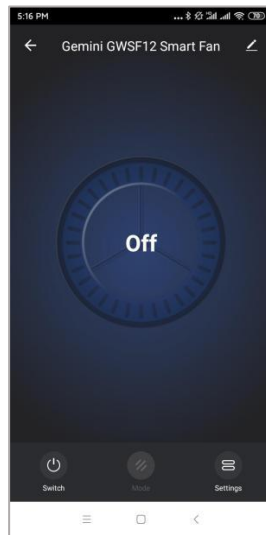


14. Press the "Switch" key to turn on the fan. The fan wind speed is set to "8" level by default, and the fan wind speed of 1-12 level can be adjusted on the horizontal line.




15. Press the "Switch" key to turn off the fan, restart to restore the last shutdown gear.

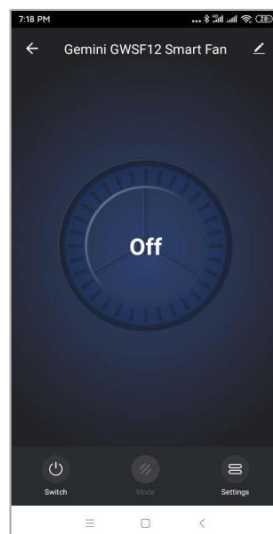

16. Press "Mode" key to select Normal, Sleep, Natural and ECO, if do not select, the default is Normal if you choose the working mode after shutdown and restart.

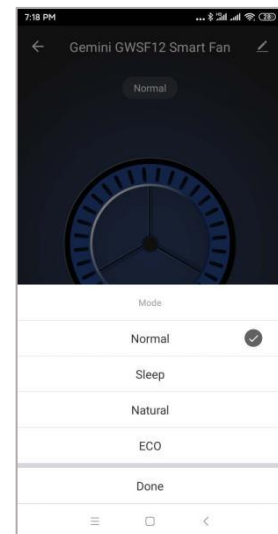


 17. Press "Settings" key to control Up-and-Down Swing and Left-and-Right Swing; Press "Timer off setting" to select 1-9h timing (The timing function can only be used when shutdown).

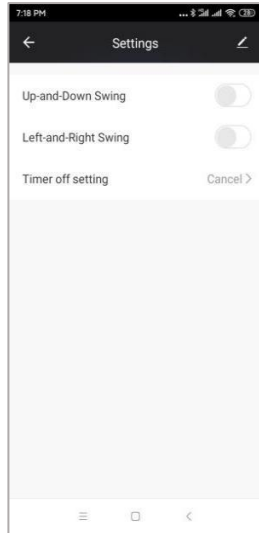


3. Retrieve Password Operation Instruction


1. Click to log in with an existing account.

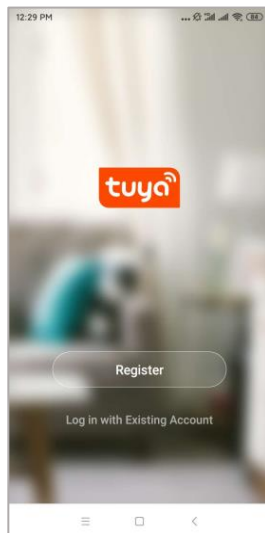


2. Click "Forget Password".

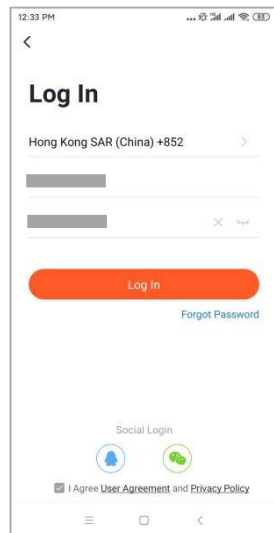


3. Get verification code if you forget the password.

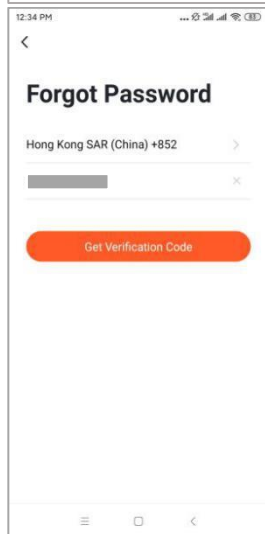

 4. Enter verification code.

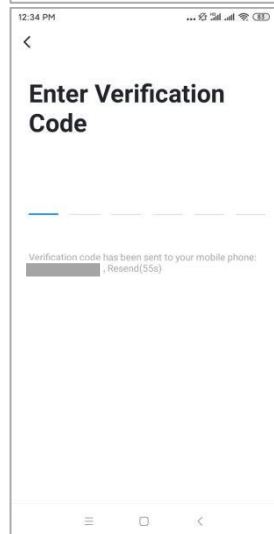

 5.Set your password.

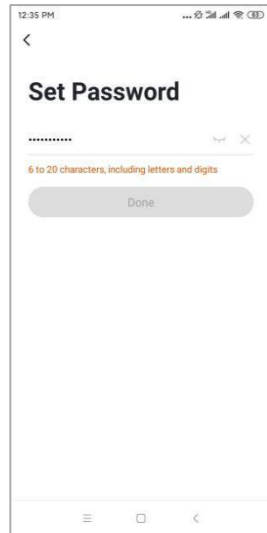

Important Note:

- The appliance must be connected with power supply and WIFI.
- Due to the continuous product improvement and updates on the Mobile APP interface, the above mentioned data and user interfaces are only for reference. The actual APP interface is subjected to the final download version and won't notice to user in advance.

Product Specification

Model: GWSF12

Voltage: 100-240V~

DC Brushless Motor: DC15V 30W

Timer Off:1-9hours

Noise: <53db

MAX RPM:1100

Max Wind Speed: 6 m / s

Product size: 360Wx1030Hx360D mm (Max. height) 360Wx800Hx360D mm(Min.height)

*The final product specification may be varied according to a different lot of material and actual input voltage power of the usage area.

安全注意事項

感謝您選擇我們的產品。為了您的消費者權益，請仔細閱讀保養卡並妥善保管。與產品保修相關的專案如下所示：

- 一般電器產品並不是為體質、感覺或智力有障礙人士(包括八歲以下兒童)、或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
- 使用前請細閱及了解所有說明書內容，以免誤用產品。請保存好說明書作日後參閱。
- 不可對風扇使用說明書上記載以外的方法及用途，以免發生意外。
- 在任何情況下包括使用前、使用中、使用後及存放時，不可讓八歲以下兒童接觸、使用、當玩具把玩、清洗及靠近本風扇、電源線及所有配件，以免發生意外。
- 請勿將包裝袋置於幼兒拿得到的地方。若套穿在頭上等，可能會堵塞口鼻導致窒息死亡。
- 未完全安裝好扇葉、前 / 後網，切勿把電插頭連接電源插座啟動風扇，避免發生意外。
- 風扇運作時必須有人看管，不要讓小童靠近接觸。
- 在沒有任何人看管的情況下，切勿啟動風扇，以免發生意外。
- 如使用時或放置時不慎把風扇傾倒，請即時先把電插頭拔離電源插座把風扇馬上關掉，把風扇放置好，檢查風扇沒問題才可再次使用。如有任何不確定或疑問請先交往維修中心檢查。
- 本風扇並不防水，切勿把風扇整機、遙控器、電源線和電插頭浸在水中或任何液體裏，也不可將其放在水龍頭下沖洗和被濺水，以免發生意外。機身外殼只能以乾軟布清潔。
- 風扇不防水，切勿把風扇放置在浴室、花灑、洗滌地方、泳池邊附近及室外使用及存放。
- 切勿將風扇放置 / 靠近明火或發熱體 / 產品旁邊使用及存放。同樣切勿放置在可被水濺到的地方使用及存放，以免破壞風扇及引起短路等意外。
- 切勿把易燃及爆炸性物品如石油、油漆或其他易燃物品放置在風扇附近位置；切勿在充滿易燃氣體的地方使用及存放風扇；切勿在風扇附近使用任何噴霧劑或殺蟲劑等，以免發生意外或破壞風扇。
- 切勿將手指或其他物品伸入前網和後網內或轉動部位，否則會造成重大傷害。特別注意兒童，防止他們做出此動作。
- 切勿在風扇上的任何縫隙及轉動位置等地方插入任何物件，以免損壞風扇或發生意外。
- 風扇運作時切勿用任何物品遮蓋前 / 後網。
- 風扇啟動時或轉動時，切勿調節風扇高度或上下風向角度，必須待風扇完全關機後才可進行調節。
- 風扇只可放置在平坦穩固的地上使用，切勿用任何方法把風扇安裝在牆身或天花板上。
- 風扇啟動時注意切勿靠近前網和後網，以免頭髮被捲入風扇導致受傷。
- 風扇不要放置在靠近窗簾、枱布、衣物等地方使用，以免被吸入風扇，同樣亦注意避免讓紙張等物被吸入風扇，造成風扇破壞或發生意外。
- 切勿強行以人手轉動調節風扇左右風向角度，以免破壞風扇。

- 使用風扇期間不要移動風扇，移動風扇前必須先關掉風扇，把電插頭拔離電源插座，用機身後的手挽提起風扇，切勿拖拉本風扇，以免破壞風扇及刮傷地面表面。

 
重要事項：

- 連接電源之前，請檢查本地的電源電壓是否與產品所標示的電壓相符。
- 當插頭、電源線、風扇本身出現任何受損時，請即停止使用。盡快交與維修中心檢查，切勿自行改裝、拆卸或維修，以免發生意外。
- 不要擠壓、扭曲、拉扯電源線，以免電源線和插頭受損及鬆脫。電源線應遠離高溫表面。電源線如有受損請立即停止使用。切勿把電源線翹在風扇上，以免損壞電源線。
- 不要把電源線放在地毯底下或用任何物件覆蓋電源線，以免損傷電源線或引起火警。
- 電源線不可被任何物品踏過、重壓或被寵物咬破，以免損壞或折斷電源線，發生意外。
- 不要使用外接定時器連接本風扇。本風扇並非以外置時間設定的裝置操作。
- 使用風扇時切勿與其他電器共用同一電源座，以免電力過負發生意外。同時亦不要使用延長線及延長拖板連接風扇使用。
- 把風扇放置離開電視機、收音機或其他影音器材最少 1 米以外的地方使用，否則可能會對以上器材造成干擾。
- 請勿用濕手接觸電插頭、電源插座及使用風扇，以免發生觸電意外。
- 拆卸或安裝前網時如不慎把螺絲掉進風扇內，請把風扇交與維修中心處理，切勿自行拆卸處理。
- 使用風扇時需注意保持室內空氣流通，以免影響進風效果。
- 請勿長時間直接對着人體吹風，特別是長者、幼兒、病人和不能自行調節體溫人士等，否則對健康有影響問題。
- 不要在潮濕、多塵的環境及表面下使用此風扇，及不要把風扇放置在陽光直射的地方使用和存放。
- 不要對風扇進行任何沖擊及摔落，亦不要按壓前網後網，以免造成風扇破壞及發生意外。
- 用戶應定期清潔機身、扇葉、前網及後網，以免積聚過多塵埃影響吹風效果。
- 進行風扇清潔、拆卸或安裝前，必須先把電源插頭拔離電源插座。
- 此風扇只供室內家庭使用及存放，不能作其他如商業用途及存放於室外。
- 如產品出現異常現象，如異味、冒煙、不正常聲響、過度發熱等情況，請立即把產品停止運作，拔掉電源插頭，停止使用。
- 遙控器使用電池，如使用時發現遙控距離變短或控制不良，可能是電池開始耗盡，需要更換全新電池。
- 如長時間不使用風扇，請把遙控器內的電池取出放好，把風扇放回包裝盒內並存放在乾爽通風及不易被小孩或寵物接觸的位置。
- 所有圖片只供參考，一切以實物為準。

警告

1. 請不要濕手拔電源線插頭，以免產生觸電危險。
2. 請保持平穩狀態使用。
3. 不得隨意分解機體，機器內部為帶電體，請勿水洗或沖水。
4. 電源線不得割傷、損壞、拉扯、扭轉、打結也不要壓上重物。
5. 請勿將手指或者其他物體塞入到風扇網框中。
6. 清潔和維護本產品時，必須電源插頭脫離連接。
7. 請勿讓兒童操作機器。
8. 由於此款循環扇上下和左右擺頭都是電動自動控制，故不能用手動大力搬動。

產品結構圖

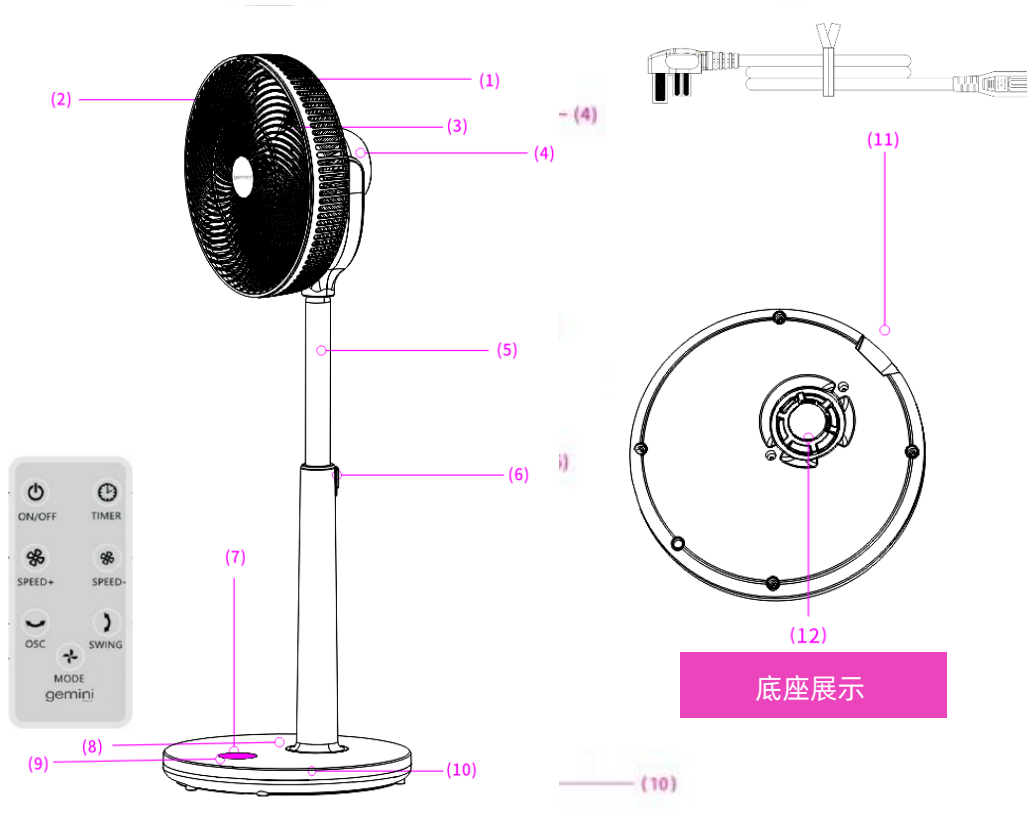

(1)後網罩	(2)前網罩	(3)風葉	(4)後殼
(5)伸縮管	(6)伸縮管調校鍵	(7)顯示屏	(8)遙控器放置處
(9)紅外線接收點	(10)底座	(11)AC 插座	(12)底座固定旋鈕

 
備註：產品圖片僅供參考，具體以實物為準。

產品配件


- 風扇*1
- 說明書*1
- 保養卡*1
- 電源線*1
- 遙控器*1


使用指南


1. 操作面板介紹及整機使用操作說明

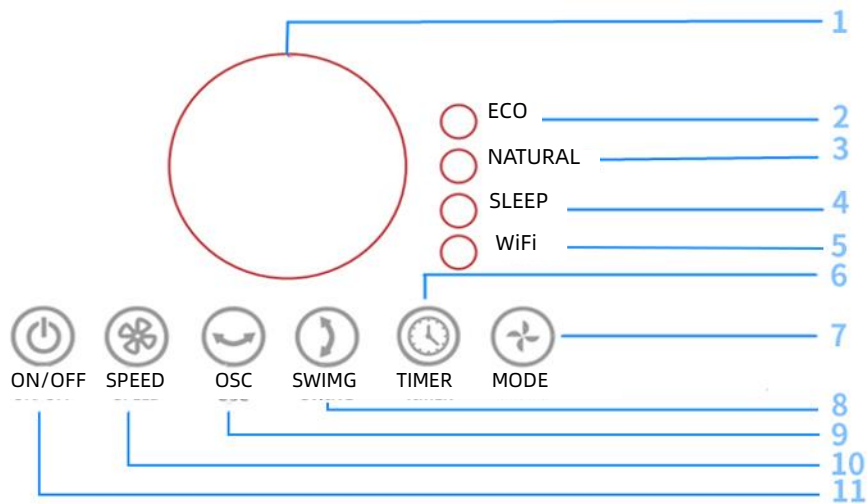



1.LED 顯示屏	2.智能模式指示燈	3.自然風指示燈	4.睡眠風指示燈
5.WiFi 無線網絡功能指示燈	6.定時功能按鍵	7.模式轉換按鍵	8.上下搖頭按鍵
9.左右搖頭按鍵	10.風速調節按鍵	11.開/關按鍵	


開/關鍵  風扇接駁電源後，按動此鍵機器開機，風速檔位預設默認為 8 檔，再次按動此鍵，關閉本機。

定時關機鍵  按定時器關閉鍵設置關閉時間，風扇將在 1h-9h 之間切換。5 秒後不操作風扇，顯示屏顯示風速和定時開關交替切換。


風速鍵  點擊風速鍵，增加風量，1-12 檔，到 12 檔以後再次點擊返回 1 檔。

上下擺頭鍵  按上下擺頭鍵第 1 次，上下擺頭步進電機啟動；按上下擺頭鍵第 2 次，上下擺頭電機關閉。

左右擺頭鍵  按左右擺頭鍵第 1 次，左右擺頭步進電機啟動；按左右擺頭鍵第 2 次，左右擺頭電機關閉。


模式鍵  按模式鍵後，可調校智能風、自然風、睡眠風 三種功能模式，每按 1 次會選定 1 種模式，對應的指示燈會點亮，智能風模式，風扇顯示屏會顯示當前的環境溫度，根據室內溫度自動調節風速的快慢控制檔位切換。切換到自然風模式，風扇會按系統設定好的檔位風速進行工作。選定睡眠風模式時風扇進入靜音模式，達到人適合睡眠的要求。

2.遙控器功能說明

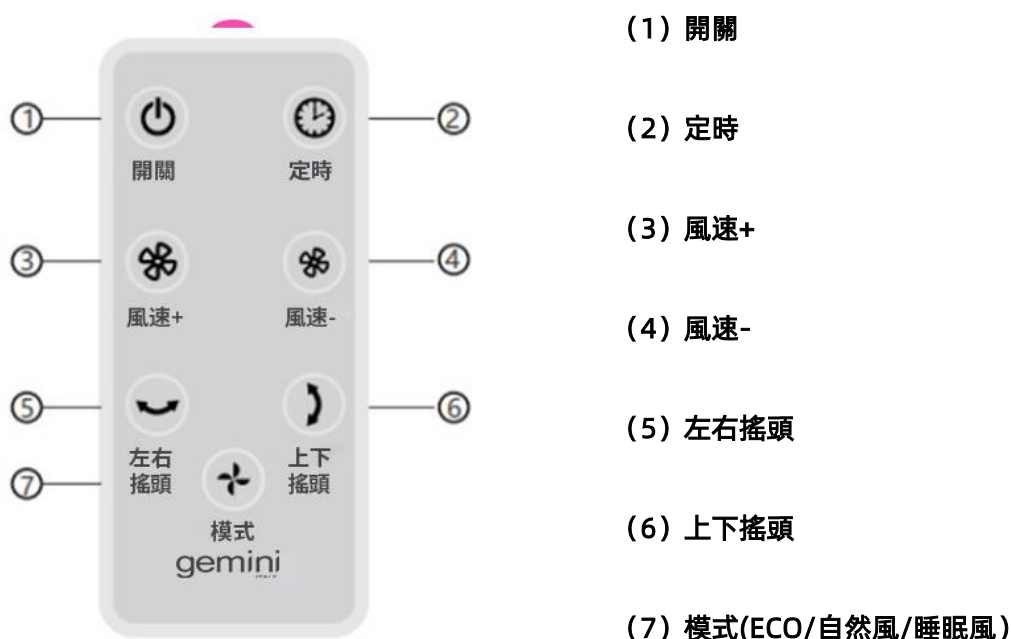

溫馨提示：


1. 遙控器在產品正面 6 米內，偏離角度在 45°範圍內正常使用。
2. 將 CR2025 電池放在支架上，確保“+”面朝上，背面朝下。
3. 遙控器內已裝好電池，使用前請拔掉絕緣，遙控器電池使用完以後，請將廢舊電池分類回收。

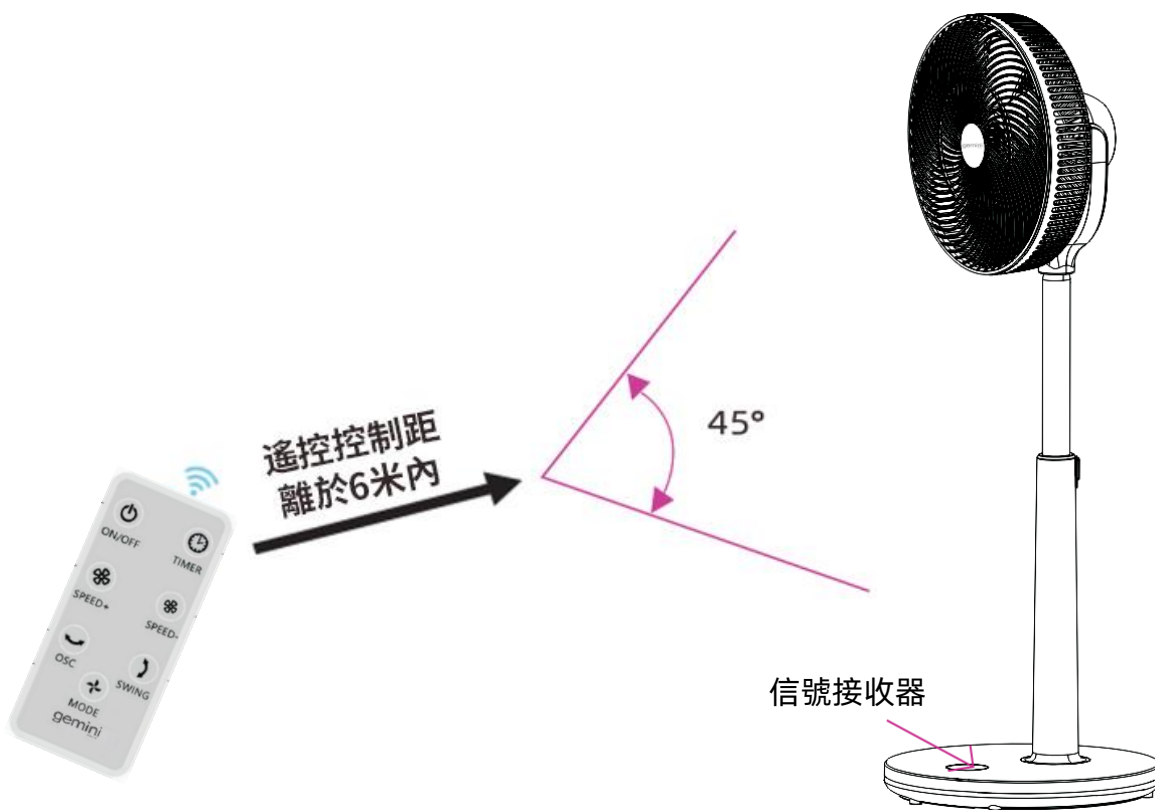

2. 搖頭功能設定

點擊 OSC 或 SWING 按鍵可開啟自動搖頭模式。

左及右自動搖頭 100 度

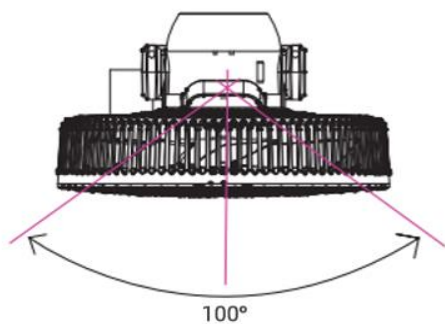

上及下自動搖頭 90 度




注意：切勿強行擺動風扇機頭的水平或垂角度超過 90 度，否則會損壞電風扇機械結構。


安裝說明

1. 打開風扇組件

如圖示，取出風扇組件，逆時針旋轉風扇前網至鬆動，按方向向外卸下風扇前網，取出風葉。

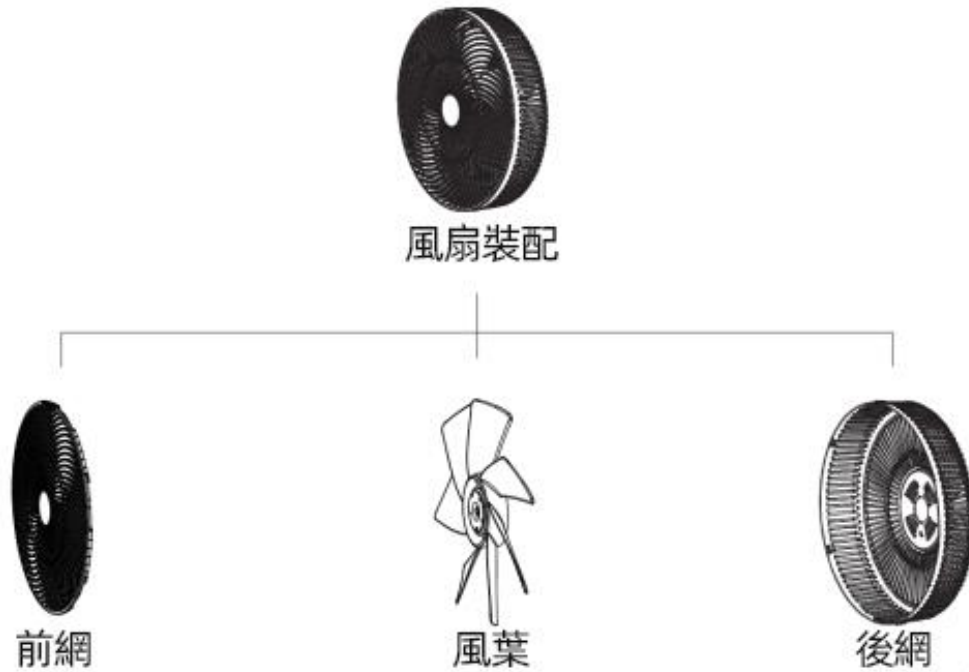


2. 安裝底座

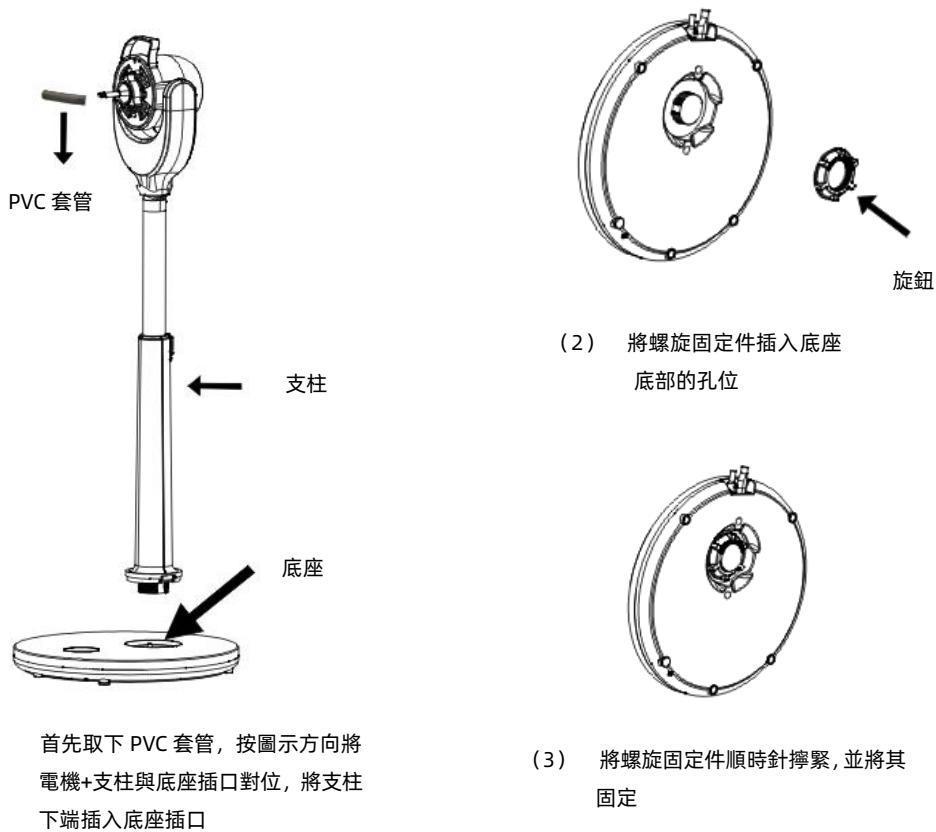


3. 安裝風扇後網在主電機頭部

將風扇後罩對位點裝上電機頭部（步驟一），順時針旋緊風扇罩旋鈕，使風扇後罩與電機頭部固定（步驟二）。

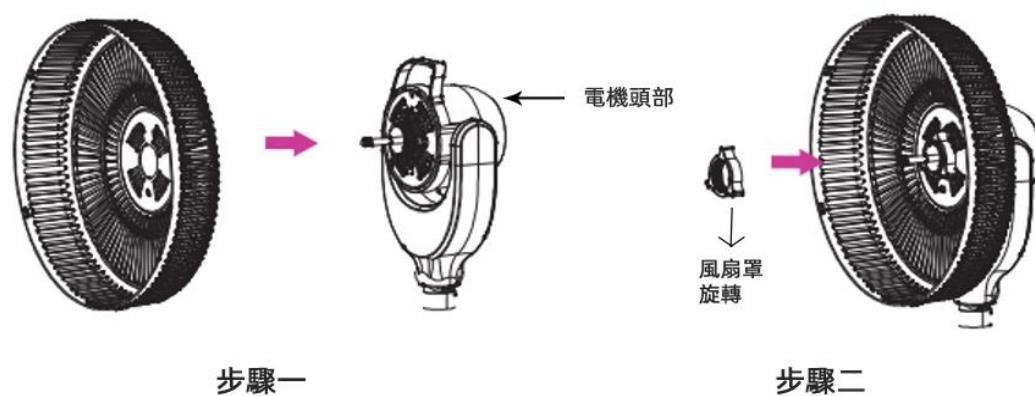

4. 安裝風葉


將風機葉片置於電機軸上（步驟一），順時針擰緊旋鈕，然後用螺絲固定前網（步驟二）。

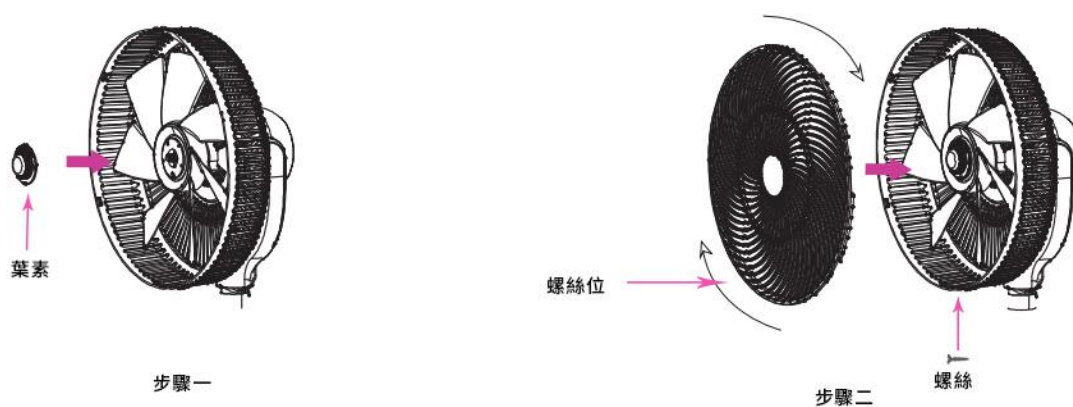

注意：請確保風扇葉緊固件將風扇葉緊固，否則會存在危險。

清潔與維護說明

* 警告：清洗前，請務必關閉電源開關，拔下插頭。不能直接對電風扇噴水或噴霧。

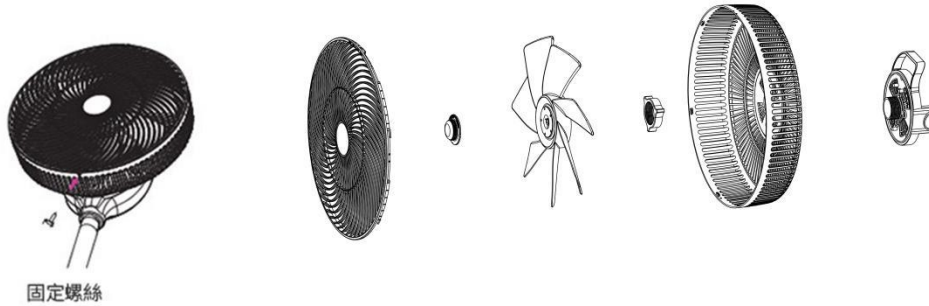

* 可清洗的部件：用梅螺絲刀（十字螺絲刀）取掉前殼與中網之間的固定螺絲，便可用中性清潔劑通過軟布或者海綿毛刷等清洗上圖所示配件，清洗完後必須擦乾全部配件。

* 電風扇底部不可拆卸部件的清洗：將軟布在低於 40 度以下溫水的軟布後，擦去機器表面污漬。

* 儲藏：電風扇長期不使用時，清洗乾淨，晾乾後裝入原包裝盒中，並存放在乾燥處。

手機上塗鴉智能程式的連接指南

注意：用戶需要正確安裝塗鴉智能 APP,才能確保成功連接本產品的 WiFi 無線網絡功能!

1. 下載塗鴉智能 APP

請用手機掃描右邊二維碼

下載並安裝 Tuya Smart App.

APP 更多功能，請參考 APP 介面提示。



2. Tuya App 連接說明

1. 從 APP 商城下載塗鴉軟件。



2. 創建新賬戶。



 
3. 註冊賬戶，獲取驗證碼。



4. 輸入驗證碼。



5. 設置密碼。

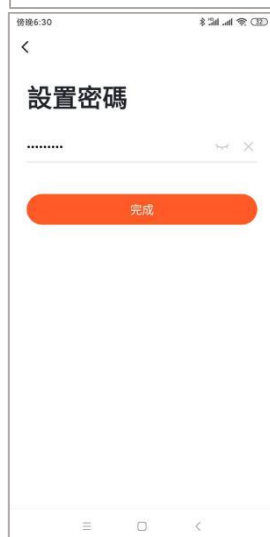

6. 點擊主頁右上角的“+”號圖標，進入選擇設備類型界面。




7. 選擇小家電中的“風扇”選項。



8. 請連接室內 WiFi 路由器並輸入正確的密碼，點擊下一步完成操作（僅支持 2.4GHz）。



9. 連接電源在關機模式下同時按住風扇的開關鍵和模式鍵，直到 WiFi 指示燈由慢閃到快閃松手，然後按指示操作 APP 界面。

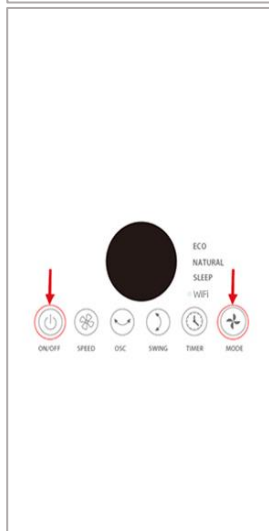

10. 請打開設備，確認指示燈快速閃爍，然後單擊“下一步”。



11. 連接設備時請確保設備處於通電狀態。



12. 添加設備成功，點擊完成。



13. 連接設備後可控制風扇。



14. 按下“開關”鍵，打開風扇，風扇風速默認為“8”檔，可隨意在橫線上調整 1-12 檔的風速。



15. 再次按下“開關”鍵，關閉風扇，再次開機恢復上次關機時的檔位。



16. 打開“工作模式”，可選擇“正常風”、“睡眠風”、“自然風”、“智能模式”4種模式選擇，若不選擇，則默認為“正常風”，選擇工作模式開機後，再重新啟動默認為“正常風”模式。



17. 點擊“設置”鍵即可控制上下及左右搖擺風開關；點擊“關機定時設置”可任意選擇 1-9H 定時（定時功能僅限關機時才可使用）。



3.找回密碼操作說明

1. 點擊使用已有帳戶登錄。



2. 點擊“忘記密碼”。




3. 請輸入手機號碼，獲取驗證碼。



4. 輸入驗證碼。



5. 重置密碼。

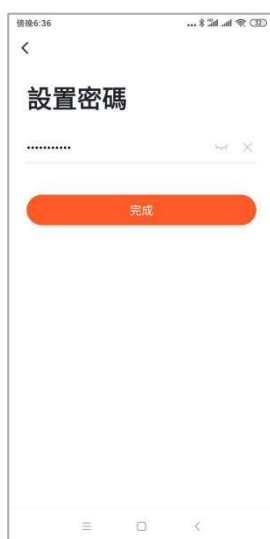

重要注意事項：

- 設備必須連接電源和 WIFI。
- 由於本產品及手機軟件程式使用界面會不斷改良及更新，以提升用戶使用體驗。以上文中列出的軟件使用界面內容及數據只供參考。最新的使用界面需按當時下載的軟件版面為實，不會另行通知。

產品規格

型號： GWSF12

電壓： 100-240V~

電機： DC15V 30W

定時關機： 1-9 小時

噪音值： <53db

最大轉速： 1100

最大風速： 6M/S

產品尺寸： 360 闊 X 1030 高 X 360 深 毫米(最高) 360 闊 X 800 高 X 360 深 毫米 (最低)

*相關產品的規格，可能會因配件批次或實際使用地區的電壓差異而有所不同。

請記錄下列產品資料

• 型號

• 機身編號

• 經銷商名稱

• 購買日期

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong
香港九龍灣啓祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com

Proudly Serviced by:



太平家庭電器