 


空調器遙控器說明書

三菱重工窗口式空調器

中文

ENGLISH

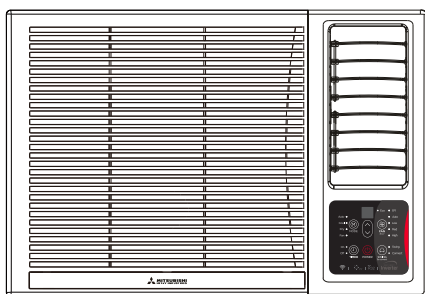

REMOTE CONTROL USER'S MANUAL

WRK20MGC1
WRK26MGC1
WRK35MGC1
WRK53MGC1

R32 Refrigerant



承蒙選購三菱重工空調器，深表感謝！爲了使空調器長久保持其良好的運轉性能，在您開始使用空調器之前，務請仔細閱讀本說明書。閱後應將它妥善保管好，以備必要時查閱。

Thank you for purchasing a MITSUBISHI HEAVY INDUSTRIES-JINLING AIR CONDITIONERS CO.LTD. Air-Conditioner. To get the best long-lasting performance, please read and follow this User's Manual carefully before using your air-conditioner. After reading, please store the Manual in a safe place and refer to it for operational questions or in the event of any irregularities.

本空調器使用輕度易燃製冷劑(R32)，當需要維修、檢查以及保養時，請對經銷商說明此情況。

This air conditioner uses mildly flammable refrigerant(R32). Please explain this to dealer when it needs repair, inspection and maintenance.

本空調器適用於家用。

This air-conditioner is intended for domestic use.

目 錄

遙控器規格	01
遙控器操作說明.....	02
遙控器各按鈕功能.....	03
遙控器顯示屏介紹.....	04
如何使用基本功能.....	05
如何使用進階功能.....	09

特別注意

- 設備上的按鈕設計可能與顯示例略有不同。
- 如果冷氣機沒有相關功能，按遙控器上該功能的按鈕將不起作用。
- 當《遙控器手冊》與《用戶手冊》在功能描述上有較大差異時，以《用戶手冊》的描述為準。


設計和規格如有更改，恕不另行通知。

有關信息詳情，請諮詢銷售代理商或製造商。

遙控器規格

型號	RYT502A003
額定電壓	3.0V (兩節 R03/LR03 乾電池)
信號接收距離	8m
使用條件	-5°C ~ 60°C(23°F~140°F)

 快速入門指南

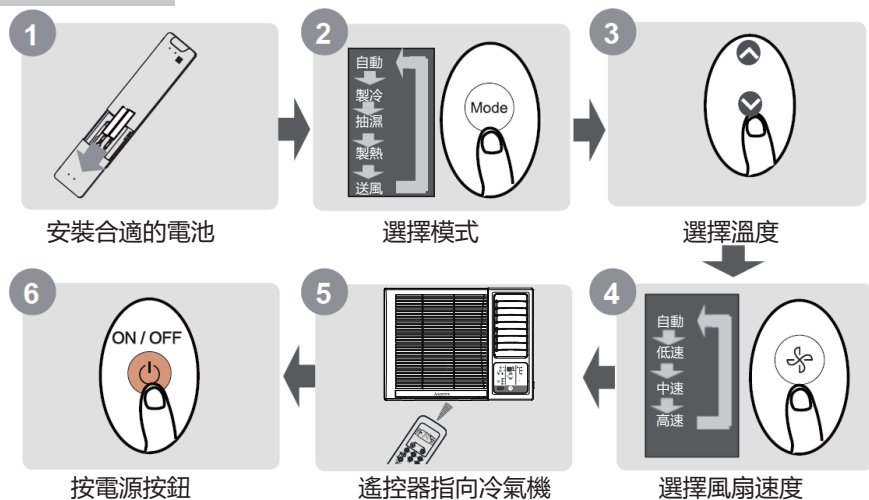

不確定功能是什麼？

 
有關如何使用冷氣機的詳細說明，請參閱本手冊的“如何使用基本功能”和“如何使用進階功能”部分。

遙控器操作說明

安裝和更換電池

您的冷氣機裝置可能隨附兩節電池（部分機型）。使用之前，請將電池放入遙控器中。

1. 從遙控器向下滑動後蓋，露出電池盒。
2. 插入電池，注意將電池的（+）和（-）末端與電池盒內的符號對齊。
3. 將電池蓋滑回原位。

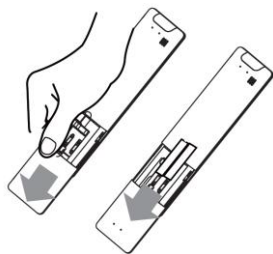

注意事項

- 不要混合不同類型的新舊電池使用。
- 如果兩個月或以上的時間都不再使用遙控器，請取出電池。



電池處理

不要將電池作為未分類的垃圾處理。有關正確處理電池，請參閱當地法律。

使用遙控器的提示

- 必須在距離冷氣機 8 米以內使用遙控器。
- 收到遙控信號時，冷氣機會發出蜂鳴聲。
- 窗簾，其他材料和直射的陽光會干擾紅外線信號接收器。

使用遙控器的注意事項

該設備可能符合當地國家法規。

- 在加拿大，它應符合 CAN ICES-3 (B) / NMB-3 (B) 的要求。
- 在美國，此設備符合 FCC 規則的第 15 部分。操作必須符合以下兩個條件：
 - (1) 本遙控器不會造成有害干擾，並且
 - (2) 本設備必須接受收到的任何干擾，包括可能導致意外操作的干擾。

本設備經測試證明符合 FCC 規則第 15 部分中關於 B 類數字設備的限制。這些限制設計用於在住宅安裝中提供合理的保護，以防止有害干擾。本設備會產生，使用並輻射射頻能量，如果未按照說明進行安裝和使用，可能會對無線電通信造成有害干擾。但是，不能保證在特定安裝中不會發生干擾。如果此設備確實對無線電或電視接收造成有害干擾（可以通過打開和關閉設備來確定），則鼓勵用戶嘗試通過以下一種或多種措施來消除干擾：

- 重新調整或擺放接收天線。
- 增加設備和接收器之間的距離。
- 將設備連接到與接收器不同電路的插座上。
- 請諮詢經銷商或有經驗的廣播/電視技術人員以尋求幫助。
- 未經負責合規方批准的更改或修改可能會使用戶喪失操作設備的權限。

遙控器各按鈕功能

在開始使用新的冷氣機之前，請確保熟悉其遙控器。以下是遙控器本身的簡要介紹。有關如何操作冷氣機的說明，請參閱本手冊的“如何使用基本功能”部分。

開/關按鈕

啟動或關閉冷氣機。

溫度升 ^ 按鈕

以 1°C (1°F) 的增量增加溫度。
最高 溫度為 30°C (86°F)。

設置按鈕

按 SET 按鈕可滾動瀏覽以下功能: UV(☀)-睡眠(💤)-iSense(⋈)-AP 模式(🌿)-UV ...
所選符號將在顯示區域上閃爍，然後按 OK 按鈕進行確認。

溫度降 v 按鈕

以 1°C (1°F) 的增量降低溫度。最低溫度為 17°C(62°F)。

風速按鈕

在以下順序選擇風扇速度
自動-低速-中速-高速。
按住此按鈕 2 秒鐘將啟動靜音功能

擺風按鈕

開始和停止垂直百葉窗運作。

模式按鈕

按以下順序選取運轉模式: 自動-製冷-抽濕-製熱-送風
注意: 淨冷機無製熱功能

生態節能

按此按鈕進入ECO生態節能模式。

OK 確認鍵

用於確認所選取的功能。

定時按鈕

設定定時開機或關機。

快捷按鈕

用於復原當前設定或重新開始之前的設定。

自動清洗按鈕

用於啟動/停止自動清潔或主動清潔功能。
(此功能不適用於WRK53MGC1)

LED 按鈕

打開和關閉冷氣機的LED顯示屏和冷氣機蜂鳴器(取決於型號)，從而營造舒適，安靜的環境。

 
增強按鈕

使設備在最短的時間內達到預設溫度。

型號: RYT502A003

遙控器顯示屏介紹

當初次安裝電池時，顯示屏會亮著所有信息。

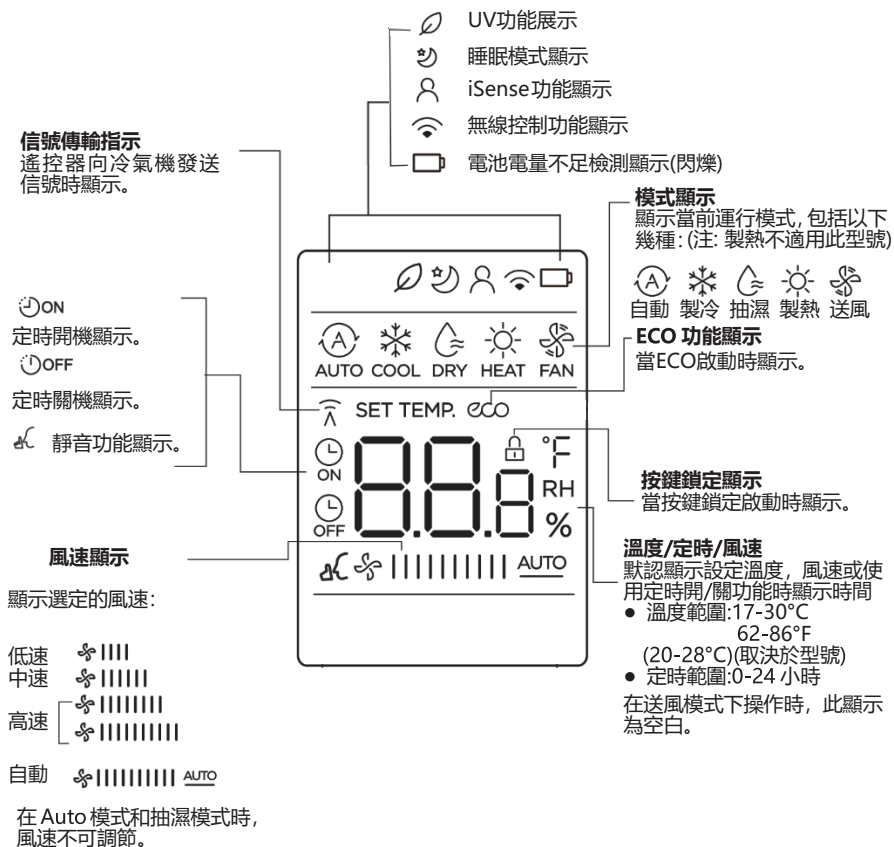


注意：圖中顯示的所有指標都是為了清楚表述。
但是在實際操作期間，在顯示屏中僅顯示相對功能符號。

如何使用基本功能

基本操作

 注意！在操作之前，請確保冷氣機已插上並接通電源。

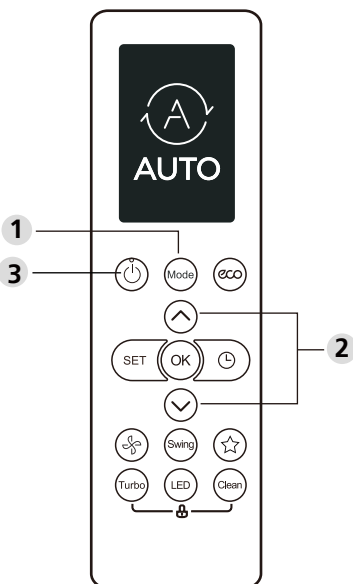

製冷模式

1. 按 MODE 按鈕選擇 **COOL 製冷**
2. 按溫度 ^ 或 v 按鈕設置所需的溫度
3. 按 FAN 按鈕調節風速範圍：
自動—低速—中速或者高速
4. 按 ON / OFF 按鈕啟動冷氣機

設定溫度

冷氣機的工作溫度範圍是 17-30°C (62-86°F) / 20-28 °C。

 
您可以以 1°C (1°F) 的增量增加或減少設定溫度。

 
自動模式

在自動模式下，冷氣機將根據設定溫度自動選擇製冷，送風和製熱模式(不適用此型號)。

1. 按 MODE 按鈕選擇 **AUTO 自動**
2. 按溫度 ^ 或 v 按鈕設置所需的溫度
3. 按 ON / OFF 按鈕啟動冷氣機

注意：在自動模式下，無法調整風速

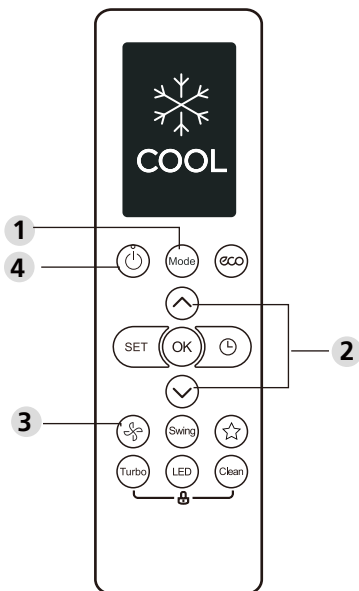

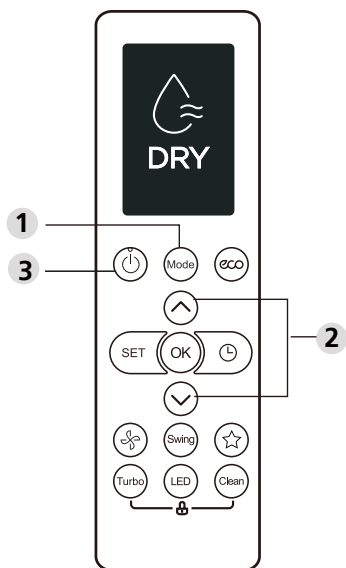

送風模式

 
1. 按 MODE 按鈕選擇 **FAN 送風模式**
2. 按 FAN 按鈕調節風速範圍：
自動-低速-中速-高速
3. 按 ON / OFF 按鈕啟動冷氣機

注意：您無法在 FAN 模式下設置溫度
而遙控器的 LCD 屏幕將不會顯示溫度

抽濕模式

1. 按 MODE 按鈕選擇 **DRY 抽濕**
2. 按溫度^或v按鈕設置所需的溫度
3. 按 ON / OFF 按鈕啟動冷氣機

注意：在抽濕模式下，無法調整風速

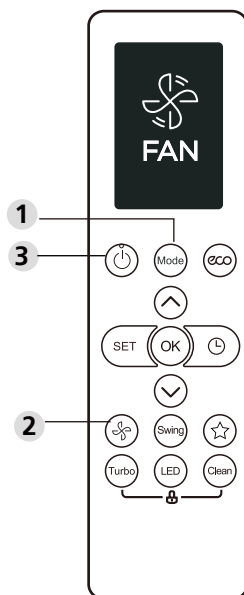

定時功能設置

 
設置冷氣機將定時自動開啟 / 關閉的時間。

定時開機設置

按 **TIMER** 按鈕啟動開機時間序列。

按溫度調節上或下按鈕多次，以設置開啟冷氣機所需的時間。

將遙控器指向冷氣機並等待 1 秒鐘，將啟動定時開機功能。

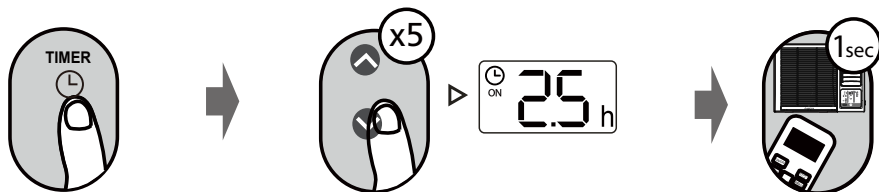


定時關機設置

按 **TIMER** 按鈕啟動關機時間序列。

按溫度調節上或下按鈕多次，以設置關閉冷氣機所需的時間。

 將遙控器指向冷氣機並等待 1 秒鐘，將啟動定時關機功能。

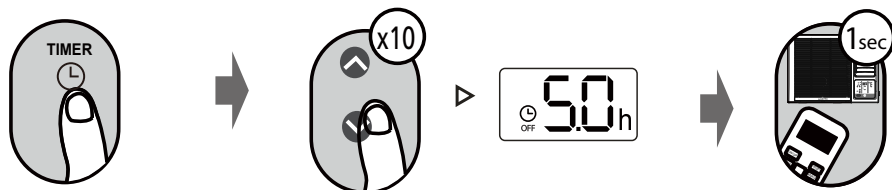



注意：

1. 設定 **TIMER ON** 定時開機或 **TIMER OFF** 定時關機時，每按一次，時間將增加 30 分鐘，最多增加 10 個小時。10-24 小時之間，它將以 1 小時為增量增加。(例如，按 5 次得 2.5h，然後按 10 次得 5h,) 計時器將在 24 點後恢復為 0.0h。
2. 通過將其計時器設置為 0.0h 來取消定時功能。

定時器開與關設置 (示例)

請謹記，為這兩個功能設置的時間段是指當前時間之後的小時數。

  示例: 如果當前計時器為 1:00 PM, 則要按上述步驟設置計時器, 本機將在 2.5h (3:30 PM) 之後打開, 並在 6:00 PM 關閉。

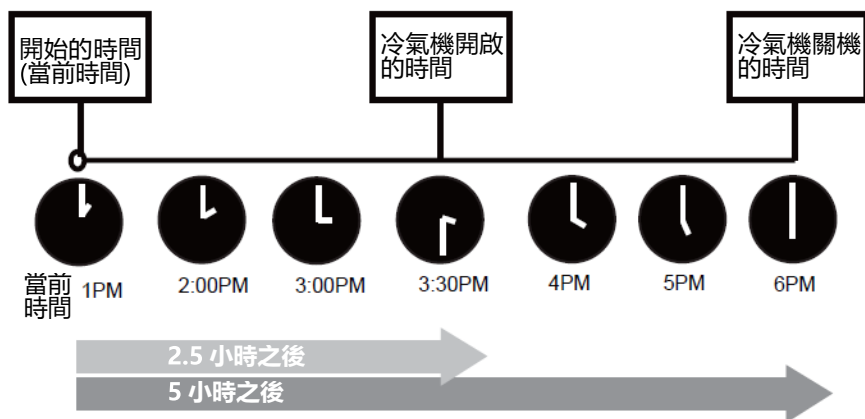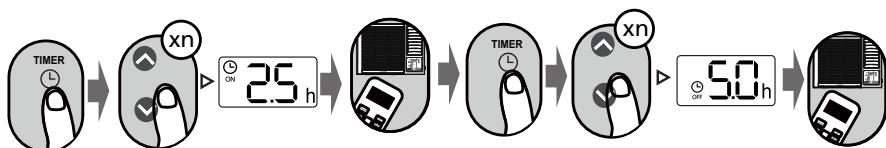


示例: 如果當前計時器為 1:00 PM, 則要按上述步驟設置計時器, 本機將在 2.5h (3:30 PM) 之後打開, 並在 6:00 PM 關閉。

如何使用進階功能


擺風功能

 按擺風 **Swing** 按鈕

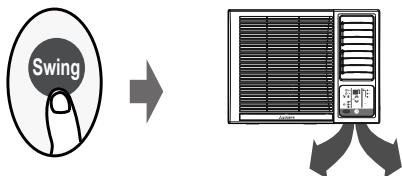


按一下 **Swing** 搖擺 按鈕，垂直百葉將自動左右搖擺。再按一次使其停止。

 LED 顯示屏

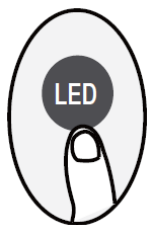

按一下 LED 按鍵

 按下此按鈕可以打開和關閉冷氣機上的顯示屏。

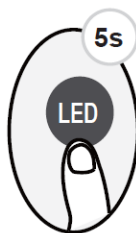

按住 LED 按鈕 5 秒鐘以上（只適用於部分型號）

按住此按鈕 5 秒鐘以上，冷氣機將顯示實際的室溫。再按 5 秒鐘以上將恢復顯示設定溫度。

 
靜音模式



持續按住 **FAN 風扇** 按鈕 2 秒鐘以上以啟動/禁用靜音功能（部分機型）。

由於壓縮機低頻運行，可能會導致製冷和製熱能力不足。按 ON/OFF 開/關，MODE 模式，Sleep 睡眠，Turbo 增強或 Clean 清潔按鈕將取消靜音功能。

ECO節能功能

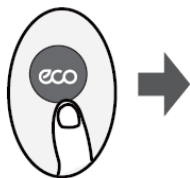

按 ECO 按鈕以進入節能模式。

注意：此功能僅在製冷模式下有效。

 
ECO 生態節能模式：

在製冷模式下，按此按鈕，遙控器會自動將溫度調節到 24°C/75°F，自動風扇速度，此狀態可以節省能量（但僅限設定溫度小於 24°C/75°F 時）。如果設定溫度高於 24°C/75°F，按 ECO 按鈕，風扇速度將變為自動，設定溫度將保持不變。

注意：

按下 ECO 按鈕，修改模式或將設定溫度調節到 24°C / 75°F 以下將停止 ECO 操作。在 ECO 模式下，設定溫度應為 24°C / 75°F 或更高，這可能會導致冷卻不足。如果您感到不舒服，只需再次按 ECO 按鈕即可將其停止。

鎖定功能

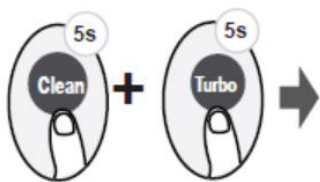

同時按下 **Clean** 按鈕和 **Turbo** 按鈕 5 秒鐘以上以啟動鎖定功能。

除了再次按下這兩個按鈕兩秒鐘以解除鎖定以外，所有按鈕都不作回應。

快捷按鈕功能

按快捷按鈕 (SHORTCUT)



當遙控器打開時，按此按鈕，系統將自動返回到之前的設定，包括操作模式、設定溫度、風速級別和睡眠功能（如果已啟動）。如果按下2秒鐘以上，系統將自動恢復當前的操作設置，包括操作模式、設定溫度、風速級別和睡眠功能（如果已啟動）。

自動清洗功能 (此功能不適用於WRK53MGC1)

按自動清洗 Clean 按鈕



空氣中的細菌可以在設備換熱器周圍凝結的水分中生長。經常使用時，大部分水分會從設備中蒸發掉。

按下 Clean 按鈕，冷氣機將自動清潔。清潔後，本機將自動關閉。在清洗中途按下 Clean 按鈕將取消操作並關閉設備。您可以隨時使用 Clean。

注意：您只能在 COOL 或 DRY 模式下啟動此功能。

LED 顯示屏

 
增強功能

按增強 Turbo 按鈕



當您在製冷模式下選擇 Turbo 功能時，設備將以最強風設置吹冷空氣以啟動冷卻過程。

SET 設置按鈕

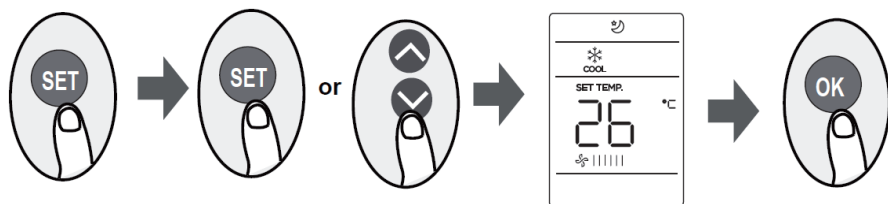

- 按 **SET 按鈕** 進入功能設置，然後按 **SET 按鈕** 或 **TEMP V** 或 **TEMP ^** 按鈕選擇所需的機能。所選符號將在顯示區域上閃爍，然後按 **OK 按鈕** 進行確認。
- 要取消選擇的機能，只需執行與上述相同的步驟即可。
- 按 **SET 按鈕** 可滾動瀏覽以下功能：
UV () → 睡眠 () → iSense () → AP 模式 ()
[*]: 如果您的遙控器具有 UV 功能 按鈕或睡眠 **SLEEP 按鈕**，則無法使用 **SET 按鈕** 選擇 UV 功能 或睡眠 **SLEEP 功能**。

UV 功能 ()

當 UV 功能啟時，內置 UV 燈通電，有助殺滅機內細菌，降低二次污染，讓冷氣機發放出來的空氣更清新。

Sleep 睡眠功能 ()

睡眠功能用於減少睡眠時的能量消耗（並且不需要相同的溫度設置以保持舒適）。此功能只能通過遙控器激活。

有關詳細信息，請參閱“用戶手冊”中的“睡眠操作”。

注意：睡眠功能在 **FAN 送風** 或 **DRY 抽濕** 模式下不可用。

AP 無線功能 ()

選擇 AP 模式進行無線網絡配置 對於某些設備，按 **SET 按鈕** 不起作用。要進入 AP 模式，請在 10 秒內連續按七次 **LED 按鈕**。

iSense 功能 ()

iSense 功能使遙控器能夠測量當前遙控器位置的溫度，並每隔 3 分鐘將此信號發送到冷氣機。

冷氣機在自動，製冷或製熱模式時，通過遙控器（而不是冷氣機本身）測量環境溫度將使冷氣機能夠優化您周圍的溫度並確保最大的舒適度。

注意：按住 **Turbo 增強按鈕** 七秒鐘以啟動/停止“iSense”功能的記憶功能。

- 如果激活了記憶功能，則“ON”將在屏幕上顯示 3 秒鐘。
- 如果記憶功能停止，“OF”將在屏幕上顯示 3 秒鐘。
- 激活記憶功能後，按開/關按鈕，切換模式或斷電不會取消“iSense”功能。

客戶服務中心：

電郵地址：8210service@gilman-group.com

請即上網登記：www.dchtoolbox.com

網址：www.gilman-group.com

Table of Contents


Remote Controller Specifications	14
Handling the Remote Controller	15
Buttons and Functions	16
Remote Screen Indicators	17
How to Use Basic Functions	18
How to Use Advanced Functions	21

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

Remote Controller Specifications

Model	RYT502A003
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5℃~60℃(23℉~140℉)

 Quick Start Guide

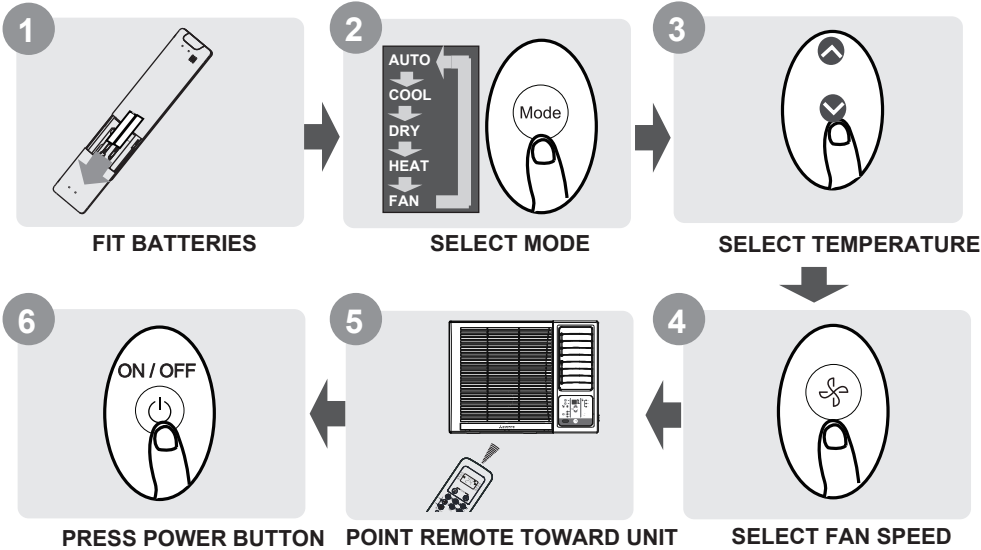

NOT SURE WHAT A FUNCTION DOES?

Refer to the **How to Use Basic Functions** and **How to Use Advanced Functions** sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE

 
- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will have no effect.
- When there are wide differences between "Remote controller Manual" and "USER'S MANUAL" on function description, the description of "USER'S MANUAL" shall prevail.

Handling the Remote Controller

Inserting and Replacing Batteries

Your air conditioning unit may come with two batteries(some units). Put the batteries in the remote control before use.

1. Slide the back cover from the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

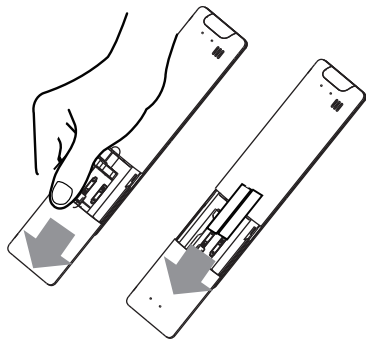

! BATTERY NOTES

For optimum product performance:

- Do not mix old and new batteries, or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.



BATTERY DISPOSAL

Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

TIPS FOR USING REMOTE CONTROL

- The remote control must be used within 8 meters of the unit.
- The unit will beep when remote signal is received.
- Curtains, other materials and direct sunlight can interfere with the infrared signal receiver.
- Remove batteries if the remote will not be used more than 2 months.

NOTES FOR USING REMOTE CONTROL

The device could comply with the local national regulations.

 
- In Canada, it should comply with CAN ICES-3(B)/NMB-3(B).
- In USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Buttons and Functions


Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the **How to Use Basic Functions** section of this manual.

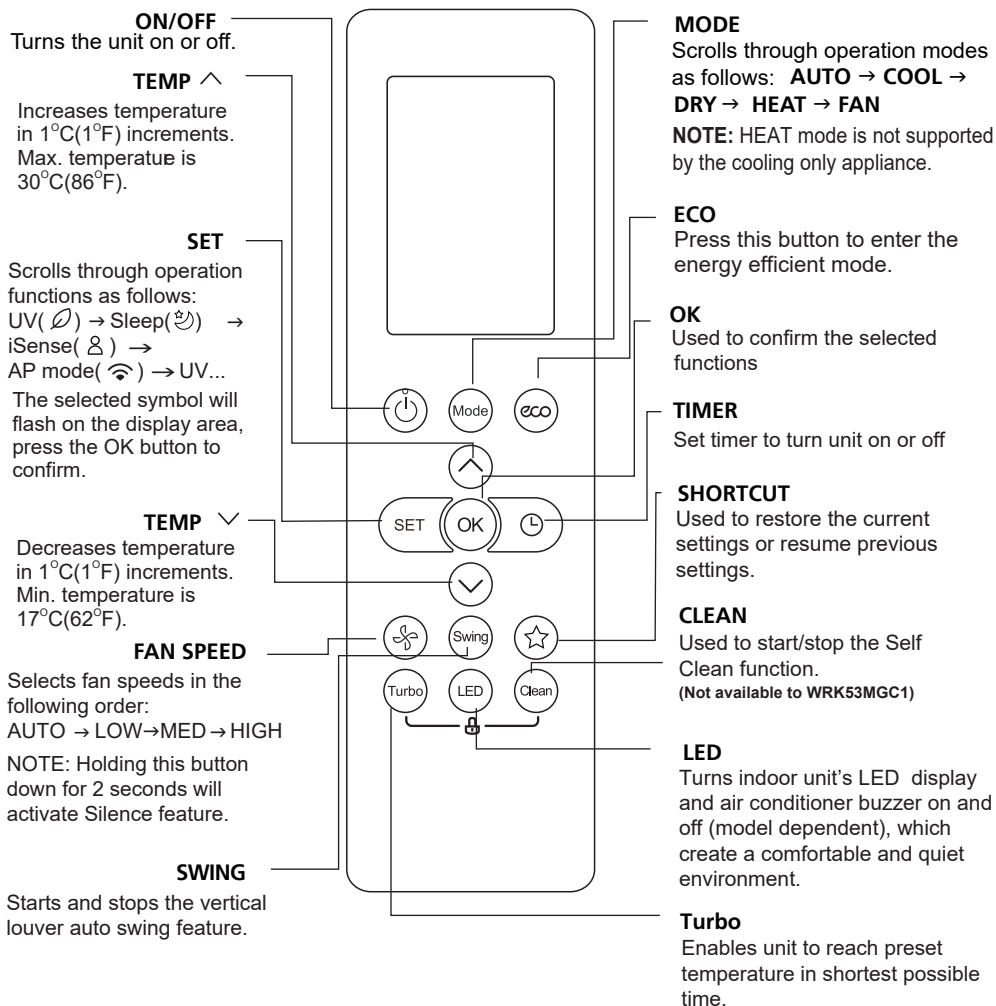

Model: RYT502A003

Remote Screen Indicators

 Information are displayed when the remote controller is power up.

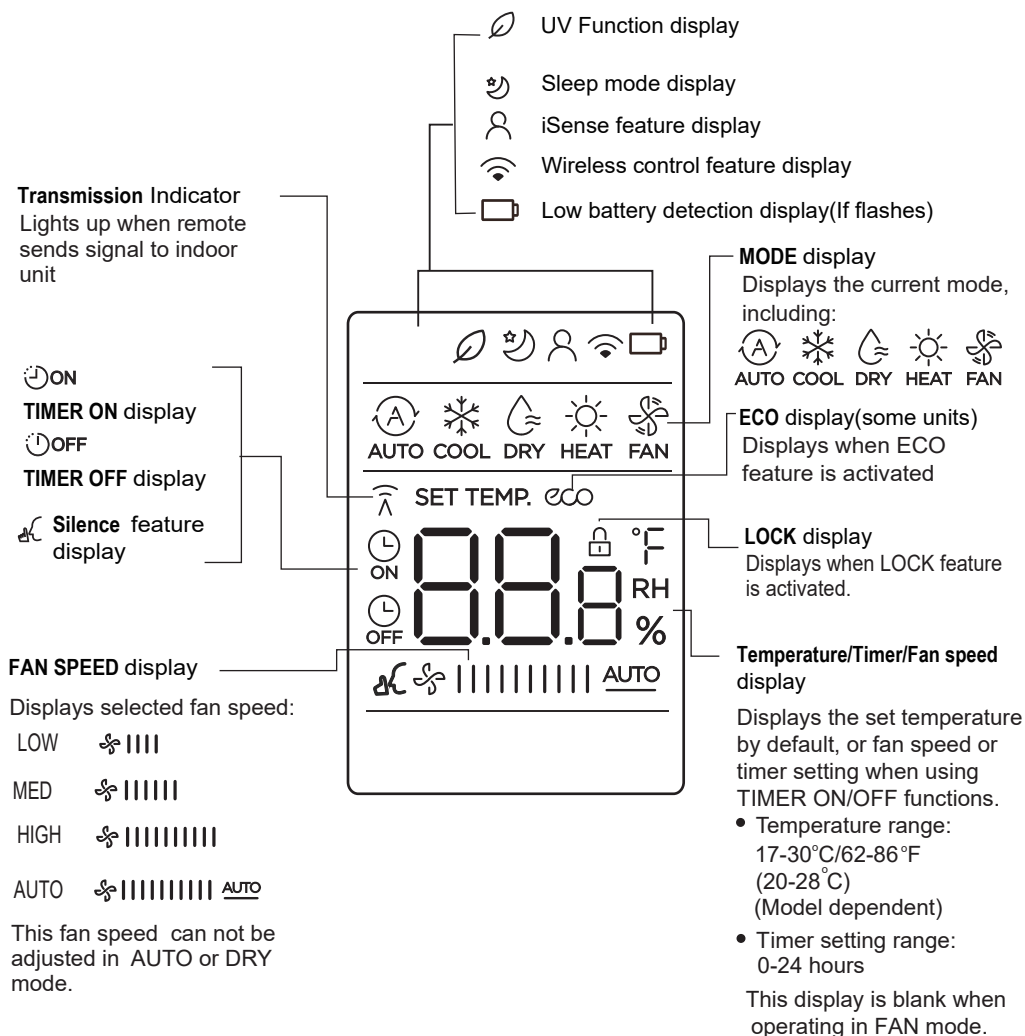


Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation, only the relative function signs are shown on the display window.

How to Use Basic Functions

Basic operation

 ATTENTION! Before operation, please ensure the unit is plugged in and power is available.

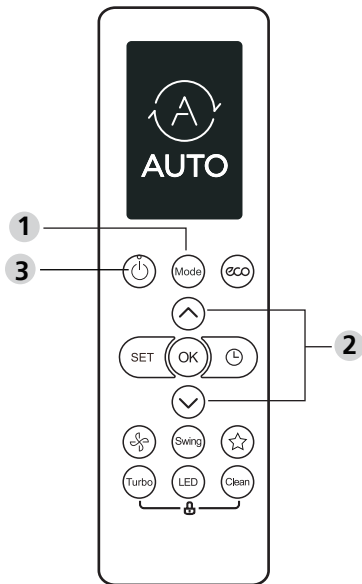

COOL Mode

1. Press the **MODE** button to select **COOL** mode.
2. Set your desired temperature using the **TEMP** $\wedge$ or **TEMP** $\vee$ button.
3. Press **FAN** button to select the fan speed: AUTO, LOW, MED or HIGH.
4. Press the **ON/OFF** button to start the unit.

SETTING TEMPERATURE

The operating temperature range for units is 17-30°C (62-86°F)/20-28°C.

 
You can increase or decrease the set temperature in 1°C (1°F) increments.

 
AUTO Mode

In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT operation based on the set temperature.

1. Press the **MODE** button to select **AUTO**.
2. Set your desired temperature using the **TEMP** $\wedge$ or **TEMP** $\vee$ button.
3. Press the **ON/OFF** button to start the unit.

NOTE: FAN SPEED can't be set in AUTO mode.

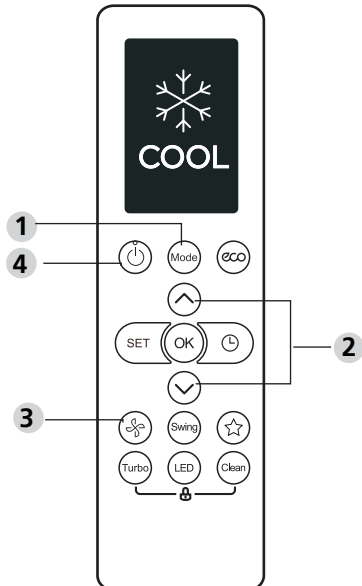

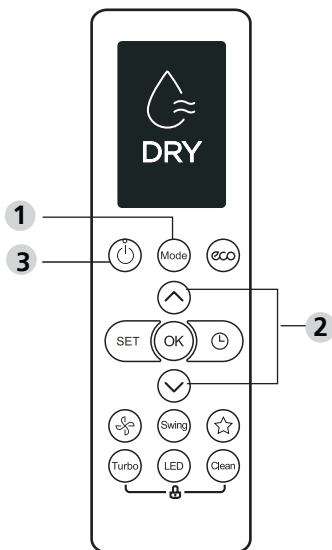

FAN Mode

 
1. Press the **MODE** button to select **FAN** mode.
2. Press **FAN** button to select the fan speed: AUTO, LOW, MED or HIGH.
3. Press the **ON/OFF** button to start the unit.

NOTE: You can't set temperature in FAN mode. As a result, your remote control's LCD screen will not display temperature.

DRY Mode (dehumidifying)

1. Press the **MODE** button to select **DRY**.
2. Set your desired temperature using the **TEMP** $\wedge$ or **TEMP** $\vee$ button.
3. Press the **ON/OFF** button to start the unit.

NOTE: FAN SPEED cannot be changed in DRY mode.

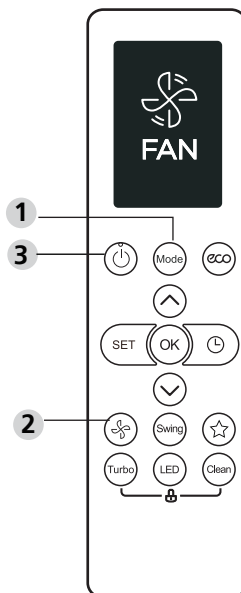


Setting the TIMER


TIMER ON/OFF - Set the amount of time after which the unit will automatically turn on/off.

TIMER ON setting

 Press TIMER button to initiate the ON time sequence.



 Press Temp. up or down button for multiple times to set the desired time to turn on the unit.




Point remote to unit and wait 1sec, the TIMER ON will be activated.




TIMER OFF setting

 Press TIMER button to initiate the OFF time sequence.



 Press Temp. up or down button for multiple times to set the desired time to turn off the unit.



Point remote to unit and wait 1sec, the TIMER OFF will be activated.

 
 


NOTE:

1. When setting the TIMER ON or TIMER OFF, the time will increase by 30 minutes increments with each press, up to 10 hours. After 10 hours and up to 24, it will increase in 1 hour increments. (For example, press 5 times to get 2.5h, and press 10 times to get 5h.) The timer will revert to 0.0 after 24.
2. Cancel either function by setting its timer to 0.0h.

TIMER ON & OFF setting(example)


Keep in mind that the time periods you set for both functions refer to hours after the current time.

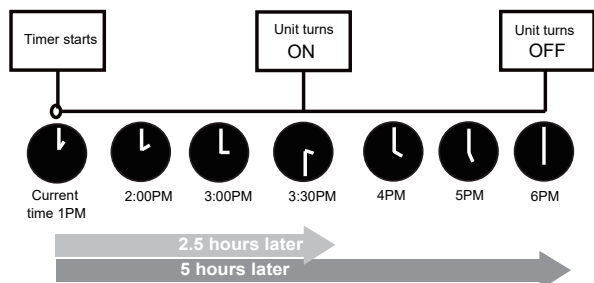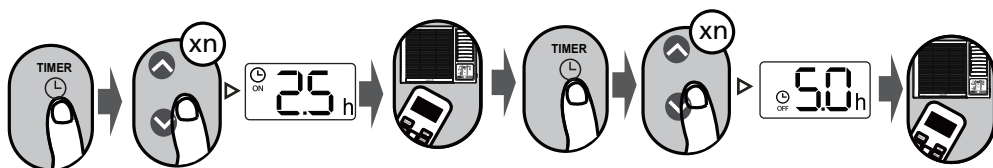

Example: If current timer is 1:00PM, to set the timer as above steps, the unit will turn on 2.5h later (3:30PM) and turn off at 6:00PM.


How to Use Advanced Functions

 Swing function

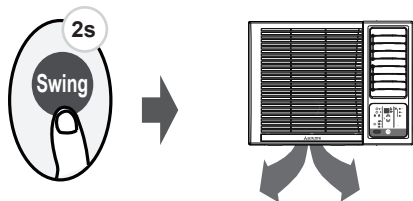


Keep pressing **Swing** button, the vertical louver swing function is activated.

 LED DISPLAY

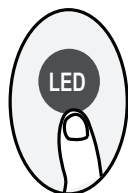

Press LED button

 Press this button to turn on and turn off the display on the indoor unit.

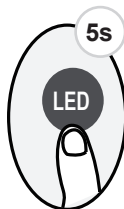

Press this button more than 5 seconds(some units)

Keep pressing this button more than 5 seconds, the indoor unit will display the actual room temperature. Press more than 5 seconds again will revert back to display the setting temperature.

Silence function



Keep pressing Fan button for more than 2 seconds to activate/disable Silence function(some units).

Due to low frequency operation of compressor, it may result in insufficient cooling and heating capacity. Press ON/OFF, Mode, Sleep, Turbo or Clean button while operating will cancel silence function.

ECO function

Press ECO button(some units)



Press ECO button to enter the energy efficient mode.

Note: This function is only available under COOL mode.

ECO operation:

 
Under cooling mode, press this button, the remote controller will adjust the temperature automatically to 24°C/75°F, fan speed of Auto to save energy (only when the set temperature is less than 24°C/75°F). If the set temperature is above 24°C/75°F, press the ECO button, the fan speed will change to Auto, the set temperature will remain unchanged.

NOTE:

Pressing the ECO button, or modifying the mode or adjusting the set temperature to less than 24°C/75°F will stop ECO operation.

Under ECO operation, the set temperature should be 24°C/75°F or above, it may result in insufficient cooling. If you feel uncomfortable, just press the ECO button again to stop it.

LOCK function

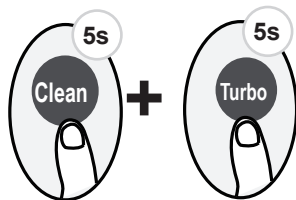

Press together **Clean** button and **Turbo** button at the same time more than 5 seconds to activate Lock function. All buttons will not response except pressing these two buttons for two seconds again to disable locking.

SHORTCUT function

Press SHORTCUT button(some units)



Push this button when remote controller is on, the system will automatically revert back to the previous settings including operating mode, setting temperature, fan speed level and sleep feature (if activated).

If pushing more than 2 seconds, the system will automatically restore the current operation settings including operating mode, setting temperature, fan speed level and sleep feature (if activated).

Clean Function(Not available to WRK53MGC1)

Press CLEAN button



Airborne bacteria can grow in the moisture that condenses around heat exchanger in the unit. With regular use, most of this moisture is evaporated from the unit. By pressing the CLEAN button, your unit will clean itself automatically. After cleaning, the unit will turn off automatically. Pressing the CLEAN button mid-cycle will cancel the operation and turn off the unit. You can use CLEAN as often as you like.

Note: You can only activate this function in COOL or DRY mode.

 
TURBO Function

Press TURBO button



When you select Turbo feature in COOL mode, the unit will blow cool air with strongest wind setting to jump-start the cooling process.

SET function

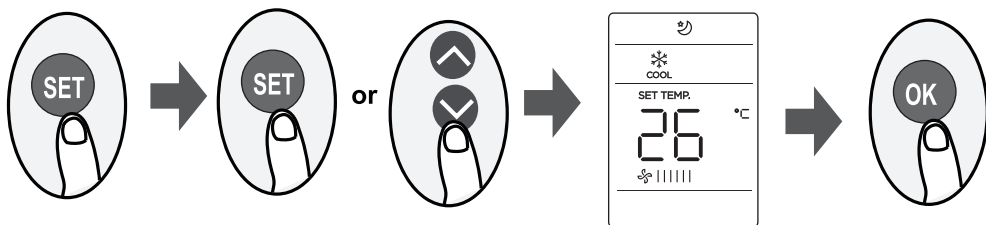

- Press the SET button to enter the function setting, then press SET button or TEMP▼ or TEMP▲ button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm.
- To cancel the selected function, just perform the same procedures as above.
- Press the SET button to scroll through operation functions as follows:
 UV*(☼) → Sleep*(💤) → iSense(⌂) → AP mode(📶)
 [*]: If your remote controller has UV and Sleep button, you can not use the SET button to select the UV and Sleep feature.

UV function(☼)

When UV function is initiated, the UV light is energized and will help to purify the air in the room.

Sleep function(💤)

The SLEEP function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable). This function can only be activated via remote control.

For the detail, see "sleep operation" in "USER'S MANUAL".

Note: The SLEEP function is not available in FAN or DRY mode.

AP function(📶)

Choose AP mode to do wireless network configuration. For some units, it doesn't work by pressing the SET button. To enter the AP mode, continuously press the LED button seven times in 10 seconds.

iSense function(⌂)

The iSense function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner every 3 minutes interval. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

NOTE: Press and hold Turbo button for seven seconds to start/stop memory feature of iSense function.

- If the memory feature is activated, "On" displays for 3 seconds on the screen.
- If the memory feature is stopped, "OF" displays for 3 seconds on the screen.
- While the memory feature is activated, press the ON/OFF button, shift the mode or power failure will not cancel the iSense function.

Toolbox Customer Service Centre:
 Service E-mail: 8210service@gilman-group.com
 Please register now at: www.dchtoolbox.com
 Website: www.gilman-group.com



mitsubishi heavy industries - jinling air - conditioners co., ltd.