 


SCHNEIDER

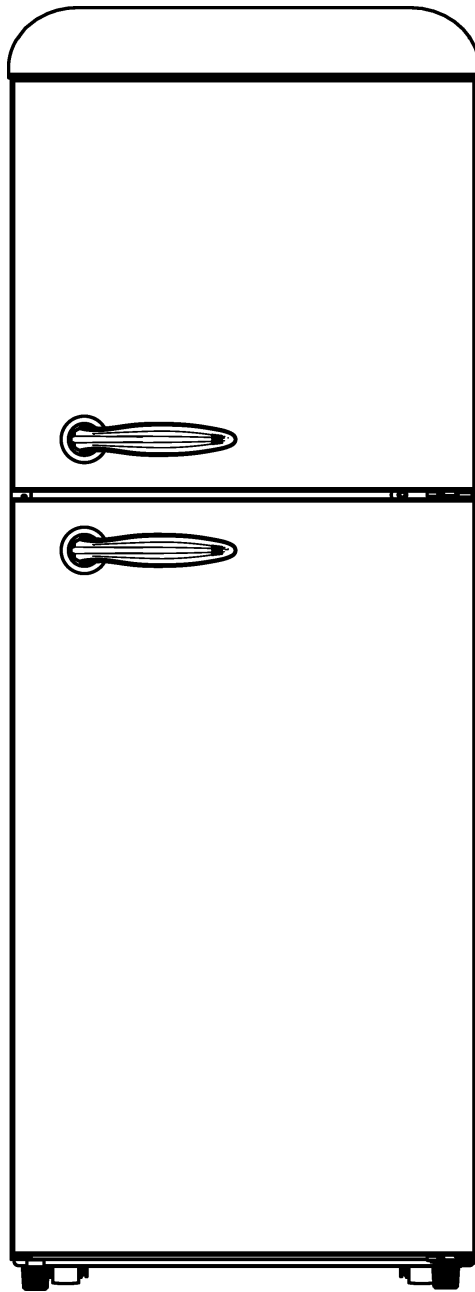

REFRIGERATOR

SCDD188VNFAB

Instruction Manual



Please read the following instructions carefully before using this device.
Please save these instructions for all time.

SAFETY INSTRUCTION

Read all instructions before using the appliance.

Read this manual carefully before using the machine so that you know exactly what to do and what not to do.

Improper use of the appliance can be dangerous, especially for children.

This device is intended for use in household applications.

This device can be used by children 8 years of age or older and by people with physical, sensory or mental abilities.

have little or no experience or knowledge, if they are properly supervised or if they have been given instructions on the safe use of the device and if the risks involved have been apprehended. Children must not play with it the device. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

CAUTION: Keep ventilation openings in the enclosure of the appliance or in the built-in structure clear.

CAUTION: Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.

CAUTION: Do not damage the refrigeration circuit.

CAUTION: Do not use electrical appliances inside the food storage compartment, unless they are of the type recommended by the manufacturer.

If the power cable is damaged, it must be replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid any danger.

Do not store explosive substances such as aerosols containing flammable propellants in this device.

- Before you throw away your appliance: remove the door and leave the shelves in place so that children cannot easily play inside.
- Never allow children to operate or play with the device.
- Never clean any parts of the appliance with flammable fluids. The fumes represent a fire hazard or can cause explosions.
- Do not store or use gasoline or other flammable gases or liquids in or near this appliance. Fumes can cause fire or explosion.
- Do not install this device in a place with extreme climatic conditions such as: insufficient ventilation, temperatures below 16 ° C or above 38 ° C

This product complies with current European safety standards for electrical devices. It has been subjected to long trials and meticulous tests to assess its safety and reliability.

Before connecting the appliance, check that the data on the rating plate correspond to those for your installation.

The packaging materials are recyclable, do not leave them in the environment, take them to a specialized center for recycling. The electrical safety of this device is guaranteed only when it is connected to an electrical installation equipped with a grounded plug in good condition, in accordance with the standards in force. If in doubt, have the installation checked carefully by a qualified technician.

The use of this device, like that of any electrical device, involves observing certain fundamental rules:

- Do not touch the device with wet or damp hands or feet;
- Do not pull on the power cable to disconnect the plug from the socket;
- Do not leave the device exposed to agents atmospheric;
- Do not allow the device to be used by children in the absence of supervision;
- Do not unplug or insert the plug into the socket with wet hands; before carrying out any cleaning or maintenance operation, disconnect the appliance from the power supply by unplugging the plug or by turning off the main switch of the installation;

The socket must remain accessible after the installation of the device.

- In the event of a breakdown or malfunction, turn off the device and do not damage it. The power outlet must always remain accessible after installation of the device.
- **WARNING:** When positioning the machine, make sure that the power cord is not trapped or damaged.
- **WARNING:** Do not place mobile bases multiple outlets or portable power supplies on the back of the device.
- Children aged 3 to 8 are allowed to load and unload refrigeration devices.
- To avoid contamination of food, please observe the following instructions:
 - Prolonged opening of the door can lead to a significant increase in temperature in the compartments of the appliance.
 - Regularly clean surfaces that may come into contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that they do not come into contact with and drip on other foods.

- The two-star compartments for frozen products are suitable for storing frozen food, storing or making ice cream and for making ice cubes.
- The one, two and three star compartments are not suitable for freezing fresh food.
- If the refrigeration appliance is left empty for long periods of time, turn it off, defrost, clean, dry and leave the door open to prevent mold growth in the appliance.
- Place the device against a wall whose free distance does not exceed 75 mm and exceeds 50 mm.

The LED lamp is not replaceable. Only an authorized technician can change the LED in the event of a fault.

Regarding the instructions for installation device, refer to paragraph 'Installation instructions' below in the manual. For the maintenance and cleaning of the appliance, refer to the paragraph 'Maintenance and cleaning'.

Refrigerant



**DANGER: RISK OF FIRE /
FLAMMABLE MATERIALS**

WARNING: When positioning the device, make sure that the power cord is not pinched or damaged.

WARNING: Do not place multiple outlet mobile bases or portable power supplies on the back of the device.

The refrigerant gas contained in the circuit of this device is isobutane (R 600a), a low-polluting but flammable gas.

When transporting and installing device, be careful not to damage any part of the refrigeration circuit

Do not use any sharp or pointed tools to defrost the unit.

Do not use any electrical device inside the device.



Suitable for food contact

INSTRUCTIONS FOR USE

DEVICE IDENTIFICATION

On each device is stuck a sign located in the refrigerator on the side adjacent to the box for fruits and vegetables

CHARACTERISTICS

The most important feature of this device is:

Automatic defrosting of the refrigerator cell. The defrost water is conveyed to a tank placed on a compressor from where it evaporates with the heat generated during the refrigeration process.

WARNING!

When installing your refrigeration appliance, it is important to take into account the climatic class of the product. To find out which climate class your refrigerator belongs to, please check the data plate as shown below: The refrigeration appliance operates correctly within the ambient temperature range shown in the table, depending on the climate class.

Classroom	Symbol	Average ambient temperature ° C
temperate enlarged	SN	from + 10 to + 32
temperate	N/T	from + 16 to + 32
subtropical	ST	from + 16 to + 38
Tropical	T	from + 16 to + 43

ELECTRICAL CONNECTION

Check that the voltage values of the electrical network can withstand those indicated on the nameplate placed behind the vegetable drawer of the refrigerator.

If the outlet is not equipped with an earthed socket, or if the plug is not suitable for your network, we advise you to contact a specialized electrician.

Do not use detergents or derivators to avoid heating and burning. If the appliance is not equipped with an electrical outlet, it will have to be connected to the network by means of a switch which will be connected directly to the power supply terminals. This switch must guarantee a single-pole disconnection of the device with separation of the contacts of not less than 3 MM.

TECHNICAL ASSISTANCE

 
Before calling the After-Sales Service, if the refrigerator is not in operation, check that the power plug is correctly inserted in the outlet. If the refrigerator makes noise, check the leveling and check that there is no object in contact with the rear wall; if the refrigerator is not performing sufficiently, check that the interior is not full, that the door closes and that the condenser is not full of dust.

If there should be water in the lower part of the refrigerator (vegetable drawer and extractable top) check that the hole allowing the defrost water to exit is not blocked. The installation is the buyer's responsibility. Our company is not responsible for damage due to improper installation and declines all responsibility in the event that the earth connection does not comply with the National Standards in force.

At the end of the functional life of the device using R 600a refrigerant gas (isobutane) and flammable gas inside the insulating foam, the device must be set up in a safe state before its disposal. For information relating to this operation, contact your trusted dealer or the local body in charge.

CAUTION: Do not damage the refrigerant circuit.

Description of the device

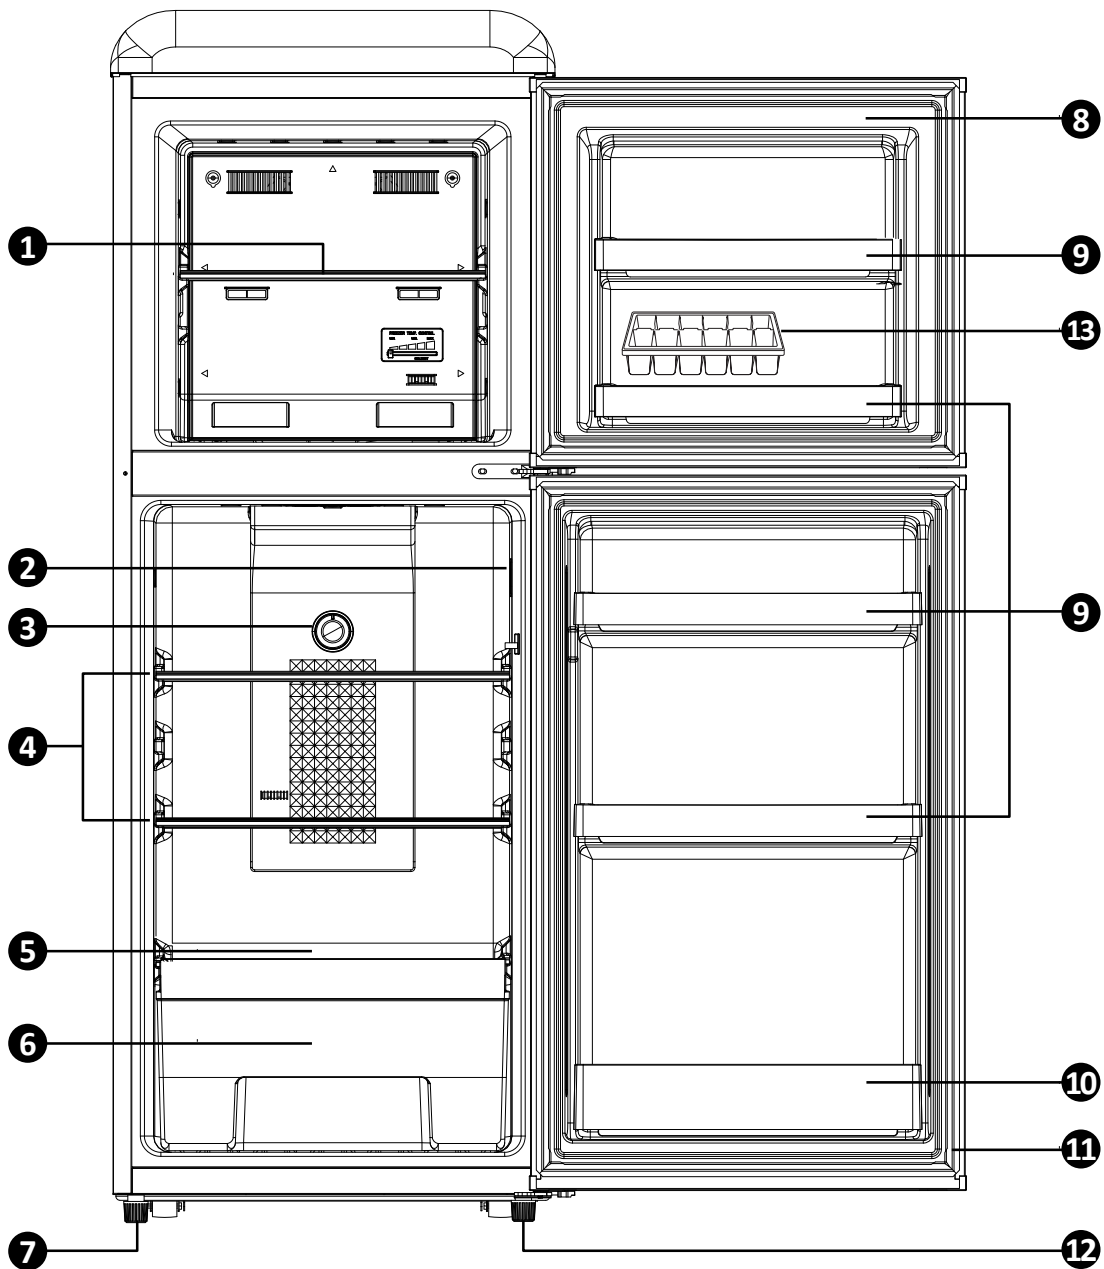







- | | |
|---------------------------|------------------------|
| 1. Glass shelf | 8. Freezer seal |
| 2. LED lamp | 9. Shelves |
| 3. Control panel | 10. Bottle shelf |
| 4. Glass shelf | 11. Refrigerator seal |
| 5. Vegetable drawer cover | 12. Front foot (right) |
| 6. Vegetable drawer | 13. Ice cube tray |
| 7. Adjustable feet | |

The drawing and the number of shelves are indicative references which may be subject to change.

Control Panel

OPERATING YOUR APPLIANCE

Refrigerator Temperature Control

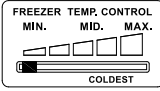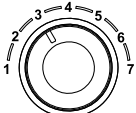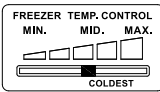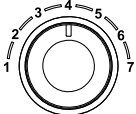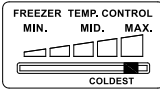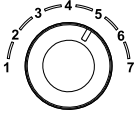Temperature Setting Recommendation		
	Freezer Compartment	Fresh food Compartment
Summer (Higher than 35°C)	 Set on Min. (Set on MID. when you make the ice)	 Set on 3-5
Normal (20 - 32°C)	 Set on MID.	 Set on 4
Winter	 Set on MAX.	 Set on 4-5

Please install the refrigerator where the temperature is 16°C to 43°C.
If your refrigerator is installed in too low or high temperature,
the internal cooling system may not work correctly.

Setting the Temperature Control

- Your refrigerator has one control for regulating the temperature. The temperature control is located on the middle of the refrigerator compartment. As well as a control knob in the freezer to balance the cold air distribution between the two compartments.
- The temperature control in the refrigerator compartment will control the actual cooling cycle whereas the control knob in the freezer compartment will adjust the distribution of the cold air between the freezer and the refrigerator compartments.
- The first time you turn the unit on, adjust the temperature control knob to “MAX” or COLDEST” in the freezer compartment and “7” in the refrigerator compartment and run for at least 4 hours before placing foods inside. This will ensure the freezer cabinet is thoroughly chilled and the refrigerator compartment will be stabilized before food is placed. Then return selector to “MED” position in the freezer compartment and “4” in the refrigerator compartment.
- Adjust the temperature control to the setting that best suits your needs. The setting of “4” in the refrigerator compartment and “MED” in the freezer compartment will distribute the cold air equally between both compartments which should be appropriate for home or office refrigerator use.
- If you at any time want to distribute a larger amount of cold air to the freezer for example is a large amount of food has been added to the freezer, simply move the controller to the “MAX” position until the desired temperature has been attained then return the controller to the “MED” position.
- If you at any time want to distribute a larger amount of cold air to the refrigerator section, for example to quickly cook down if a large amount of fresh food has been added, simply move the controller in the freezer to the “MIN” position until the desired temperature has been attained and then return the controller to the “MED” position.

NOTE:

- IF THE UNIT IS UNPLUGGED, HAS LOST POWER, OR IS TURNED OFF, YOU MUST WAIT 3 TO 5 MINUTES BEFORE RESTARTING THE UNIT. IF YOU ATTEMPT TO RESTART BEFORE THIS TIME DELAY, THE REFRIGERATOR-FREEZER WILL NOT START.

NOTE:

WE DO NOT RECOMMEND THE INSTALLATION OF THE REFRIGERATOR WHERE THE TEMPERATURE WILL DROP BELOW 50°F (13°C) OR RISE ABOVE 110°F (43°C). THE COMPRESSOR WILL NOT BE ABLE TO MAINTAIN PROPER TEMPERATURES INSIDE THE REFRIGERATOR.

 
FOR INSTALLATIONS WHERE THE TEMPERATURES WILL DROP BELOW 50°F SET THE FREEZER TEMPERATURE CONTROL TO THE “COLDEST” SETTING. THIS WILL IMPROVE THE OPERATIONS OF THE REFRIGERATOR UNDER THESE CONDITIONS.

Freezing Fresh Foods

- Proper use of the appliance, adequately packed food, correct temperature and taking into account hygienic precautions will substantially influence the quality of freezing the food or storing of the frozen foods.
- This compartment is designed for the long-term storage of frozen food.
- The storage life of frozen foods varies and the recommended storage time should not be exceeded.
- Pre-packed commercially frozen food should be stored in accordance with the frozen foods manufacturer’s instructions for a three star frozen food storage compartment or home freezer.
- Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times.
- Carefully select food you intend to freeze, it should be of adequate quality and suitable for freezing.
- Use correct packaging and wrap it tight.
- The packaging should be airtight and shouldn’t leak since this could cause substantial vitamin loss and dehydration of foods.
- Foils and bags should be soft enough to tightly wrap around the foods.
- When preparing foods to be frozen, consider sanitary precautions.
- Mark packages with following data: kind and amount of foods and the date of loading.
- It is extremely important that the food is frozen as quickly as possible.
- If the loading amount is too large, the quality of freezing is reduced which affects the quality of frozen foods.

Note:

To avoid cooling and performance issues, DO NOT block freezer vents while storing food in the freezer.

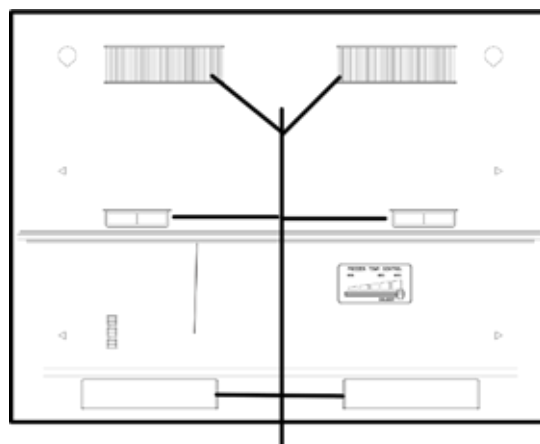

DO NOT BLOCK AIR VENTS
To Prevent Issues with cooling and performance

Care and maintenance

Reversing the Door Swing of Your Appliance

This refrigerator-freezer has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, Please refer to the Door Reversal Instructions Package included with this manual.

Cleaning Your Appliance

- Unplug the unit, and remove the food and baskets.
- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the baskets with a mild detergent solution.
- The outside of the unit should be cleaned with mild detergent and warm water.

CAUTION

Failure to unplug the refrigerator-freezer could result in electrical shock or personal injury.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your refrigerator-freezer if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your food.

Vacation Time

Short vacations: Leave the unit operating during vacations of less than three weeks. Long vacations: If the appliance will not be used for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly; blocking it open if necessary.

Moving Your Appliance

- Remove all the food.
- Securely tape down all loose items inside your unit.
- Turn the leveling screws up to the base to avoid damage.
- Tape the door shut.
- Be sure the unit stays in the upright position during transportation.

Energy Saving Tips

- The unit should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of direct sunlight.
- Let hot foods cool to room temperature before placing them in the unit. Overloading the unit forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the unit. This cuts down on frost build-up inside the freezer.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

PROBLEMS WITH YOUR APPLIANCE?

You can solve many common refrigerator-freezer problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling for service.

Cleaning

For hygienic reasons, the device (including exterior and interior accessories) should be cleaned regularly at least every two months. **Warning !** The appliance must not be connected to the mains during cleaning. **Danger of electric shock!** Before cleaning the device, switch it off and unplug it from the power outlet.

Exterior cleaning

To maintain a good appearance of your device, you need to clean it regularly.

- Wipe the digital panel and display panel with a soft, clean cloth.
- Spray water on a cleaning cloth instead of spraying water directly onto the surface of the device. This will help ensure an even distribution of moisture over the surface.
- Clean the doors, handles and compartment surfaces with a mild detergent then wipe dry with a soft cloth.

Warning !

- Do not use sharp objects as they can scratch the surface.
- Do not use thinner, car detergent, chlorine products, essential oils, abrasive cleaners or organic solvents such as benzene for cleaning. They could damage the surface of the device and cause a fire

Interior cleaning

You should regularly clean the inside of the appliance. It will be easier to clean it when food stocks are low. Wipe down the inside of the fridge-freezer with a weak baking soda solution, then rinse with lukewarm water using a sponge or wrung out cloth. Wipe dry completely before replacing shelves and baskets.

Thoroughly dry all surfaces and removable parts. Although this appliance defrosts automatically, a layer of frost may form on the interior walls of the freezer compartment if the freezer door is opened frequently or left open for too long. If the frost is too thick, pick a time when food stocks are low and do the following:

1. Remove the existing food and accessory baskets, disconnect the appliance from the mains supply and leave the doors open. Be sure to ventilate the room well to speed up the defrosting process.
2. When defrost is complete, clean your freezer as described above. **Warning !** Do not use sharp objects to remove the no-Frost from the freezer compartment. Once the interior is completely dry, the appliance can be reconnected to the mains socket and restarted.

Cleaning the door seals

Take care to keep the door seals clean. Sticky foods and drinks can cause the gaskets to stick to the compartment and damage them when you open the door. Wash the gaskets with a mild detergent and hot water. Rinse them and dry them completely after cleaning.

Warning ! Once the door gaskets are completely dry, the appliance can be reconnected to the power outlet and restarted.

Guide troubleshooting


If there is a problem with your device or if you think your device is not working properly, there are a few simple checks you can do before you call for service, please see below. There are a few simple checks listed in this section that you can perform before calling for service. Warning! Do not try to repair the device yourself. If the problem persists after performing the checks mentioned below, contact a qualified electrician, certified engineer, or the store where you purchased the product.

Problem	Possible cause and solution
The device does not function correctly	Check if the power cable is properly connected to a plug.
	Check the fuse or circuit in your power supply, and replace if necessary.
	The ambient temperature is too high. Try adjusting the room temperature to a cooler level to resolve this problem.
	It is normal for the freezer not to operate during the automatic defrost cycle, or for a short time after the appliance has been switched on to protect the compressor.
There are smells in the compartments	Interior may need to be cleaned
	Certain foods, containers or packaging cause the smells.
The device makes noise	<p>Compressor operating noises Air circulation noises from the small fan motor in the freezer Compartments or other</p> <ul style="list-style-type: none"> • Gurgling sounds like boiling water. • Noises during automatic defrost. • Clicking noises before the compressor starts. <p>Other unusual noises are due to the reasons below and should be checked to take the necessary action: The appliance is not level. The back of the device touches the wall. Bottles or containers have fallen or are rolling.</p>
Motor runs continuously	<p>It is normal to hear the sound of the engine frequently; it works best in the following circumstances:</p> <ul style="list-style-type: none"> • The temperature setting is set cooler than necessary • A large amount of hot food has recently been stored in the appliance. • The ambient temperature is too high • Doors are kept open too frequently or too often long time • After installing your device or when it has been turned off for a long period.



A layer of gel has formed in the compartment	Check that the air outlets are not blocked by food and make sure that the food is placed in the appliance in such a way as to allow sufficient ventilation. Make sure the door is completely closed. To remove frost, please refer in the paragraph concerning cleaning and maintenance.
The temperature inside is too hot.	You may have left the doors open too long, or you have opened them too often; or the doors are held open by an obstacle; or the device is installed in a location with insufficient clearance on the sides, back and top.
The temperature inside is too cold.	Increase the temperature according to the paragraph "Control panel control".
Doors cannot be closed easily	Check if the top of the refrigerator is tilted backwards 10 to 15 mm to allow the doors to close on their own, or if something inside is preventing the doors from closing.
Drops of water flow on the ground.	The water pan (located at the bottom of the back of the compartment) may not be properly leveled, or the drain spout (located under the top of the compressor deposit) may not be positioned correctly to direct water to the tray, or the water flow is blocked. You may need to move the refrigerator from the wall to check the drain pan and spout.
The lamp does not work.	<ul style="list-style-type: none"> • The LED lamp may be damaged. please refer to the paragraph on cleaning and maintenance to replace the LED lamp. • The control system has turned off the lights because the door is remained open too long; close and reopen the door to reactivate the lights.
Unit does not operate.	Not plugged in. The circuit breaker tripped or there is a blown fuse.
Compressor turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the refrigerator - freezer. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The refrigerator - freezer does not have the correct clearances.
Vibrations.	Check to assure that the refrigerator - freezer is level.
The unit seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your refrigerator - freezer. Contraction and expansion of the inside walls may cause popping and crackling noises. The unit is not level.
The door will not close properly.	The unit is not level. The door is reversed and not properly installed. The gasket is dirty. The baskets are out of position.
The unit does not cool properly	Check the temperature control settings on page 9 and 10.

Installation Instructions

 1. Make sure that the device remains upright during transport. Do not tilt the device more than 45 degrees when moving it. Do not exert pressure on the condenser, the door and its handle to avoid deformations or disturbances of the functioning of the refrigerator.

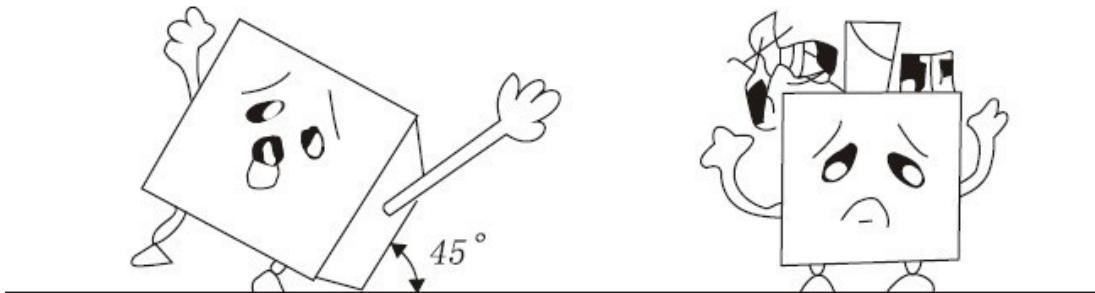

2. Make sure **there is** enough space around the refrigerator for it to function well. Allow a dozen cms of free space at the back and sides of the unit so that air can circulate to cool the compressor. Also leave about thirty centimeters above it.
3. Place the appliance away from direct sunlight and sources of heat (stoves, heating, radiators, etc...). Direct sunlight can damage the acrylic coating and heat sources can increase electricity consumption. Extremely cold ambient temperatures can also cause malfunctions. Avoid putting the device in humid places. If there is too much humidity in the air, there will quickly be frost on the evaporator.

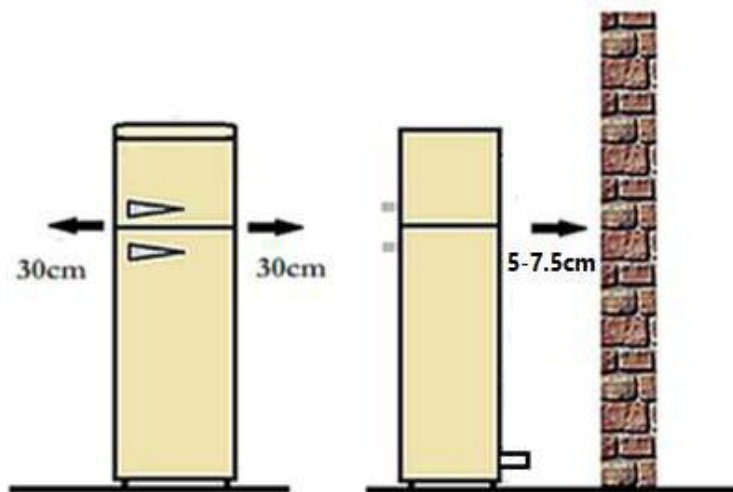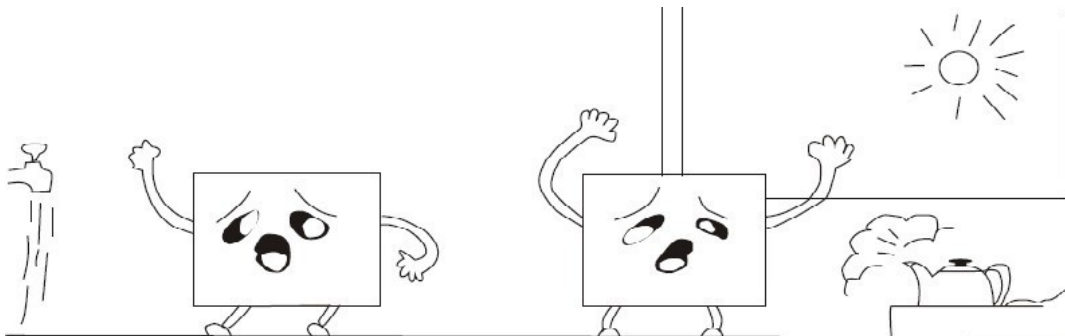  

This product complies with the requirements imposed by directives 2014/35 / EU (repealing directive 73/23 / EEC amended by directive 93/68 / EEC) and 2014/30 / EU (repealing the directive 89/336 / EEC)

Read all instructions before using the appliance

- This appliance is intended for domestic and indoor use only.
- Children should be supervised to ensure that they do not play with the appliance.
- CAUTION: Keep ventilation openings in the enclosure of the device, in its exterior part or in its built-in structure.
- CAUTION: Do not damage the refrigeration circuit.
- CAUTION: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- CAUTION: Do not use electrical appliances inside the food storage compartment, unless they are of the type recommended by the manufacturer.
- Before throwing away your appliance: remove the door, leave the shelves in place so that children can
cannot easily play indoors.
- Never allow children to operate or play with the appliance.
- Never clean any parts of the appliance with flammable fluids. The fumes represent a fire hazard or can cause explosions.
- Do not store or use gasoline or other flammable gases or liquids near this appliance. Fumes can cause fire or explosion.
- Do not install this device in a location with extreme weather conditions such as:
insufficient ventilation, temperatures below 16 ° C or above 38 ° C

Chief Zone

You can store food such as cheese, meat, fish there.

Coldest zone: 1 ° C to 5 ° C

This is where to put foods that need to be cold to be stored safely. More generally, it is any fresh product for which the use-by date (DLC) is associated with a storage temperature less than or equal to + 4 ° C.

- Raw and uncooked foods should always be wrapped.
- Refrigerated precooked foods, eg ready-to-eat foods, meat pies, soft cheeses.
- Pre-cooked meats, for example ham.
- Prepared salads (including mixed green salads, in pieces, pre-washed, prepackaged, rice, potato salad, etc.).
- Desserts, for example cream cheese, home-prepared food and leftovers or cream cakes.

Vegetable drawer

This is the wettest part of the Refrigerator.

Vegetables, fruits, pieces of fresh salad, eg whole unwashed lettuce, whole tomatoes, radishes, etc ... WE RECOMMEND THAT ALL PRODUCTS PRESERVED IN THE SALAD CONTAINER BE PACKAGED.

NOTE :

ALWAYS PACK AND STORE RAW MEAT, CHICKEN AND FISH ON THE LOWEST SHELF AT THE BOTTOM OF THE REFRIGERATOR. THIS WAY THEY WILL NOT DRAIN ON OR TOUCH OTHER FOODS. DO NOT STORE GAS OR FLAMMABLE LIQUID

Freezer

Upper freezer drawer

Storage of frozen foods such as ice cream.

Middle / lower freezer drawer

Storage of fresh meat and fish or dry food, divided into small portions.

Note:

To get more space, you can store the food after removing the drawers and the ice cube tray. The freezer compartment storage volume is calculated after removing the ice cube tray, ice drawer, and top and middle freezer drawers.

Food packaging

Pack foods in portions that suit your needs.

Portions of fruits and vegetables should not exceed 1 kg, those of meat can reach 2.5 kg.

Small portions freeze faster and help preserve food quality better when defrosting and preparing meals.

It is important to package foods in airtight bags or containers before placing them.

freeze to prevent them losing their taste or becoming dehydrated.

Wrap the food, expel the air, and seal the bag or container tightly.

Appropriate packaging:

Plastic bags, stretch film, aluminum foil and freezer trays. You can obtain these packaging from your usual retailers.

Inappropriate packaging:

Wrapping paper, parchment or cellophane, garbage bags or bags that have already been used.

Suitable sealing devices:

Elastics, plastic clips, cords, ties for freezer bags or similar device. Films and plastic bags can be sealed using a special press.

 
Before placing the package in the freezer, affix a label with the description of the contents and the date of freezing.

Precautions:


1. Plug the machine into a properly installed and grounded proprietary wall outlet. Never cut or remove (for any reason) the third wire (ground) from the power cord. Any questions regarding power or grounding should be addressed to a licensed electrician or to a center authorized to work on this type of product.

Warning: If the grounded plug is used improperly, there may be a risk of electric shock.

2. The installation socket must always have an earth connection. If the current supply is not connected to earth; you do not need to connect the device

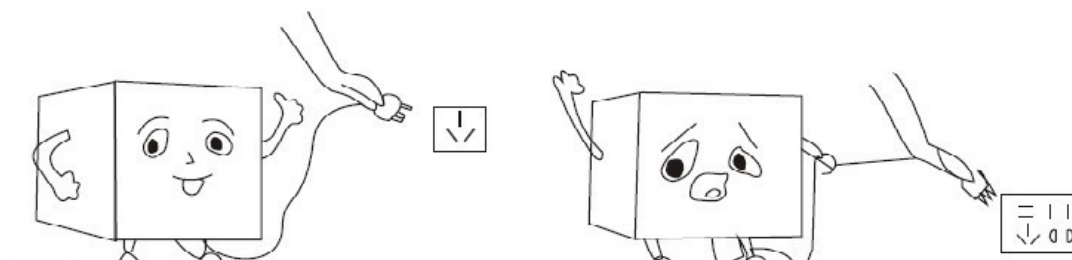

 3. Do not throw water on the refrigerator: it can cause equipment failure or risk of electric shock.
4. Do not store or use gasoline or other flammable gases or liquids near of this device. Fumes can cause fire or explosion.

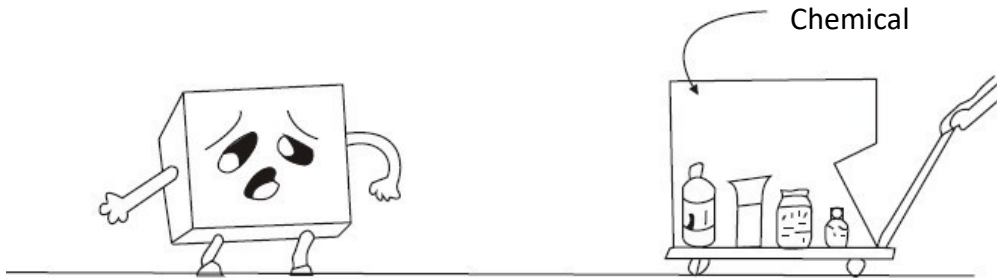


Use:

1. Before connecting the appliance to the electric current, let it stand for about two hours. This will reduce the risk of malfunction in the cooling system due to handling during transport. Run your product about 2/3 hours before adding food

CAUTION: To avoid a danger caused by instability of the device, the device must be installed and secured in accordance with the instructions in the installation manual.

 2. Do not put too much food in the appliance. Do not open the door too often to maintain the indoor temperature and save electricity.

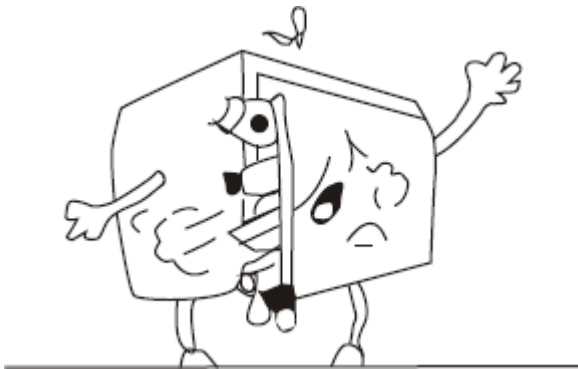

ELIMINATION



This logo affixed to the product means that it is a device whose treatment as waste falls within the framework of directive 2012/19 / EU of January 4, 2012, relating to waste electrical and electronic equipment. (WEEE).

The presence of hazardous substances in electrical and electronic equipment may have potential effects on the environment and human health in the reprocessing cycle of this product.

Tips - Energy savings

Install the appliance in a cool, dry and adequately ventilated room.

 
Take care not to expose the device to direct sunlight and never place it near a direct source of heat (near a radiator, for example).

Never block the ventilation openings or grids of the appliance. Allow food to cool before placing it in the appliance. Place frozen products in the refrigerator to thaw them.

The low temperature of frozen food will help cool the food in the refrigerator.

Do not leave the appliance doors open for too long when storing or removing food from the appliance.

When you freeze food or want to store it in the freezer, place it directly in the upper freezer compartment.

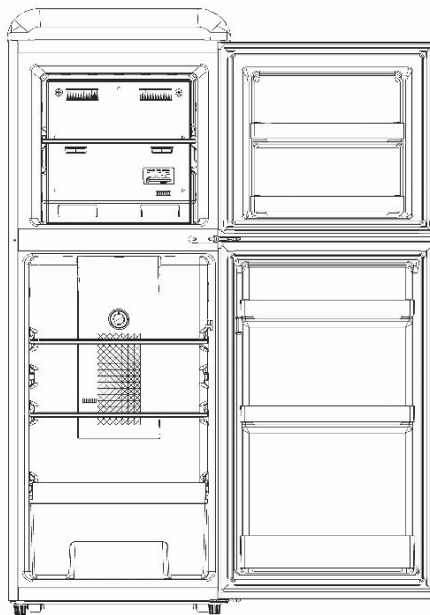

Guarantee

The warranty does not cover product wear parts, problems or damage resulting from:

- (1) surface deterioration due to normal wear and tear of the product;
- (2) defects or deterioration due to contact of the product with liquids and due to corrosion caused by rust or the presence of insects;
- (3) any unauthorized incident, abuse, misuse, modification, disassembly or repair;
- (4) any improper maintenance operation, use not in accordance with the instructions concerning the product or connection to an incorrect voltage;
- (5) any use of accessories not supplied or approved by the manufacturer.

The warranty will be void if the nameplate and / or serial number of the product is removed.

請記錄下列產資品料

Please record the following product information

● 型號 Model

● 機身編號 Body number

● 經銷商名稱 Dealer name

● 購買日期 Purchase date

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不之便處，敬請原諒。

This product is constantly improving. If the function is changed, no notice will be given. If you have any questions, please contact the customer service center. We apologize for the inconvenience.

說明書內容以英文版本為準

The content of the manual is subject to the English version.

ToolBox Customer Service Centre 客戶服務中心：
4/F, DCH Building, 20 Kai Cheung Road, Kolwoon Bay, Hong Kong
香港九龍啟祥道20號大昌行集團大廈4樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210

Service E-mail 電郵地址：8210service@gilman-group.com

Please register now at 請即上網登記：www.toolbox.hk

Website 網址：www.gilman-group.com



a Gilman Group Company

SCHNEIDER